## Progressive Die Holders

Supports short delivery times and lower costs.


Method of ordering:
material T (thickness) × A (length) × B (width) = number of holders

Example

Material	Т	Α	В		Q&H	No. of holders
SKS3	25×299×100			<	GS F	> =30

\*Materials Handled DC53, SKD11, SKS3, SK3, SPH40, S50C

\*Please place all orders by using diagrams.

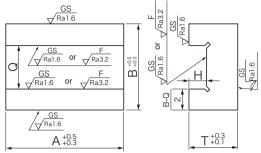

\*Dimensions Q and H are available in two types: F and GS

In mm

## Dimensions of Each Part (reference)

Difficition of East (Totoroffo)											
-	Γ										
GS	+0.3 +0.1	25	28	30	35	40	45	50			
А		210	250	300	350	400	450	500			
F	+0.5 +0.3	210	250	(A	430	300					
В											
GS	+0.5 +0.3	100	125	130	150	180	210	250			
Q											
F	GS	50	60	80	100	125	150				
-0.3	-0.01										
-0.5   -0.03		(Any width Q)									
Н											
F	GS	5	8	10	13	16	20				
-0.3 -0.5	-0.01 -0.03			( <b>A</b> r	y denth	H)					
		(Any depth H)									

