
Bolsters SS400, S50C

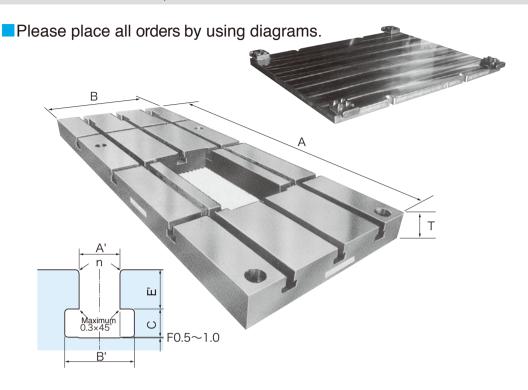

JIS Standards (reference)

18)	20	22	24	28)	32	36)	Standard Quasi-standard

Method of Ordering (example)

In mm

Material	Exterior dimensions			No.	T groove dimensions					
SS400 S50C	Т	А	В	= No.	В'	С	A'	E'	n	
S50C	90	2000	1000	2	46	20	28	36	0.5 \(\) 1.0	