
INF5520, INF5520a & INF55WIN8 IR Codes

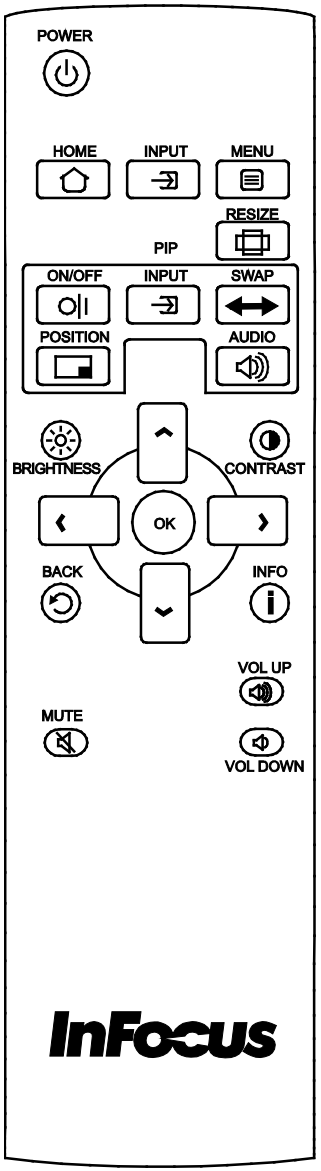

Remote Key		Customer Code: 0x0080	
Key Name	**Data Code**	**Function Description**	**Activity**
POWER	0x03	Software Power On/Off	
INPUT	0x01	Rotates through the display video inputs: HDMI1, HDMI2, PC, VGA, YPbPr, S-Video, CVBS	
MENU	0x1E	Enter OSD Menu	
HOME	0x1D	Change source to PC	
RESIZE	0x29	Performs the Aspect Ratio Advance command	
PIP ON/OFF	0x24	Switch the PIP/POP and OFF	OFF -> PIP -> POP -> PBP (aspect) -> PBP (full) -> OFF
PIP INPUT	0x25	Select the input source of PIP	
PIP SWAP	0x26	Change the PIP/MAIN	
PIP POSITION	0x27	Cycles through PIP window placement options	Able to position in any of the four corners of display
PIP AUDIO	0x28	Turns on/off PIP audio mixing	
BACK	0x1C		IR control shall be set to “Normal” if the “Exit” button is pushed more than 5 seconds.
UP	0x15		
DOWN	0x14		
OK	0x23		
PLUS	0x22		
MINUS	0x21		
INFO	0x1F	Information (pass through for PC)	
BRIGHTNESS	0x19	Enables brightness adjust – slider bar controlled by left and right <>	
CONTRAST	0x20	Enables contrast adjust – slider bar controlled by left and right <>	
MUTE	0x1B	Mute On/Off	
VOL UP	0x17	Audio volume up	
VOL DOWN	0x16	Audio volume down	