Example connector




Front (plug)



Rear (crimp plug)

STEP A:

Take the connector rear

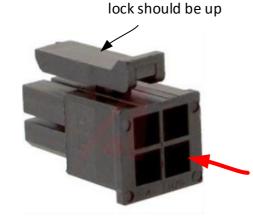


This connector

The crimp terminal "hollow" side should be up

STEP B:

Insert crimp
Until the "click"
sound is heard

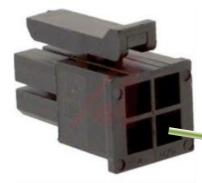

STEP C:

Repeat steps A and B for all wires

