XIAO ESP32C3 adapter for the GPS2 socket (Dual-Left, U11) of the AiO v4.5 Micro


GPS2 socket: pin 2 = Teensy RX2 (pin 7), pin 3 = Teensy TX2 (pin 8). On the Teensy it is Serial2.

Power: the 3.3 V of the socket (the board's 1 A K7803M regulator) goes through U2 (LM66100 ideal diode) into the XIAO 3V3 pin. U2 stops the XIAO USB from feeding the AiO 3.3 V.

R1 and R2: 1k in series on the serial lines (they limit the current into an unpowered Teensy to about 3 mA). On the ESP32-C3: Serial0 = D6 TX (GPIO21) and D7 RX (GPIO20).


Not connected: pins 6 to 8 (F9P USB), 16 (wired to the GPS1 socket), 18 (LED RTK_STAT_1) and the other NC pins.

J1 = socket pins 1-10, J2 = socket pins 11-20 (J2 pin 1 = socket pin 11). Both are 1x10 2.00 mm male headers on the bottom side.

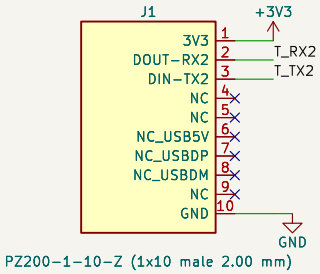


PZ200-1-10-Z (1x10 male 2.00 mm)




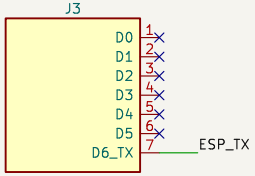

PM254-1-07-Z-8.5 (1x07 female 2.54 mm)

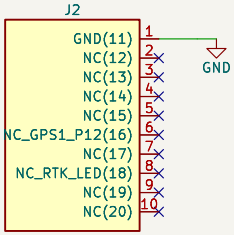


PZ200-1-10-Z (1x10 male 2.00 mm)

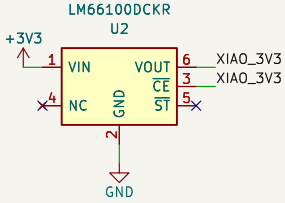





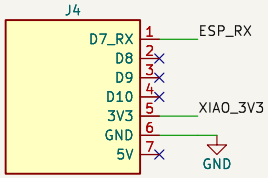

PM254-1-07-Z-8.5 (1x07 female 2.54 mm)

U1 = Seeed XIAO ESP32C3 (or ESP32S3), plugged into J3 (XIAO pins 1-7) and J4 (XIAO pins 8-14), USB-C at the USB-C mark.

GPS2 socket pins copied from the official AiO v4.5 Micro PCB

renatorgr

Sheet: /

File: AiO_Micro45_XIAO_C3.kicad_sch

Title: AiO v4.5 Micro – XIAO ESP32C3 adapter (GPS2 / Serial2)

Size: A4	Date: 2026-10-20	**Rev: 1.2**
KiCad E.D.A. kicad-cli 7.0.11+dfsg-1build4		Id: 1/1