XIAO ESP32C3 / ESP32S3 adapter for the GPS2 socket of the AiO v4.5 Standard (headers P8, P7 and H14)


P8 pin 1 = Teensy RX2 (pin 7), P8 pin 2 = Teensy TX2 (pin 8): Serial2 of the Teensy. ESP32-C3: D6 = TX (GPIO21), D7 = RX (GPIO20). ESP32-S3: D6 = GPIO43, D7 = GPIO44.


Power: the 5 V of the socket (P7 pin 4, K7805M 1 A regulator of the board) through D1 to the 5V pin of the XIAO, as Seeed asks for an external 5 V supply.


The 3.3 V of the socket (P7 pin 7) is the Teensy's own regulator and is NOT used. With D1, the USB-C of the XIAO may be plugged in with the adapter on the board.


R1, R2: 1 k in series on the serial lines (protect the pins when only one side is powered, e.g. XIAO on USB with the AiO off).


Not connected: P8 pin 3 (goes to the GPS1 socket), P7 pins 1, 5, 6, 7, 8 and the whole H14 (holds the adapter and stops it going in turned 180 degrees).

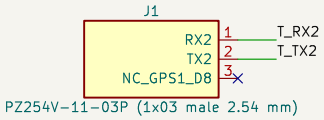





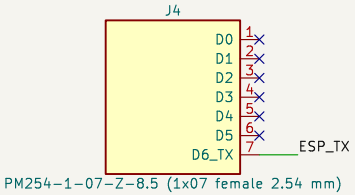

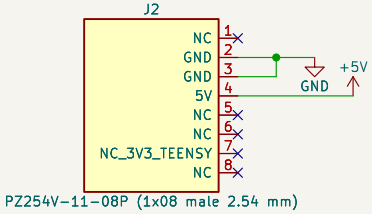

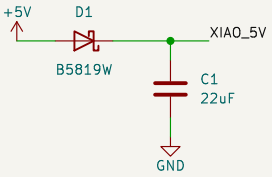

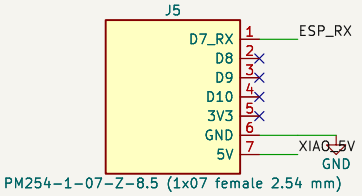

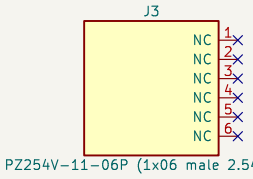

U1 = Seeed XIAO ESP32C3 or ESP32S3, plugged into J4 (XIAO pins 1–7) and J5 (XIAO pins 8–14), USB-C

GPS2 socket pins copied from the official AiO v4.5 Standard PCB

renatorgr

Sheet: /

File: AiO_Std45_XIAO_C3.kicad_sch

Title: AiO v4.5 Standard – XIAO ESP32C3 adapter (GPS2 / Serial2)

Size: A4	Date: 2026-10-19	**Rev: 1.2**
KiCad E.D.A. kicad-cli 7.0.11+dfsg-1build4		Id: 1/1