



TOTALITY

A generator of hypnotic Berlin techno

Version 1.0.0 · 668 parameters · manual built 01.10.2026



Contents

1. [About](#)
2. [Quick start](#)
3. [The panel](#)
4. [The track and the set](#)
5. [Sounds and presets](#)
6. [Arrange](#)
7. [Patterns and the Eclipse](#)
8. [Low End](#)
9. [Drums](#)
10. [Tones](#)
11. [Dub](#)
12. [Mixer and Master](#)
13. [Perform](#)
14. [Export and cues](#)
15. [Style](#)
16. [Meta Quest](#)
17. [The command line](#)

About

Totality composes, mixes and plays hypnotic Berlin techno: tracks of six to eight minutes and DJ sets of up to four hours, in which the tracks follow one another on two decks as a DJ would mix them. Nothing is played back from a recording. The kick, the rumble under it, the twelve lanes of the drum kit, the ping, the bass and the 303, the dub chord, the drone and the texture are synthesised; the tape echo, the spring, the plate and the rooms are simulated; and every note, every operation of the form and every move of a knob is decided by the composer.

The music it aims at is the one of Berghain and Ostgut Ton, of Dub Techno and of the hypnotic school: a groove that holds for minutes and changes by one element at a time, a low end made of a kick and the rumble of its own reverb, a chord thrown into a tape echo. Four style profiles span it -- Hypnotic in the centre, Ostgut, Dub and Raw -- and every knob of their recipes was fitted against measurements of thirty reference tracks: their spectral balance, their width, their loudness and its range, and how alike their bars are.

The same seed always gives the same track. A track is a seed, a style, a length and a handful of rerolls, which is what a set file stores and what you can hand to someone else. The standalone and the plugin play what the offline renderer plays, sample for sample.

Totality is the moment of a total eclipse when the moon covers the sun entirely and only the corona shines round the dark disc. In Totality's Patterns view the kick is that disc: every other part turns around it in rings, and its corona swells with every beat.

Quick start

The standalone plays by itself: press Play. Track and DJ mix, beside the style, choose what Totality makes: a single track, or a DJ mix -- a set of tracks mixed on two decks. A click on either composes it at once; the length beside them is the one of what is chosen (a track 2 to 16 minutes, a mix 10 minutes to 12 hours), and the Compose button names what it writes (Compose track, Compose mix) with the knobs as they stand; New seed draws a fresh one. The status line begins with "single track" or "DJ mix of" and tells what plays: its style and form, its tempo, its key with the Camelot label a DJ mixes by, and its length. While a track begins to play, Totality measures its loudest part in the background, sets every part against the kick -- each lane of the kit, the figure and the other tonal voices, one or two up front and the rest behind them, the room taken back where the mids would stand over the records' -- and brings the track to its style's loudness; the status says "levelling" until the corrections have glided in.

A DJ mix of that many minutes is a set: a dramaturgy of tempo and energy, tracks in neighbouring keys, blends of 16 or 32 bars with the bass swapped on the 32-bar line where the incoming track's figure lands -- its first body block runs under the outgoing track's full groove --, loops of the last track under the next on the third deck, breaks from the mixer's effects.

In a DAW, Totality is an instrument plugin that follows the host's transport: it plays when the host plays, jumps when the host jumps, and plays at the host's tempo (a set's own tempo drift is the standalone's and the export's). Its output is a finished stereo mix at about -10 LUFS with its true peak under -1 dBTP.

A reroll draws one part of the track again and leaves the rest as it was: form, harmony, rack, layers, blocks, events, moves, sounds. In a mix the rerolls act on the track under the playhead, and "reroll the whole track" or "the mix's plan" draw more at once (the Arrange page).

The panel

Totality shares its panel with the other generators of the family -- Phosphene, Ephemeris and Parhelion (and, in part, Noctuary) -- so that what is learned on one holds on the others: the same places, the same keys, the same controllers, the same hands. Each keeps its own colours, its own letters and the picture behind its panel (Settings > Picture behind the panel takes it away).

The header's first row: the logo, the style, the key and the scale, what is composed and its length, Compose, New seed, Play and Mute. Its second row: the thumbs -- a verdict on what plays, for the curation --, the status line, and at the right Undo, Redo, Help and the settings. Under the header the whole track or set at a glance; a click jumps there. The tabs come in one order everywhere: Set, Arrange, the instrument's own pages -- a page of several has small tabs of its own --, Mixer, Perform, Export, Style.

A colour says what a control does, the same on every page and in every generator of the family: the sources, the filters, the envelopes, what moves by itself, the room and the mix. A knob the composer moves has a thin ring round it that shows where it stands at this moment. A double click sets a control to its default; a right click offers MIDI learn, forgetting the controller, and the default.

Undo and Redo take back and bring back what was changed -- a knob, a new seed, a reroll, a preset, a loaded set -- one step at a time; the button's tooltip names the step. Help opens this manual by topic, with the page in front, the keys and the headset as topics of their own. The settings hold the update check (it asks GitHub once a day whether a newer Totality is out; nothing else is sent), the picture behind the panel, the headset, the window's size, full screen, the keys and About.

Space	play / stop
Ctrl+Z	undo
Ctrl+Y, Ctrl+Shift+Z	redo
F1	help
F11	full screen (the standalone); Esc leaves it and closes the help
Ctrl+S, Ctrl+O	save the set, open one
Ctrl+E	export

The controllers every generator of the family listens to without learning: controller 74 (brightness) moves the master filter, 11 (the expression pedal) the echo throw; the mod wheel is left free. The keys from middle C up toggle the mutes (Perform).

The headset. The controls of a Meta Quest's hands are shown only while a headset sends them -- or always, if the settings say so (Headset > Always show them); Off stops listening. The Quest app sends its hands to this computer in bridge mode: bridge_host = this computer's address in its tot.cfg (audio=0 leaves the headset silent), and Totality listens on port 9103. The hands mean the same in every generator of the family, on the headset alone and here:

left pinch	play / stop
both hands pinched	the next track (or set)
right pinch	kick out / kick in
left hand up, down	the master filter: low pass below the middle, high pass above
right hand up	the echo throw

A pinch acts when it opens again, so a pinch of both hands is never also one of each; a hand moves its control only while it does not pinch, and both glide and are centred: a hand at mid height plays what was composed.

The track and the set



A track has one of three forms. The Arc is the DJ tool: an intro of 32 or 64 bars -- never the kick alone: kick, hats and a percussion from the first bar, or hats and percussion, or an atmosphere and percussion, with the kick on bar 9 or 17, as most of the reference records begin (the plan names the opening); the percussion that opens it carries it, four to seven hits a bar and up front in the balance, and a mix's first track never begins with the kick --, a body that builds its groove over its first blocks -- a main entry on each block's first bar and further hats and percussion on its 8-bar lines, full by about bar 97 --, an outro that takes them away again -- so it mixes. The Peak builds to a kick-out and returns into its densest block. The Endless is full from the first bar and changes only by exchanging layers, as the hypnotic records do. Every block has exactly one operation (add, remove, swap) on its first bar -- a hat or a perc may come in on the block's 8- or 16-bar line instead --, every change falls on a 4-bar line and a return on a 16-bar line; nothing tonal plays in the first and last 32 bars, so two tracks can be mixed without a clash.

Every track is of a kind as well as of a style, its archetype: a Tool (the groove and its automation), a Roller (toms, shaker and rim in polymeters, the percussion up front), a Stab, an Acid or a Bleep track (the chord's stabs, a 303 line or the ping as its figure), a Dub Chord track (the chord with its echo chain) or a Tribal track (toms, claps and rims, fills, a kick-out). Each style draws them with its own weights -- Hypnotic mostly Rollers and Bleeps, Ostgut Stabs and Tools, Dub its Dub Chords, Raw Acid and Tribal tracks --; Archetype fixes one, and a set never plays two of a kind in a row. The archetypes with a melodic figure play it the same one or two bars from its entry (the body's second block; a bass riff with the body) to the end, and it changes only through its

filters. Between the operations the body runs in waves of 32 or 64 bars: the figure's filters and the hats' bus open towards a wave's end and fall back after it; two to four bars before that landing something drops away -- the centre of the mix, the kick and the claps, the figure -- so that the landing lands; in the middle of a wave one element (the figure, the bass or the rumble, the percussion, the open hats and the ride) breathes out for 8 or 16 bars and comes back with an echo throw. The Arrange page names the figure and the bars where the waves land.

Style picks the profile; Morph To and Morph blend it with a second one; the Dub and Hypnotic shares pull any profile along the two axes the style is described by. With Auto the tempo, the key and the owner of the low end are drawn from the profile; without it the knobs decide. Minutes is the track's length, rounded to whole blocks.

A set is mixed the way the Berghain residents describe their nights: as one long recomposition, not a row of crossfades. Each track is heard for about three minutes of its own (Track Time) and a third of it lies under its neighbours -- about twenty tracks an hour. The incoming track comes in with its first body block, its highs first and its mids over the last 16 bars, its low band killed; on a 32-bar line the bass goes over in one move; the outgoing track keeps its hats a while, loses its mids and highs and fades. The third deck borrows: the hats and percussion of the track that just left carry on under the new one, the next track's figure is teased in, high-passed, before its blend (where the keys agree), or a percussion loop of the track before last is layered under the one playing. Between the blends the DJ's hand works the channel on the 16-bar lines -- a low kill before the line so the kick slams back, the highs taken out and faded back in, a dip of the mids, the high-pass filter drawn up into the line, an echo throw on the last beat -- never where the track itself already drops something.

The set knobs: its length (up to twelve hours), the dramaturgy (Warm-up, Peak, Closing, Sunday, Flat, Cruise -- hard from the start, a long cruise, building again at the end -- and Marathon -- a warm-up, two peaks, a long closing: the arc of tempo and energy over its length), whether the styles wander with the energy or stay, how often the third deck borrows (Live Loops), how often a break comes from the mixer's effects, the blend's length, a track's own time (Track Time) and how busy the DJ's hand is (DJ Hand). The mixer's effects are one send per deck into a tape echo and a long hall, which the set's breaks throw into and the Perform page's throw uses.

COMPOSE

Control	Key	Range	Default
Tempo	<code>compose.bpm</code>	100 .. 160 BPM	130 BPM
Key	<code>compose.key</code>	C, C#, D, D#, E, F, F#, G, G#, A, A#, B	A
Scale	<code>compose.scale</code>	Aeolian, Dorian, Phrygian, Hexachord, Minor Pentatonic	Aeolian
Style	<code>compose.style</code>	Hypnotic, Ostgut, Dub, Raw Peak	Hypnotic
Length	<code>compose.minutes</code>	2 .. 16 min	7 min
Swing	<code>compose.swing</code>	50 .. 66 %	53 %
Humanize	<code>compose.humanize</code>	0 .. 10 ms	3 ms
Low End	<code>compose.low_owner</code>	Rumble, Sub	Rumble
Auto	<code>compose.auto</code>	off / on	on
Form	<code>compose.form</code>	Auto, Arc, Peak, Endless	Auto
Morph To	<code>compose.morph_to</code>	Off, Hypnotic, Ostgut, Dub, Raw Peak	Off
Morph	<code>compose.morph</code>	0 .. 1	0.5

Dub Share	compose.dub_share	0 .. 1	0
Hypnotic Share	compose.hypnotic_share	0 .. 1	0
Composer's Sounds	compose.pick_sounds	off / on	on
Archetype	compose.archetype	Auto, Tool, Roller, Stab, Acid, Bleep, Dub Chord, Tribal	Auto
Favor Ratings	compose.use_ratings	off / on	off

SET

Control	Key	Range	Default
Dramaturgy	set.dramaturgy	Warm-up, Peak, Closing, Sunday, Flat, Cruise, Marathon	Peak
Styles	set.journey	Stay, Wander	Wander
Live Loops	set.loops	0 .. 1	0.5
FX Breaks	set.fx_breaks	0 .. 1	0.3
Blend	set.blend	16 bars, 32 bars	32 bars
Set Length	set.minutes	0 .. 720 min	0 min
Track Time	set.track_minutes	2 .. 6 min	3.5 min
DJ Moves	set.dj_hand	0 .. 1	0.5

DJFX

Control	Key	Range	Default
Echo Time	djfx.echo_time	1/16, 1/8, 3/16, 1/4, 3/8, 1/2	3/16
Feedback	djfx.feedback	0 .. 1	0.45
Echo Return	djfx.echo_return	-60 .. 6 dB	-3 dB
Hall Decay	djfx.hall_decay	0.5 .. 12 s	5 s
Hall Return	djfx.hall_return	-60 .. 12 dB	6 dB


Sounds and presets

Every synth has 1024 factory presets: the kick, the rumble, the sub, a lane of the kit, the ping, the bass, the 303, the dub chord, the drone and the texture. Each engine has sixteen groups -- "Berlin 909", "Dub Sine", "Ride Bell", "Classic 303", "Basic Channel" -- and each group sixty-four presets on an eight by eight grid: the rows an adjective from dark to bright ("Muffled" ... "Cutting"), the columns a noun of the group's own, so the name tells where on the grid a sound lies. A preset is the sound, not the mix: levels, pans, sends, ducking, the octaves and a lane's role and pattern stay where the mix and the composer put them.

For every track the composer chooses a preset per synth and per lane of the kit (Composer's Sounds, `compose.pick_sounds`): a group by how well it suits the track's style, a lane only among the presets made for its role, and in the group a row that leans to the middle -- the darkest and the brightest are chosen less often. The style then holds a few knobs in its own range (the Dub kick's soft click, the Raw kick's hard clip, the Dub chord's bright band). Reroll sounds draws other presets and leaves the notes as they are.

The knobs show what plays. When a track begins -- in a set, when the next track starts on its deck -- its presets and its style's mix are put on the knobs, and each page names the preset the composer chose ("this track: Punchy Drum Hall (Hypnotic Thud)"); the Arrange page lists them for the whole track. Turn a knob and the sound follows from there; choose another preset from the menu, or step through them, and it plays at once. In a blend each deck keeps its own track's sound: the knobs show the incoming track while the outgoing one plays on as it was.

Arrange

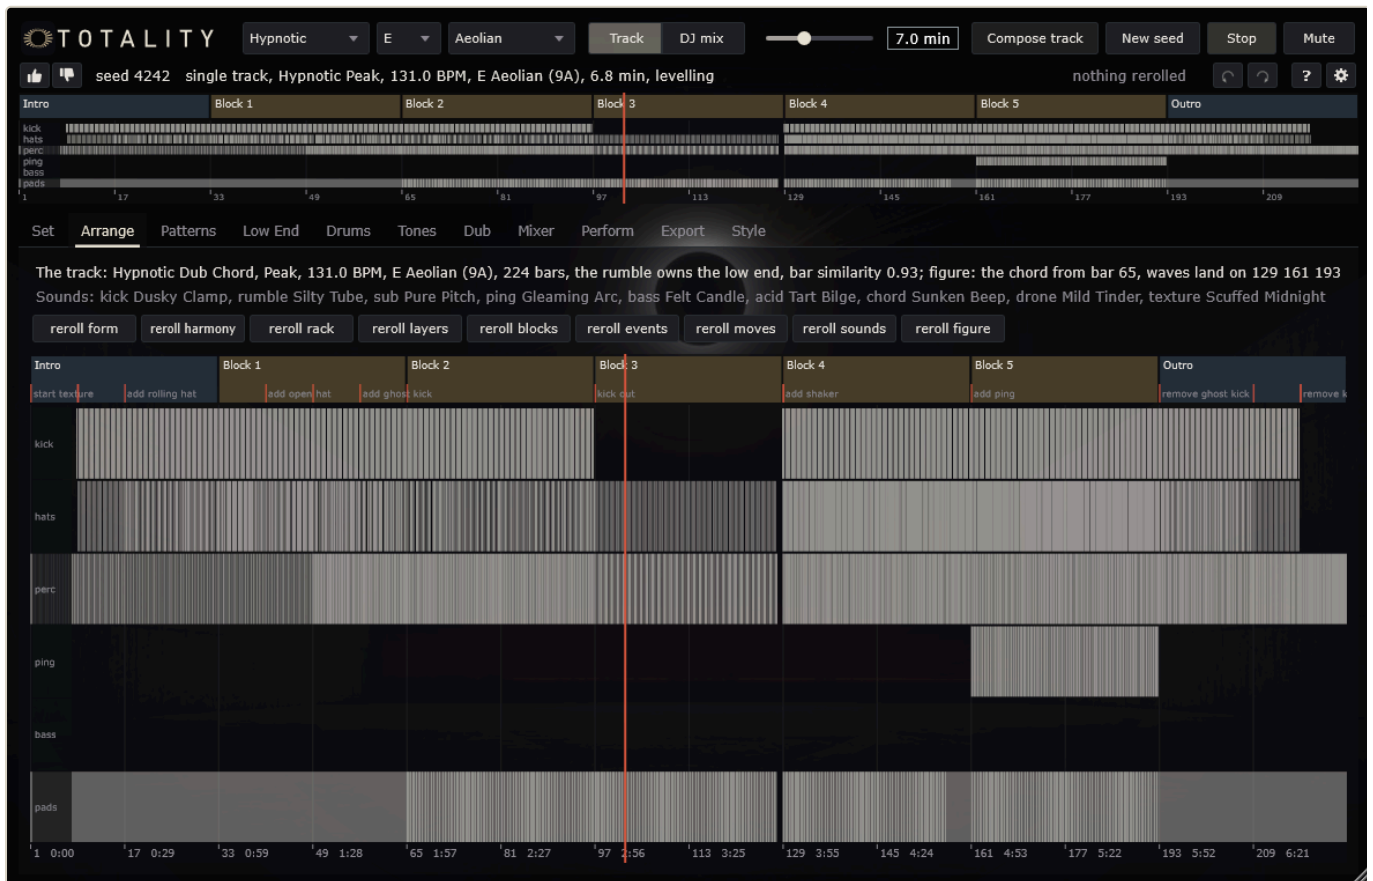


The arrangement across the whole length: in a mix the tracks on decks A and B (their swaps marked: from there a track owns the low end), in a track its blocks with their names, and under them a lane per group of layers -- kick, hats, perc, ping, bass, pads -- lit where it plays, and a ruler: a track's bars (on the Arrange page with the time beside them), a mix's minutes. The Arrange page shows the operations of the form by name. A click jumps there.

The mouse wheel zooms in and out around the pointer, down to four bars, where every hit of the kit stands apart; a drag, the wheel with Shift or a sideways wheel moves along, a double click shows the whole length again. A zoomed view pages on with the playhead when it runs out of it (not when you moved the view away), and the strip on top marks the window of the Arrange page.

The row of rerolls acts on the track under the playhead; each part of it is drawn from a stream of its own, so a reroll of the blocks keeps the harmony and the sounds, a reroll of the moves (the automation) keeps every note, and a reroll of the figure draws another motif for the same voice.

The + and - beside the status line rate the track under the playhead. The ratings are kept in Documents/Totality/ratings.tsv with the track's archetype and the groups of its presets; with Favor Ratings (the Set page) the composer draws the archetypes and preset groups you liked more often and the ones you did not seldom -- none is ever ruled out. A saved set does not carry the ratings: it plays back the same only with Favor Ratings off.

Patterns and the Eclipse

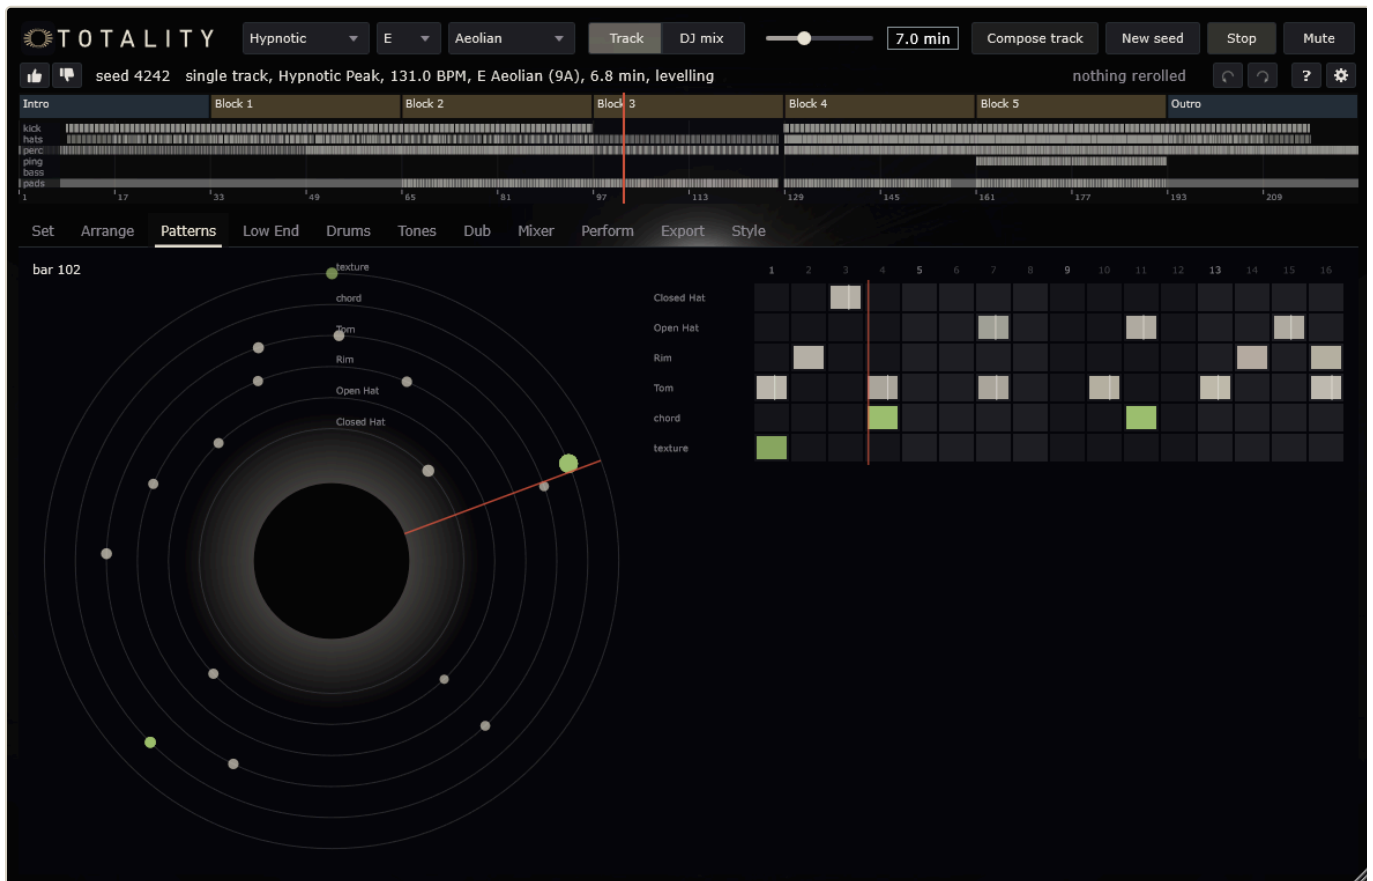

The kick is the dark disc in the middle, and every other part that plays in the bar is a ring around it: a bar once round, its onsets as beads, larger the louder, the playhead's hand sweeping over them. A layer on the sixteen-step matrix shows the same beads bar after bar; a polymeter or a slipping layer moves on from bar to bar -- it precesses, and you can see it. Where three rings or more have an onset on the same sixteenth, the corona lights up at that angle: a conjunction. Beside it the same bar as a step grid, with a tick where an onset lies off the grid (swing and feel).

Low End



The low end is one system. The kick hands its phase on: the rumble's sub continues the kick's tail at the phase the kick left it, and the sub bass locks its phase to the last kick, so the three never cancel each other. The kick

has three engines (a swept sine, a resonator, a modelled 909) and a top layer; its drive runs at four times the rate.

The rumble is the kick sent into a hall, cut below the split, clipped and ducked by the next kick -- the dark roll of Berlin techno. Either the rumble or the sub bass owns the band under 80 Hz (compose.low_owner): never both at once.

KICK

Control	Key	Range	Default
Engine	kick.engine	Sweep, Resonator, 909	Sweep
Tune	kick.tune	Free, Key, Fifth, Flat Seventh	Key
Pitch End	kick.pitch_end	30 .. 120 Hz	52 Hz
Pitch Start	kick.pitch_start	60 .. 1500 Hz	300 Hz
Body Decay	kick.pitch_decay	5 .. 300 ms	18 ms
Punch Decay	kick.punch_decay	0.5 .. 20 ms	3 ms
Punch	kick.punch	0 .. 1	0.45
Attack	kick.amp_attack	0 .. 10 ms	0.2 ms
Hold	kick.amp_hold	0 .. 150 ms	25 ms
Decay	kick.amp_decay	20 .. 1500 ms	380 ms
Drive	kick.drive	0 .. 1	0.35
Clip	kick.clip	Soft, Hard	Soft
Click	kick.click_level	0 .. 1	0.35
Click Tone	kick.click_tone	500 .. 12000 Hz	3000 Hz
Click Decay	kick.click_decay	0.5 .. 30 ms	6 ms
Tone	kick.tone	200 .. 20000 Hz	6000 Hz
Level	kick.level	-36 .. 6 dB	-3 dB
Tail Limit	kick.tail_limit	-60 .. 0 dB	0 dB
Low Cut	kick.low_cut	15 .. 60 Hz	30 Hz
Dip Freq	kick.dip_freq	200 .. 1500 Hz	500 Hz
Dip	kick.dip	-12 .. 0 dB	-3 dB
Top Level	kick.top_level	-60 .. 0 dB	-12 dB
Top Pitch	kick.top_pitch	-24 .. 0 st	-8 st
Top Decay	kick.top_decay	20 .. 400 ms	90 ms
Top Drive	kick.top_drive	0 .. 1	0.6
Top Cut	kick.top_cut	150 .. 2000 Hz	400 Hz

RUMBLE

Control	Key	Range	Default
Level	rumble.level	-60 .. 6 dB	-9 dB
Split	rumble.split	50 .. 150 Hz	80 Hz
Decay	rumble.decay	0.5 .. 6 s	1.8 s

Size	rumble.size	0.3 .. 3	1
Damping	rumble.damping	0 .. 1	0.5
Pre-Delay	rumble.predelay	0 .. 60 ms	0 ms
Drive	rumble.drive	0 .. 18 dB	6 dB
Low Pass	rumble.ratio	1.5 .. 6 x f0	3 x f0
Resonance	rumble.resonance	0 .. 1	0.15
Sub	rumble.sub	-60 .. 6 dB	0 dB
Sub Attack	rumble.sub_attack	5 .. 200 ms	25 ms
Sub Release	rumble.sub_release	50 .. 2000 ms	300 ms
Duck	rumble.duck	0 .. 24 dB	7 dB
Duck Hold	rumble.duck_hold	0 .. 250 ms	80 ms
Duck Release	rumble.duck_release	30 .. 600 ms	220 ms

SUB

Control	Key	Range	Default
Level	sub.level	-60 .. 6 dB	-6 dB
Octave	sub.octave	-2 .. 2	0
Attack	sub.attack	0.5 .. 50 ms	3 ms
Decay	sub.decay	20 .. 2000 ms	250 ms
Sustain	sub.sustain	0 .. 1	0.7
Release	sub.release	10 .. 800 ms	90 ms
Low Pass	sub.low_pass	40 .. 300 Hz	110 Hz
Drive	sub.drive	0 .. 1	0.1
Kick Lock	sub.lock	Off, Kick	Kick
Duck	sub.duck	0 .. 24 dB	9 dB
Duck Hold	sub.duck_hold	0 .. 250 ms	40 ms
Duck Release	sub.duck_release	30 .. 600 ms	180 ms

Drums



Twelve lanes, each a small drum synthesiser: a role (the closed and rolling hats, the open hat, the ride, the claps, the snare, the rim, the shaker, toms and congas, noise), an engine (noise, metal -- the 909's six square waves -- modal, tone, FM), a filter, a shape. They run side by side in the lanes of the processor's vector registers. The hats and the percussion each have a bus with its level and a low pass, then the drum bus's saturation; the ducks let the pads and the rooms step aside for the kick, band by band.

PERC (12 INSTANCES)

Control	Key	Range	Default
Active	percN.active	off / on	on
Role	percN.role	Closed Hat, Rolling Hat, Open Hat, Ride, Clap, Clap Ghost, Snare, Rim, Shaker, Tom, Conga, Noise	Closed Hat
Engine	percN.engine	Noise, Metal, Modal, Tone, FM	Noise
Pitch	percN.pitch	40 .. 12000 Hz	400 Hz
Pitch Amount	percN.pitch_amount	1 .. 16 x	1 x
Pitch Decay	percN.pitch_decay	0.5 .. 300 ms	10 ms
FM Ratio	percN.fm_ratio	0.25 .. 8	1.41
FM Index	percN.fm_index	0 .. 8	0
Modes	percN.mode_set	Membrane, Bar, Harmonic	Membrane

Mode Damping	percN.mode_damp	0 .. 1	0.5
Metal Scale	percN.metal_scale	0.25 .. 4 x	1 x
Noise	percN.noise	0 .. 1	1
Noise Decay	percN.noise_decay	2 .. 3000 ms	70 ms
Bursts	percN.bursts	1 .. 6	1
Burst Spacing	percN.burst_spacing	2 .. 40 ms	10 ms
Decay	percN.decay	2 .. 3000 ms	70 ms
Filter	percN.filter	Low Pass, Band Pass, High Pass	High Pass
Cutoff	percN.cutoff	100 .. 18000 Hz	7000 Hz
Resonance	percN.resonance	0 .. 1	0.15
Low Cut	percN.low_cut	150 .. 8000 Hz	3000 Hz
Drive	percN.drive	0 .. 1	0.1
Level	percN.level	-36 .. 6 dB	-0.7 dB
Pan	percN.pan	-1 .. 1	0.1
Choke Group	percN.choke	0 .. 4	1
Shift	percN.shift	-10 .. 10 ms	0 ms
Density	percN.density	0 .. 1	0.5
Tune to Key	percN.tune	off / on	off
Pan Depth	percN.pan_depth	0 .. 1	0.3
Pan Period	percN.panBars	0.0625 .. 16 bars	0.1875 bars
Cut Tracks Pitch	percN.cut_track	0 .. 2	0
Noise Type	percN.noise_type	White, 909 Metal	909 Metal

MIX

Control	Key	Range	Default
Hats Level	mix.hats_level	-24 .. 12 dB	-3.5 dB
Hats Cut	mix.hats_cut	200 .. 20000 Hz	20000 Hz
Perc Level	mix.perc_level	-24 .. 12 dB	-6.5 dB
Perc Cut	mix.perc_cut	200 .. 20000 Hz	20000 Hz
Drum Saturation	mix.drum_sat	0 .. 1	0.35
Duck Low	mix.duck_low	0 .. 18 dB	10 dB
Duck Mid	mix.duck_mid	0 .. 12 dB	3 dB
Group Low Cut	mix.low_cut	20 .. 500 Hz	20 Hz

Tones



The ping is the hypnotic school's figure: FM through a low-pass gate, a band pass that wanders. The bass and the 303 share one synthesiser with ten circuit filters (the Moog ladder, the 303's diode ladder, the Prophet's SSM2040, the Juno's IR3109, the SEM, the MS-20's Korg35 and more); the 303 line has its accents and slides. The dub chord is a minor seventh or a stab of six voices through a band pass, a crusher and a phaser, sent into the tape echo and the plate. The drone holds a note under eight bars; the texture is vinyl crackle, hum and erosion.

PING

Control	Key	Range	Default
Level	ping.level	-60 .. 6 dB	-12.5 dB
Pan	ping.pan	-1 .. 1	0
Width	ping.width	0 .. 1	0.5
Ratio	ping.ratio	0.25 .. 8	1.414
Index	ping.index	0 .. 6	2
Index Decay	ping.index_decay	2 .. 500 ms	60 ms
Pitch Amount	ping.pitch_amount	0 .. 4	0.8
Pitch Decay	ping.pitch_decay	2 .. 300 ms	45 ms
Decay	ping.decay	10 .. 2000 ms	140 ms
Low-Pass Gate	ping.lpg	0 .. 1	0.6
Gate Release	ping.lpg_release	10 .. 2000 ms	150 ms
Resonance	ping.resonance	0 .. 1	0.35
Band	ping.band	150 .. 6000 Hz	900 Hz
Band Q	ping.band_q	0.2 .. 8	0.8
Band Mix	ping.band_mix	0 .. 1	0.5
Sweep	ping.sweep	0 .. 2 oct	0.6 oct
Sweep Rate	ping.sweep_rate	0.01 .. 2 Hz	0.07 Hz

BASS

Control	Key	Range	Default
Level	bass.level	-60 .. 6 dB	-9 dB
Pan	bass.pan	-1 .. 1	0
Wave	bass.wave	0 .. 1	0
Pulse Width	bass.pulse_width	0.05 .. 0.95	0.5
Sub Osc	bass.sub_osc	0 .. 1	0.3
Filter	bass.filter	Moog Ladder, Prophet (SSM2040), Juno (IR3109), Oberheim SEM, Xpander, Diode Ladder (303), Korg35 (MS-20), Polivoks, EDP Wasp, Comb	Juno (IR3109)
Cutoff	bass.cutoff	40 .. 12000 Hz	350 Hz
Resonance	bass.resonance	0 .. 1	0.2
Env Amount	bass.env_amount	0 .. 6 oct	2 oct
Decay	bass.decay	5 .. 3000 ms	180 ms

Accent	bass.accent	0 .. 1	0.3
Attack	bass.amp_attack	0.5 .. 500 ms	3 ms
Amp Decay	bass.amp_decay	5 .. 3000 ms	250 ms
Sustain	bass.amp_sustain	0 .. 1	0.6
Release	bass.amp_release	5 .. 3000 ms	300 ms
Glide	bass.glide	0 .. 500 ms	0 ms
Drive	bass.drive	0 .. 1	0.2
Key Track	bass.key_track	0 .. 1	0.5
Low Cut	bass.low_cut	20 .. 500 Hz	65 Hz
High Cut	bass.high_cut	500 .. 20000 Hz	5000 Hz
Dub Send	bass.dub_send	0 .. 1	0
Room Send	bass.room_send	0 .. 1	0
Duck	bass.duck	0 .. 24 dB	8 dB
Duck Release	bass.duck_release	30 .. 600 ms	200 ms

ACID

Control	Key	Range	Default
Level	acid.level	-60 .. 6 dB	-14 dB
Pan	acid.pan	-1 .. 1	0.1
Wave	acid.wave	0 .. 1	0
Pulse Width	acid.pulse_width	0.05 .. 0.95	0.5
Sub Osc	acid.sub_osc	0 .. 1	0
Filter	acid.filter	Moog Ladder, Prophet (SSM2040), Juno (IR3109), Oberheim SEM, Xpander, Diode Ladder (303), Korg35 (MS-20), Polivoks, EDP Wasp, Comb	Diode Ladder (303)
Cutoff	acid.cutoff	40 .. 12000 Hz	600 Hz
Resonance	acid.resonance	0 .. 1	0.72
Env Amount	acid.env_amount	0 .. 6 oct	2.5 oct
Decay	acid.decay	5 .. 3000 ms	220 ms
Accent	acid.accent	0 .. 1	0.6
Attack	acid.amp_attack	0.5 .. 500 ms	3 ms
Amp Decay	acid.amp_decay	5 .. 3000 ms	250 ms
Sustain	acid.amp_sustain	0 .. 1	0.8
Release	acid.amp_release	5 .. 3000 ms	60 ms
Glide	acid.glide	0 .. 500 ms	60 ms
Drive	acid.drive	0 .. 1	0.5
Key Track	acid.key_track	0 .. 1	0.3
Low Cut	acid.low_cut	20 .. 500 Hz	120 Hz
High Cut	acid.high_cut	500 .. 20000 Hz	9000 Hz

Dub Send	acid.dub_send	0 .. 1	0.25
Room Send	acid.room_send	0 .. 1	0.01
Duck	acid.duck	0 .. 24 dB	4 dB
Duck Release	acid.duck_release	30 .. 600 ms	200 ms

CHORD

Control	Key	Range	Default
Level	chord.level	-60 .. 6 dB	-5 dB
Width	chord.width	0 .. 1	0.6
Detune	chord.detune	0 .. 30 ct	10 ct
Octave	chord.octave	-2 .. 2	0
Attack	chord.attack	0.5 .. 500 ms	10 ms
Decay	chord.decay	20 .. 3000 ms	300 ms
Sustain	chord.sustain	0 .. 1	0.15
Release	chord.release	10 .. 3000 ms	400 ms
Brightness	chord.bright	200 .. 12000 Hz	2500 Hz
Env Amount	chord.env_amount	0 .. 5 oct	1.5 oct
Band	chord.band	100 .. 3000 Hz	380 Hz
Band Mode	chord.band_mode	Band Pass, High Pass	Band Pass
Band Q	chord.band_q	0.2 .. 4	0.7
Sweep	chord.sweep	0 .. 2 oct	0.5 oct
Sweep Rate	chord.sweep_rate	0.01 .. 2 Hz	0.2 Hz
Bits	chord.crush	4 .. 16	8
Crush Mix	chord.crush_mix	0 .. 1	0.2
Phaser	chord.phaser	0 .. 1	0.5
Phaser Rate	chord.phaser_rate	0.05 .. 4 Hz	0.5 Hz
Dip 600 Hz	chord.dip	-18 .. 0 dB	-7 dB
Dub Send	chord.dub_send	0 .. 1	0.5
Plate Send	chord.plate_send	0 .. 1	0.35

DRONE

Control	Key	Range	Default
Level	drone.level	-60 .. 6 dB	-13 dB
Octave	drone.octave	-2 .. 2	0
Detune	drone.detune	0 .. 30 ct	8 ct
Cutoff	drone.cutoff	80 .. 8000 Hz	700 Hz
Resonance	drone.resonance	0 .. 1	0.25
Sweep	drone.sweep	0 .. 4 oct	1.5 oct
Sweep Bars	drone.sweep_bars	4 .. 128 bars	32 bars

Attack	drone.attack	0.01 .. 20 s	4 s
Release	drone.release	0.01 .. 20 s	6 s
Plate Send	drone.plate_send	0 .. 1	0.4
Room Send	drone.room_send	0 .. 1	0.02

TEXTURE

Control	Key	Range	Default
Level	texture.level	-60 .. 0 dB	-26 dB
Crackle	texture.crackle	0 .. 1	0.5
Hum	texture.hum	0 .. 1	0.2
Hum Freq	texture.hum_hz	40 .. 70 Hz	50 Hz
Erosion	texture.erosion	0 .. 1	0.4
Width	texture.width	0 .. 1	0.8

Dub



The dub chain: a tape echo with wow, flutter and drive, a spring, a plate. The ping, the chord and the kit's buses send into it, and the composer throws single hits into the echo on the 8-bar lines. The room is the hall the hats, the percussion and the ping live in; the grain cloud hears the ping and the chord and scatters them.

DUB

Control	Key	Range	Default
Echo Time	dub.echo_time	1/16, 1/8, 3/16, 1/4, 3/8, 1/2	3/16
Feedback	dub.feedback	0 .. 1.2	0.25
Echo Tone	dub.tone	800 .. 12000 Hz	4500 Hz
Echo Low Cut	dub.low_cut	40 .. 800 Hz	200 Hz
Wow	dub.wow	0 .. 3 ms	0.5 ms
Flutter	dub.flutter	0 .. 0.5 ms	0.05 ms
Echo Drive	dub.drive	0 .. 18 dB	4 dB
Echo Return	dub.echo_return	-60 .. 6 dB	-3 dB
Spring Return	dub.spring	-60 .. 6 dB	-9 dB
Spring Decay	dub.spring_decay	0.3 .. 6 s	2 s

Plate Decay	dub.plate_decay	0.5 .. 12 s	4.2 s
Plate Damping	dub.plate_damping	0 .. 1	0.4
Plate Pre-Delay	dub.plate_predelay	0 .. 100 ms	20 ms
Plate Low Cut	dub.plate_low_cut	60 .. 800 Hz	250 Hz
Plate Return	dub.plate_return	-60 .. 18 dB	6 dB
Ping to Echo	dub.ping_send	0 .. 1	0.12
Hats to Echo	dub.hats_send	0 .. 1	0
Perc to Echo	dub.perc_send	0 .. 1	0

SPACE

Control	Key	Range	Default
Return	space.level	-60 .. 12 dB	0 dB
Size	space.size	0.3 .. 3	0.9
Decay	space.decay	0.2 .. 12 s	1.2 s
Damping	space.damping	0 .. 1	0.5
Pre-Delay	space.predelay	0 .. 100 ms	15 ms
Low Cut	space.low_cut	60 .. 800 Hz	250 Hz
High Cut	space.high_cut	1000 .. 18000 Hz	6000 Hz
Hats Send	space.hats_send	0 .. 1	0.25
Perc Send	space.perc_send	0 .. 1	0.3
Ping Send	space.ping_send	0 .. 1	0.4

CLOUD

Control	Key	Range	Default
Level	cloud.level	-60 .. 6 dB	-60 dB
Density	cloud.density	0.5 .. 60 /s	12 /s
Grain Size	cloud.size	20 .. 1000 ms	180 ms
Pitch	cloud.pitch	0 .. 1	0.3
Spray	cloud.spray	0.05 .. 4.5 s	2 s
From Ping	cloud.ping_send	0 .. 1	0.8
From Chord	cloud.chord_send	0 .. 1	0.6
Plate Send	cloud.plate_send	0 .. 1	0.5

Mixer and Master



The Mixer tab has three pages. Console: a channel strip per part -- kick, rumble, sub, the kit's lanes, the tonal voices, the dub -- with its level, its mute, its sound and its meter, and the output with its loudness at the end (a narrow window scrolls the console sideways). Buses and Master: the parameters below. Decks: the DJ mixer's channels.

The meters: each deck after its mixer channel, the output, and the loudness of the last 400 ms. Each deck's track bus has a group high pass (the form's filter sweeps), a tilt of the highs against the lows, and the glue -- a bus compressor mixed in at 35 per cent -- after which the loudness correction sits. The master keeps the side under Mono Below mono, sets the level, has an optional vinyl cut, a clipper at four times the rate and a true-peak limiter.

The motion is the free-running modulation of the whole instrument: the hats' cutoff and level, their decay, the percussion's cutoff, the rumble's drive, slow LFOs of prime periods that never line up.

A deck's channel is a DJ mixer's: the fader, a three-band isolator (200 Hz and 2.5 kHz, Linkwitz-Riley, each band from a kill to +6 dB), a filter that is a low pass to the left and a high pass to the right, and the send into the mixer's effects. In a set the composer moves them as a DJ would; in the plugin they are yours too.

MIX

Control	Key	Range	Default
Hats Level	<code>mix.hats_level</code>	-24 .. 12 dB	-3.5 dB
Hats Cut	<code>mix.hats_cut</code>	200 .. 20000 Hz	20000 Hz
Perc Level	<code>mix.perc_level</code>	-24 .. 12 dB	-6.5 dB

Perc Cut	mix.perc_cut	200 .. 20000 Hz	20000 Hz
Drum Saturation	mix.drum_sat	0 .. 1	0.35
Duck Low	mix.duck_low	0 .. 18 dB	10 dB
Duck Mid	mix.duck_mid	0 .. 12 dB	3 dB
Group Low Cut	mix.low_cut	20 .. 500 Hz	20 Hz

MASTER

Control	Key	Range	Default
Level	master.level	-24 .. 12 dB	0 dB
Glue Threshold	master.threshold	-40 .. 0 dB	-16 dB
Glue Ratio	master.ratio	1 .. 10	2
Clip Drive	master.clip	0 .. 9 dB	2 dB
Ceiling	master.ceiling	-6 .. 0 dBTP	-1 dBTP
Mono Below	master.mono_below	40 .. 250 Hz	120 Hz
Tilt	master.tilt	-12 .. 12 dB	10 dB
Vinyl Cut	master.cut	off / on	off


MOTION

Control	Key	Range	Default
Amount	motion.amount	0 .. 1	1
Hats Cut	motion.hats_cut	0 .. 1.5 oct	0.4 oct
Hats Level	motion.hats_level	0 .. 6 dB	1.5 dB
Hat Decay	motion.hat_decay	0 .. 0.5	0.2
Perc Cut	motion.perc_cut	0 .. 1.5 oct	0.4 oct
Rumble Drive	motion.rumble_drive	0 .. 6 dB	2 dB

DECK (3 INSTANCES)

Control	Key	Range	Default
Fader	deckN.fader	-60 .. 6 dB	0 dB
Low	deckN.low	-60 .. 6 dB	0 dB
Mid	deckN.mid	-60 .. 6 dB	0 dB
High	deckN.high	-60 .. 6 dB	0 dB
Filter	deckN.filter	-1 .. 1	0
FX Send	deckN.fx_send	0 .. 1	0

Perform

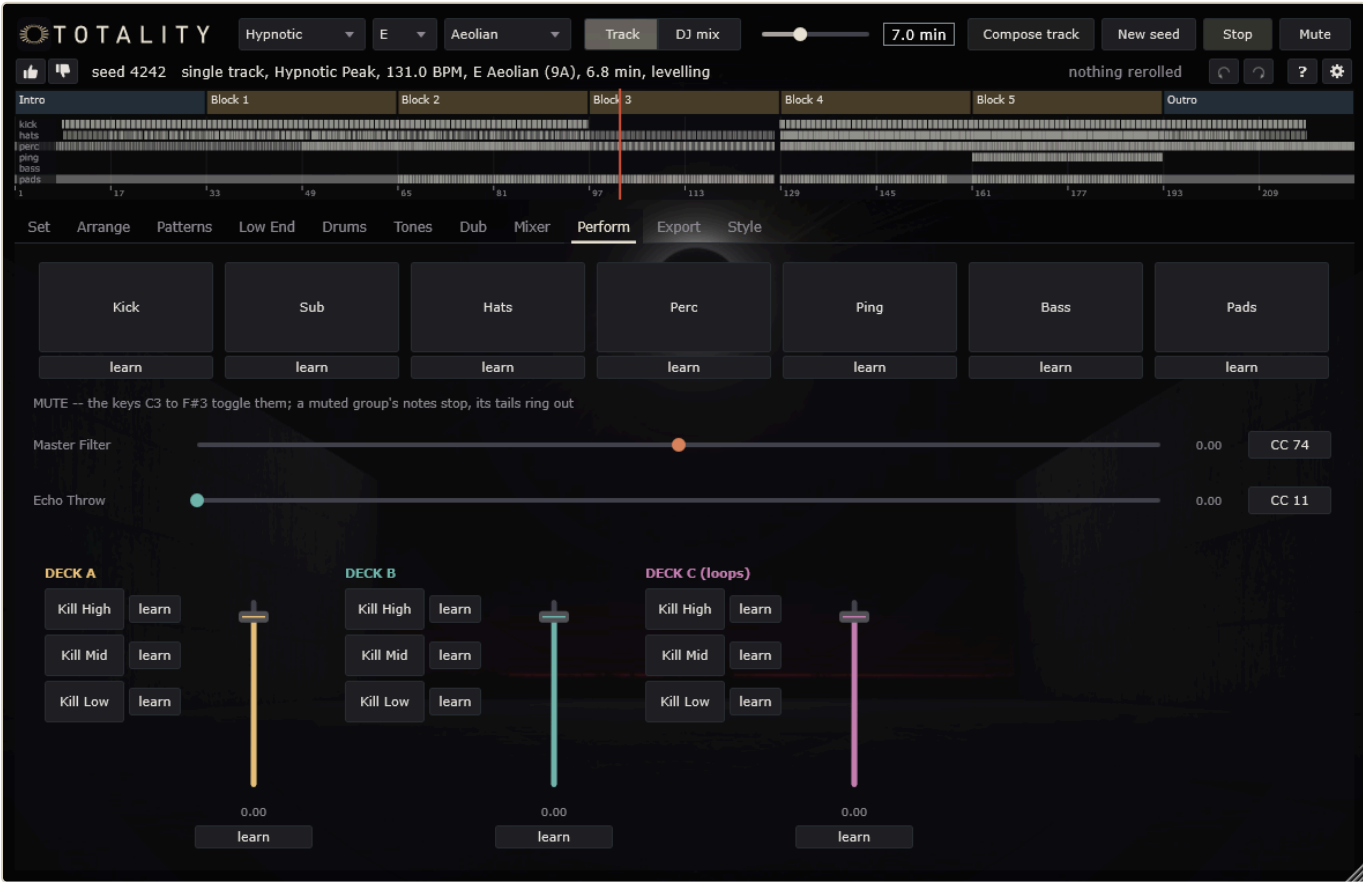

As at a mixer. Seven mutes: a muted group's notes stop and its tails ring out -- the kick out, the classic move. The master filter takes the whole mix, the echo throw sends it into the mixer's tape echo. Each deck has its kills and its fader. Every control can be learned from a MIDI controller: click learn, move the controller (a right click forgets it). By default controller 74 (brightness) moves the filter and the expression pedal (11) the throw -- the same in every generator of the family --, and the keys from middle C up (C to F#) toggle the mutes of kick, sub, hats, perc, ping, bass and pads. The bindings are saved with the project. While a headset sends its hands, a box beside the mutes shows what they do (The panel).

The perform controls are live only: an export or tot_render plays the track as it was composed.

PERFORM

Control	Key	Range	Default
Master Filter	perform.filter	-1 .. 1	0
Echo Throw	perform.throw	0 .. 1	0
Mute Kick	perform.mute_kick	off / on	off
Mute Sub	perform.mute_sub	off / on	off
Mute Hats	perform.mute_hats	off / on	off
Mute Perc	perform.mute_perc	off / on	off
Mute Ping	perform.mute_ping	off / on	off
Mute Bass	perform.mute_bass	off / on	off
Mute Pads	perform.mute_pads	off / on	off

Export and cues

TOTALITY

Hypnotic

E

Aeolian

Track

DJ mix

7.0 min

Compose track

New seed

Stop

Mute

seed 4242

single track, Hypnotic Peak, 131.0 BPM, E Aeolian (9A), 6.8 min, levelling

nothing rerolled

Intro

Block 1

Block 2

Block 3

Block 4

Block 5

Outro

kick

hats

perc

ping

bass

pads

1

17

33

49

65

81

97

113

129

145

161

177

193

209

Set

Arrange

Patterns

Low End

Drums

Tones

Dub

Mixer

Perform

Export

Style

WAV + MIDI + cues

... with stems

... with DJ loops

... with both

Save .totset

Load .totset

seed 4242

single track, Hypnotic Peak, 131.0 BPM, E Aeolian (9A), 6.8 min, levelling

The export renders what plays as it was composed (the performer's mutes, filter and throw are live only) at 48 kHz:

- a 24-bit WAV with its cues as markers (the bass's entry, the kick-outs and returns, the outro; in a set every track, swap and loop) and the same cues as JSON beside it (<name>.wav.cues.json),

- the MIDI file with the tempo map and a channel per part,

- with stems: a 32-bit WAV per element into <name>_stems; their sum is the mix before the master, exactly,

- with DJ loops (a track): 4 and 8 bars of its loudest block, seamless, the mix and kick, hats and perc alone.

An .totset holds the seed, the lengths, the rerolls and every changed knob.

OSC CUES

OSC Cues

OSC Port

9000

TOTALITY

Hypnotic

A#

Phrygian

Track

DJ mix

40 min

Compose mix

New seed

Stop

Mute

seed 5

DJ mix of 11 tracks, Peak, 41.0 min, levelling

nothing rerolled

T1 Hypnotic 8A

T2 Hypnotic 2A

T3 Hypnotic 2A

T4 Ostgut 8A

T5 Ostgut 4A

T6 Ostgut 11A

T7 Ostgut 12A

T8 Ostgut 12A

T9 Ostgut 1A

T10 Ostgut 12A

T11 Ostgut 1A

kick

hats

perc

ping

bass

pads

0:00

2:00

4:00

6:00

8:00

10:00

12:00

14:00

16:00

18:00

20:00

22:00

24:00

26:00

28:00

30:00

32:00

34:00

36:00

38:00

40:00

Set

Arrange

Patterns

Low End

Drums

Tones

Dub

Mixer

Perform

Export

Style

Track 3 of 11 in the mix: Hypnotic Tribal, Arc, 129.0 BPM, D# Aeolian (2A), 224 bars, the rumble owns the low end, bar similarity 0.86; figure: the ping from bar 65, waves land on 129 161 193

Sounds: kick Dusky Silo, rumble Morning Stadium, sub Open Umbra, ping Golden Harp, bass Firm Pluck, acid Silty Swimmer, chord Dusty Crumble, drone Cool Kindling, texture Thick Speck

reroll form

reroll harmony

reroll rack

reroll layers

reroll blocks

reroll events

reroll moves

reroll sounds

reroll figure

reroll the whole track

reroll the mix's plan

T1 Hypnotic 8A

T2 Hypnotic 2A

T3 Hypnotic 2A

T4 Ostgut 8A

T5 Ostgut 4A

T6 Ostgut 11A

T7 Ostgut 12A

T8 Ostgut 12A

T9 Ostgut 1A

T10 Ostgut 12A

T11 Ostgut 1A

kick

hats

perc

ping

bass

pads

0:00

5:00

10:00

15:00

20:00

25:00

30:00

35:00

40:00

A DJ mix of 40 minutes on the Arrange page: its eleven tracks on two decks, their blends, the swaps, a ruler of minutes.

The export renders what plays at 48 kHz: a 24-bit WAV with cue markers (the bass's entry, the kick-outs and returns, the outro; in a set every track, swap and loop) and the same cues as JSON beside it, for DJ software that does not read the WAV's markers, and a rekordbox collection beside it (<name>.wav.rekordbox.xml: the beat grid, following a set's tempo ramps bar by bar, every cue a memory cue and the first eight hot cues; import it in rekordbox under Preferences > Advanced > rekordbox xml); the MIDI file with the tempo map and a channel per part; on request the stems -- a WAV per element, whose sum is exactly the mix before the master -- and the DJ loops of a track: 4 and 8 bars of its loudest block, seamless, as the mix and as kick, hats and percussion alone. An .totset file holds the seed, the lengths, the rerolls and every changed knob.

The OSC cues tell a visualiser such as Kaleidoscope what the score knows, at the moment it is heard: the beat and the tempo, the bar, the block's name, the form's operation, the key. They go to this machine at the port given, or to TOT_CUE_HOST.

```
/tot/beat i f      beat number, tempo
/tot/bar i        bar number
/tot/block s      the block's name ("Intro", "Block 3", "Reduction", a set's track)
/tot/op s         the operation ("add ride", "kick out")
/tot/key s        the key as a Camelot label ("8A")
```

CUE

Control	Key	Range	Default
OSC Cues	cue.enabled	off / on	off
OSC Port	cue.port	1024 .. 65535	9000

Style



The numbers of the profile the knobs describe, and the references' measurements per style that the profiles are fitted to. A style of your own: Take the profile's numbers, change what you like, switch Use on -- the tempo range, the weights of the three forms, the length, the rack's mutation and reroll, polymeters, fills, swing, the filtered edges, the longest kick-out, the events, the corridor of bar similarity the composer's candidates are chosen against, and the loudness the Leveler brings each track to.

CUSTOM

Control	Key	Range	Default
Use Custom Style	custom.use	off / on	off
Tempo Low	custom.bpm_low	120 .. 140 BPM	128 BPM
Tempo High	custom.bpm_high	120 .. 140 BPM	133 BPM
Arc Weight	custom.arc	0 .. 1	0.5
Peak Weight	custom.peak	0 .. 1	0.2
Endless Weight	custom.endless	0 .. 1	0.3
Sub Owns Low	custom.sub_chance	0 .. 1	0.3
Blocks Low	custom.blocks_low	4 .. 12	6
Blocks High	custom.blocks_high	4 .. 12	8
Mutation	custom.mutation	0 .. 1	0.25
Reroll	custom.reroll	0 .. 1	0.15

Polymer	custom.polymer	0 .. 1	0.8
Fills	custom.fill	0 .. 1	0.15
Filtered Edges	custom.edge	0 .. 1	0.5
Longest Kick-out	custom.max_reduction	4 .. 32 bars	32 bars
Swing Low	custom.swing_low	50 .. 62 %	51 %
Swing High	custom.swing_high	50 .. 62 %	56 %
Events	custom.event_rate	0 .. 1	0.35
Throw Share	custom.throw_share	0 .. 1	0.5
Density Cap	custom.density_cap	3 .. 12	9
Bar Similarity	custom.similarity	0.7 .. 1	0.9
Target LUFS	custom.peak_lufs	-14 .. -7 LUFS	-10 LUFS

Meta Quest

The whole generator runs on the headset (build-quest\TotalityQuest.apk, see Quest/README.md). The hands are the hands at the mixer: left pinch play and stop, right pinch kick out and in, both hands together the next track; the left hand's height the master filter, the right's the echo throw -- the grammar of every generator's headset (The panel). Above and ahead of the player the Eclipse turns at the size of a room. A file tot.cfg in the app's folder sets the seed, the style, a set's length and any knob; bridge_host (and bridge_port, 9103) send the hands to Totality on a computer instead, which then plays with them as with its own; audio=0 leaves the headset silent.

The command line

tot_render composes and renders without a window, the same samples the plugin plays:

```
tot_render --seed 7 --out track.wav --midi track.mid --stems stems --loops loops
tot_render --seed 2026 --set-minutes 120 --out set.wav --score-json set.json
tot_render --set "compose.style=Dub; compose.minutes=8" --seed 3 --out dub.wav
tot_render --list                every parameter with its value
tot_render --bench --quality quest how fast, at the headset's quality
```

The evaluation (Tools/eval_report.py) measures rendered tracks as the references were measured and writes a report of what lies outside their corridor.