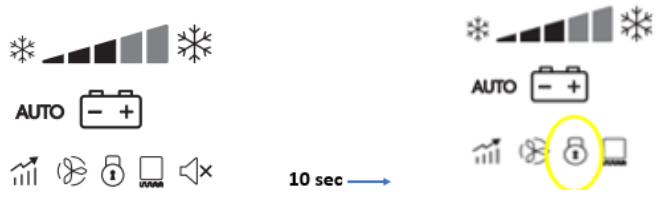
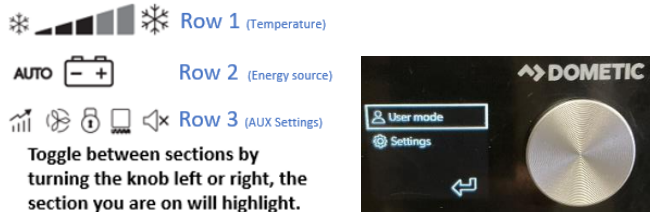


RUA upright absorption refrigerator– settings not adjustable

A common complaint is that the user is unable to adjust the temperature or other settings.
DON'T change the PCB!
It is most likely that the consumer has inadvertently selected the child lock option which is designed so that it is not possible for settings to be accidentally changed. Childlock function needs to be disabled to allow changes to any of the settings.

The padlock symbol highlighted in White colour at bottom of screen when you push the control knob means that the childlock is activated. (Other modes in operation are also displayed)	
Temporary disabling of child lock - If activated, push the control knob 3 times within 1.5 seconds to temporarily unlock the controls then a 4th time to change any selection. After 10 seconds without touching or scrolling the knob - child lock will be reactivated.	
Disabling of child lock – Push the control knob 3 times within 1.5 seconds to temporarily unlock the controls; within 10 seconds push the button a 4th time and turn the knob to highlight Row 3. Then push button again to bring up the user mode or settings screen. Select settings mode by scrolling & pushing the button.	
Once in settings mode, scroll to the padlock symbol; When the symbol is highlighted, press the button to turn off the highlighted blue lock. Press the “back arrow” to exit.	Child lock on – Child lock off  If symbol is highlighted Blue, it is on

Back arrow takes user back to main screen; if you do not push this arrow, the new setting will not be saved.