
OSSM

Toy Mounting Guide

Flange plates and Vac-U-Lock · Version 1.0.2

RESEARCH + DESIRE

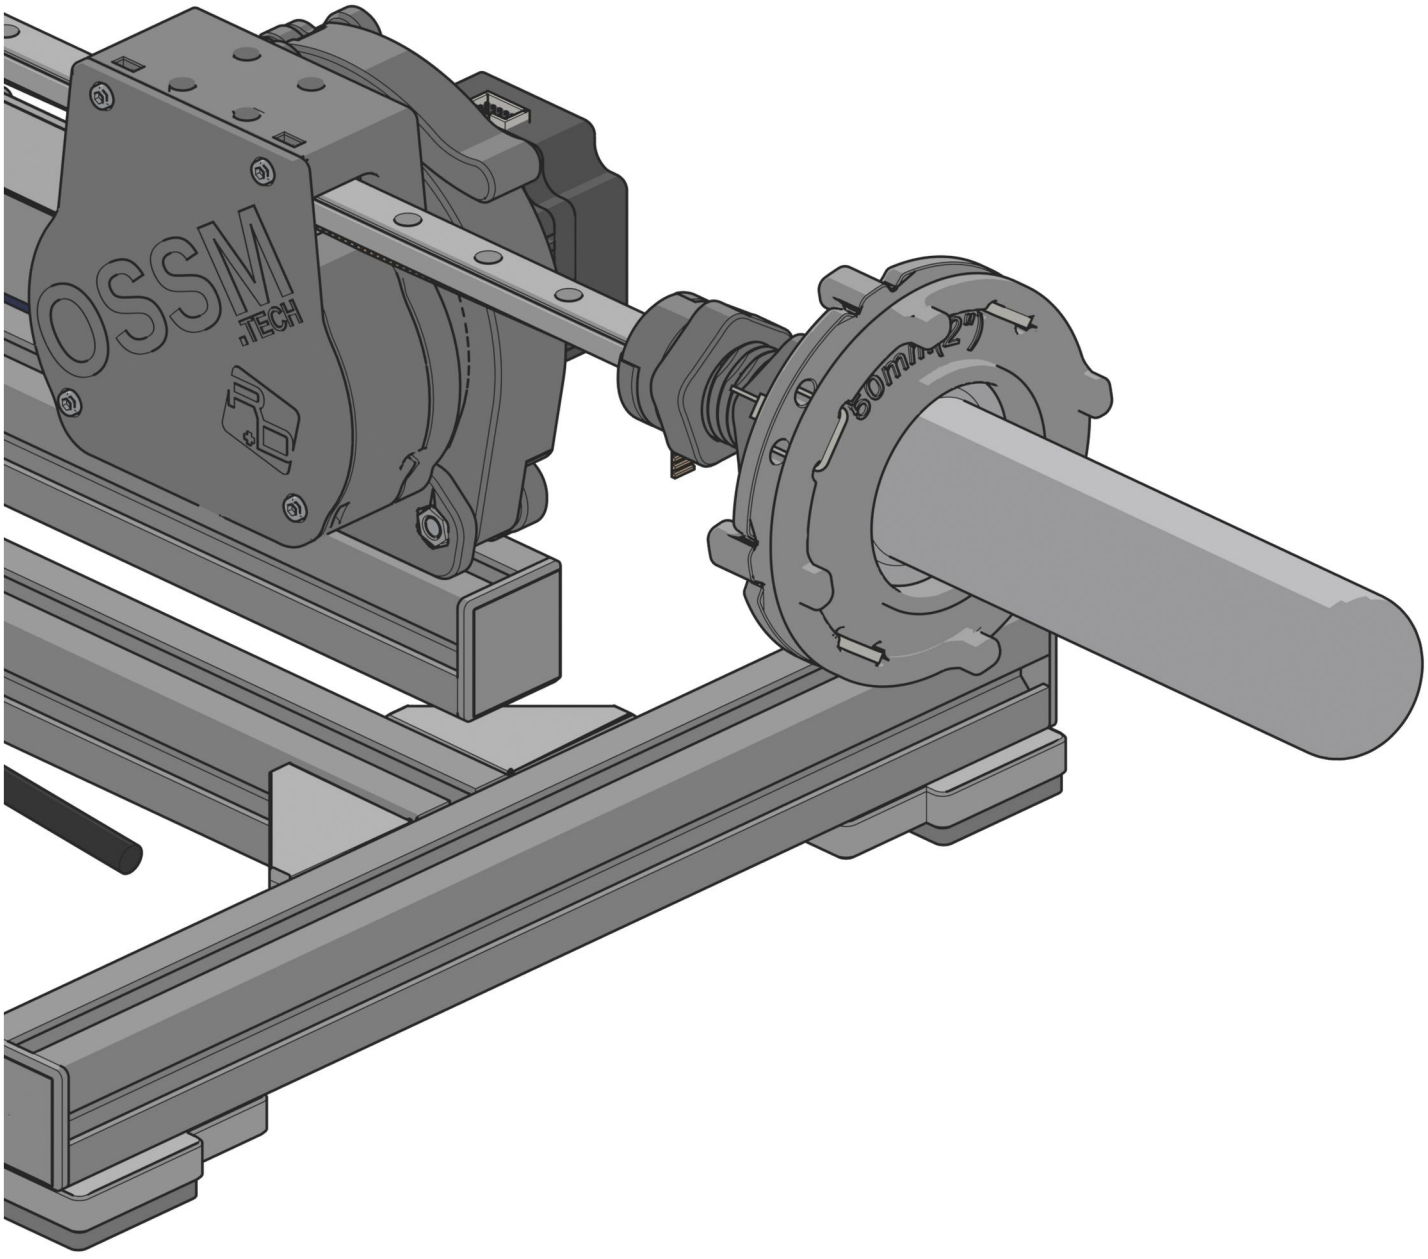


Support
support@researchanddesire.com


Assembly instructions
ohai.researchanddesire.com/ossm

Parts


3D printed

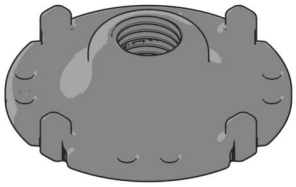


1×
Flange base

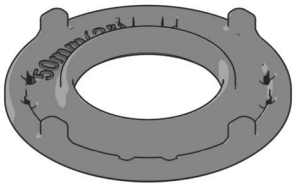


1×
50 mm
Flange ring

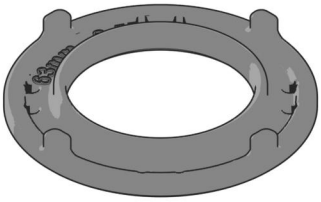

1×
63 mm
Flange ring

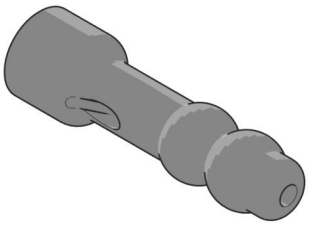


1×
Vac-U-Lock
adapter




1×
Lock nut


Not in the kit

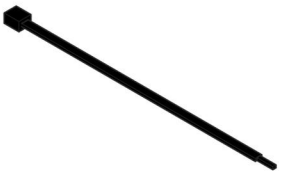

4×
Cable tie

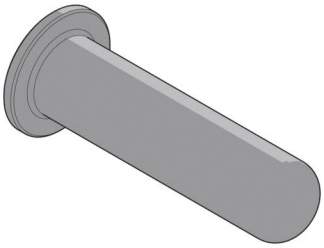


1×
Toy

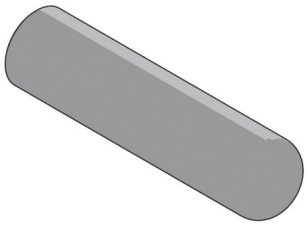


1×
Vac-U-Lock toy

1 Flange plates

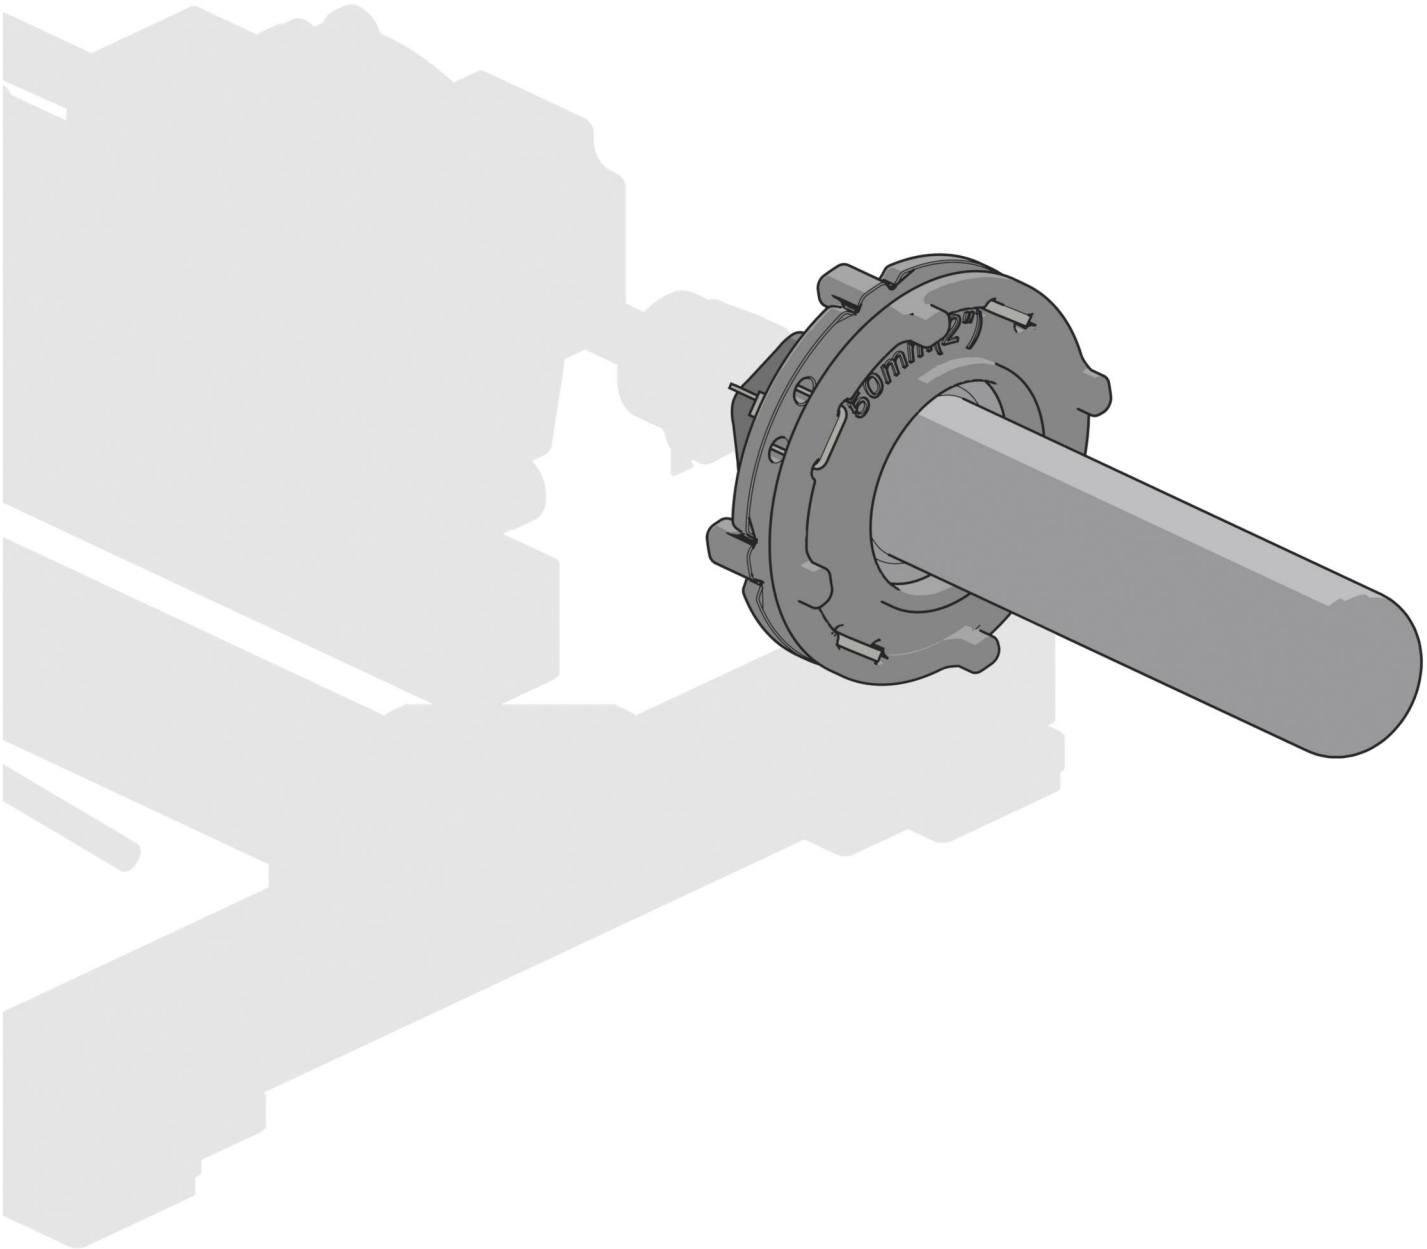


1




1×

Lock nut

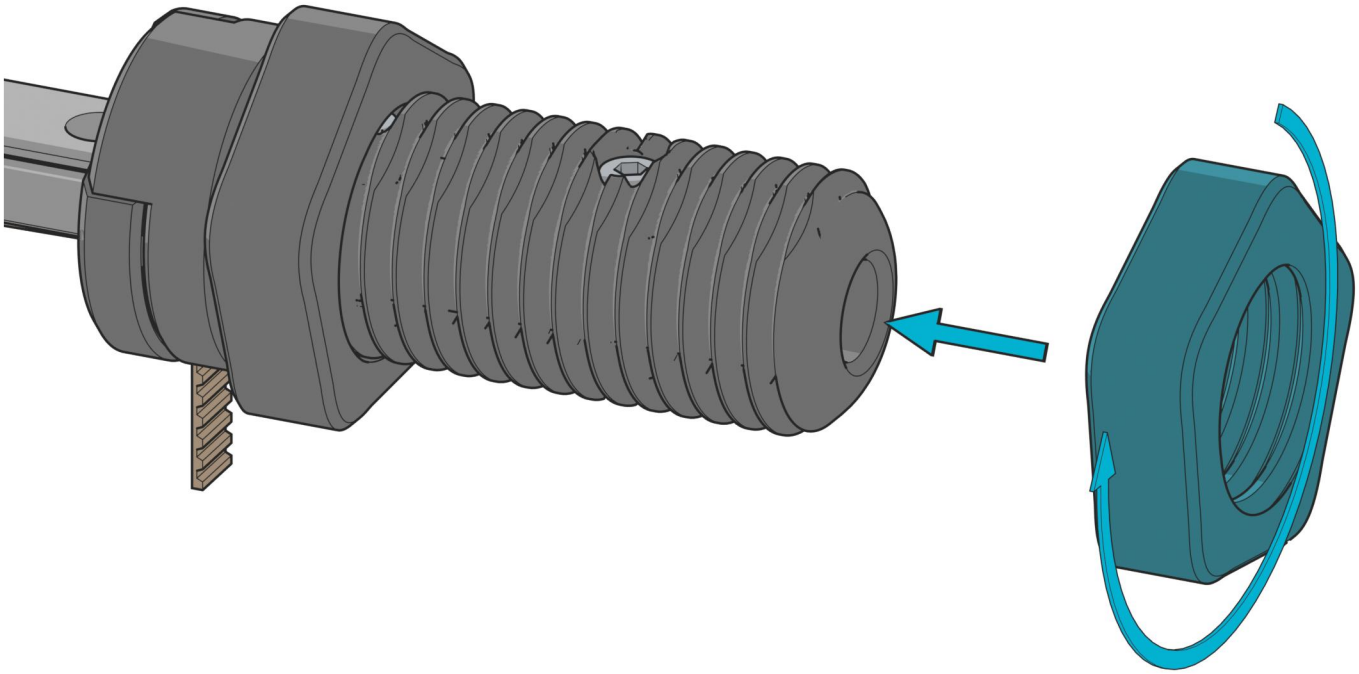


2

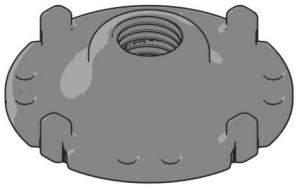


1×

Flange base

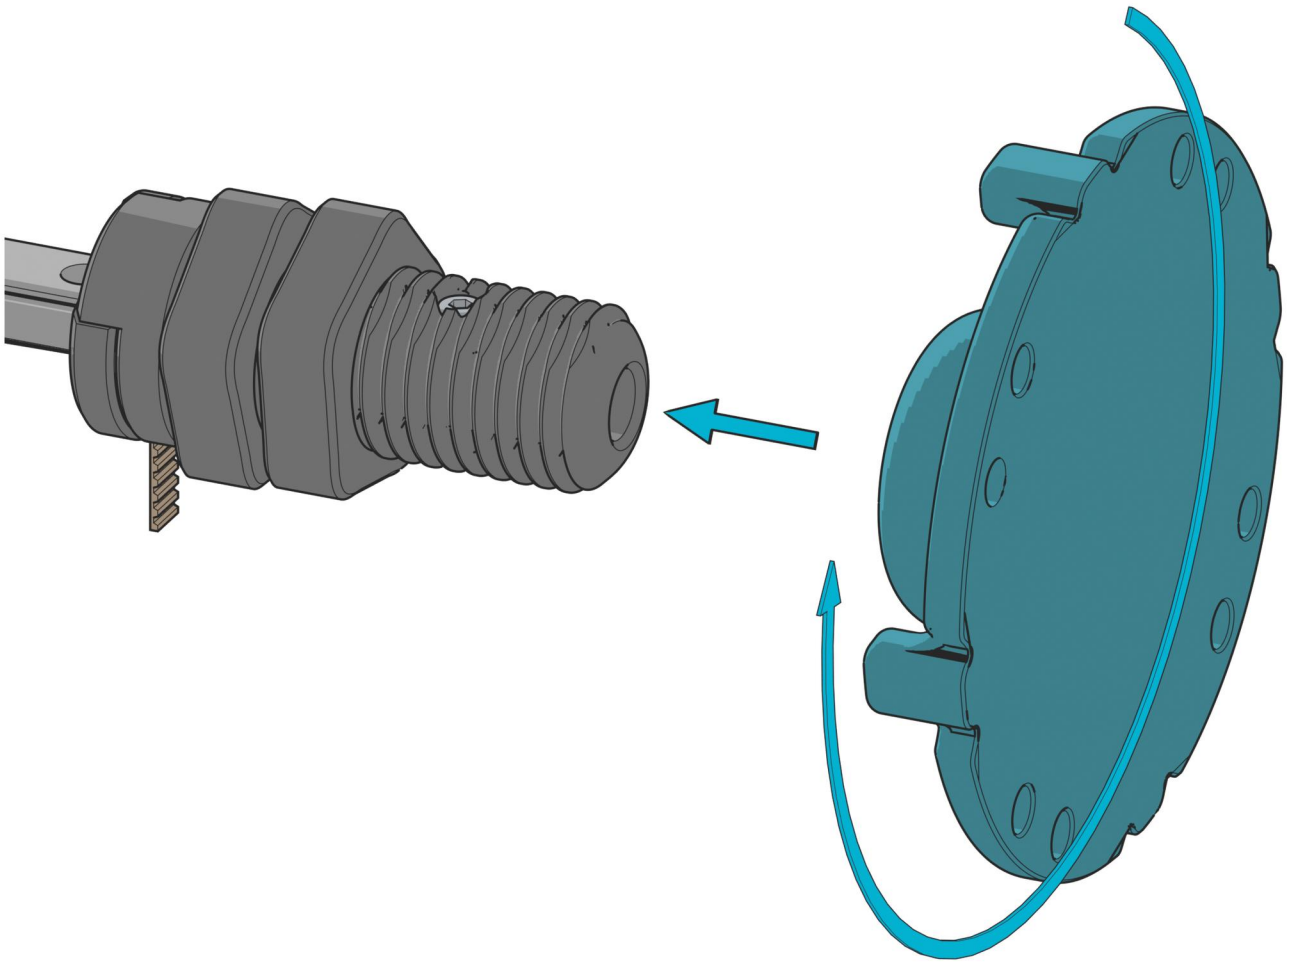


Turn it on by hand until it stops.

3

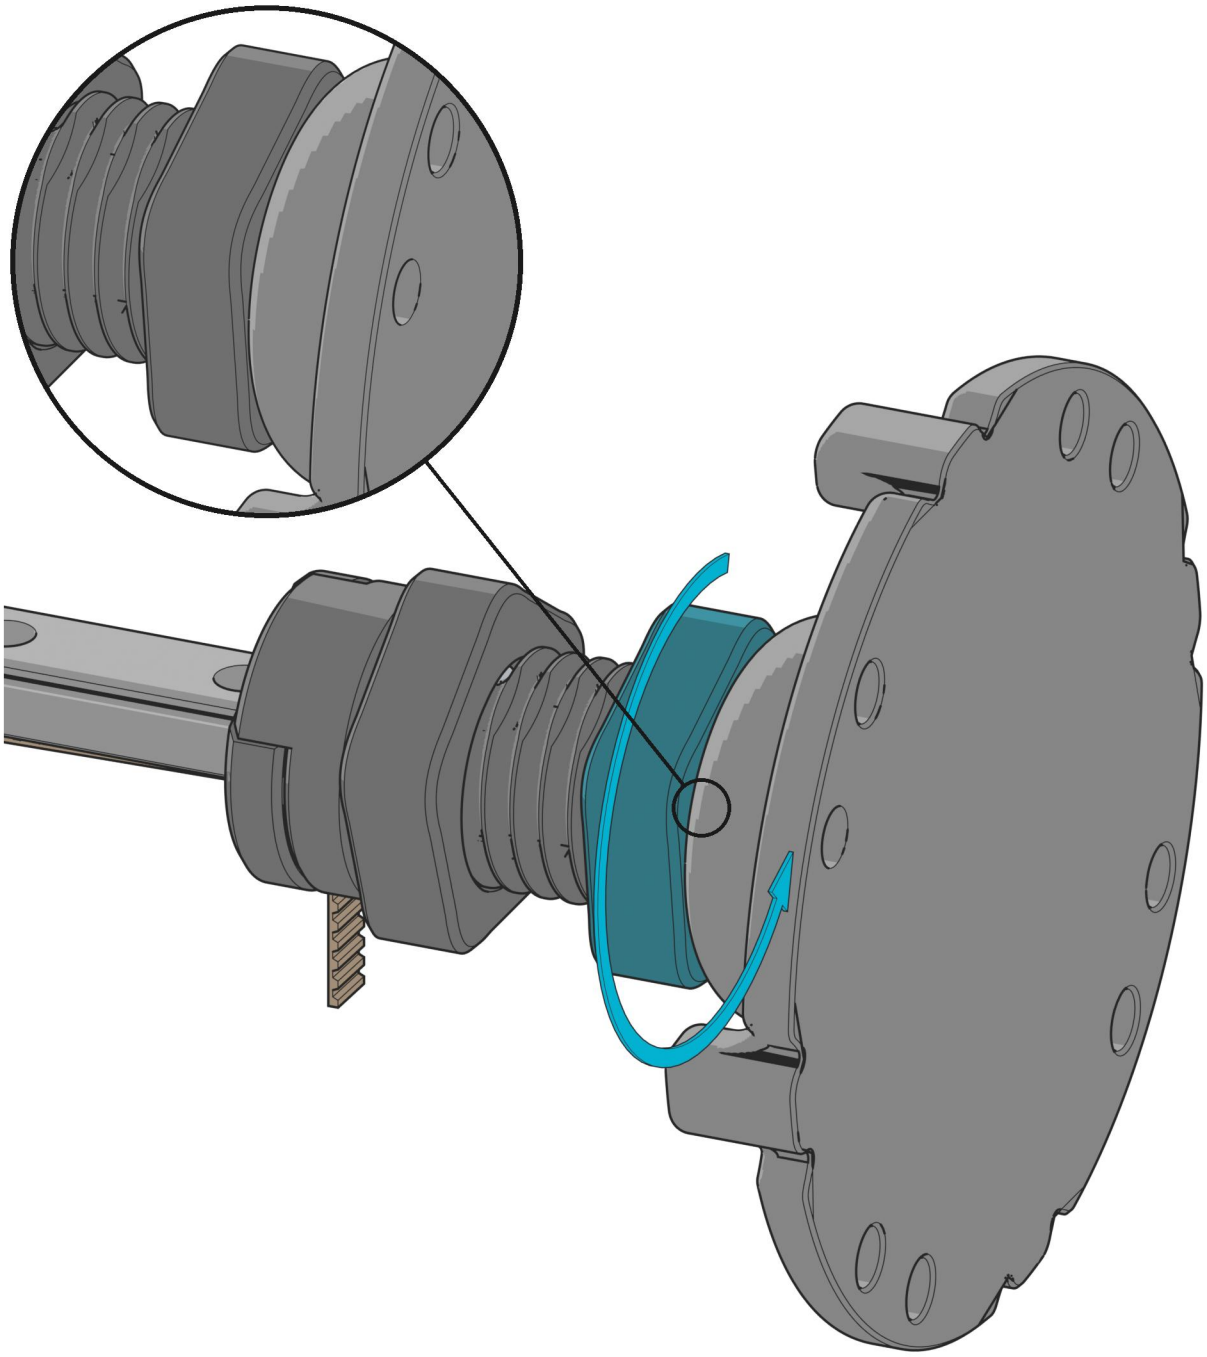


Turn it back by hand, hard against the mount: it stops the mount working loose.

4

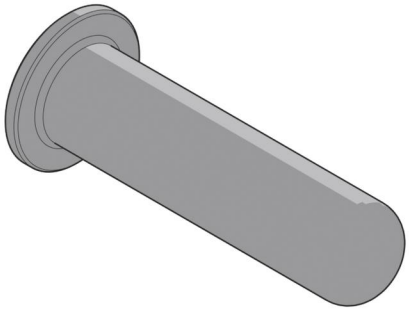


1×


Toy

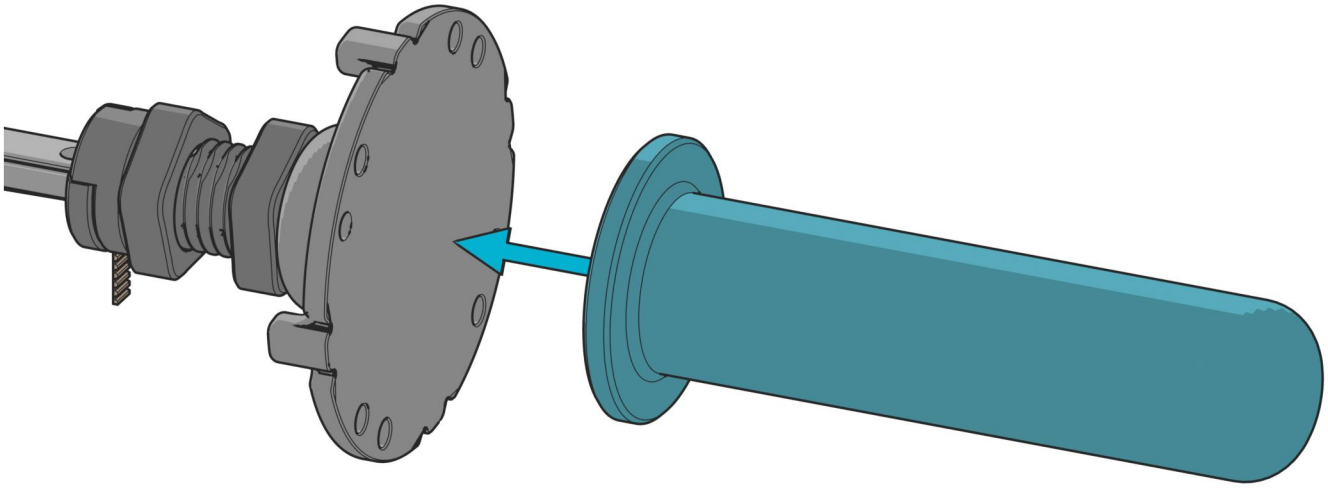


5

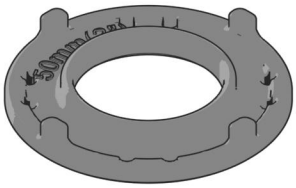



1×
50 mm
Flange ring

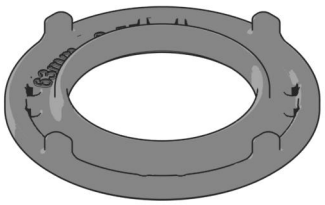

1×
63 mm
Flange ring

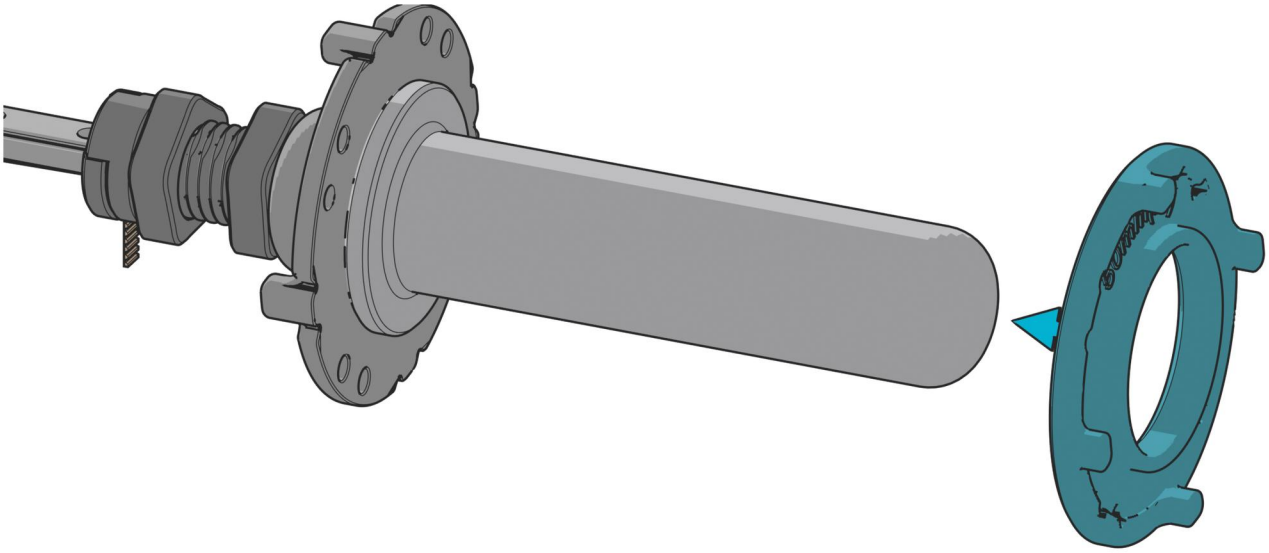


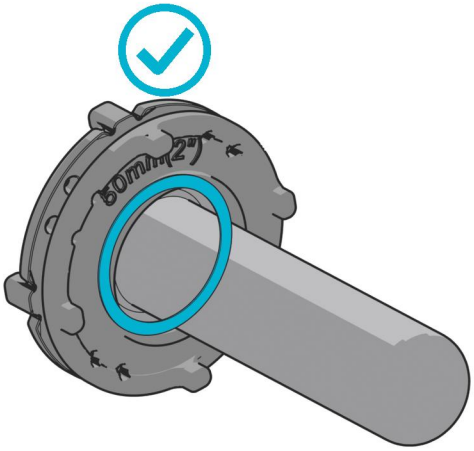

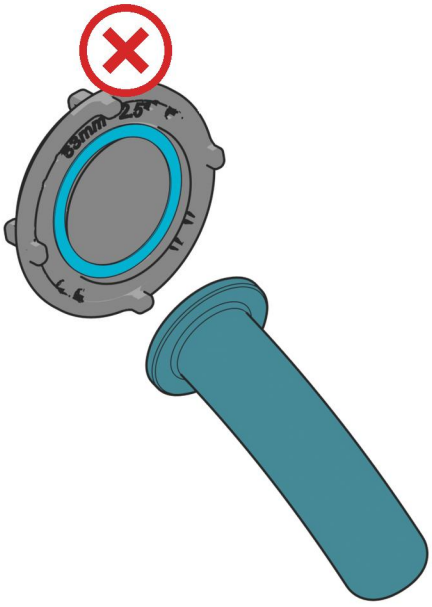


Use the ring whose hole is smaller than the toy's flared base.

6

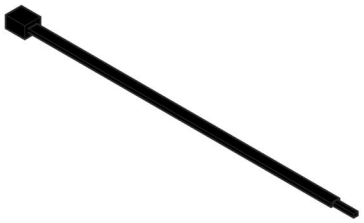

4×


Cable tie

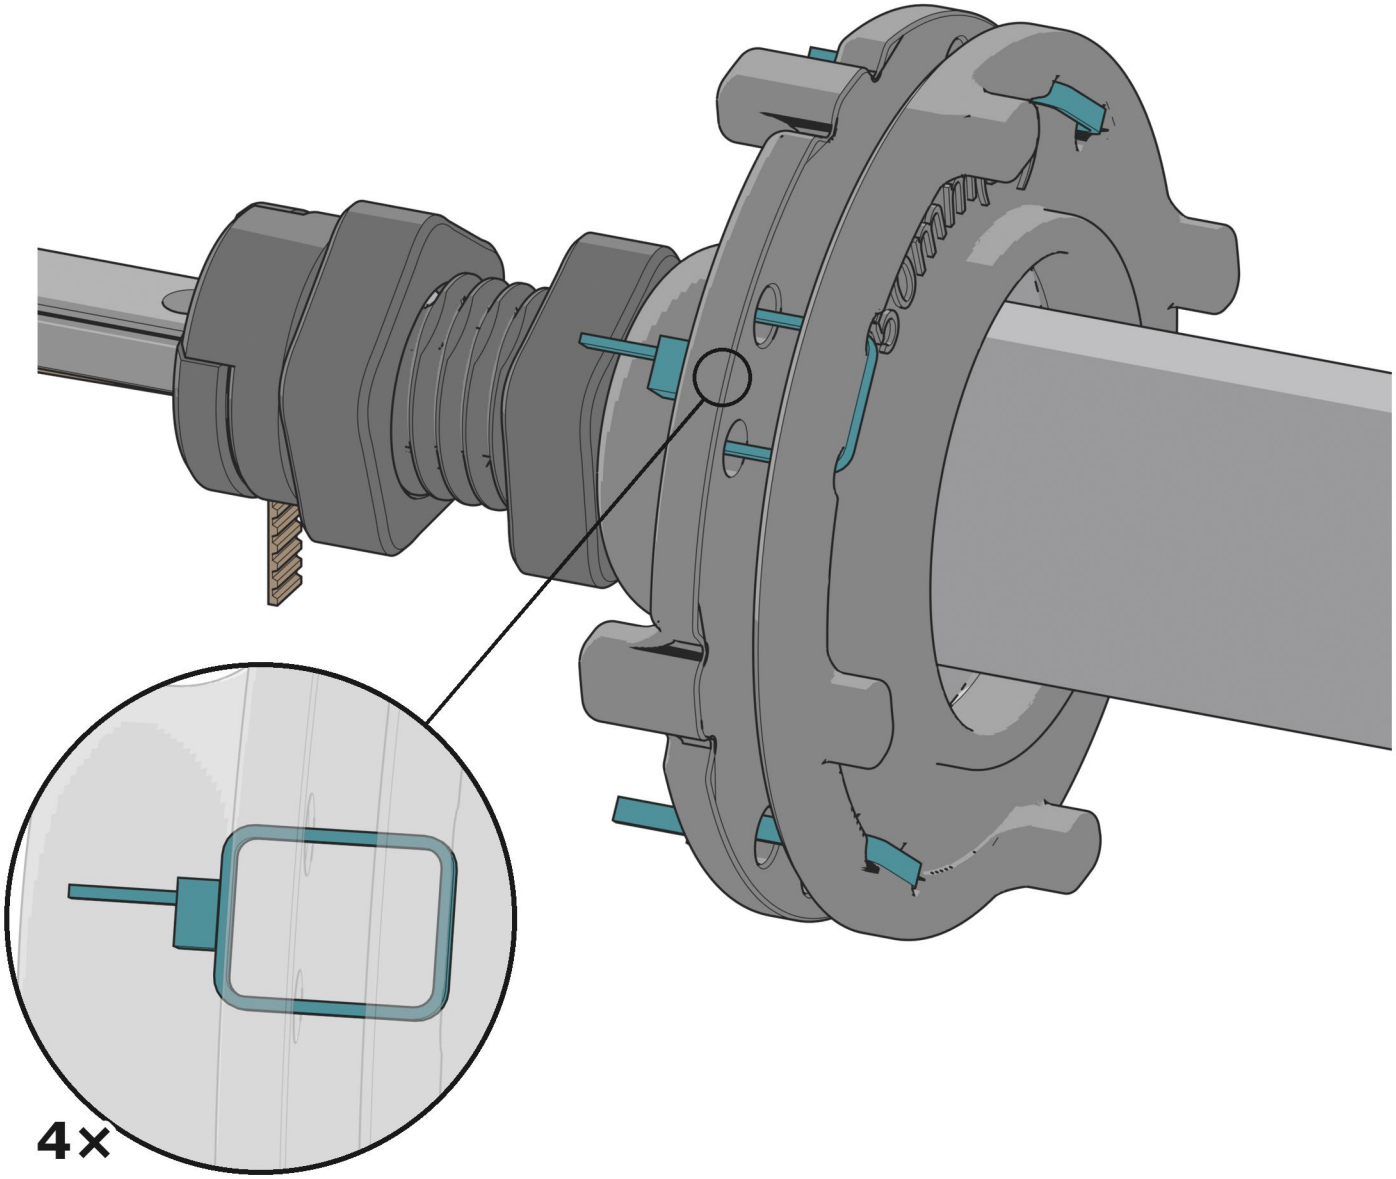

4×


Pull each tie tight and cut off its tail (cord, tied tight, also works).

7

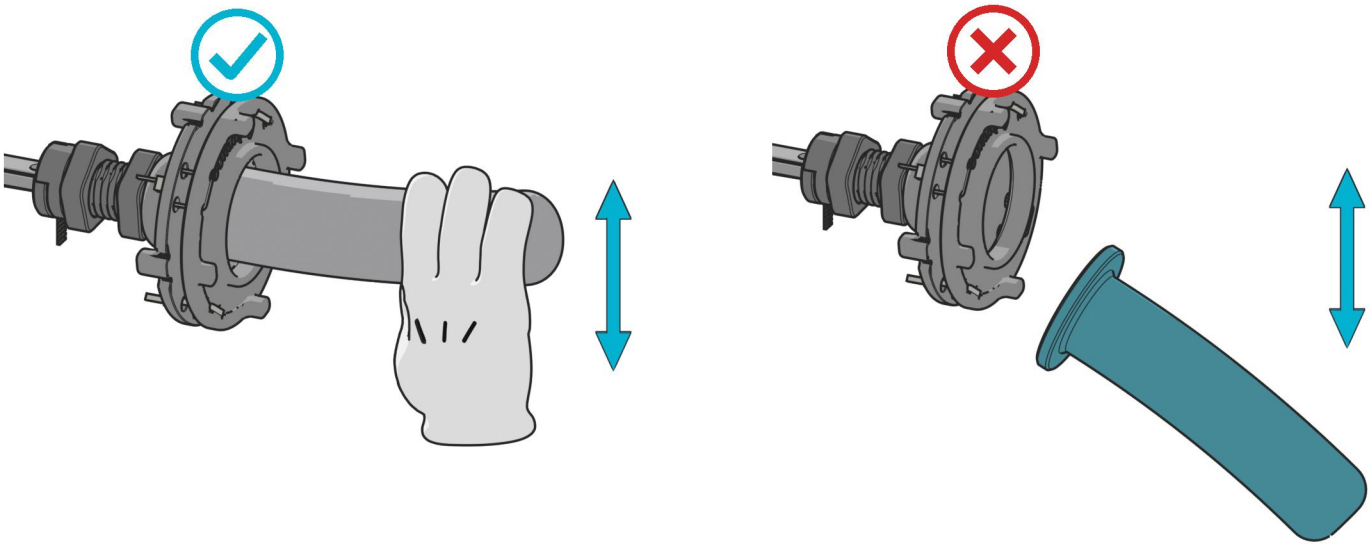


Work the toy up and down before every use, and after a few minutes of running: it must hold.

2 Vac-U-Lock

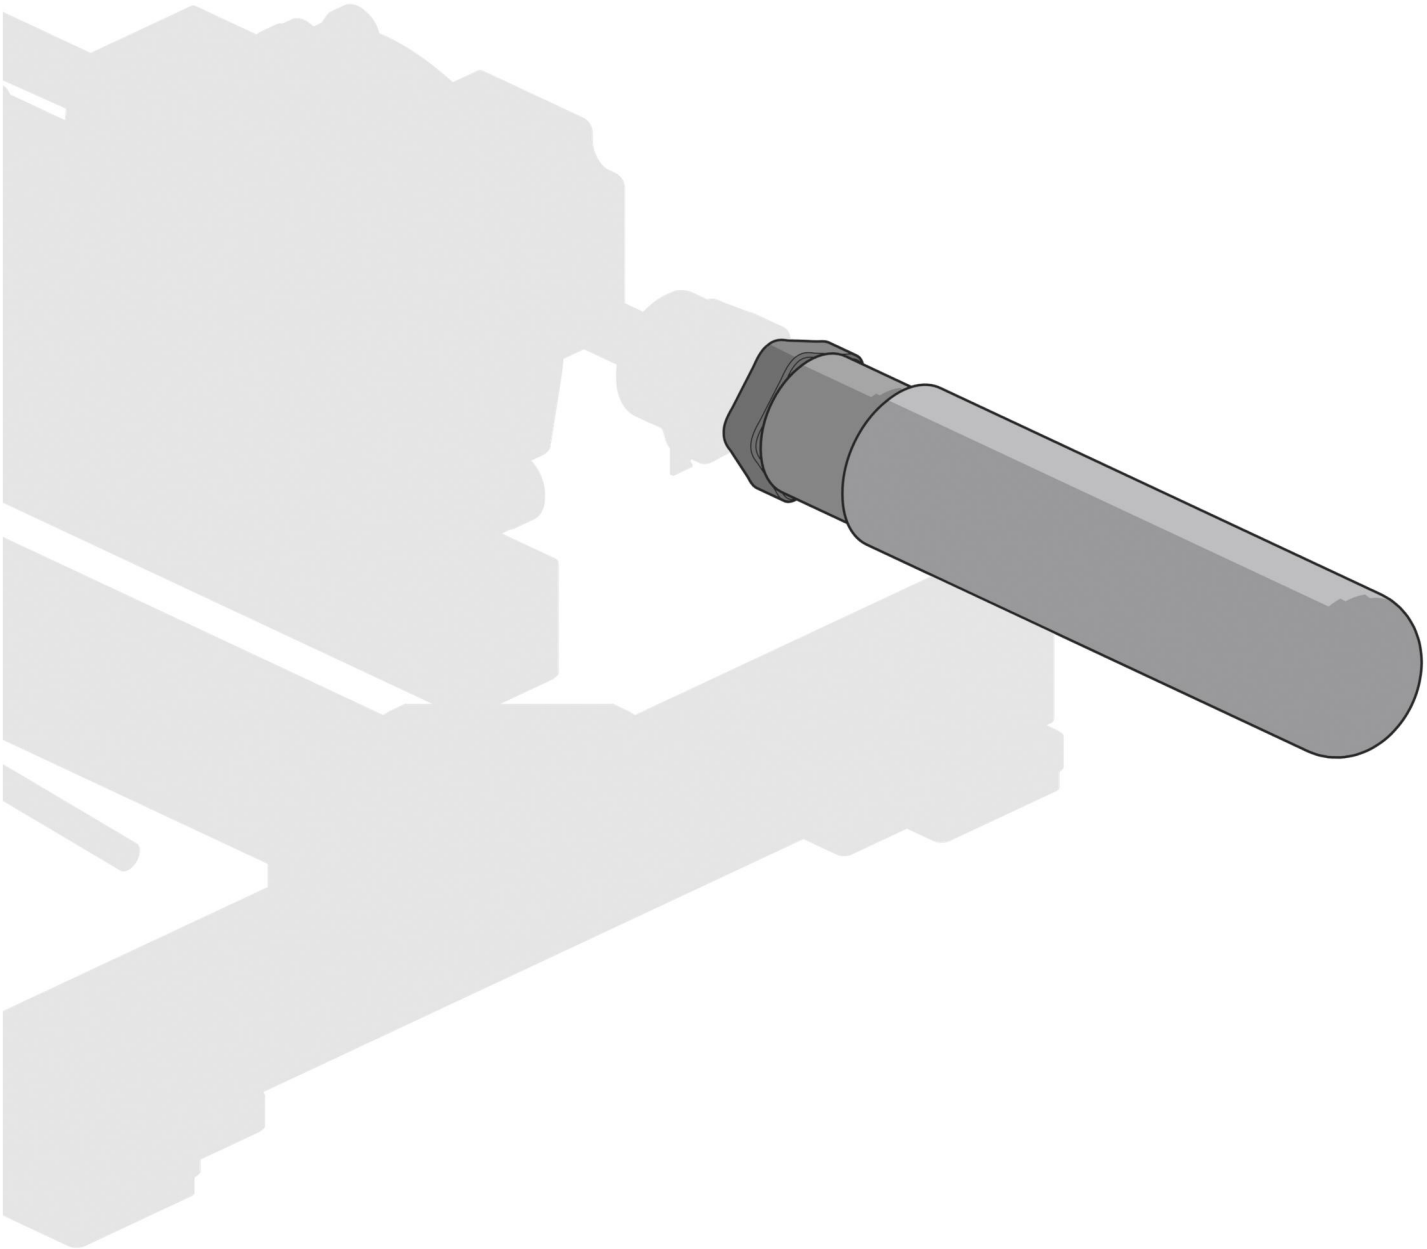


8




1×

Lock nut

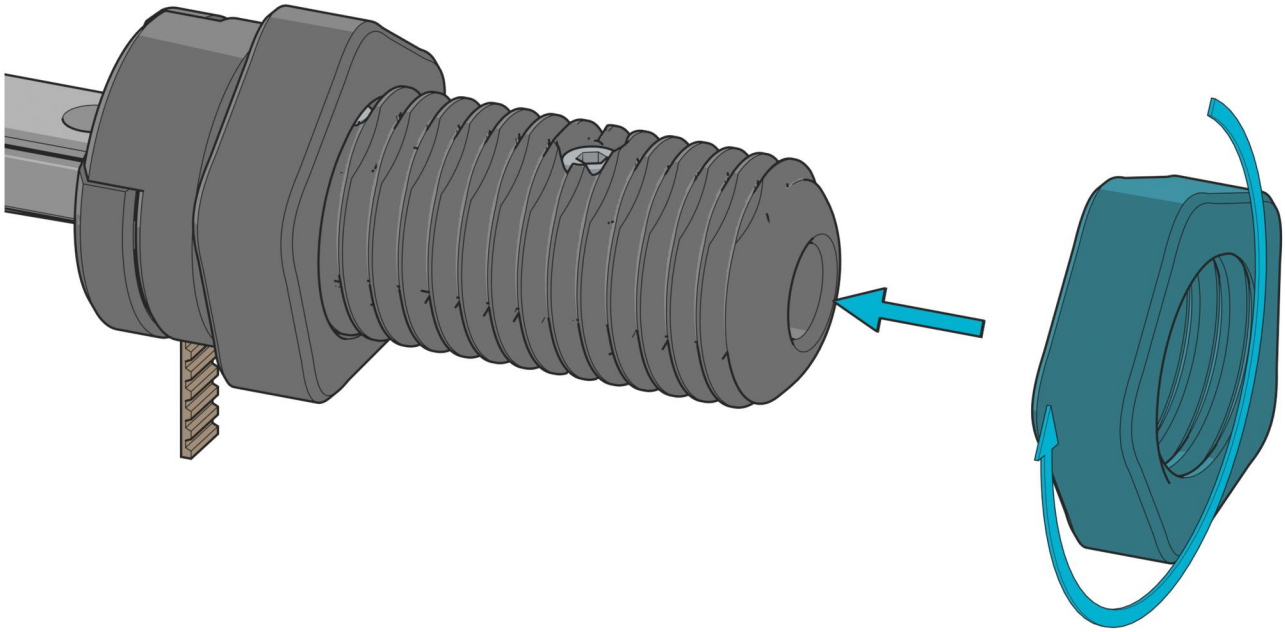


One mount at a time: take the flange plates off first.

9

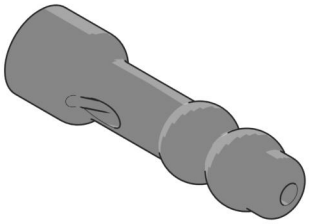


1×

Vac-U-Lock
adapter

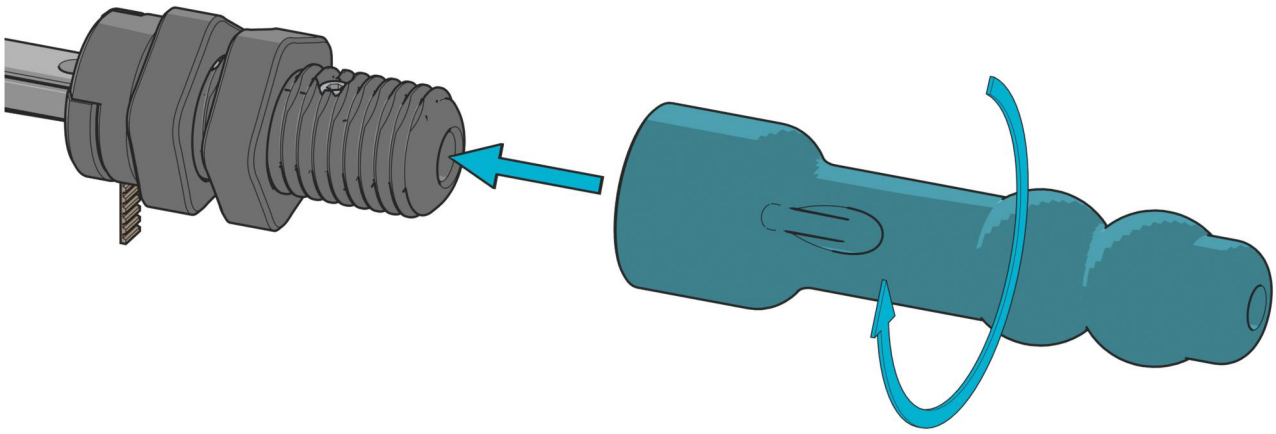


Turn it on by hand until it stops.

10

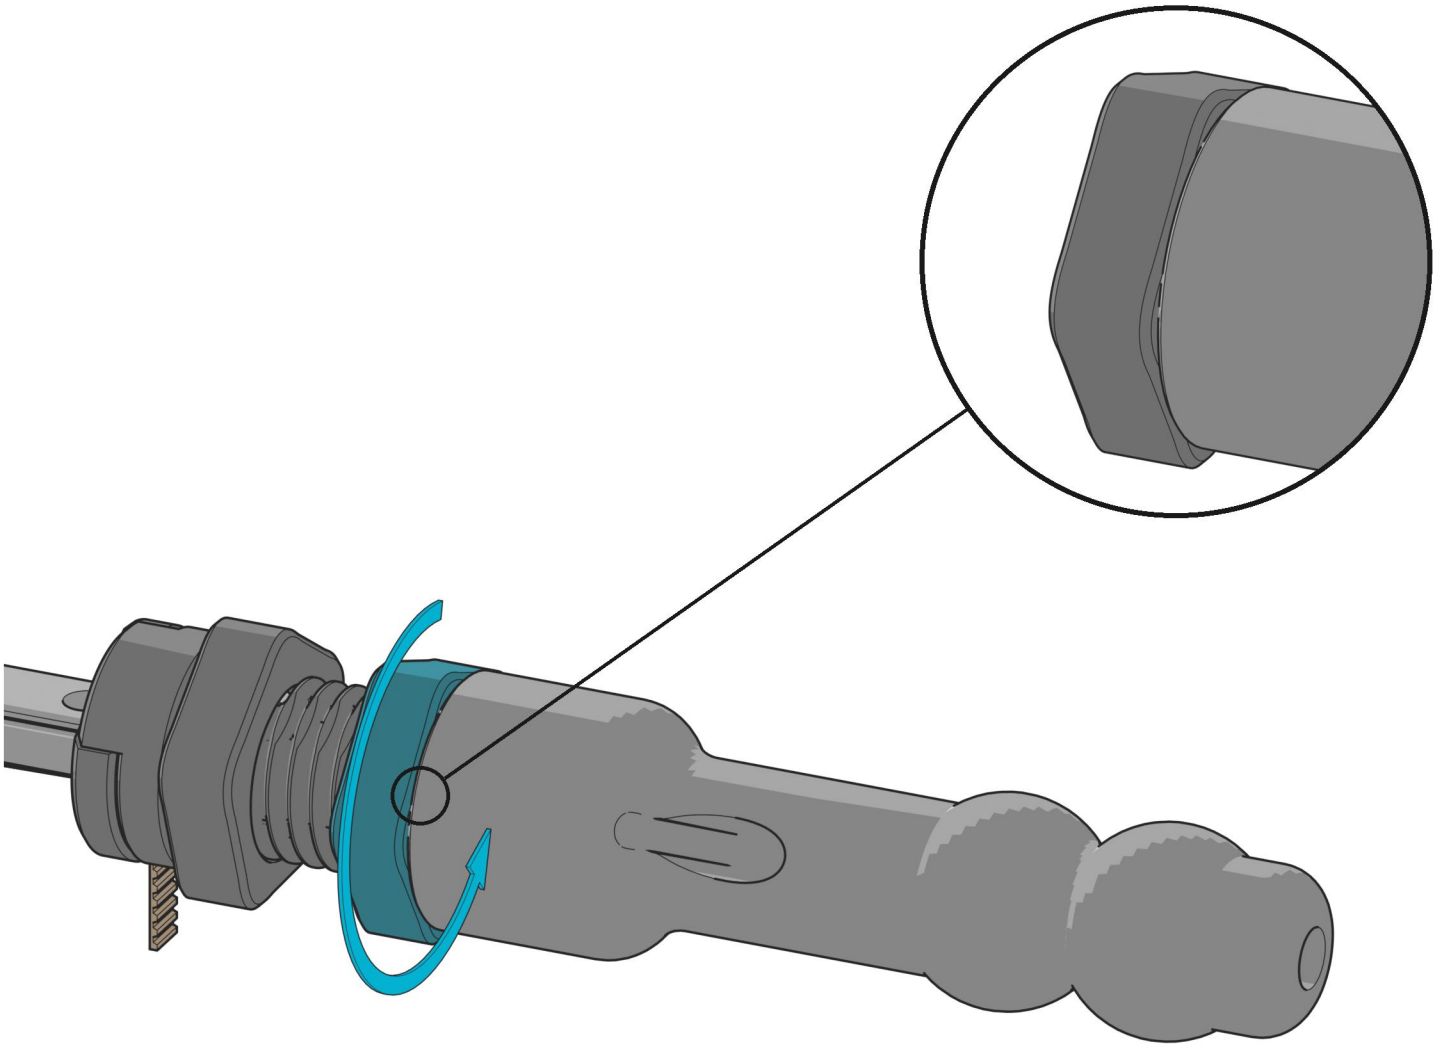

Turn it back by hand, hard against the mount: it stops the mount working loose.

11

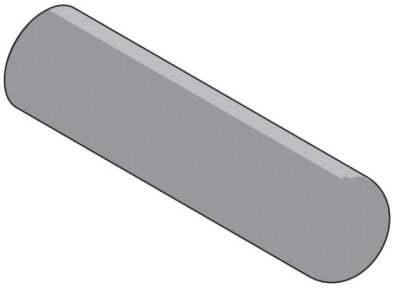



1×

Vac-U-Lock toy





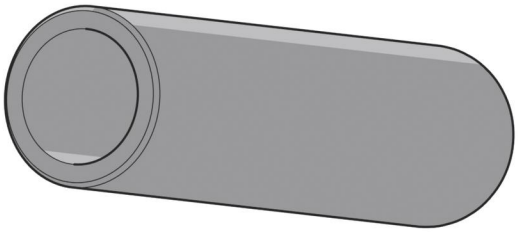


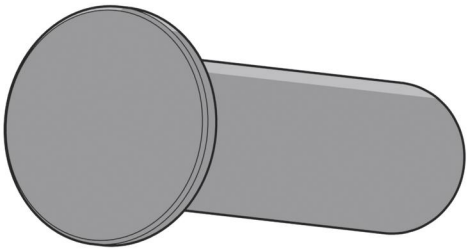




Only a toy with a Vac-U-Lock socket in its base fits the adapter.


12

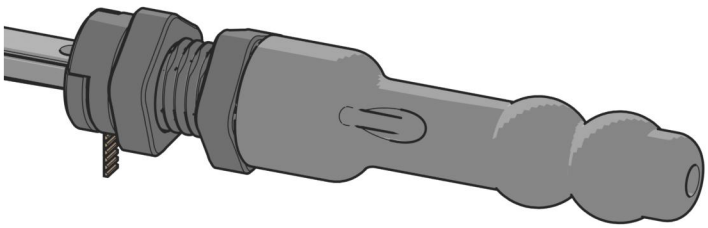


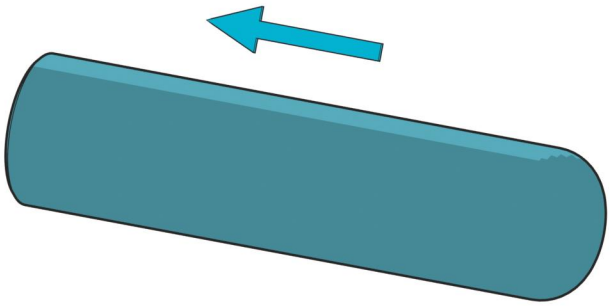






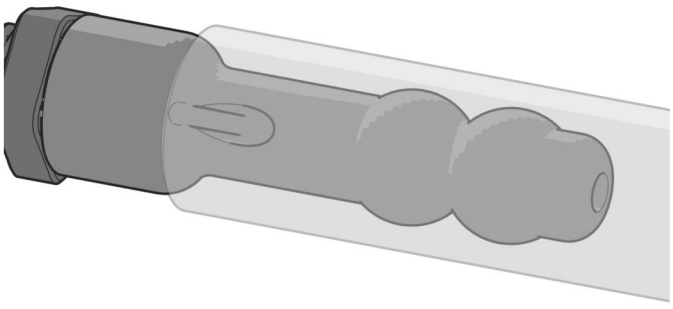

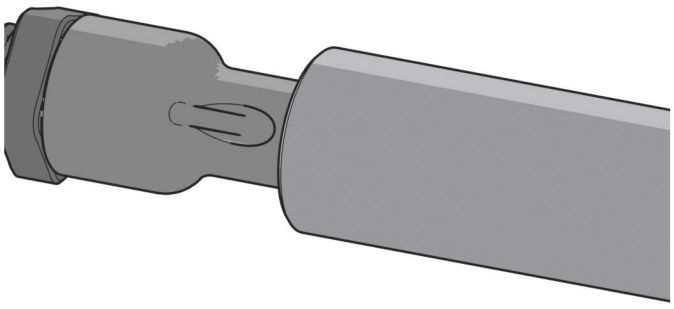


Keep the plug dry (no lube) and press until the toy's base covers the air hole.

13

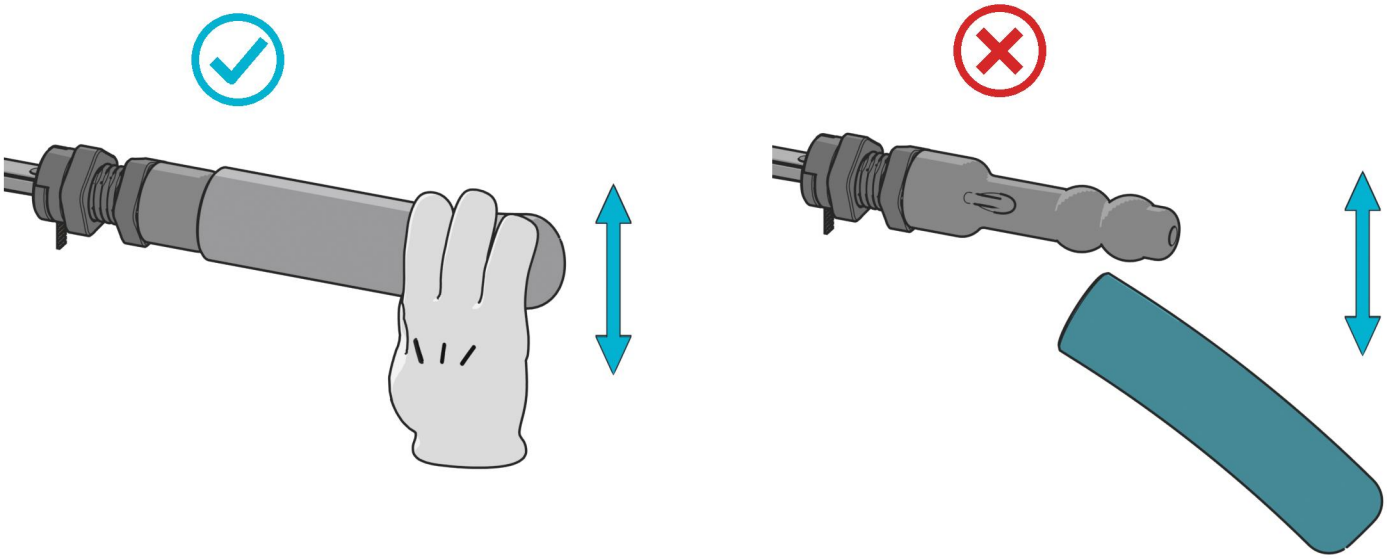

Work the toy up and down before every use, and after a few minutes of running: it must hold.

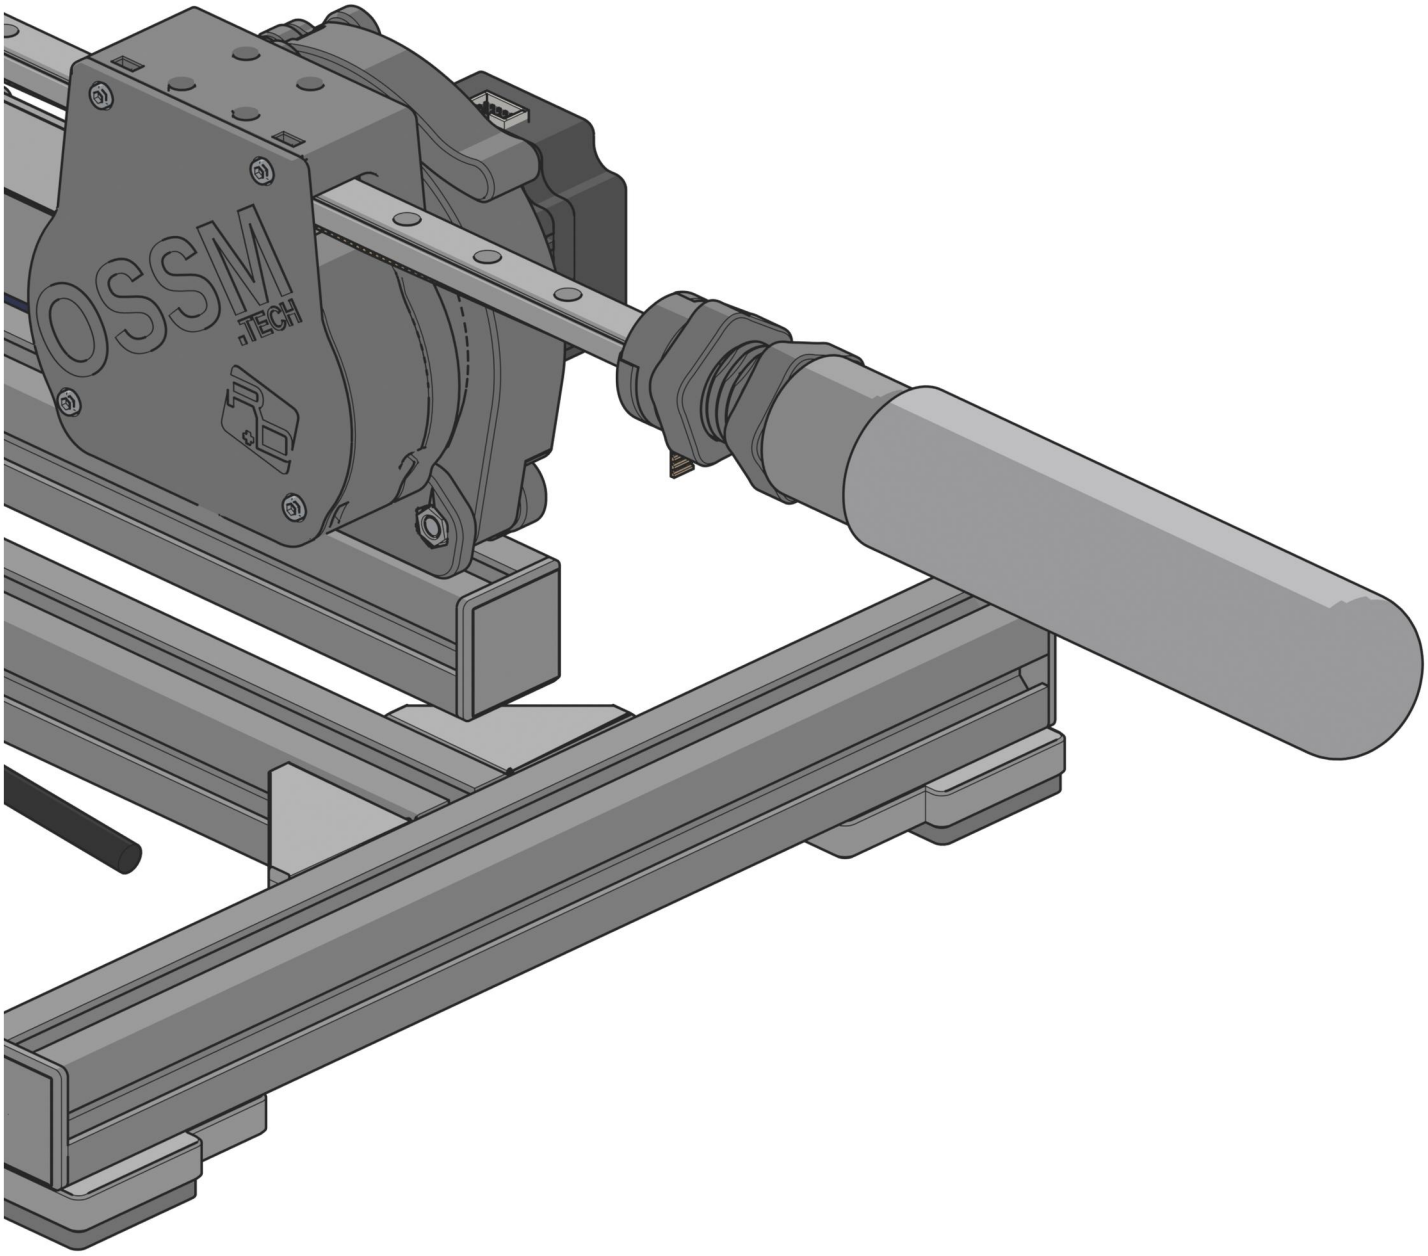

Start slowly. Stop and re-seat the toy if it moves in its mount.

RESEARCH + DESIRE

OSSM Toy Mounting Guide

Flange plates and Vac-U-Lock · Version 1.0.2

Support
support@researchanddesire.com
Assembly instructions
ohai.researchanddesire.com/ossm

Gloved hand: "Low Poly Gloved Hand" by CitrusH (@venture.dalton), CC BY 4.0 (creativecommons.org/licenses/by/4.0), posed and restyled: sketchfab.com/3d-models/low-poly-gloved-hand-1f5b60b45c4a43a0984042e23ced7fc6