

## Adding mindsensors.com Toolkit to LVEE

- 1.Unzip the folder mindsesnors.com LVEE
- 2. Open a blank vi in LVEE
- 3.On the Block Diagram Go to Tools->Advanced->Edit Palette Set...

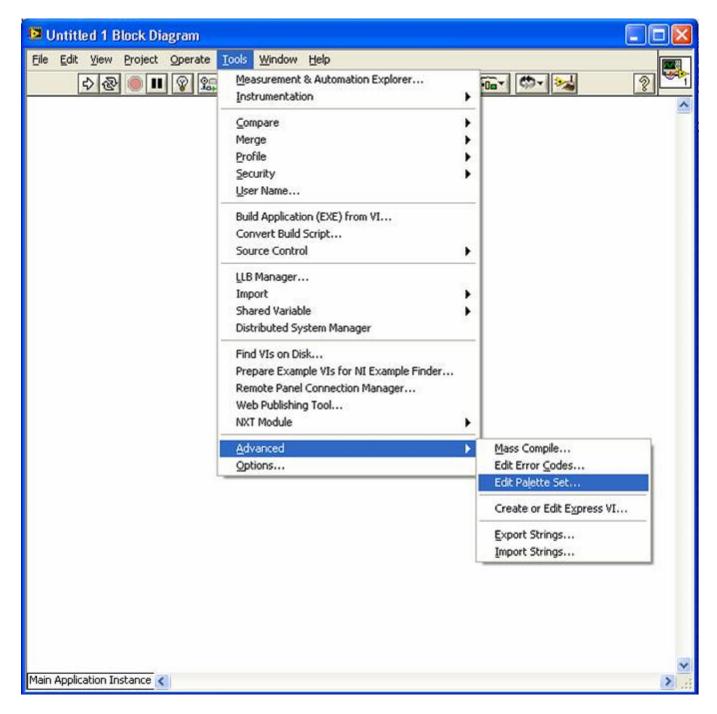


4. Right click in the Functions Palette->Insert->Subpalette...

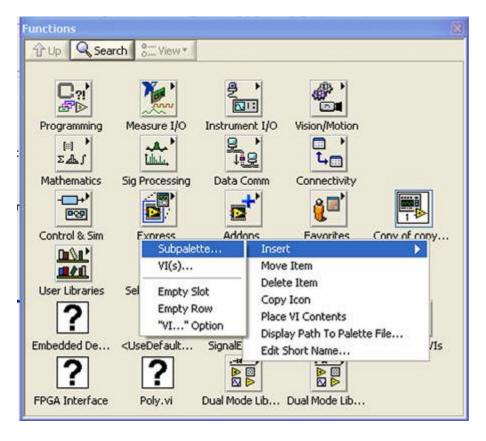


5. Select Link to an existing palette file (.mnu) and click OK




6.Go to your folder called mindsensors.com LVEE Toolkit, it is is mindsesnors.com LVEE

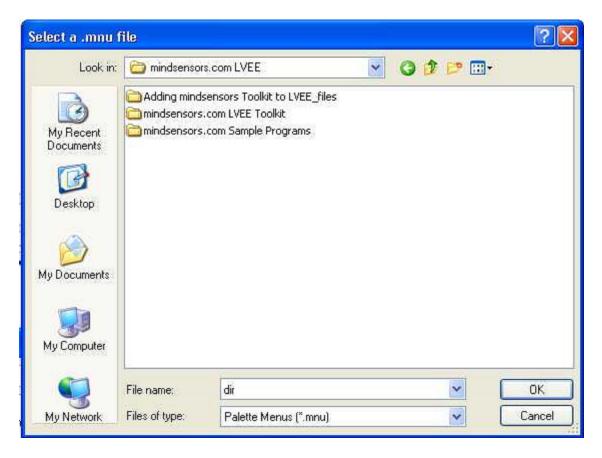

7. Double click on the file dir.mnu

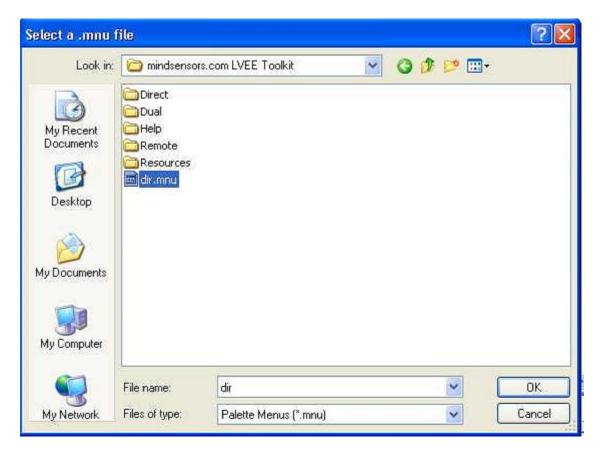

8.On the Edit Controls and Functions Palette Set pop-up select Save Changes and click Continue if prompted

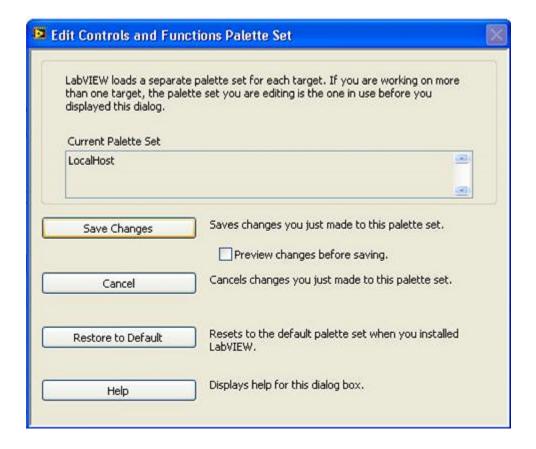

Now in your Functions Palette you will see a palette called mindsensors devices.

NOTE: When you open each sample program or use each VI for the first time a message may pop up at the start, click ignore, also when you close the VI it will ask if you want to save click save all.