

**EZ BUILDER™**

# FRAMER BARN KIT #504

## ASSEMBLY MANUAL

**LOT#:**

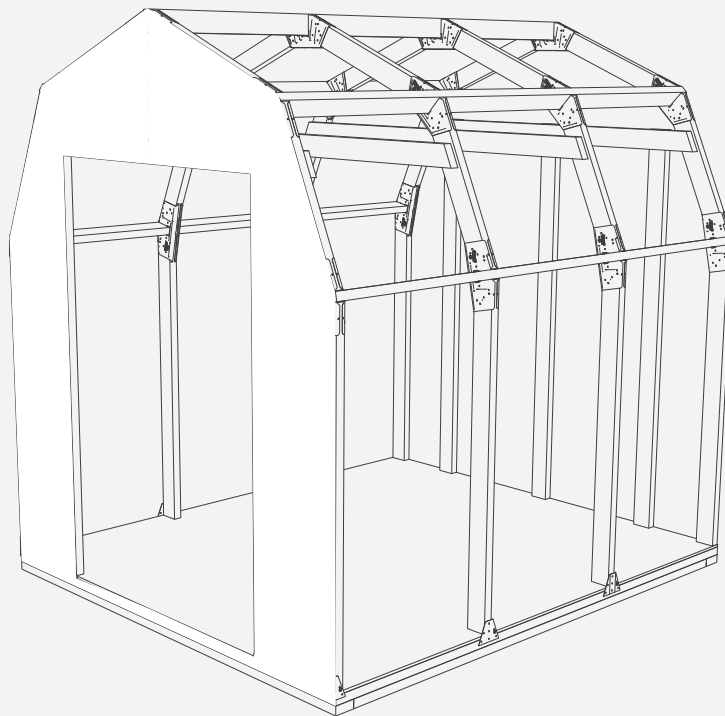


Photo represents finished shed.  
Wood not included.

## Customer Service

*If you have a question or concern*

**Email: [service@neopmail.net](mailto:service@neopmail.net)**

**or call 203-591-9033**





*Monday-Friday 8:30am-4:30pm EST*

PDF manual <https://ezgomaterials.com>


**DO NOT RETURN TO THE STORE!**

# Please read instructions fully before beginning assembly


**THIS KIT IS FOR 7' X 8' ONLY [#504]**
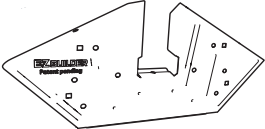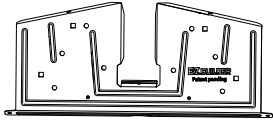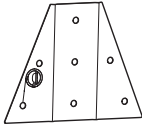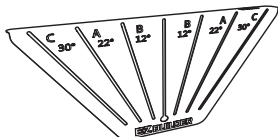
| NO | Illustration                                                                        | Description         | Part # | QTY. |
|----|-------------------------------------------------------------------------------------|---------------------|--------|------|
| 1  |    | A Bracket           | A      | 24   |
| 2  |    | B Bracket           | B      | 16   |
| 3  |    | Stud Bracket        | D      | 12   |
| 4  |   | Door header Bracket | E      | 4    |
| 5  |  | Angles Jig          | 8111   | 1    |


## ADDITIONAL KITS ARE NEEDED

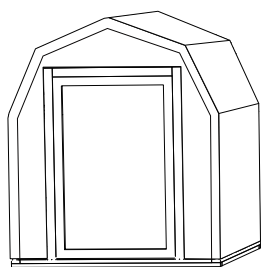

**7ft.wide X 8ft.long**  
2133mm x 2438mm  
**1 kits**

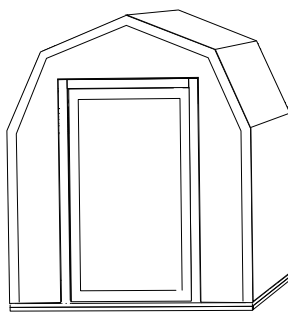


**8ft.wide X 14ft.long**  
2438mm x 4267mm  
**2 kits**

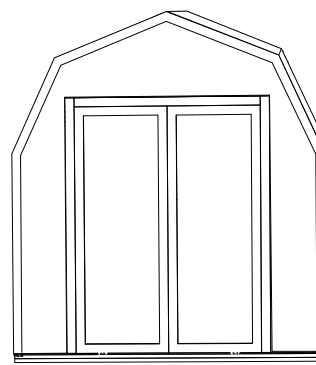

**10ft.wide X 22ft.long**  
3048mm x 6705mm  
**3 kits**


## RECOMMENDED TOOLS

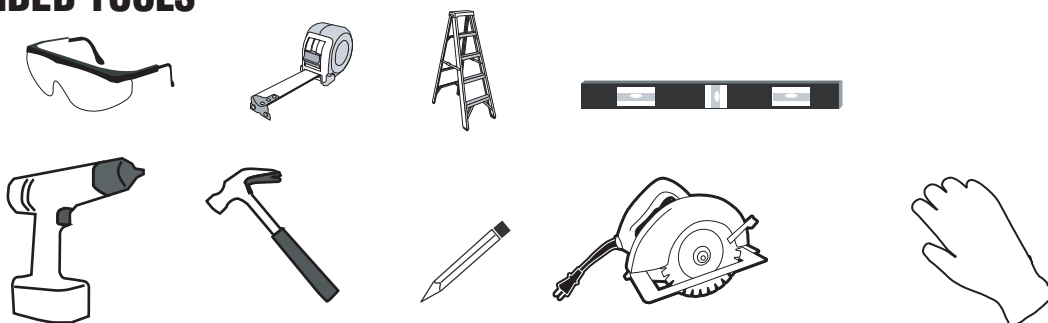


## MATERIAL LIST BY BUILDING SIZE

|    |                                                                                                                              | 7 ft. wide x 8 ft. long | 8 ft. wide x 14 ft. long | 10 ft. wide x 22 ft. long |
|----|------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------------------------|---------------------------|
| 1  | Ez Builder kit                                                                                                               | 1                       | 2                        | 3                         |
| 2  | 8 ft. 2x4's                                                                                                                  | 23                      | 29                       | 60                        |
| 3  | 10 ft. 2x4's                                                                                                                 | 9                       | 1                        | 37                        |
| 4  | 12 ft. 2x4's                                                                                                                 | 2                       | 16                       | 1                         |
| 5  | 14 ft. 2x4's                                                                                                                 | \                       | 7                        | \                         |
| 6  | 16 ft. 2x4's                                                                                                                 | \                       | \                        | 7                         |
| 7  | 8 ft. Pressure-Treated 2x4's                                                                                                 | 9                       | 12                       | \                         |
| 8  | 10 ft. Pressure-Treated 2x4's                                                                                                | \                       | \                        | 18                        |
| 9  | 12 ft. Pressure-Treated 2x4's                                                                                                | \                       | \                        | 1                         |
| 10 | 14 ft. Pressure-Treated 2x4's                                                                                                | \                       | 2                        | \                         |
| 11 | 16 ft. Pressure-Treated 2x4's                                                                                                | \                       | \                        | 2                         |
| 12 | 8 ft. 1x4's                                                                                                                  | 4                       | 6                        | 10                        |
| 13 | 4x8 Sheets for Roof - 1/2 in.                                                                                                | 4                       | 8                        | 12                        |
| 14 | 4x8 Sheets for Sheathing- 1/2 in.                                                                                            | 7                       | 13                       | 20                        |
| 15 | 4x8 Sheets for floor 3/4 in.                                                                                                 | 2                       | 4                        | 7                         |
| 16 | Roofing Material                                                                                                             | 90 SQ.ft.               | 175 SQ.ft.               | 335 SQ.ft.                |
| 17 | <br>1 1/4 in. 32mm Galvanized wood screws | 3 lbs./ 1.4kg           | 4 lbs./ 1.9kg            | 5 lbs./ 2.3kg             |
| 18 | <br>2 1/2 in. 64mm Galvanized wood screws | 3 lbs./ 1.4kg           | 4 lbs./ 1.9kg            | 5 lbs./ 2.3kg             |


7 ft. x 8 ft.  
2134 x 2438 mm

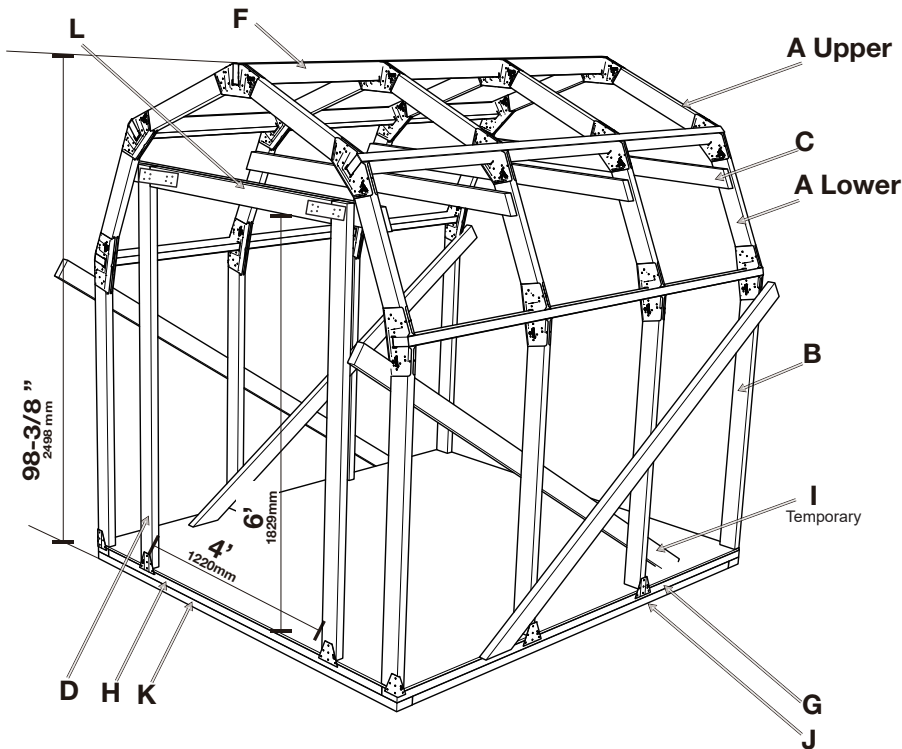


2x4 x 8ft. 38x89x2438mm

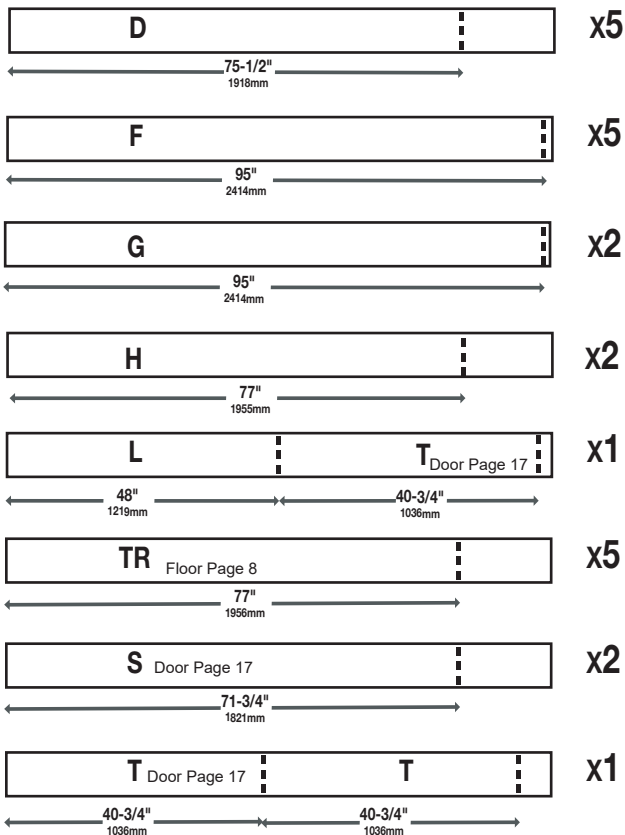


2x4 x 8ft. 38x89x2438mm  
Pressure treated

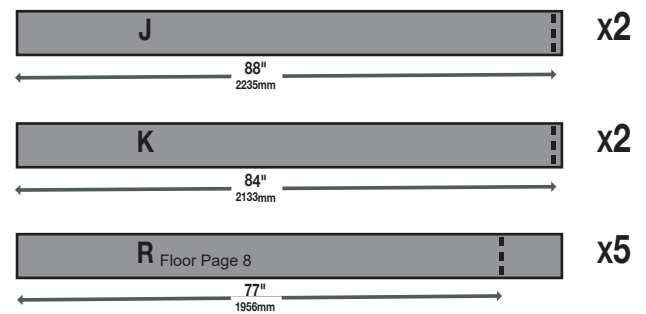


2x4 x 10 ft. 38x89x3048 mm

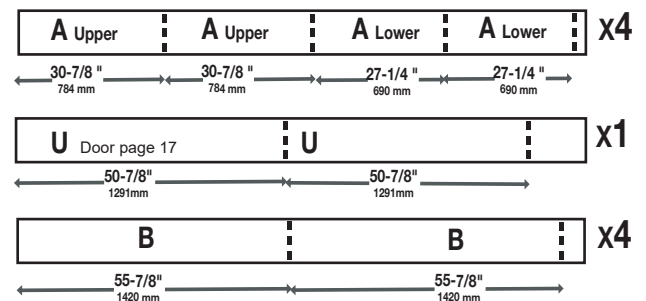





2x4 x 12ft. 38x89x3657mm



8 ft. x 14 ft.  
2438 x 4267 mm

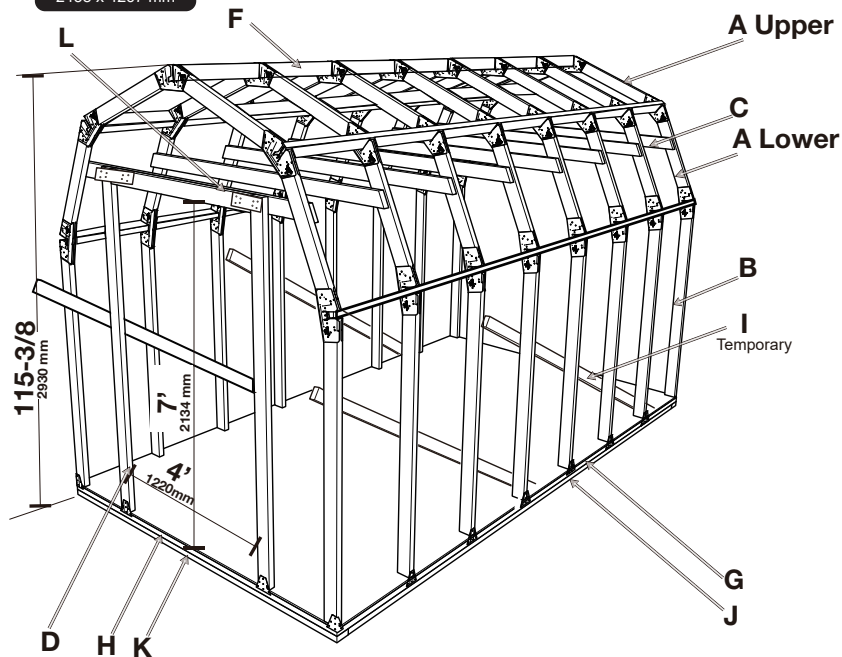

2x4 x 8ft. 38x89x2438mm





2x4 x 10ft. 38x89x3048mm



2x4 x 14ft. 38x89x4267mm






2x4 x 8ft. 38x89x2438mm  
Pressure treated




2x4 x 14ft. 38x89x4267mm  
Pressure treated




2x4 x 12ft. 38x89x3657 mm



10 ft. x 22 ft.  
3048 x 6706 mm

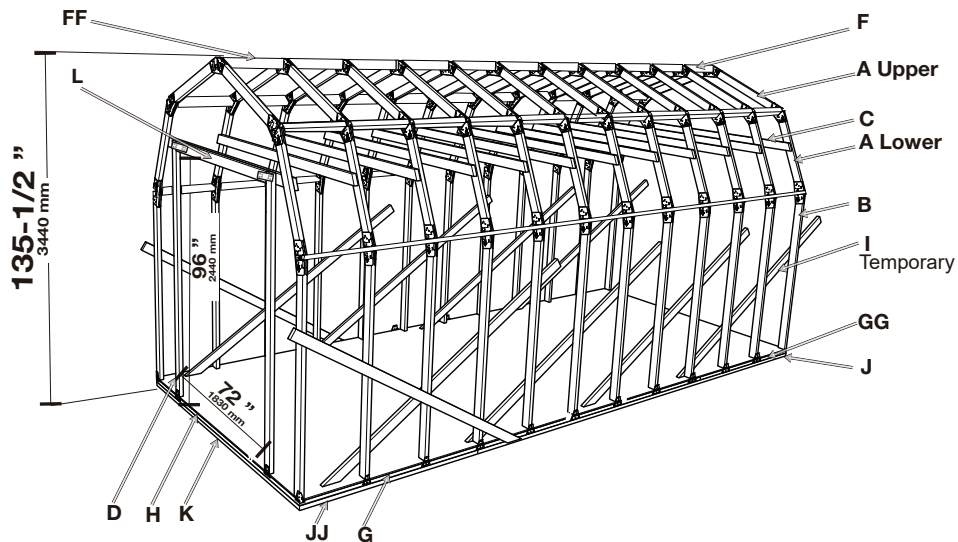


## 2x4 x 8ft. 38x89x2438mm

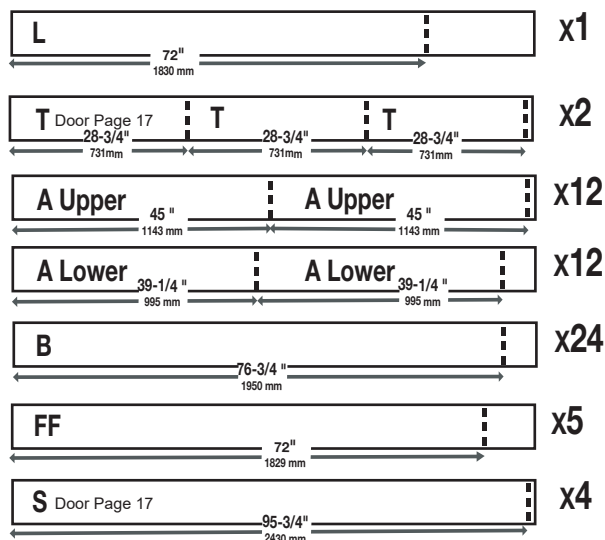

## 2x4 x 12ft. 38x89x3657mm




## 2x4 x 16ft. 38x89x4877mm

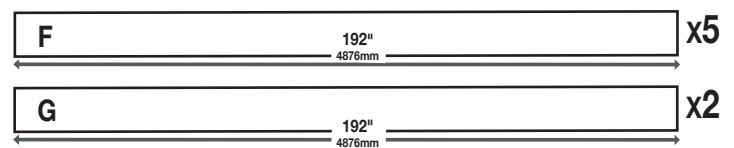


## 2x4 x 10ft. 38x89x3048mm

Pressure treated

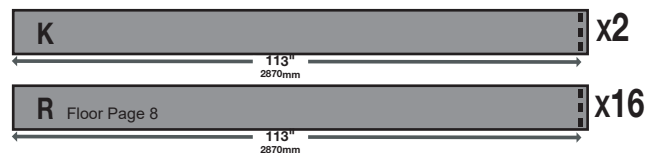

## 2x4 x 10ft. 38x89x3048mm

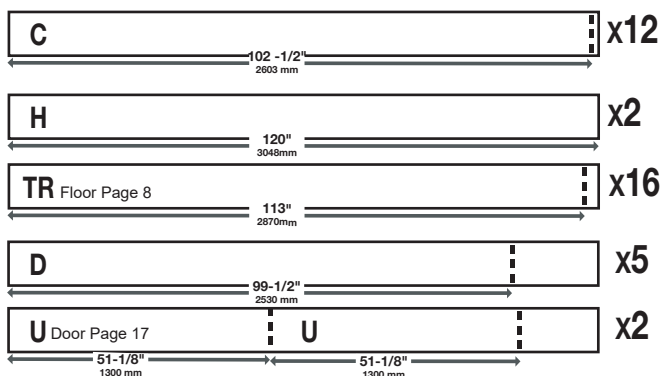


## 2x4 x 12ft. 38x89x3657mm

Pressure treated




## 2x4 x 16ft. 38x89x4877mm

Pressure treated



1

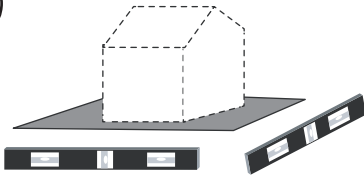


GROUPS SHOULD BE LEVEL PRIOR TO ASSEMBLY.

2

7 ft. x 8 ft.  
2134 x 2438 mm

8 ft. x 14 ft.  
2438 x 4267 mm

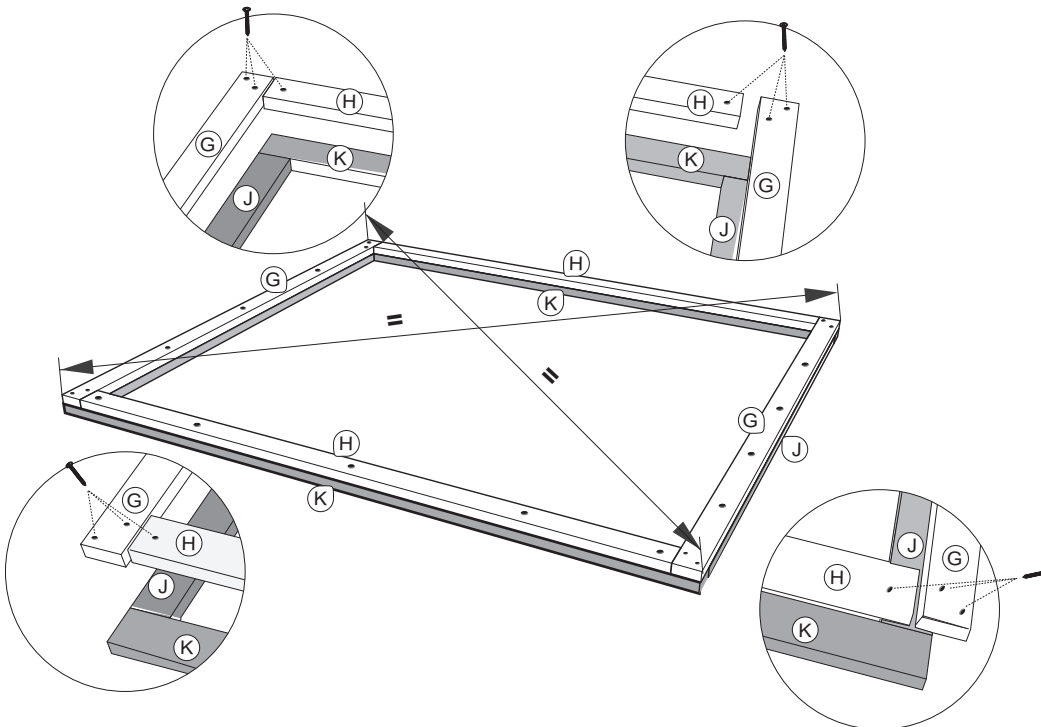

Pressure-Treated 2x4's

1. Cut and stack all lumber in separate piles.
2. Use 2-1/2" Screws to build the base frame and make sure to overlap the ends to make a solid frame.
3. Put a screw every 20" except where we show to put 2 screws in the corners
4. Ensure the base frame is square by making diagonal measurements equal.

2 1/2in. 64mm

7 ft. x 8 ft.  
2134 x 2438 mm

30


8 ft. x 14 ft.  
2438 x 4267 mm

40

10 ft. x 22 ft.  
3048 x 6706 mm

54


10 ft. x 22 ft.  
3048 x 6706 mm

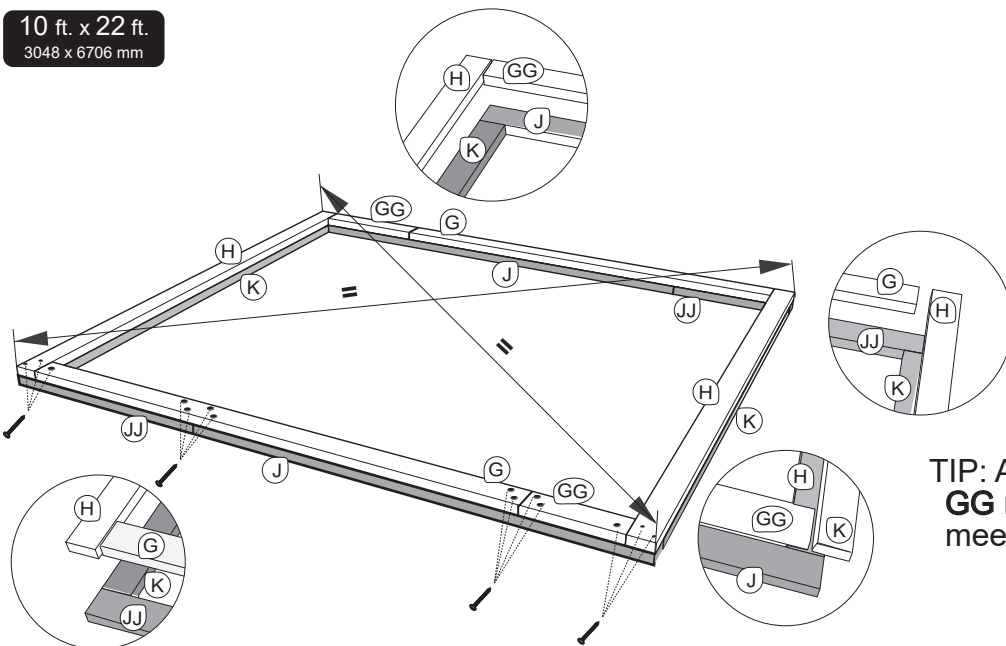


TIP: Adding some screws where the GG meet the G and where the JJ meet the J

**3**

Drawing showing 7' X 8'

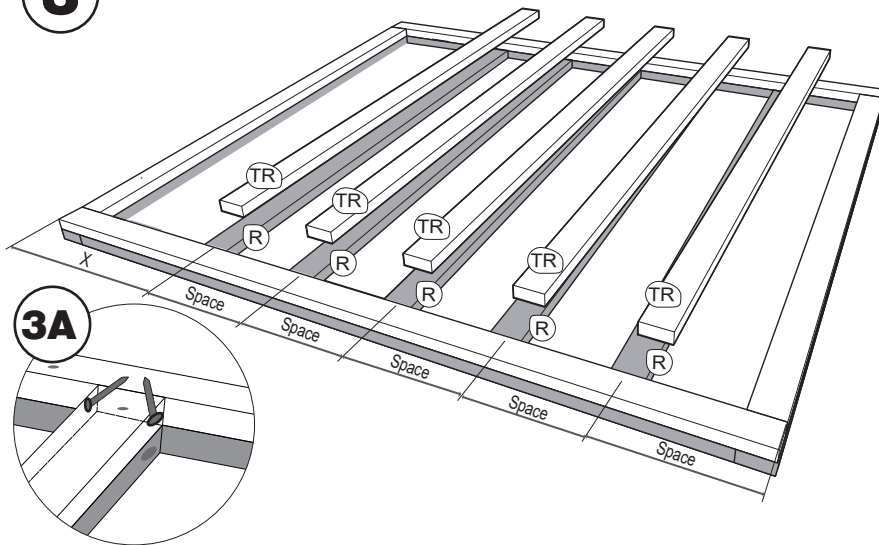


**3A**

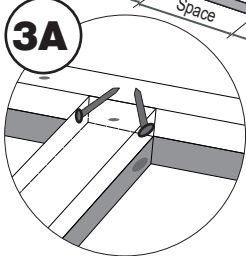

|        | 7 ft. x 8 ft.<br>2134mm x 2438mm | 8 ft. x 14 ft.<br>2438mm x 4267mm | 10 ft. x 22 ft.<br>3048mm x 6705mm |
|--------|----------------------------------|-----------------------------------|------------------------------------|
| R=     | 5                                | 10                                | 16                                 |
| TR=    | 5                                | 10                                | 16                                 |
| Space= | 16 in.<br>406mm                  | 16 in.<br>406mm                   | 16 in.<br>406mm                    |


1. Toe nail (using 2-1/2" screws) **R** and **TR** to the base frame every 16" on center . Lookup 3A
2. Screw **TR** to **R** together with 2-1/2" screws every 20"

**4**

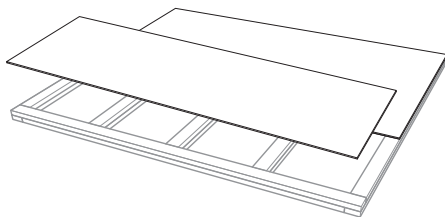


1. Use 2-1/2" screws to secure the plywood to the base frame.

7 ft. x 8 ft.  
2134 x 2438 mm

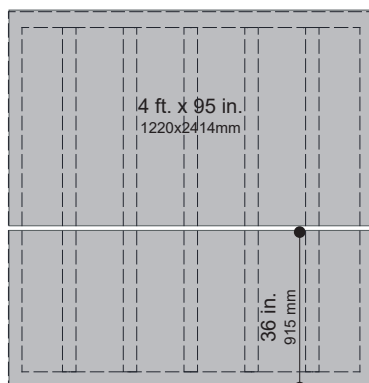


8 ft. x 14 ft.  
2438 x 4267 mm

Start with a full sheet of plywood at the opposite side of the X .

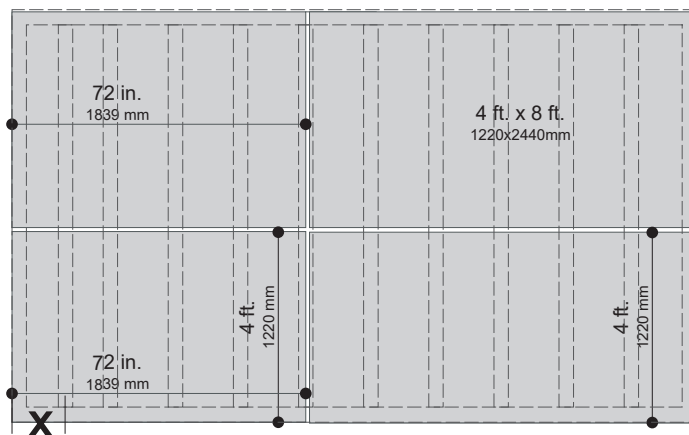


10 ft. x 22 ft.  
3048 x 6706 mm

Start with a full sheet of plywood at the opposite side of the X .

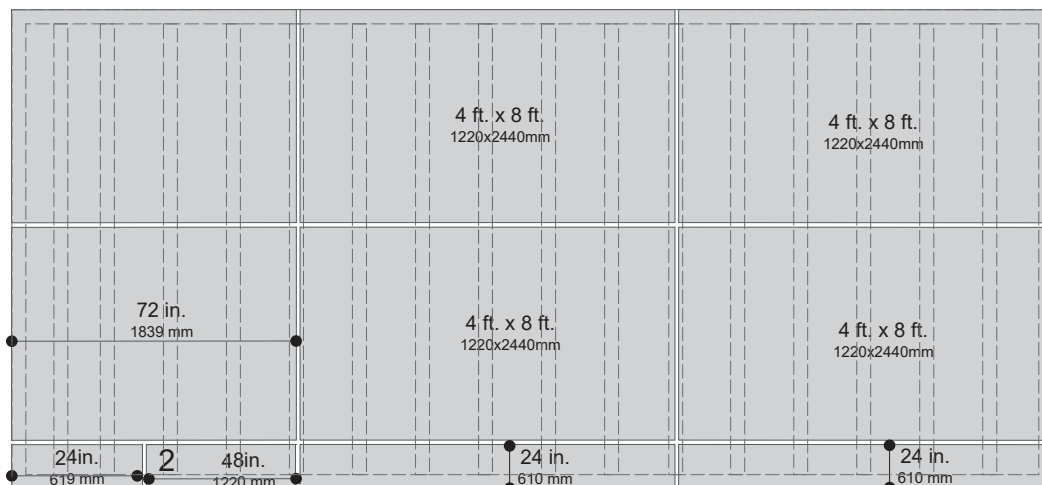



5

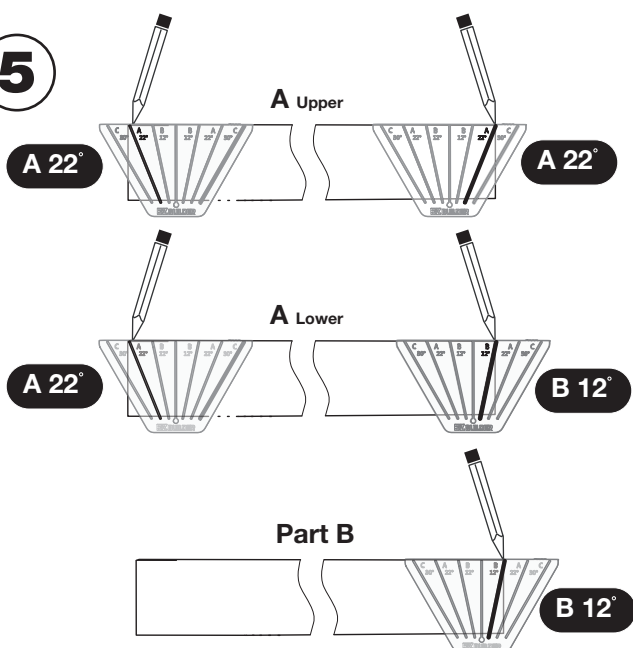

1. Use the **Angles jig** to mark all the angles to be cut.

Cut both ends of **A Upper** with angle **A 22°**


Cut both ends of **A Lower** one with angle **A 22°** and the other with **B 12°**

Cut one end of **Part B** with angle **B 12°**

TIP : Assemble one arch before cutting all the pieces to make sure the angles and length work properly

**IMPORTANT:**

**MAKE SURE TO DOUBLE CHECK YOUR CUTS.  
ALWAYS MEASURE TWICE.**

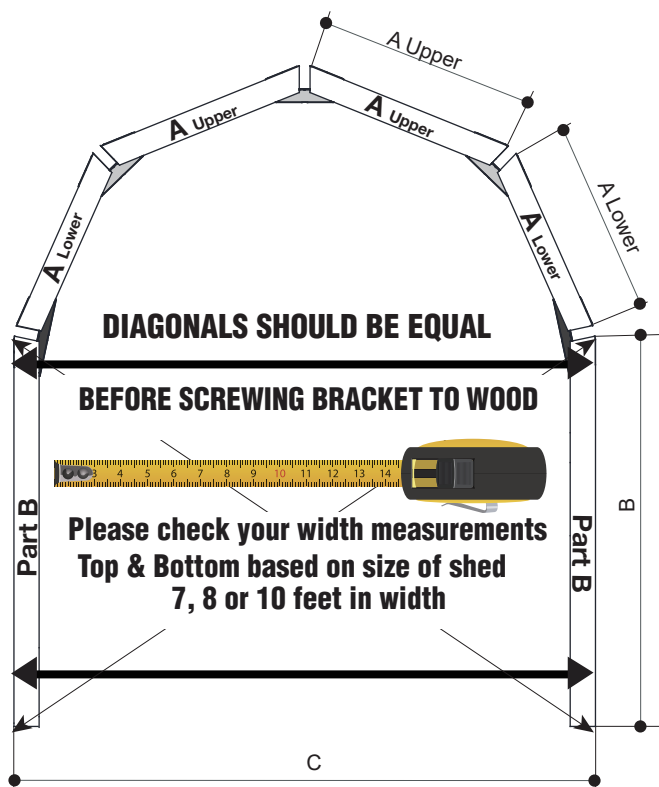



|         | 7 ft. x 8 ft.<br>2134mm x 2438mm | 8 ft. x 14 ft.<br>2438mm x 4267mm | 10 ft. x 22 ft.<br>3048mm x 6705mm |
|---------|----------------------------------|-----------------------------------|------------------------------------|
| A Upper | 8 pcs<br>30-7/8 in.<br>784 mm    | 16 pcs<br>35-1/8 in.<br>892 mm    | 24 pcs<br>45 in.<br>1143mm         |
| A Lower | 8 pcs<br>27-1/4 in.<br>690 mm    | 16 pcs<br>32-1/4 in.<br>818 mm    | 24 pcs<br>39-1/4 in.<br>995 mm     |
| B       | 8 pcs<br>55-7/8 in.<br>1420mm    | 16 pcs<br>66-3/4 in.<br>1695mm    | 24 pcs<br>76-3/4 in.<br>1950 mm    |
| C       | 84 in.<br>2136 mm                | 96 in.<br>2438 mm                 | 120 in.<br>3048 mm                 |

2.Begin arch assembly by sliding 2 Part **A upper** into top **A bracket**, secure with 1-1/4" screws. Check page10 step 1 and 2.






Attach the other 2 set of **A brackets** to part **A Upper/A Lower** and secure with 1-1/4" screws.

Attach the other 2 set of **B brackets** to **A Lower/part B** and secure with 1-1/4" screws.

Make sure each arch is built the same.

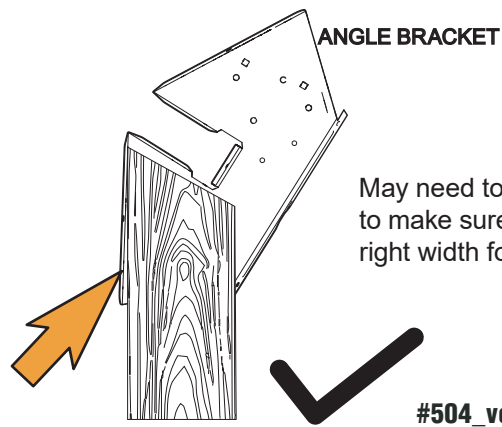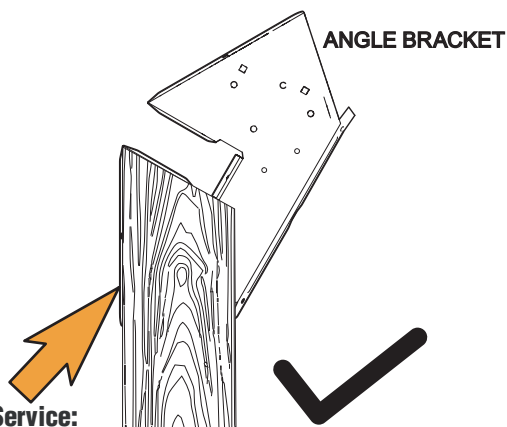




May need to adjust slightly to make sure you have the right width for the arch.

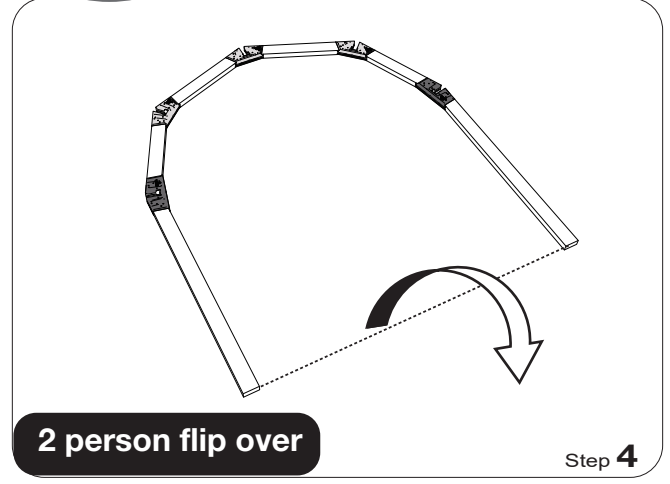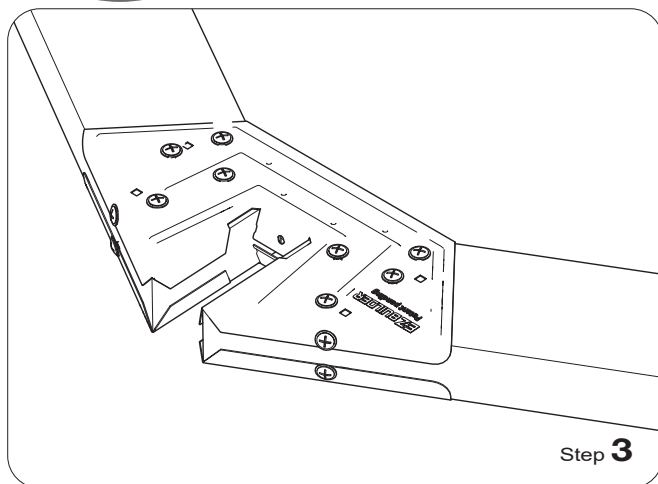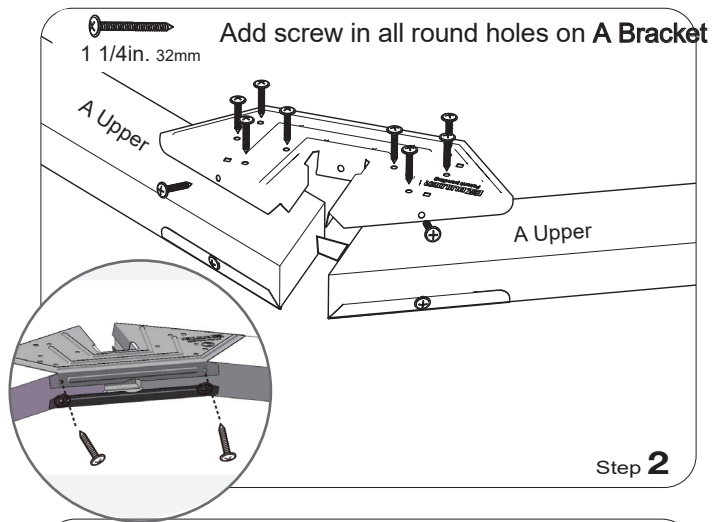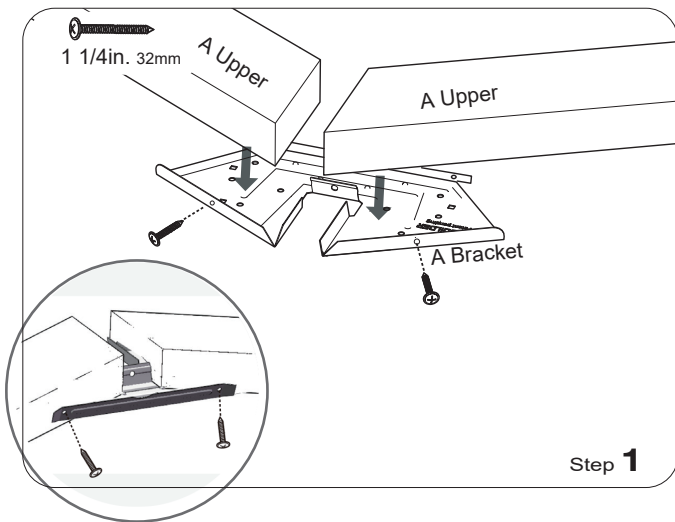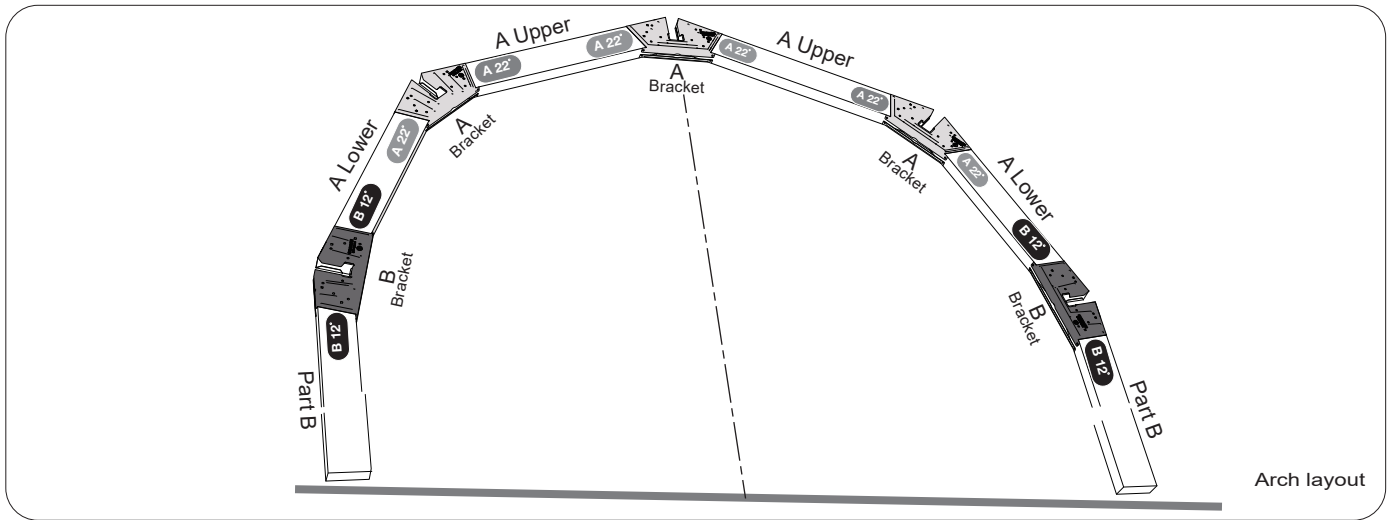


Repeat step 1 to 3 four times for the other brackets

Flip over to screw the brackets on the other side


**6** Bend 2 Stud Brackets on the left and 2 on the right

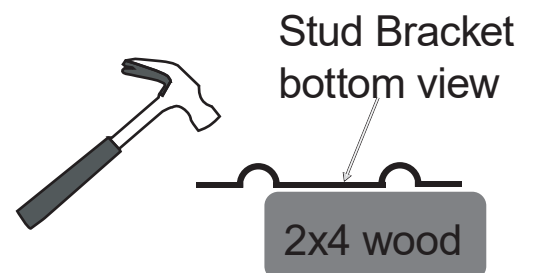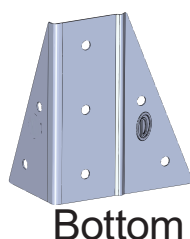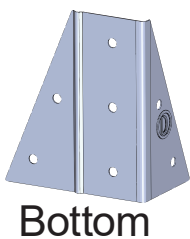



7

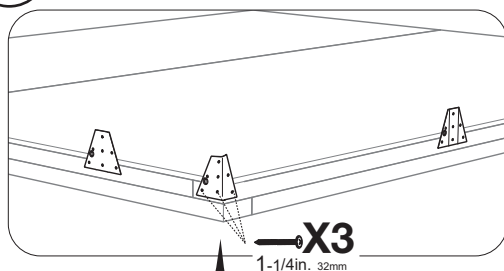



Use the bent stud brackets for the 4 corners

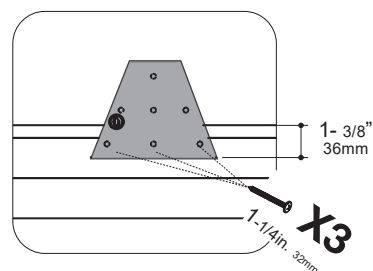



7 ft. x 8 ft.  
2134 x 2438 mm

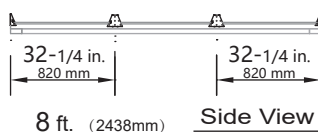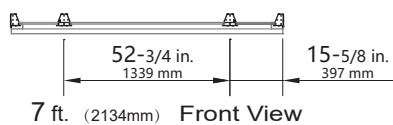

8 ft. x 14 ft.  
2438 x 4267 mm

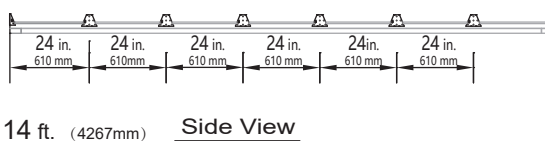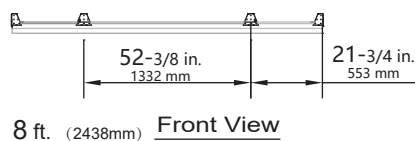

10 ft. x 22 ft.  
3048 x 6706 mm

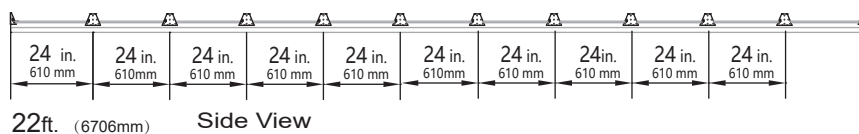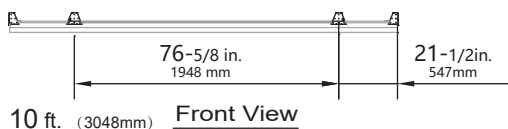


8

Draw a center line for **Part F**


7 ft. x 8 ft.  
2134 x 2438 mm

**F**



8 ft. x 14 ft.  
2438 x 4267 mm

**F**





10 ft. x 22 ft.  
3048 x 6706 mm

**FF**


**X3**

**F**

**X3**

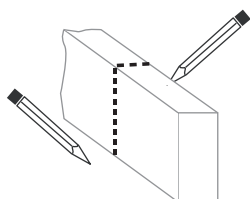


9

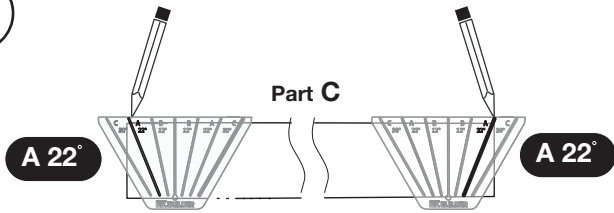

Put the **Angle Jig** at the end of the **Part C** and draw a line using the **A 22°**

|        | 7 ft. x 8 ft.<br>2134mm x 2438mm      | 8 ft. x 14 ft.<br>2438mm x 4267mm    | 10 ft. x 22 ft.<br>3048mm x 6705mm     |
|--------|---------------------------------------|--------------------------------------|----------------------------------------|
| Part C | <b>4 pcs</b><br>69-1/4 in.<br>1760 mm | <b>8 pcs</b><br>80-1/4 in.<br>2038mm | <b>12 pcs</b><br>102-1/2 in.<br>2603mm |



10

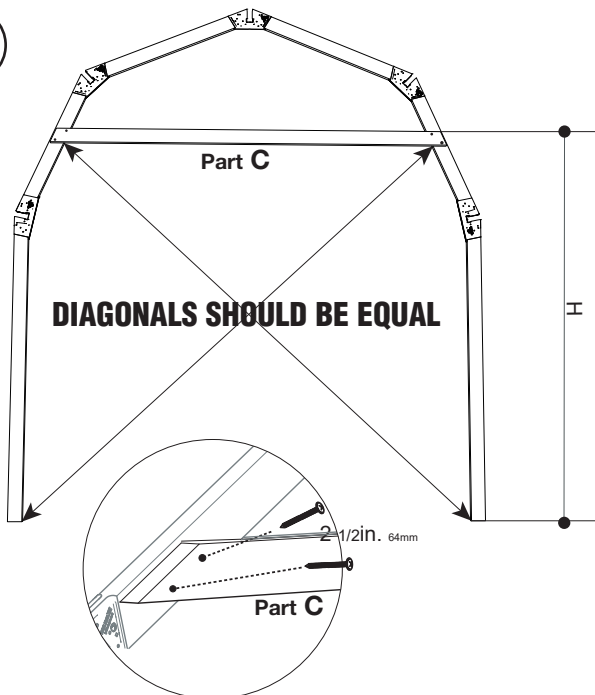

Just install the Part C on the middle arches. We will install the Part C later for the end arches.





|   | 7 ft. x 8 ft.<br>2134mm x 2438mm      | 8 ft. x 14 ft.<br>2438mm x 4267mm    | 10 ft. x 22 ft.<br>3048mm x 6705mm    |
|---|---------------------------------------|--------------------------------------|---------------------------------------|
| H | <b>2 pcs</b><br>75-1/2 in.<br>1919 mm | <b>6 pcs</b><br>87-1/2 in.<br>2224mm | <b>10 pcs</b><br>99-1/2 in.<br>2528mm |

11

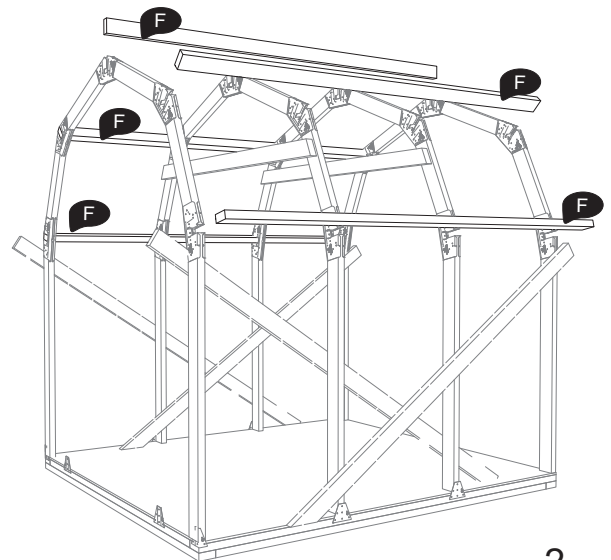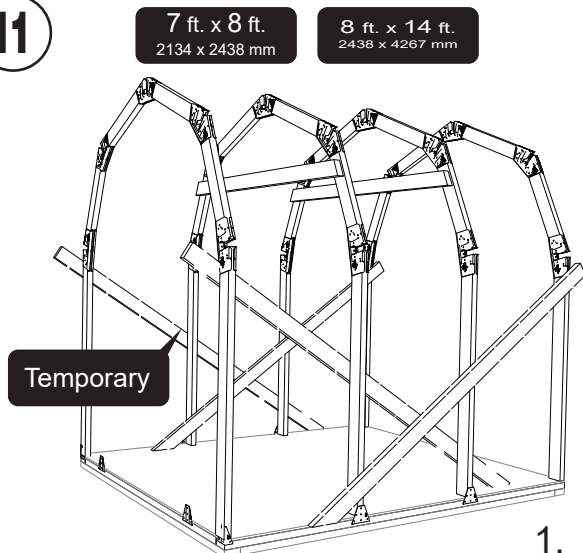

10 ft. x 22 ft.  
3048 x 6706 mm


Temporary

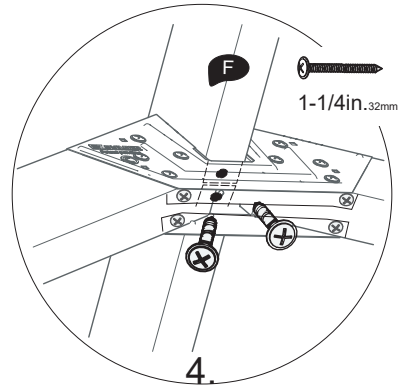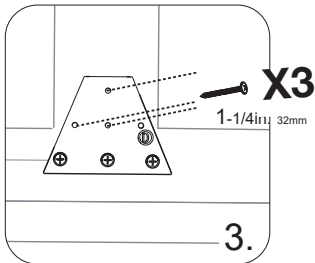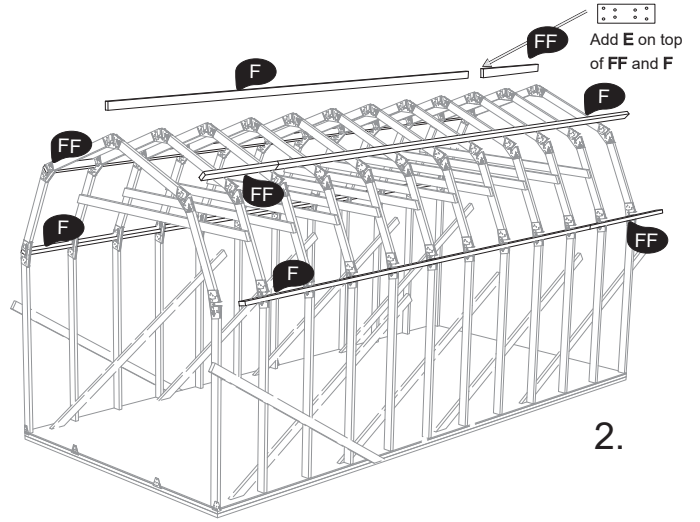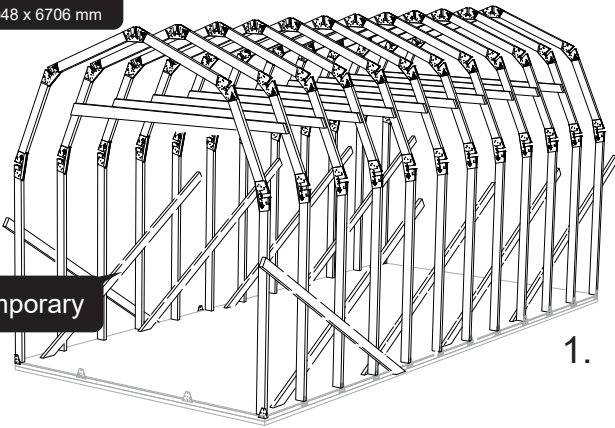

12


## Door Jams

7 ft. x 8 ft.  
2134 x 2438 mm

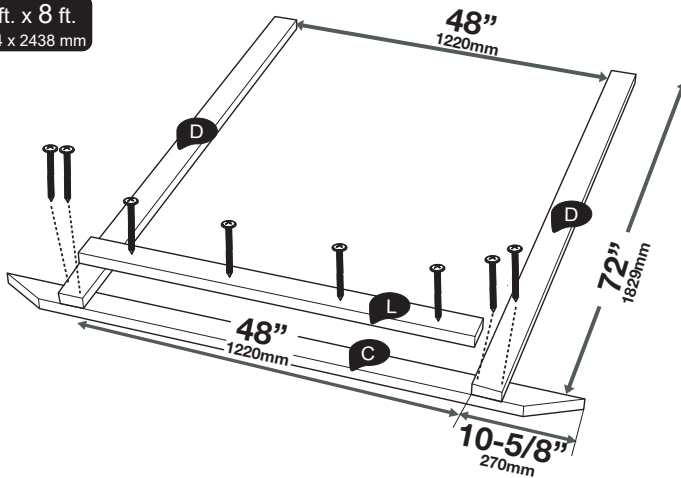


## Back Wall


7 ft. x 8 ft.  
2134 x 2438 mm

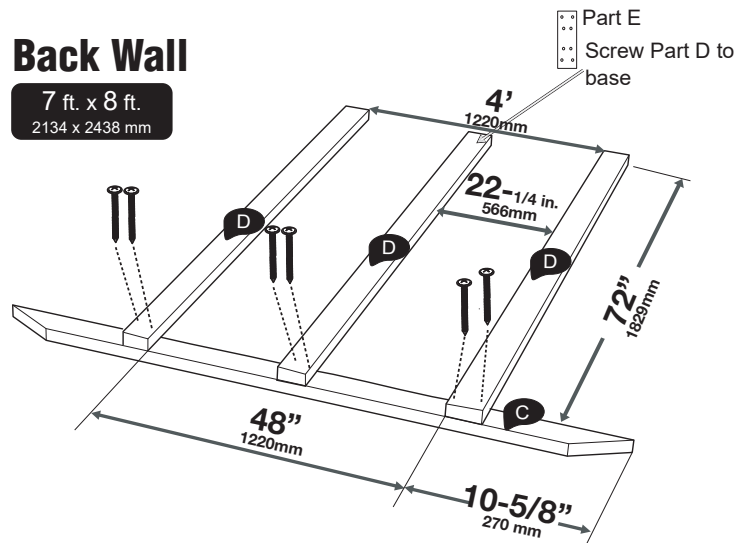


## Door Jambs

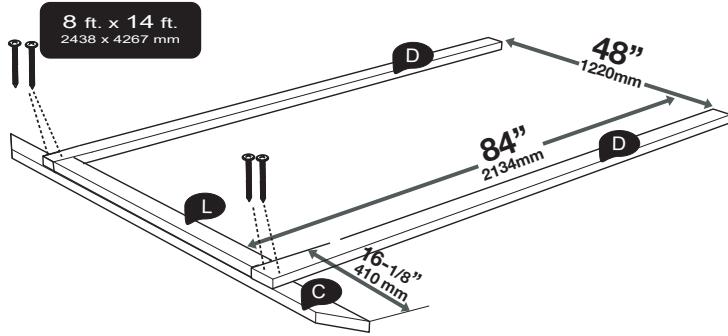


## Back Wall

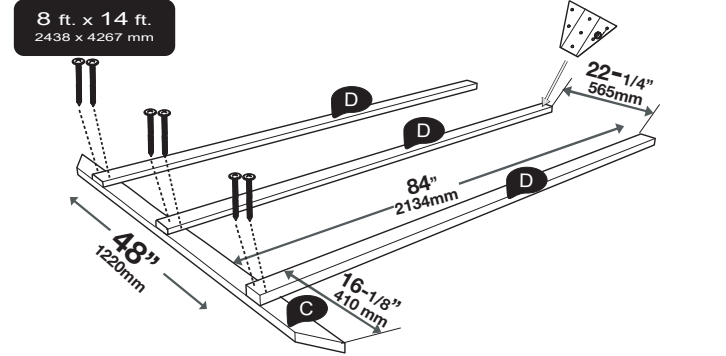

## Door Jambs

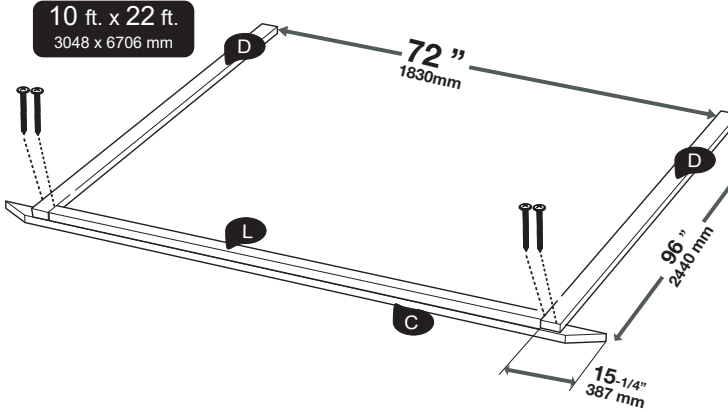


## Back Wall


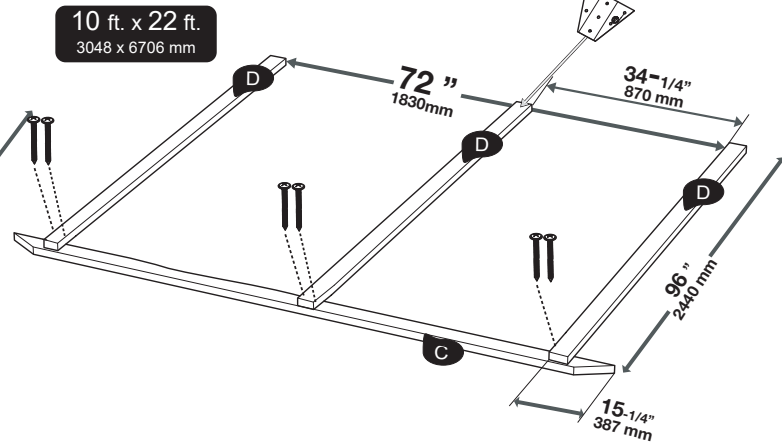


13

## Back Wall

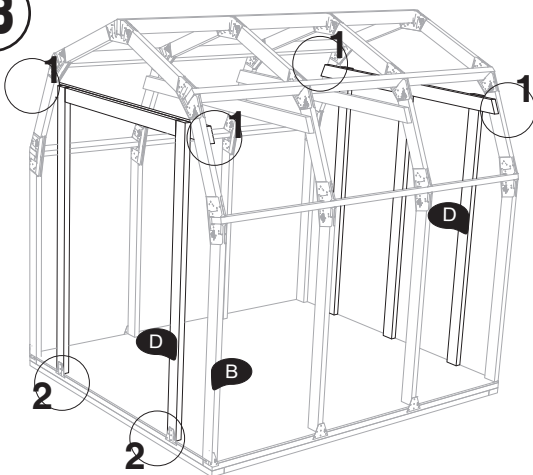


## Door Jambs

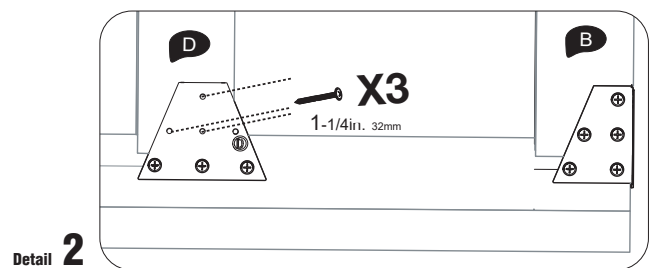
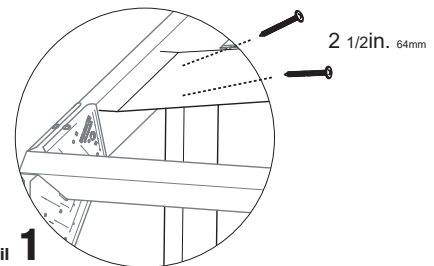


14

7 ft. x 8 ft.  
2134 x 2438 mm




Add a screw every 20" on every stud.

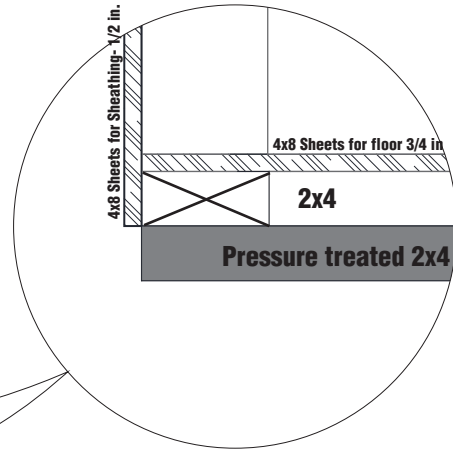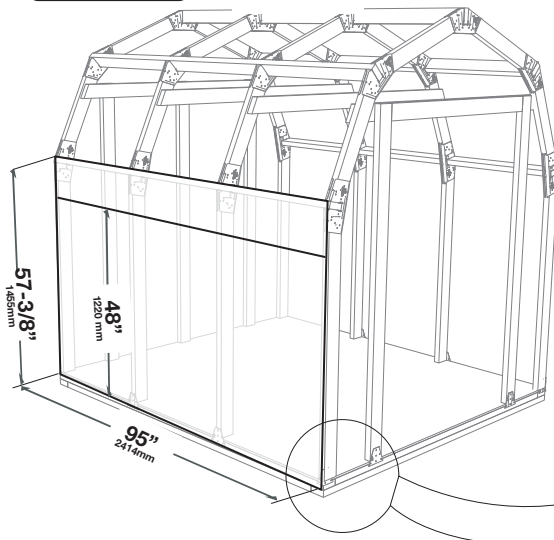


8 ft. x 14 ft.  
2438 x 4267 mm

10 ft. x 22 ft.  
3048 x 6706 mm



Add a screw every 20" on every stud.

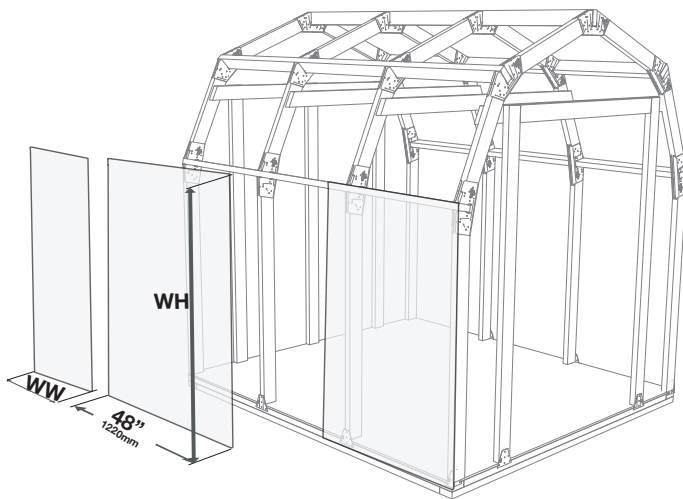




8 ft. x 14 ft.  
2438mm x 4267mm

10 ft. x 22 ft.  
3048mm x 6705mm



|                 |                                      |                                      |
|-----------------|--------------------------------------|--------------------------------------|
| WH<br>width 48" | <b>6</b> pcs<br>68-1/2 in<br>1738 mm | <b>10</b> pcs<br>93 in.<br>2361 mm   |
|                 | <b>2</b> pcs<br>23-7/8 in.<br>607 mm | <b>2</b> pcs<br>24-3/4 in.<br>628 mm |

15


7 ft. x 8 ft.  
2134 x 2438 mm

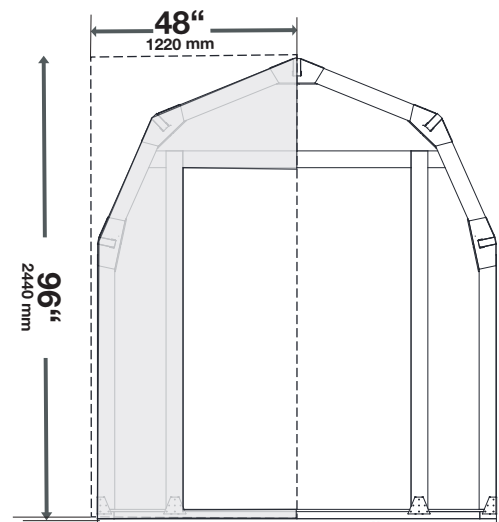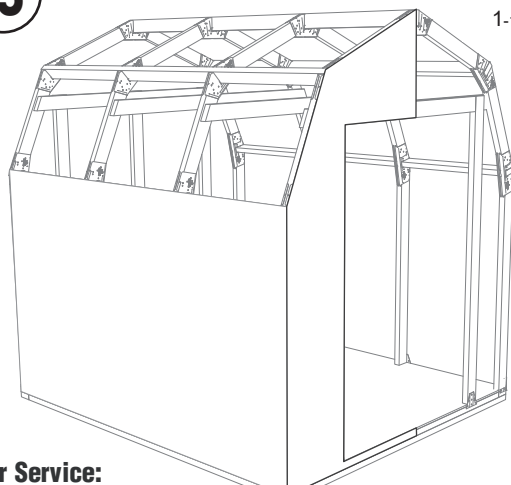



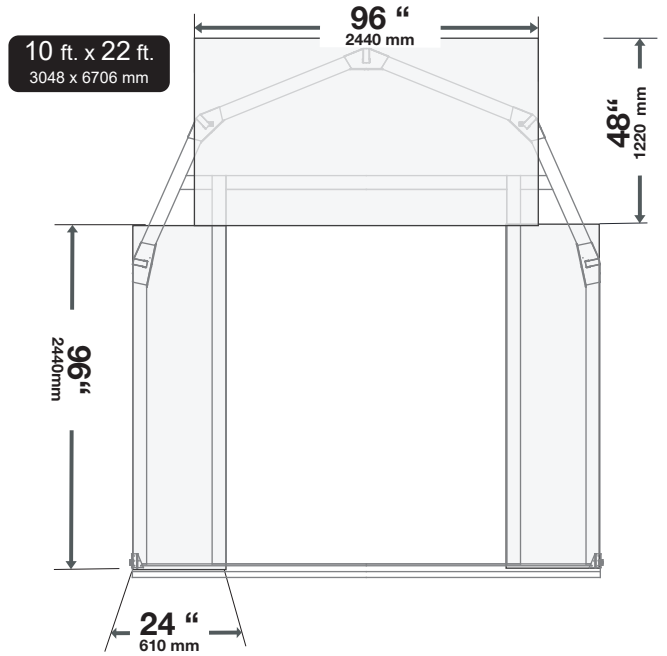
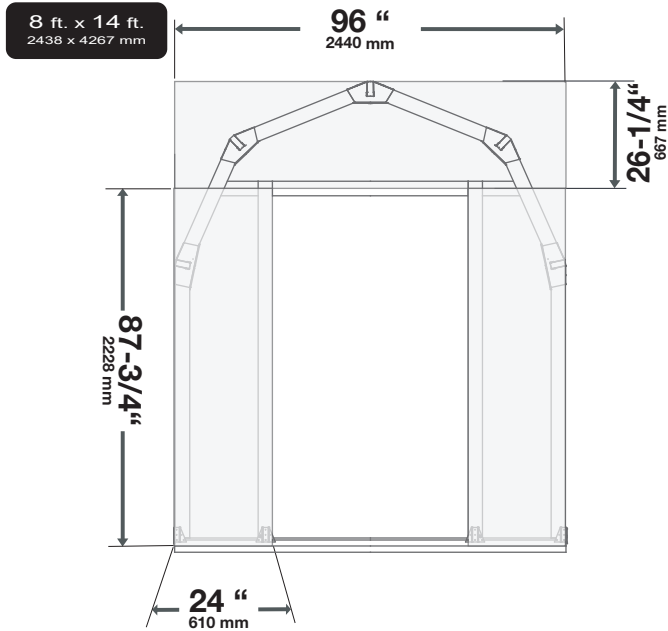


**16** 1-1/4 in. 32mm

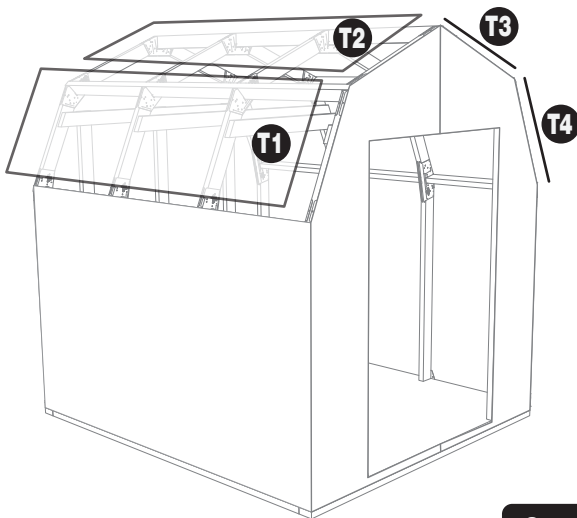


8 ft. x 14 ft.  
2438 x 4267 mm


7 ft. x 8 ft.  
2134 x 2438 mm

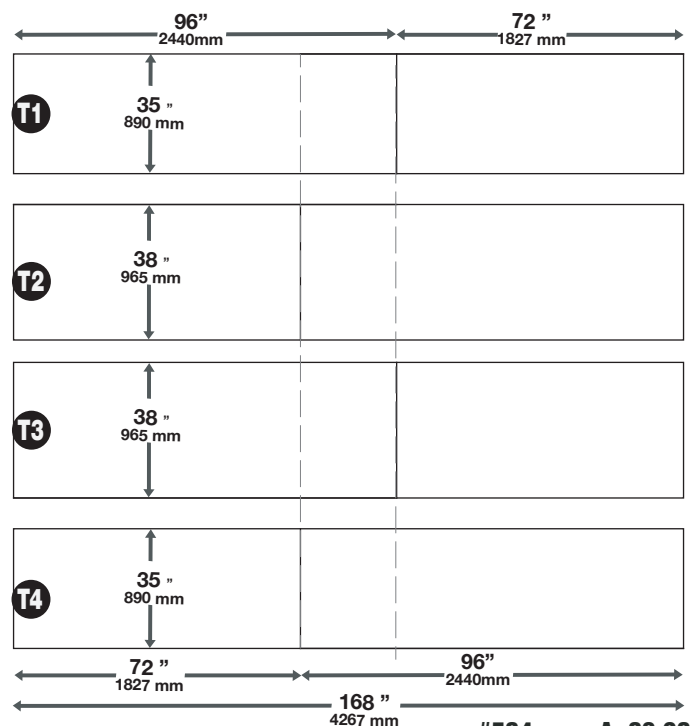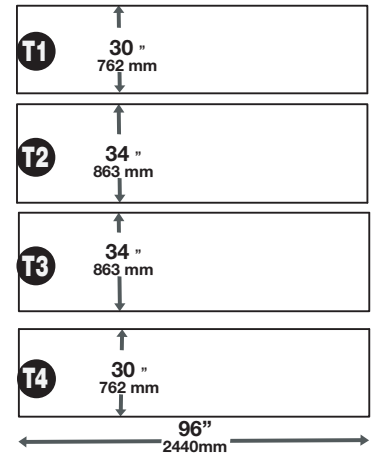



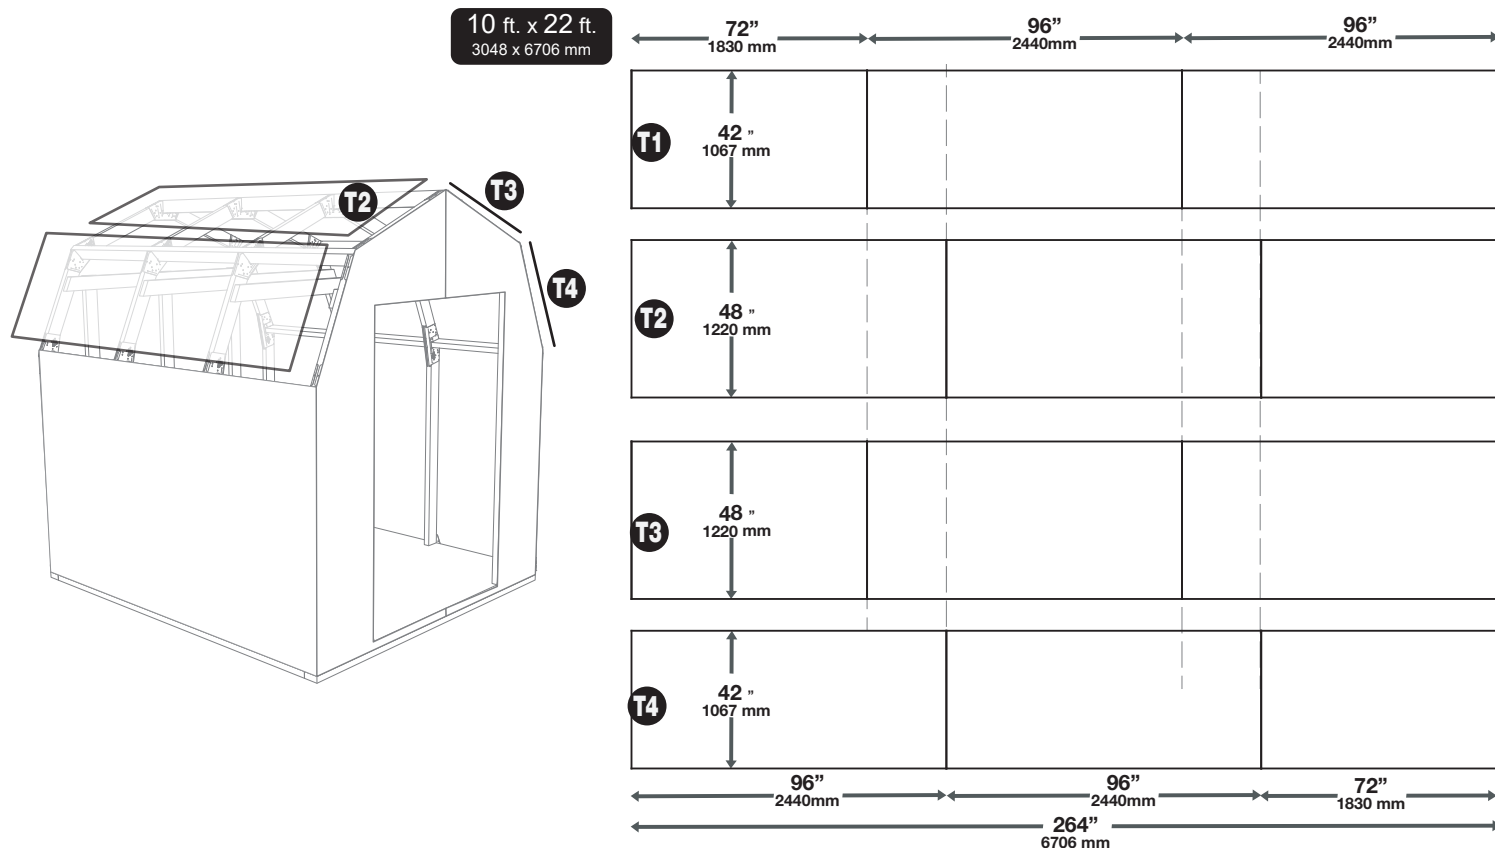

## 17 Door

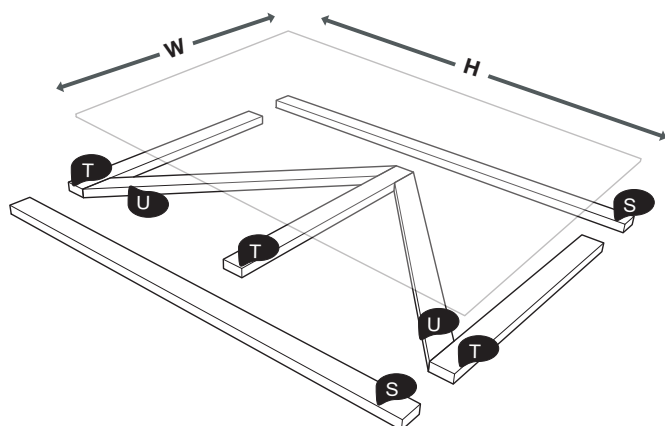

**7 ft. x 8 ft.**  
2134 x 2438 mm

**8 ft. x 14 ft.**  
2438 x 4267 mm

**10 ft. x 22 ft.**  
3048 x 6706 mm

**W H**

47-3/4 in. 71-3/4 in. **x1**  
1212 mm 1821 mm

47-3/4 in. 83-3/4 in. **x1**  
1212 mm 2127 mm

35-7/8 in. 95-3/4 in. **x2**  
911 mm 2430 mm

# Customer Service

*If you have a question or concern*

**Email: [service@neopmail.net](mailto:service@neopmail.net)**

**or call 203-591-9033**

*Monday-Friday 8:30am-4:30pm EST*

PDF manual <https://ezgomaterials.com>

**DO NOT RETURN TO THE STORE!**