



# **Bathroom corner shelf - No drilling**




VIEW IN BROWSER

updated 9. 1. 2024 | published 9. 1. 2024

## **Summary**

Simple shelf for the corner of you shower to be able to keep your neccesities close to hand. Easy to mount and no screws

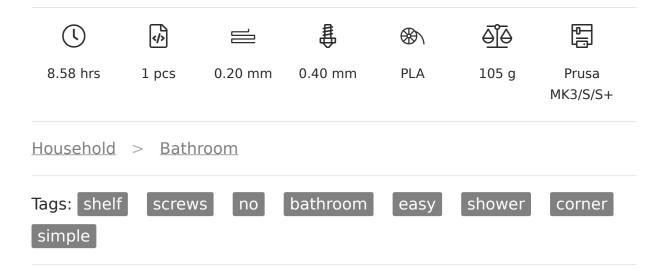

This is a simple and easy to mount shelf for the corner of your shower. It is mounted with double sided tape and is big enough for 5-6 normal sized bottles. The design is sleek, simple and has a feeling that it is floating.

There are three files, the main shelf, mounting bracket which you need two of, and a guide to help you attach the brackets in a correct position.

I have designed them to use Tesa powerbond ultra strong double sided tape

#### **Instructions**

Here are some brief instructions to help you with your new shelf:)

#### **Print:**

1x shelf

2x brackets

1x Guide for brackets (optional but recommended)

#### **Printinstructions:**

Layerheight: 0.2

Infill: 20% (would suggest using modifier and have extra infill in the front)

Parameters: 4

PLA or PETG

#### **Assembly:**

- 1. Cut the double-sided tape the the correct length and attach them in the small cutout in the bracket.
- 2. place the guide against your corner and make sure it is level. Then you place the brackets in the guide and make sure they're in the correct place.
- 3. Slide the shelf onto the brackets.
- 4. Done!

## **Model files**

#### bathroom-shelf-p1.stl



 $\square$  Shelf - one needed

#### bathroom-shelf-p2.stl



☐ Bracket - two needed

### bathroom-shelf-guide.stl



☐ Optional guide but recommended

## **Print files**

#### bathroom-shelf\_02mm\_pla\_mk3s\_8h35m.gcode



♠ PLA ♣ 0.40 mm 
☐ 0.20 mm ③ 8.58 hrs ④ 105 g ☐ Prusa MK3/S/S+

# License **G**



This work is licensed under a Creative Commons (4.0 International License)

#### **Attribution-NonCommercial**

- ★ | Sharing without ATTRIBUTION
- ✓ | Remix Culture allowed
- **×** | Commercial Use
- ★ | Free Cultural Works
- ★ | Meets Open Definition