


## IDING

## **NOTES:**

Apply a conformal coating to both sides of the PCB while preventing the coating from being applied to the KEPP-OUT regions A-F.

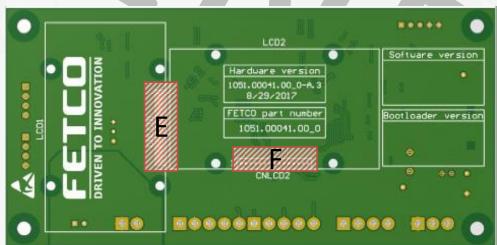

## PENDING





Conformal Coating Keep-Out Region