

# Alba Jacket



## ILLUSTRATED TUTORIAL

ADVANCED



SIZES: XS - XXXL

*Pattern  
Couture*

Thank you so much for choosing our pattern!

Our goal is to make beautiful patterns that all our clients will enjoy sewing and also feel very proud wearing!

Happy Sewing !

If you ever need any help or if you have any questions you can always write to us on Etsy or on our e-mail address **help.patterns@gmail.com**

We wish you a wonderful day and a lot of fun with your sewing project.

Do not forget to share your finished result on Instagram (P.S. add us **@patterncouture\_** for a chance to win a free sewing pattern.

*XO Katya & Tobias*

# Table of Contents



| Page Number | Table of Contents                        |
|-------------|------------------------------------------|
| 1           | Welcome and Contact Information          |
| 2           | Table of Contents                        |
| 3           | About the Pattern / Sewing Supplies List |
| 4           | How to take body Measurements            |
| 5           | Choosing your Size / Size Chart          |
| 6           | Fabric Requirements                      |
| 6           | Recommended Fabrics                      |
| 7           | Printing Instructions                    |
| 8           | Pattern Assembly with Video Instructions |
| 9-10        | Pattern layout                           |
| 10          | Fabric Cutting Instructions              |
| 11          | Fabric Layout                            |
| 12          | Sewing Tips and Tricks                   |
| 13 - 24     | Sewing Instructions                      |
| 25          | Final Looks                              |

## ABOUT THE PATTERN

Alba jacket.

The shirt jacket is perfect for casual moment.  
It can be worn on its own like a shirt, as a jacket  
over a T-shirt or under jacket,

This pattern comes in sizes XXS-XXXL.

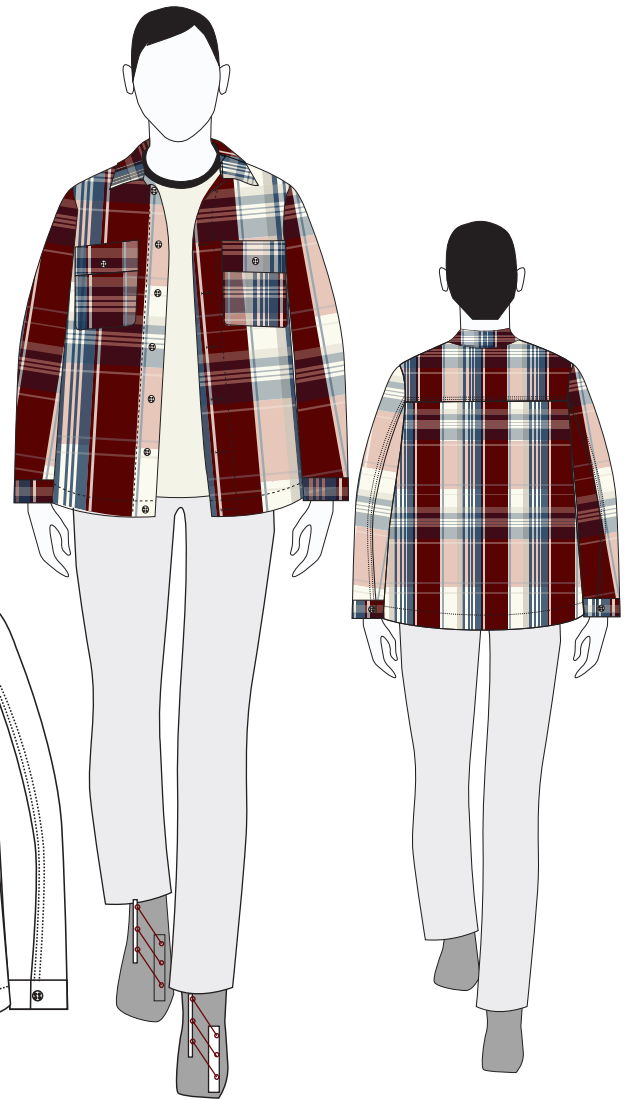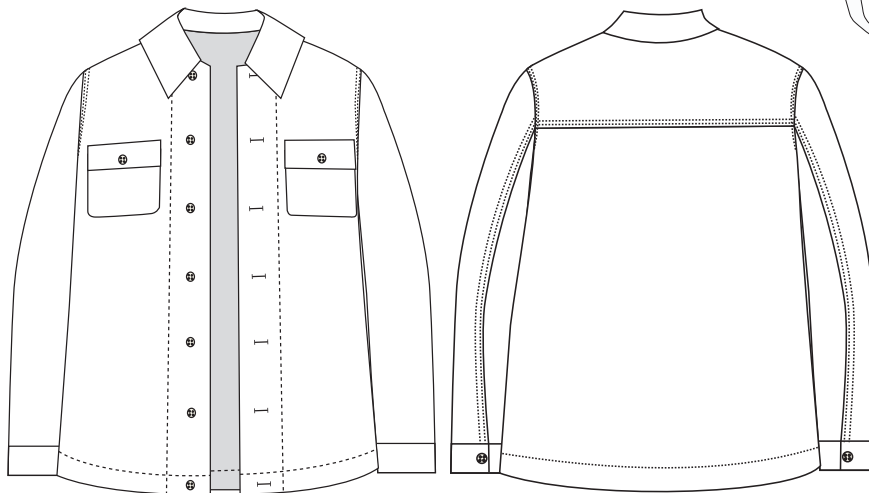


## Sewing Supplies Checklist

- Measuring tape
- Scissors
- Pins or clips
- Coordinating thread
- Fabric marker
- Seam ripper
- Sewing Machine
- Ruler
- Iron
- Hand sewing needle

NOTIONS:  
11 pcs Button 18mm (28L)

Optional:  
A serger or coverstitch machine is not required  
but always fun to use if available.



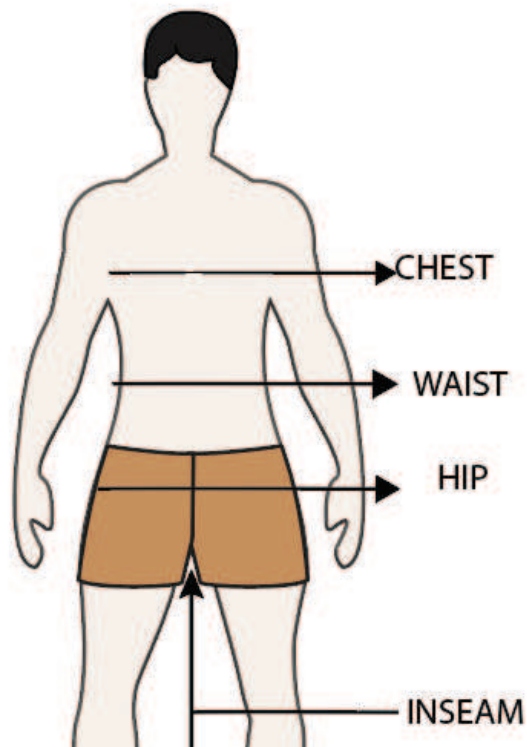

In order to pick the right size, you need to compare your measurements with the measurements from the size guide.

For tops base your size decision according to the bust circumference.

For bottom garments ( pants, shorts...) base your size decision to the hip circumference.

If your measurement fall between two sizes, you should pick the size which your measurement comes closest to.  
For example if your chest size is 86cm or 34" choose XS.  
If you fall exactly into the middle (+/-2) go to higher size for close fitting garments and to the smaller size for loose fitting garments.

**IMPORTANT!** In case you fall into one size according to your chest measurement (for example XS ) and a different size according to your W and H measurements (for example L), then you'll have to adjust the pattern at the waist and hip lines.

# Choosing Your Size

## ATTENTION!

Our brand uses **different size charts** for different patterns.

Make sure to **check your size** for each project.

Also do not rely on the ready to wear garment size you buy in shops.

## How to measure your size:

The best thing you can do is, to get a friend or a family member to help you.

The measurements should be taken in the same Underwear / undergarments in which you will wear the garment.

## Size Chart

The following 3 measurements we need: **Chest, Waist and Hip.**

The measurements of the chest and the Hip should be taken in the most protruding part of the body. The measurement tape should be taut but it shouldn't deform your body. If you can still put a finger between the measurements tape you are good.


This pattern is designed for a height of 170 cm (6'7")

| INCHES | XS | S  | M   | L   | XL  | XXL | XXXL |
|--------|----|----|-----|-----|-----|-----|------|
| CHEST  | 34 | 37 | 40  | 43  | 46  | 49  | 52   |
| WAIST  | 28 | 31 | 34  | 37  | 40  | 44  | 48   |
| HIPS   | 34 | 37 | 40  | 43  | 46  | 49  | 52   |
|        |    |    |     |     |     |     |      |
| CM     | XS | S  | M   | L   | XL  | XXL | XXXL |
| CHEST  | 86 | 94 | 102 | 109 | 117 | 124 | 132  |
| WAIST  | 71 | 79 | 86  | 94  | 102 | 112 | 122  |
| HIPS   | 86 | 94 | 102 | 109 | 117 | 124 | 132  |

# Recommended Fabrics

This pattern is not suitable for knit fabrics or fabrics with stretch

This pattern is best suited for heavy weight fabric such as denim, Thick Flannel, twill.

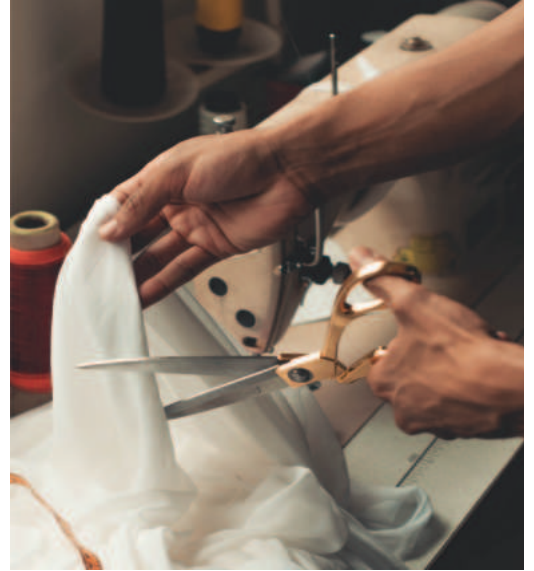

## Fabric Requirements

Main Fabric

| Amount of Fabric Required |                    | XS   | S    | M    | L    | XL   | XXL  | XXXL |
|---------------------------|--------------------|------|------|------|------|------|------|------|
| 150 cm wide fabric        | amount in metre(s) | 1.54 | 1.56 | 1.65 | 2.05 | 2.11 | 2.15 | 2.20 |
| 60 " wide fabric          | amount in yard(s)  | 1.7  | 1.7  | 1.8  | 2.2  | 2.3  | 2.4  | 2.41 |

Interfacing

| Amount of Fabric Required | All Sizes XS - XXXL |
|---------------------------|---------------------|
| 150 cm wide fabric        | 1                   |
| 60 " wide fabric          | 1                   |

# Printing Instructions



Let us print out the pattern.  
There are 3 options on how to print the pattern:

A4 and US Letter size - these are tiled versions which you can print out at home on your desktop computer.

AO size - You can go to a copy shop and print it on a big scale. The nice thing is it is one sheet of paper and saves you the time of sticking pages together.

## PRINTING CHECKLIST !


- Select your layers
- Enter print pages
- Orientation set to auto
- Set scale to 100%
- Print the Test Page
- Check your scale

Two test squares are provided to help ensure your pattern prints in the right size.

Depending on the test square you measured, it should be either 5cm x 5cm or 2" x 2".

If it has the wrong measurement, check your printer settings and try again.

NOTE : The pattern will not sew in the correct size if the Test Square does not measure correctly.

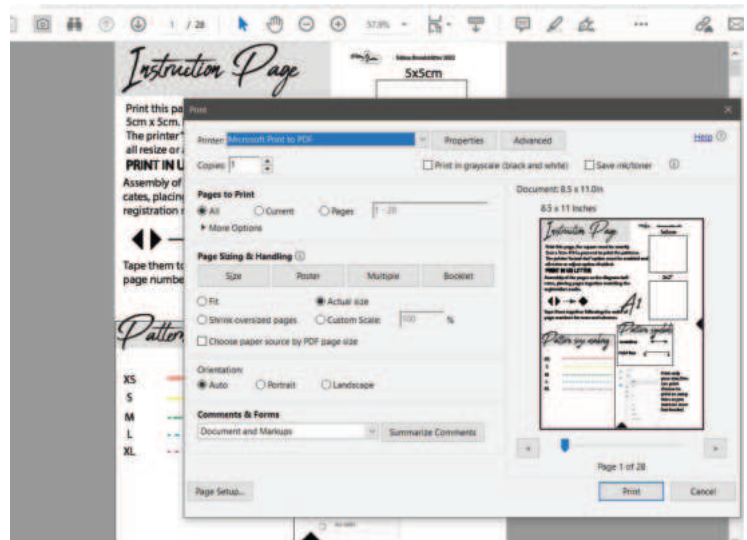

## IMPORTANT:

Do not open or print the pattern in Microsoft Word.

In order to print this pattern you need the Adobe Acrobat Reader software. This software is available for free download on the internet.

<https://get.adobe.com/reader/>


# Pattern Assembly

See the sample image below which shows how each sheet of paper will be placed. Use the corner marks to align each paper next to each other.

Stick the sheets together using the number on the pages and the layout below as a guide.

PATTERN ASSEMBLY VIDEO LINK:

<https://youtu.be/cOW1K41QOBQ>

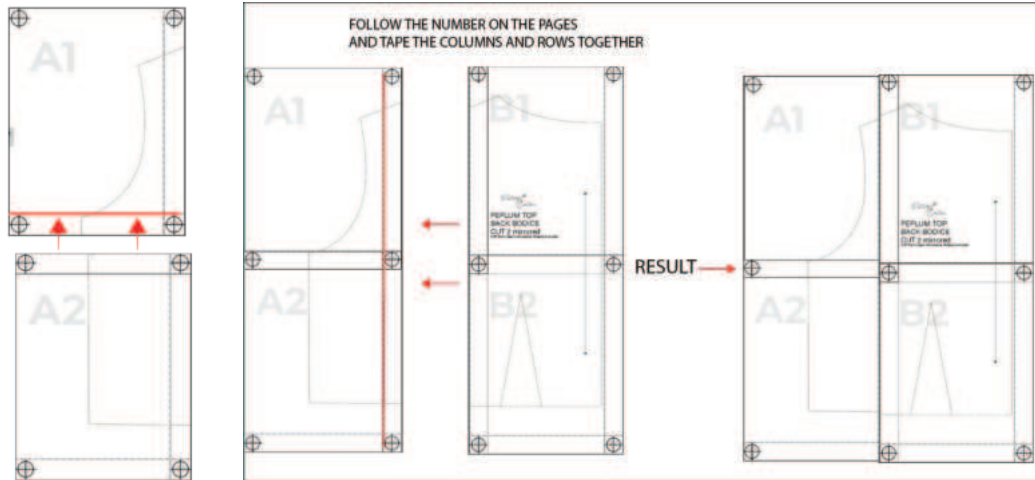


## Pages to Print


| Pattern Piece Name       | Pages to Print A4               | Pages to Print US            |
|--------------------------|---------------------------------|------------------------------|
| Front Bodice             | 15-17, 20-23, 26-29, 31-34      | 16-19, 23-26, 30-33          |
| Back Bodice              | 2-5, 8-11, 14-17                | 2-5, 9-12, 17-19             |
| Sleeves                  | 5-7, 11-13, 17-19, 23-25, 29-30 | 5-8, 12-15, 19-22, 26-29, 34 |
| Cuff Pattern             | 23,29,34                        | 8,15,22                      |
| Pocket                   | 14-15                           | 9, 10, 16,17                 |
| Pocket's cover           | 14                              | 9, 16                        |
| Collar                   | 14, 20                          | 16, 23                       |
| Front Center Interfacing | 2, 8, 14, 20                    | 8, 15, 22, 29                |

# Pattern Layout


A4 LAYOUT

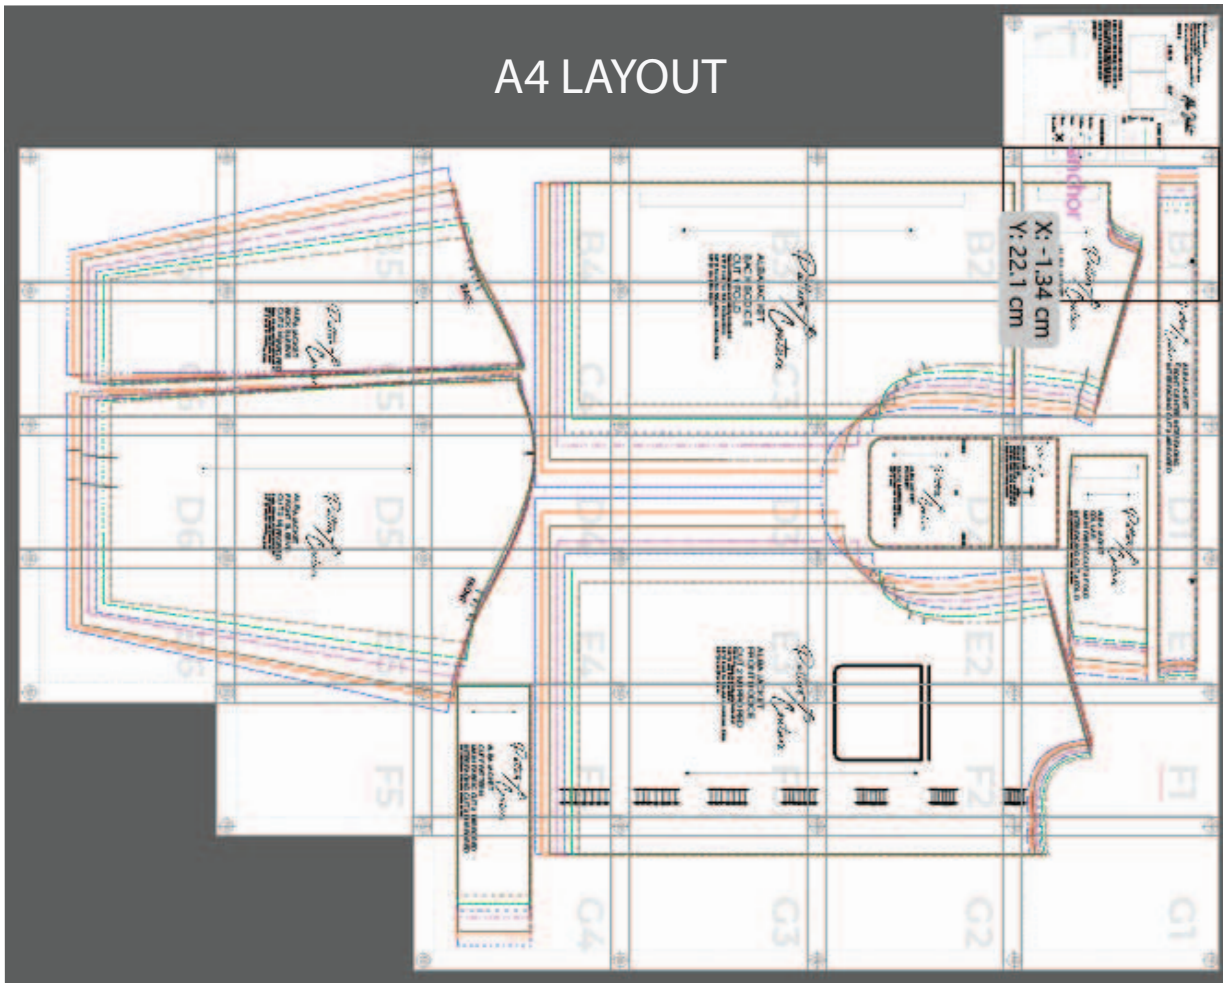

US LETTER LAYOUT

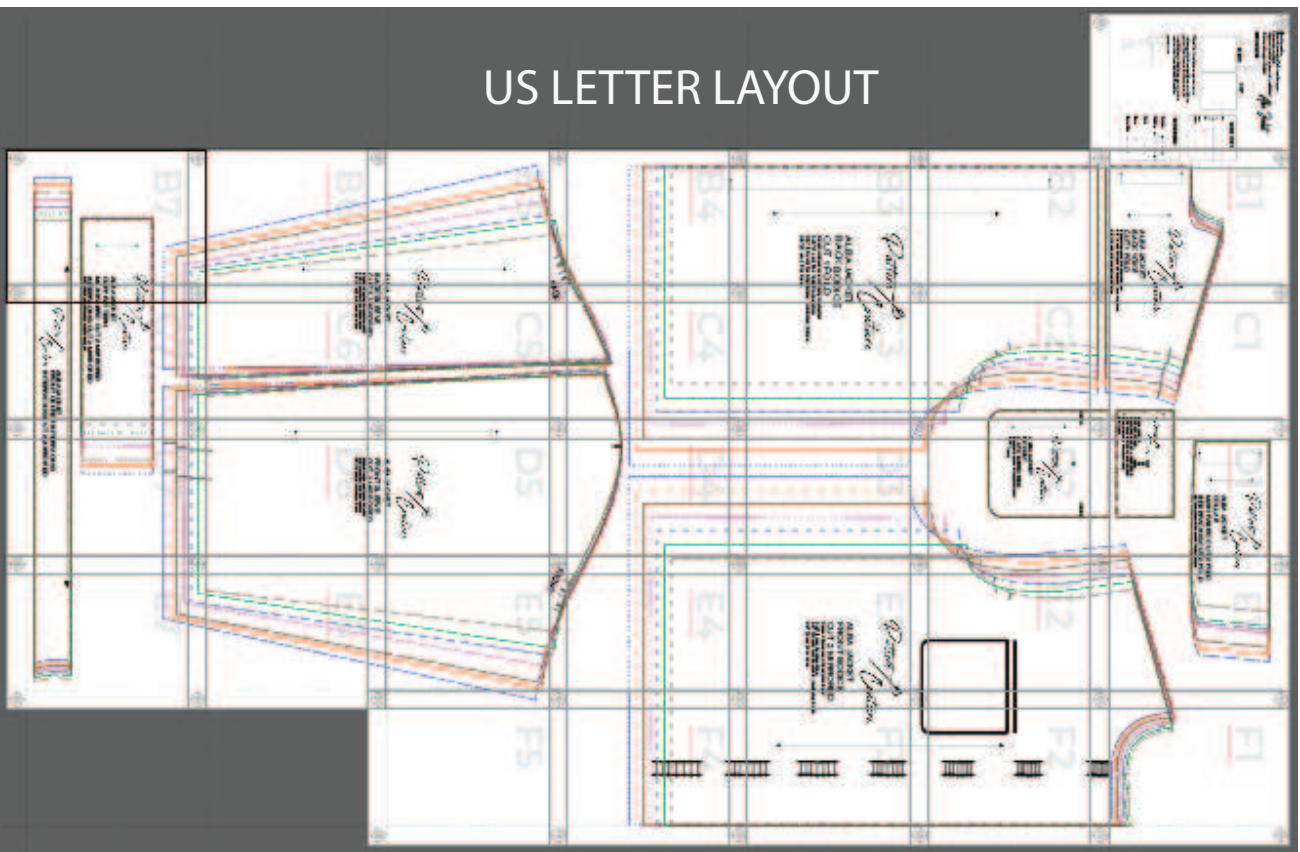


## A0 LAYOUT

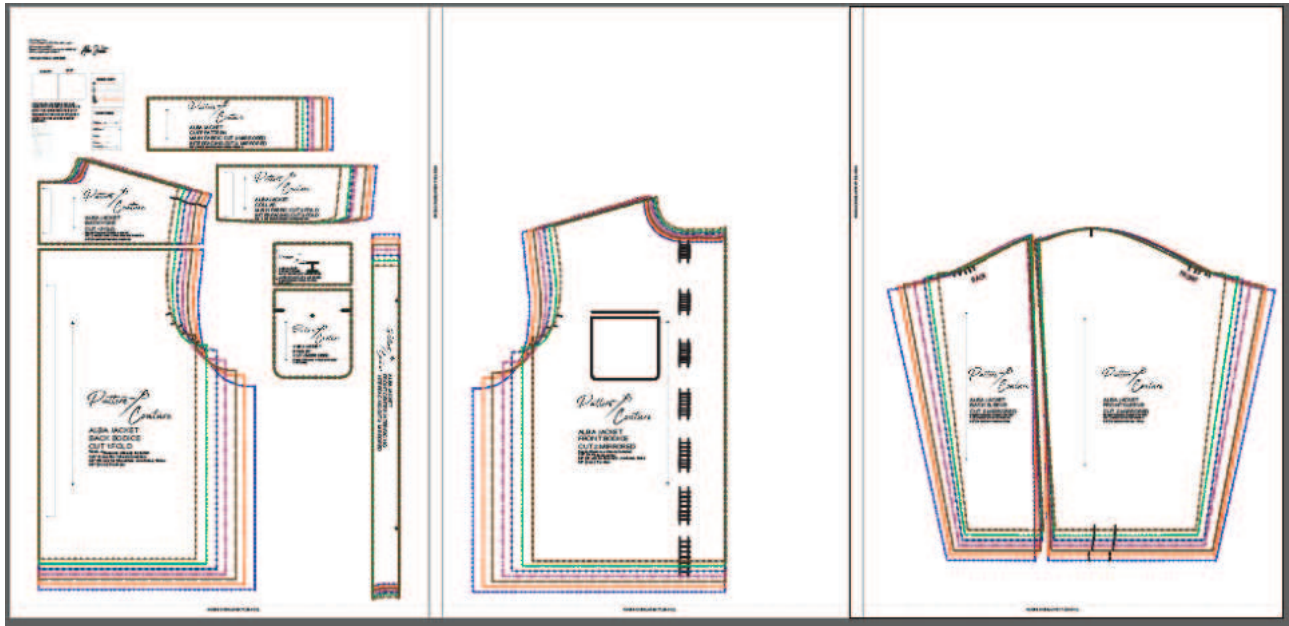

## Fabric Cutting Instructions

| Pattern Piece Name       | Pieces to Cut                                              |
|--------------------------|------------------------------------------------------------|
| Front Bodice             | Cut 2- Mirrored                                            |
| Back Bodice              | Cut 1 Fold                                                 |
| Back Yoke                | Cut 1 Fold                                                 |
| Front Sleeves            | Cut 2 - Mirrored                                           |
| Back Sleeves             | Cut 2 - Mirrored                                           |
| Pockets                  | Cut 2 - mirrored                                           |
| Pocket's covers          | Main Fabric cut 4 - mirrored, Interfacing cut 2 - Mirrored |
| Collar                   | Main Fabric cut 2 - Fold, Interfacing cut 2 - Fold         |
| Cuff Pattern             | Main Fabric Cut 2 - Mirrored Interfacing cut 2 - Mirrored  |
| Front Center Interfacing | Cut 2 - Mirrored                                           |

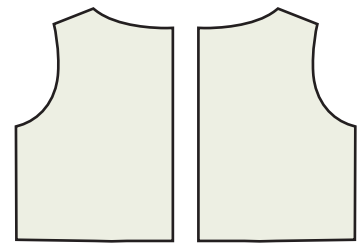

Mirrored pieces are pieces of the same exact shape, but cut in opposite directions, so as to be symmetrical mirror images of each other.

The fastest way to cut mirror images is to fold your fabric **RIGHT** sides together and cut the piece out, cutting through both layers of fabric.

# Fabric Layout


Sample cutting chart shown below.

Depending on what options you choose, it may be laid out differently.

## MAIN FABRIC LAYOUTS



## INTERFACING

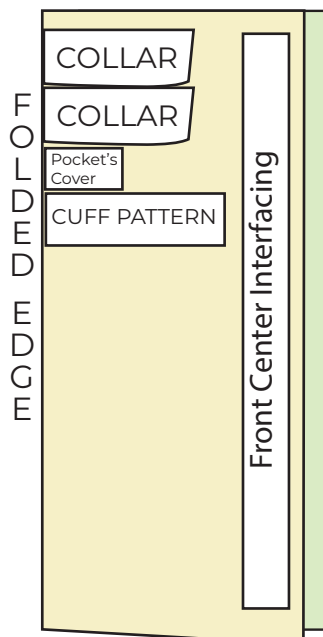

# *Tips and Tricks when sewing with woven (non stretch) fabrics*

## **Choose the Right Needle:**

Use a universal or sharp needle for most woven fabrics.

For heavyweight fabrics like denim or canvas, consider using a jeans/denim needle.

## **Select the Right Thread:**

Choose a good quality, all-purpose polyester or cotton thread for most woven fabrics.

Match the thread color to your fabric for a more polished look.

## **Prewash Your Fabric:**

Pre-wash your fabric to prevent shrinkage after your garment is completed.

This is especially important if your final garment will be washed.

## **Use the Right Stitch Length:**

For most woven fabrics, a stitch length of 2.5 to 3.0 mm works well.

Adjust the length based on the weight of the fabric.

## **Finish Raw Edges:**

Serge, zigzag, or use pinking shears to finish raw edges and prevent fraying.

Alternatively, you can use French seams for a neat finish on lightweight fabrics.

## **Press as You Go:**

Press your seams as you sew. Use a hot iron and steam to set the stitches and create crisp seams.

## **Grainline Matters:**

Pay attention to the grainline of your fabric. Cut pieces on the straight grain unless the pattern indicates otherwise.

## **Staystitch Curves:**

Staystitching helps stabilize curves and prevents stretching.

Stitch along the seam line within the seam allowance.

## **Use Interfacing:**

For areas that need extra stability, like collars and cuffs, use interfacing. It prevents these areas from becoming too limp.

## **Mark Your Fabric:**

Use tailor's chalk, disappearing ink pens, or tailor's tacks to mark darts, notches, and other important points accurately.

## **Clip Curves and Notches:**

Clip into seam allowances on curves to help the fabric lay flat. Make small notches at the seam allowance for easier alignment.

## **Test on Scrap Fabric:**

Always test your stitches and settings on a scrap piece of fabric before sewing the actual garment.

## **Understand Fabric Properties:**

Different fabrics behave differently. Understand the properties of the fabric you're working with, such as its drape, weight, and stretch.

## **Practice Precision:**

Be precise with your cutting, marking, and sewing. Accurate measurements and cuts lead to a more professional-looking garment.

# Sewing Instructions

Note :

Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing




Pocket Right Side



Pocket's cover Right Side

## PREPARATION STEPS :

- Mark notches and transfer all pattern markings
- Iron interfacing to the wrong side of your fabric

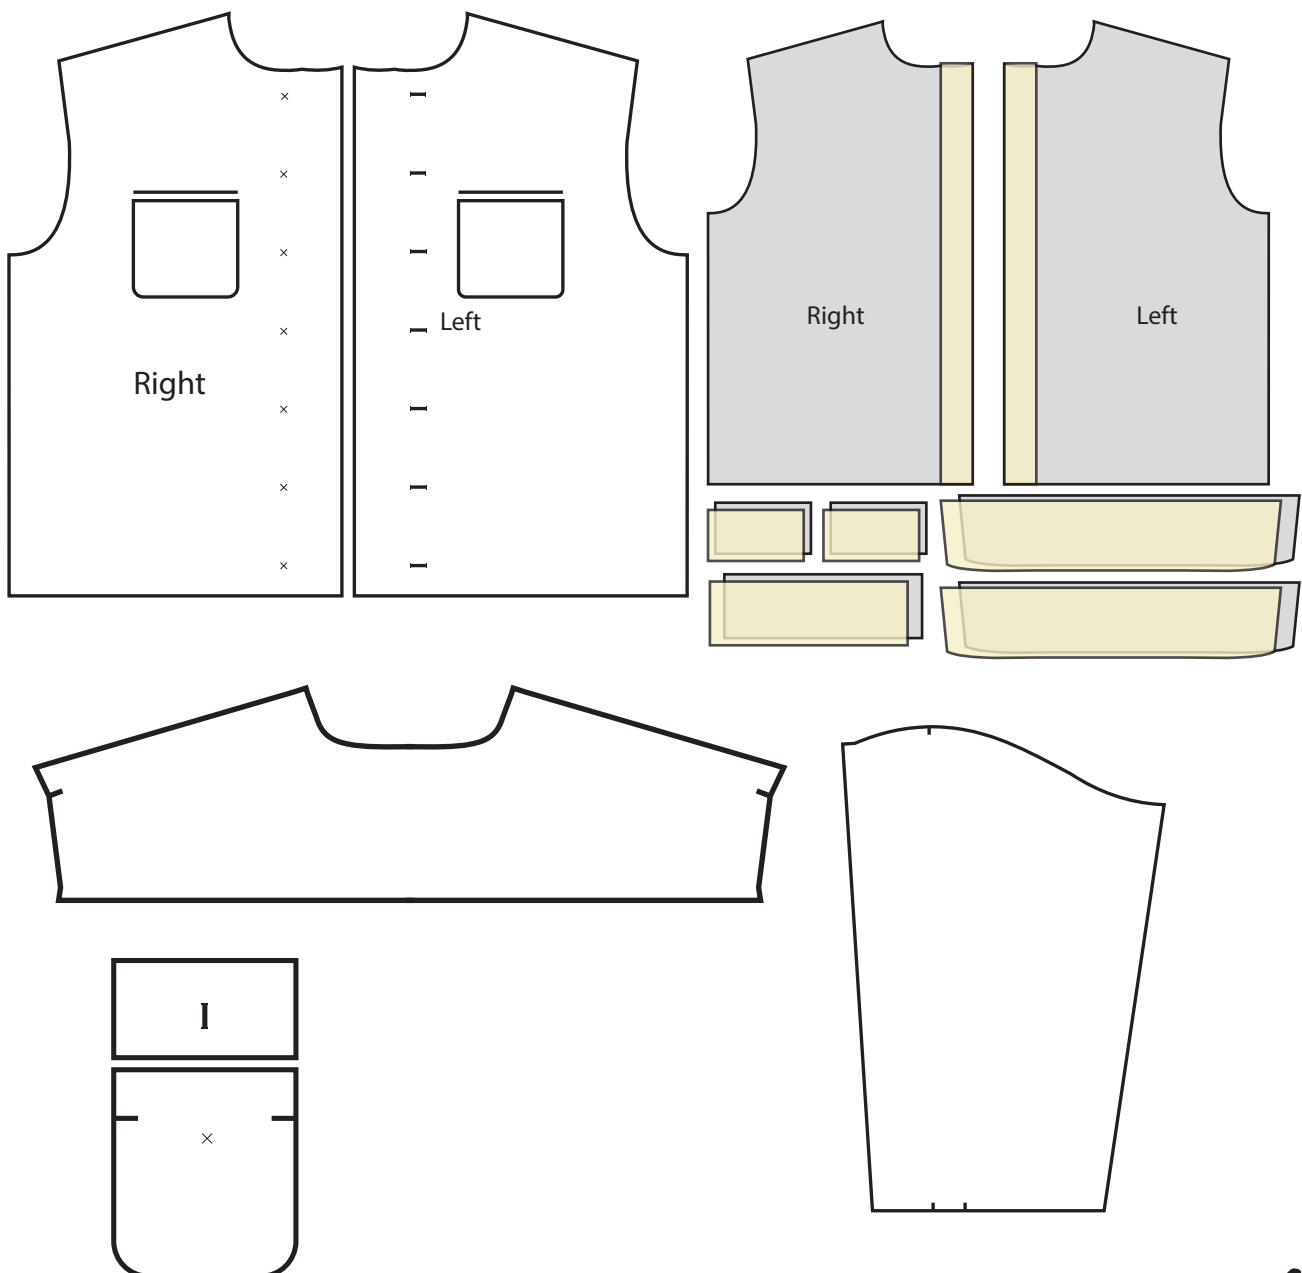

# Sewing Instructions

Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing







Pocket Right Side



Pocket's cover Right Side

## Step 1 : SEWING THE COLLAR

- Match the collars with right sides of the fabric together and sew the upper collar seam at 1 cm (3/8").
- Make cuts along the seam allowance, and Bring the seam allowance to one side and make a top stitch 1.5mm (1/16") on the right sides of the fabric.
- Fold the top seam of the collar towards the under and sew the sides of the collar 1 cm (3/8").
- Turn the collar right sides out and press.

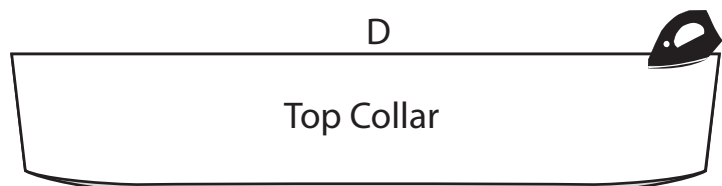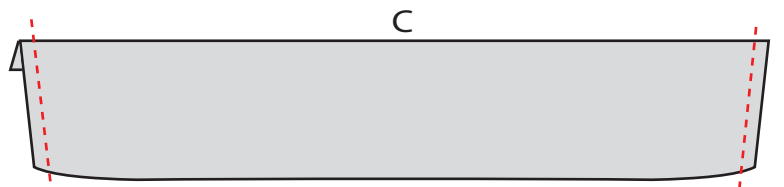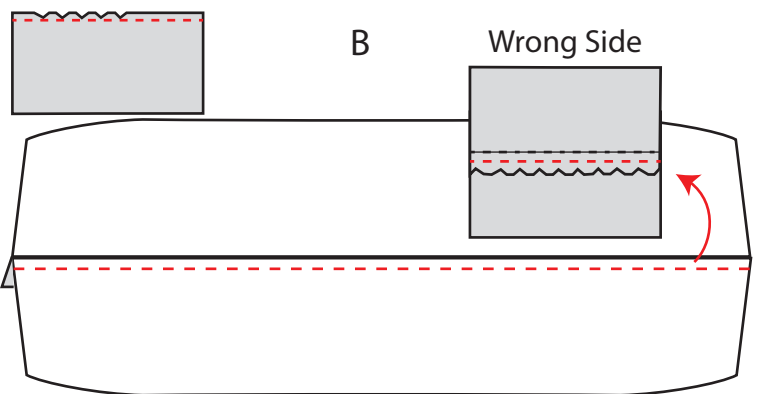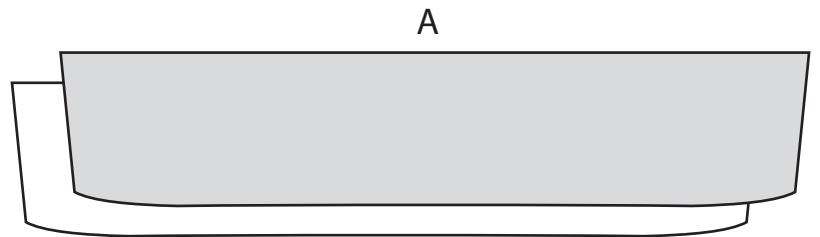

# Sewing Instructions

Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing







Pocket Right Side



Pocket's cover Right Side


## Step 2 : SEWING POCKETS AND POCKET'S COVERS

- Match the Pocket's covers with the Right Sides of the fabric together and sew the sides and the bottom at 1 cm (3/8").
- Turn the pocket's cover right sides out and press, sew 0.5 cm (1/4") from the side edges and bottom edge.
- Fold the top seam of the pocket 1 cm (3/8") towards the wrong side of the fabric, and fold again 2 cm (0.8"). Sew 1.5mm (1/16") from the edge. Press. Finish the sides and the bottom seam allowance with serger or zigzag.
- Fold the side and bottom seams of the pocket at 1 cm (3/8") toward the wrong side of the fabric press and sew at 0.6 cm (1/4") from the folded edges.

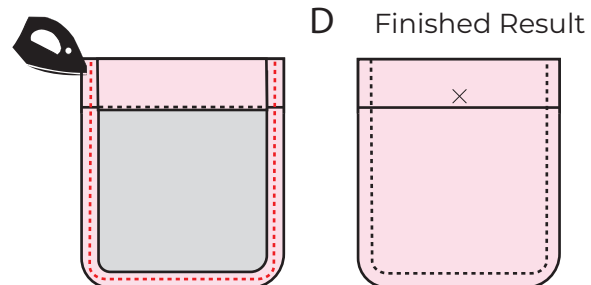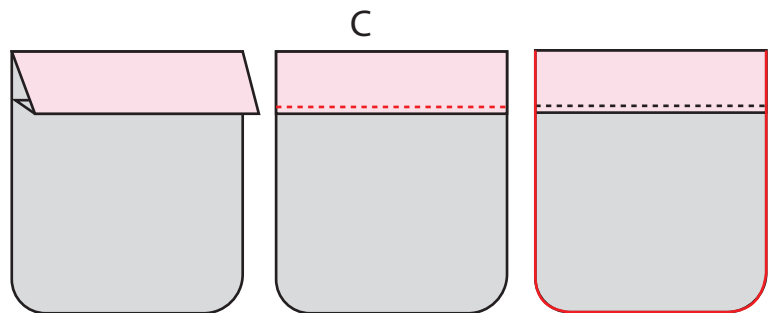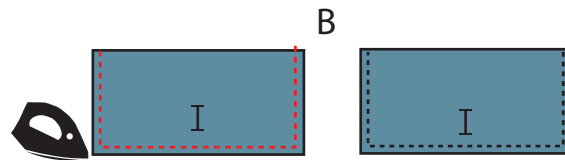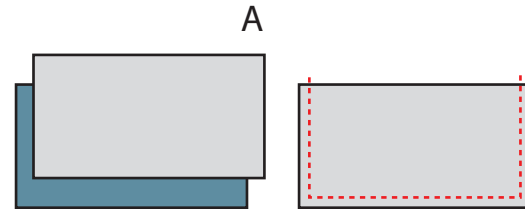

# Sewing Instructions


Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



## Step 3: SEWING THE POCKETS AND POCKET'S COVERS ON THE FRONT BODICES

- Match the pocket with the pocket line mark. Sew the pocket 0.1 cm (0.04") from the edge and on the top sides of the pocket, form a 0.5 cm (1/4") x 3 cm (1.25") square stitch.
- Place the top Pocket's cover directly over the pocket, so that the two edges meet, sew the seam allowance 1 cm (3/8").
- Trim the top pocket's cover seam allowance at 0.5 cm (1/4").
- Fold down The Pocket's cover, press and sew 0.5 cm (1/4") from the edge.

NOTE: Do the same thing on the other side.

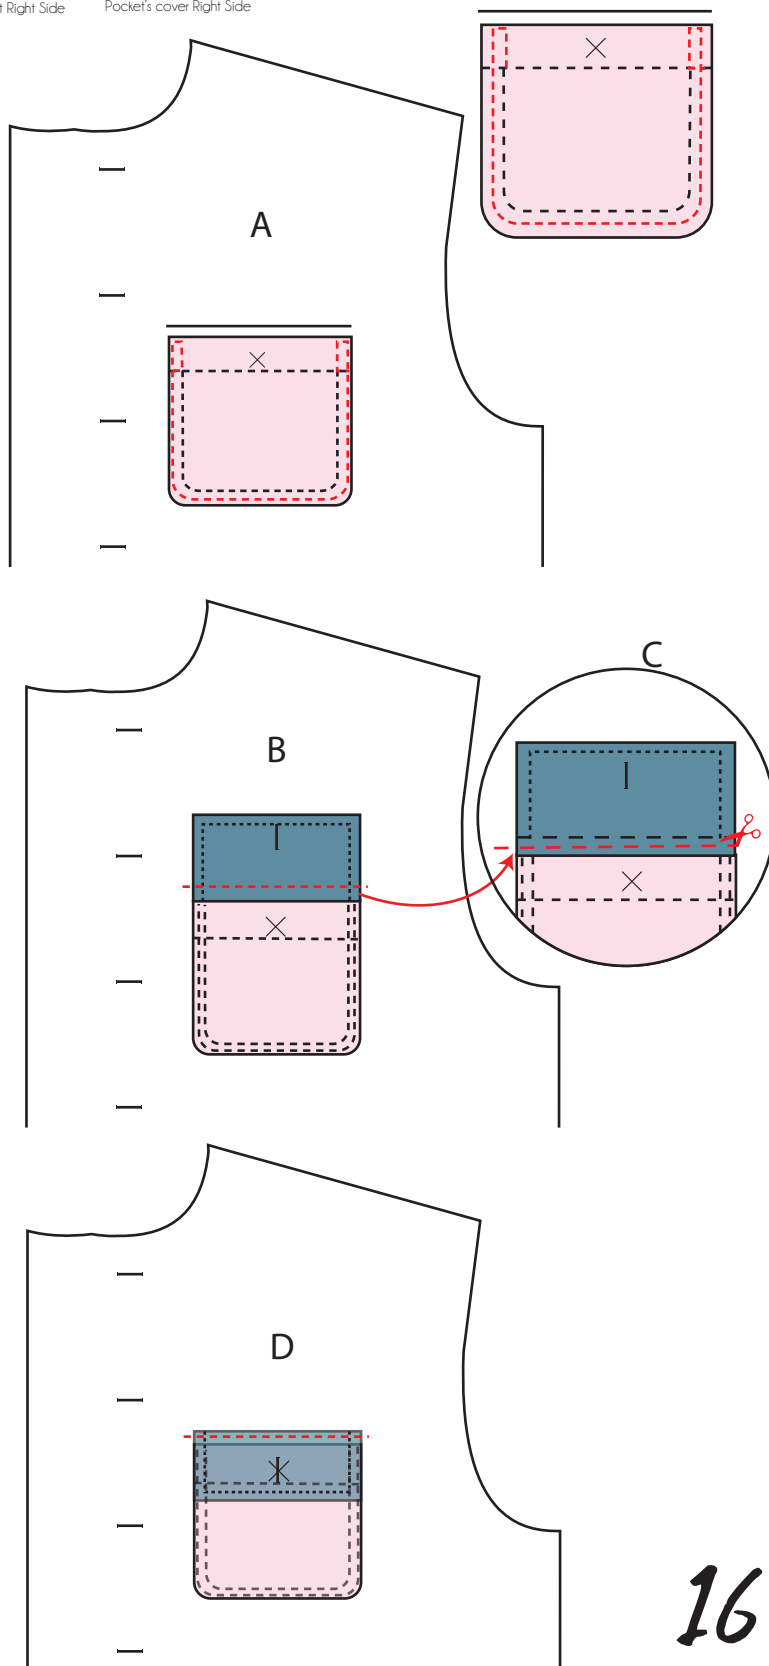

# Sewing Instructions

Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing



Pocket Right Side




Pocket's cover Right Side



## Step 4 : SEWING THE BACK YOKE

Match the Back Yoke and the back bodice with the right sides of the fabric together and sew the seam allowance at 1 cm (3/8"). Finish the seam allowance with zigzag or serger.

Press the seam allowance to the back yoke. Make two top stitches at 1.5mm (1/16") from the yoke's edge and 0.5 cm (1/4") from the first stitch.

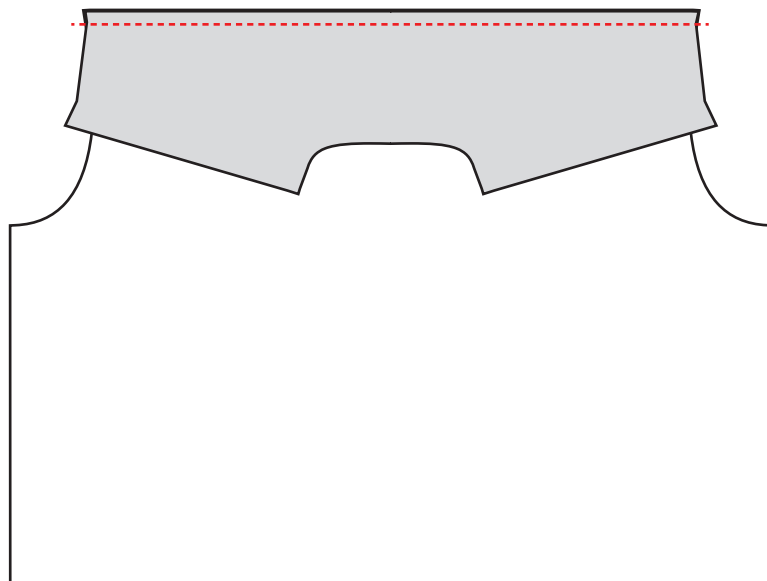

Wrong Side

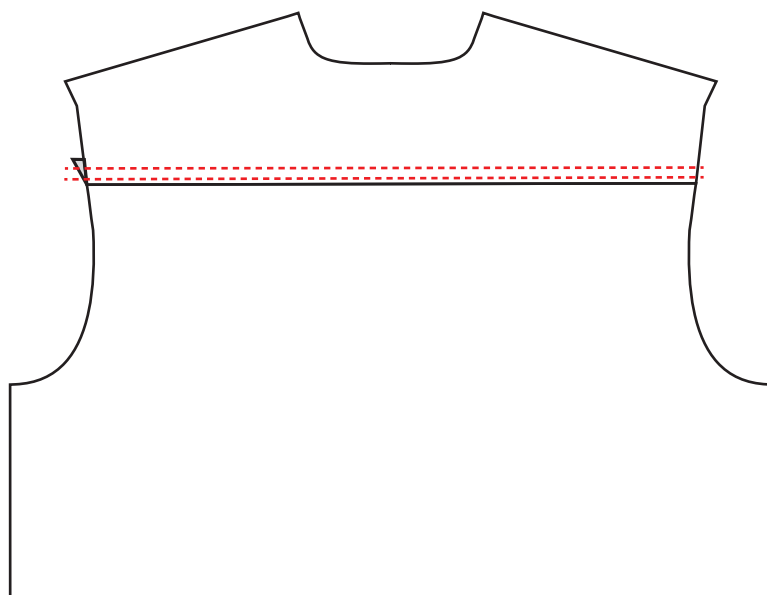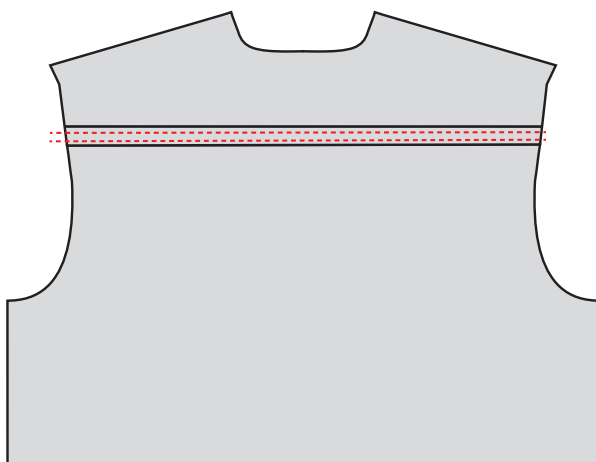

# Sewing Instructions

Note :

Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing



Pocket Right Side




Pocket's cover Right Side

## Step 5 : SEWING THE SHOULDERS

Match the front and back with the right sides of the fabric together and sew the shoulder seams at 1 cm (3/8"). Finish the seam allowance with zigzag or serger.

Press the seam allowance to the back. Make two top stitches at 1.5mm (1/16") from the edge and 0.5 cm (1/4") from the first stitch.



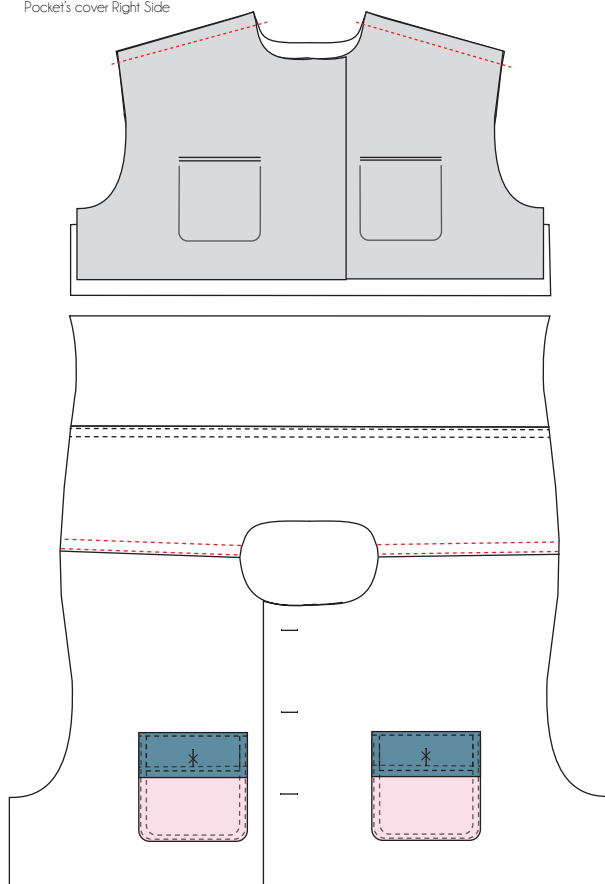


## Step 6 : OVER-LOCK AND FOLD THE CENTER FRONT

Over-lock the center front edge with zigzag or serger, and fold the center front 5 cm (2") towards the wrong sides. Press it .


Wrong side

Right side

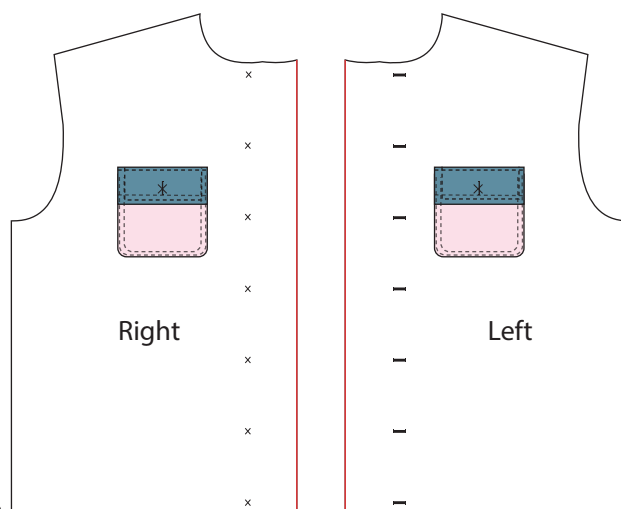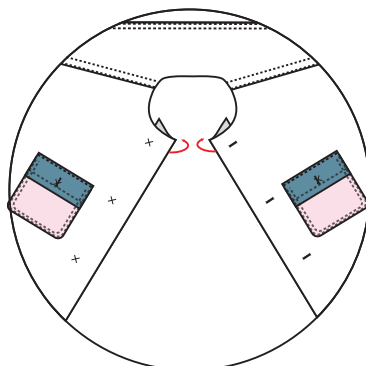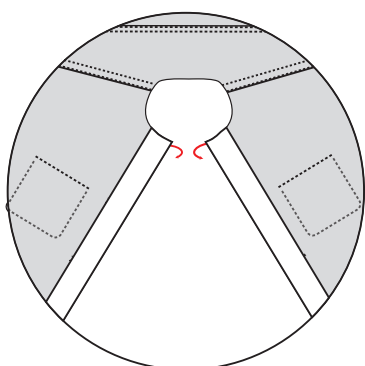





# Sewing Instructions

Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



## Step 7: SEWING THE COLLAR

- Open the fold in the center front and fold 5 cm (2") towards the right sides.
- Insert the collar into the fold with the under of collar facing the right-side of the fabric then put the collar 2 cm (3/4") from the folded edges and pin. Match the collar to the neckline. Sew the fold front together with the collar (sew point 1 to 2 and point 3 to 4) at 1 cm (3/8") seam allowance.
- Move the top collar out of the way so you can access the under collar and neckline. Sew the under collar to jacket neckline at 1 cm (3/8") seam allowance. Start and finish the seam at the end stitch of the step B on each side.
- Make cuts along the seam allowance and Cut seam allowance of the top collar, lower collar, and jacket neckline diagonally and cut as close to the center front edge. Press the seam allowance the under collar and neckline jacket into the collar.

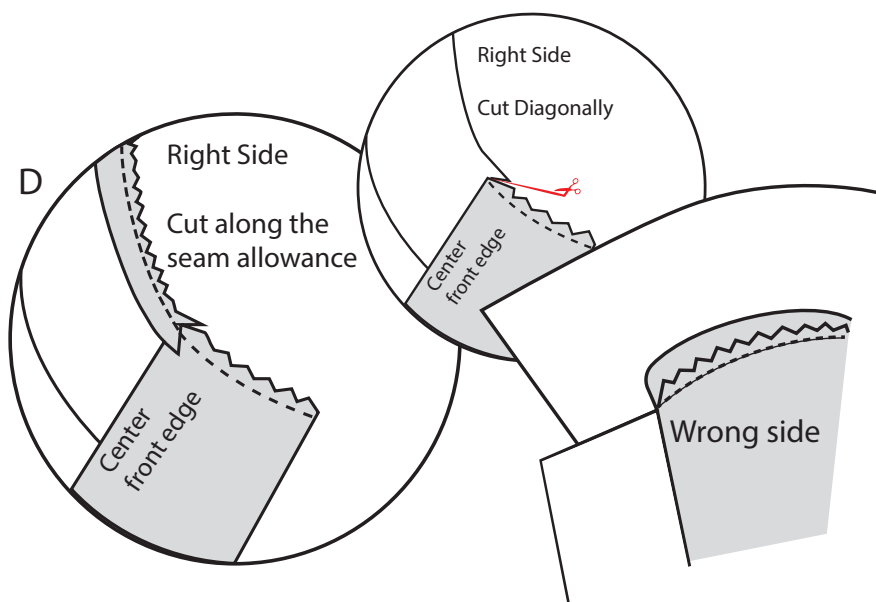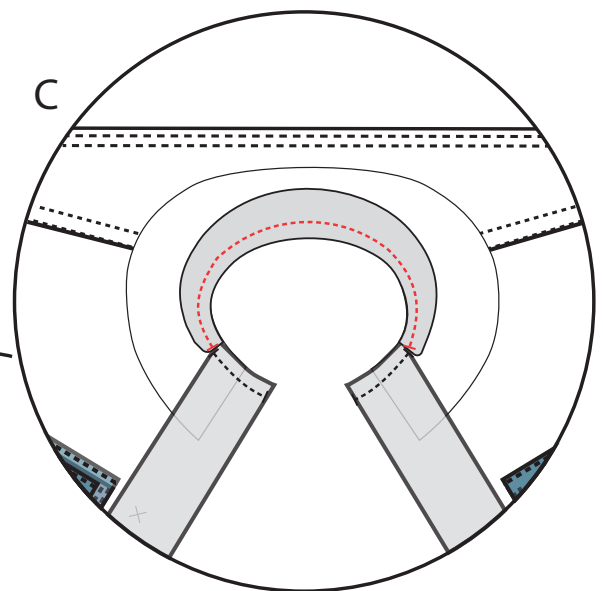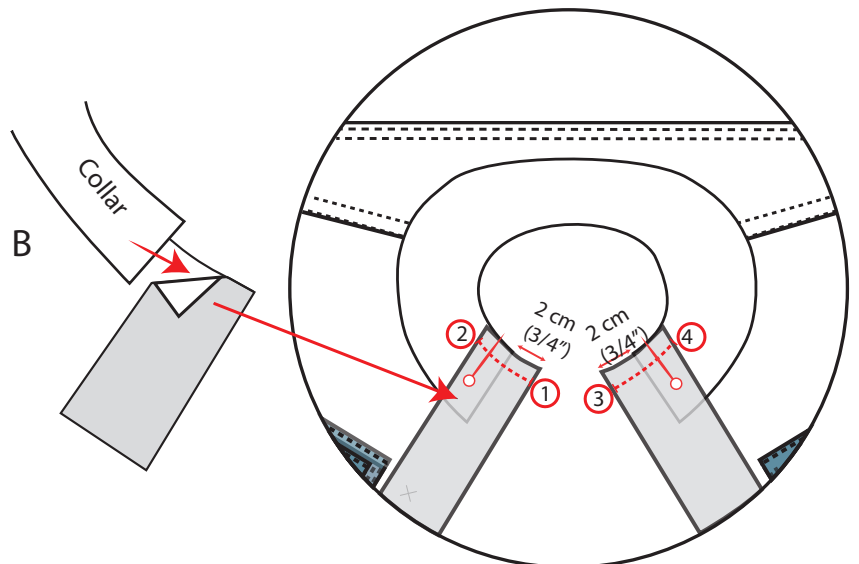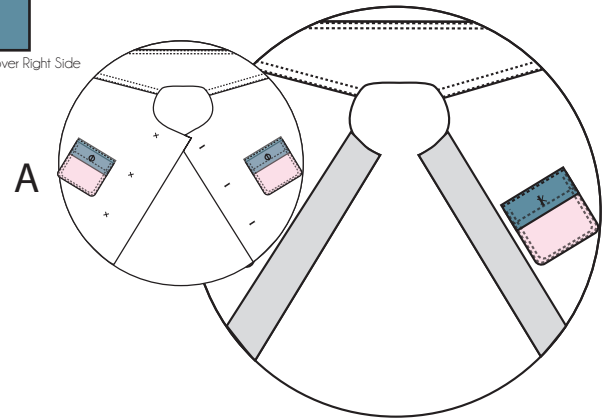

# Sewing Instructions

Note :

Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing



Pocket Right Side





Pocket's cover Right Side

e. Turn the center front right sides out and Press.



f. Fold the top collar at 0.7 cm (1/4") and pin to the neckline covering the seam from point C at 1.5mm (1/16").

g. Sew the top collar at 1.5mm (1/16") from the edge fold.



E

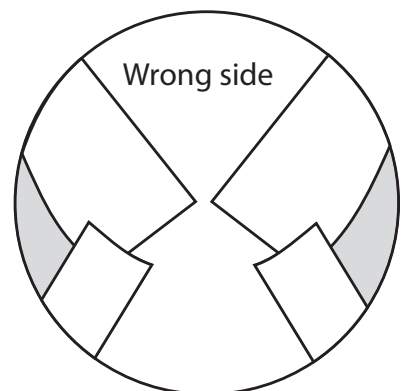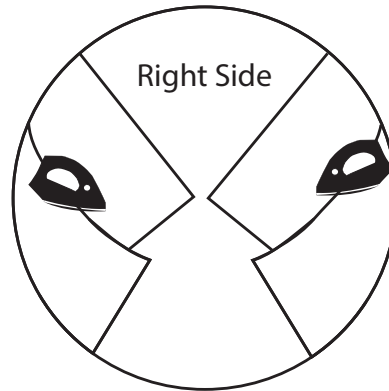

F

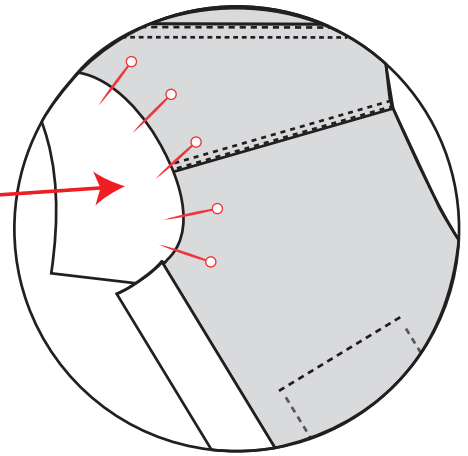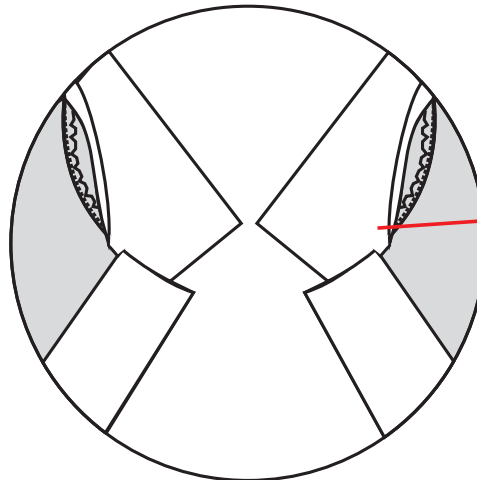

G

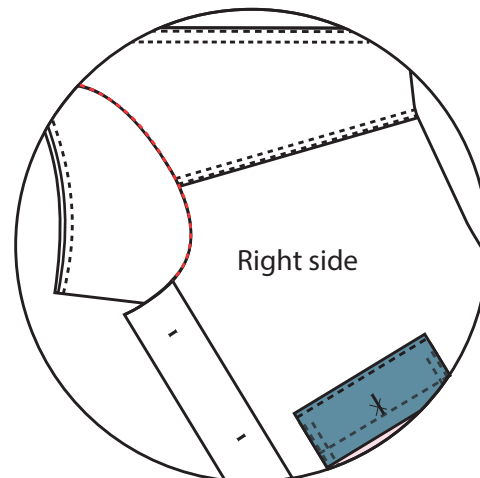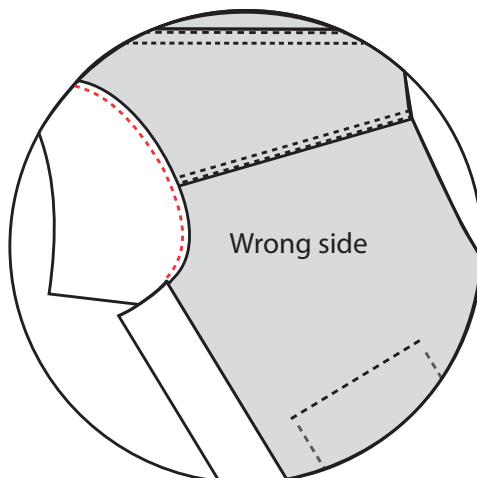

# Sewing Instructions

Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing




Pocket Right Side



Pocket's cover Right Side


## Step 8 : SEWING THE CENTER FRONT

Sew the center front at 5cm (2") from the folded edge. Sew straight down on the right side of the fabric.

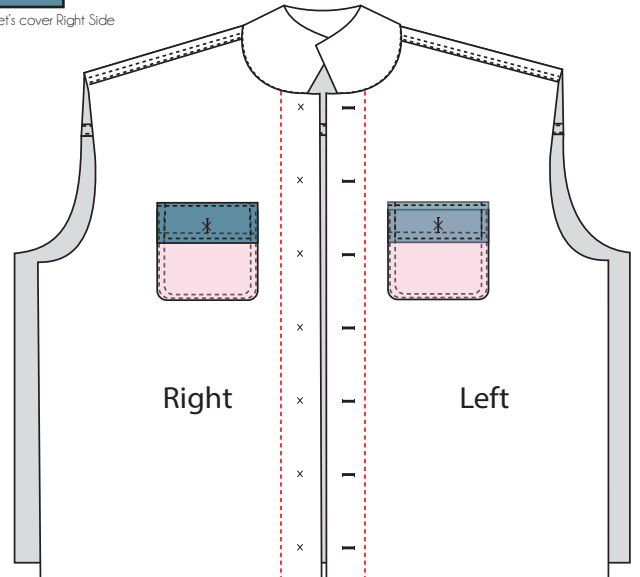

## Step 9 : SEWING THE FRONT AND BACK SLEEVES

- Match the back sleeve and the front sleeve with the right sides of the fabric together and sew the seam allowance at 1.5 cm (5/8") leave 12 cm (5") from the bottom seam allowance.
- At 15 cm (6") from bottom seam allowance, finish the seam of the Front and Back Sleeve pieces separately with a zigzag stitch or serger. Press it.
- For the remaining seam allowance of the front and back sleeve pieces, finish with serger or zigzag from the top of the sleeve to the point just above the 6" (15cm) finished edge. Press this seam allowance to the front sleeve.
- Sew two top stitches at 1.5mm (1/16") from the front edge and 0.5 cm (1/4") from the first stitch.
- Topstitch the back sleeve placket to the back sleeve with two rows of stitching - at 1.5mm (1/16") from the back edge and 0.5 cm (1/4") from the first stitch.

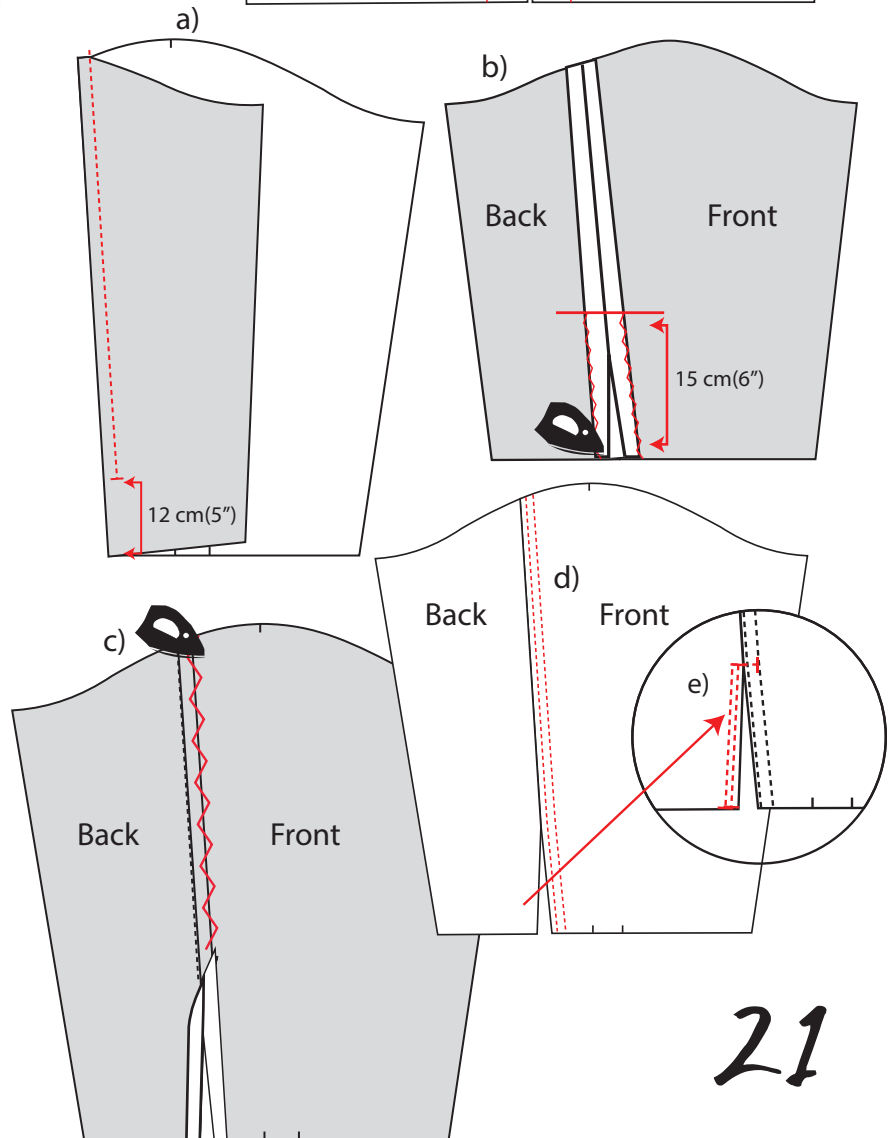

# Sewing Instructions

Note :

Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing






Pocket Right Side



Pocket's cover Right Side

## Step 10: SEWING SLEEVES

- Match the sleeves with the bodice right sides together, aligning the sleeve notches with the armhole notches. The centre notch will match with the armhole's center notch.
- Sew the sleeves into the armholes at 1.5 cm (5/8"). Finish the seam allowance with zigzag or serger.
- Press the seam allowance to the bodice. Make two top stitches at 1.5mm (1/16") from the edge and 0.5 cm (1/4") from the first stitch.

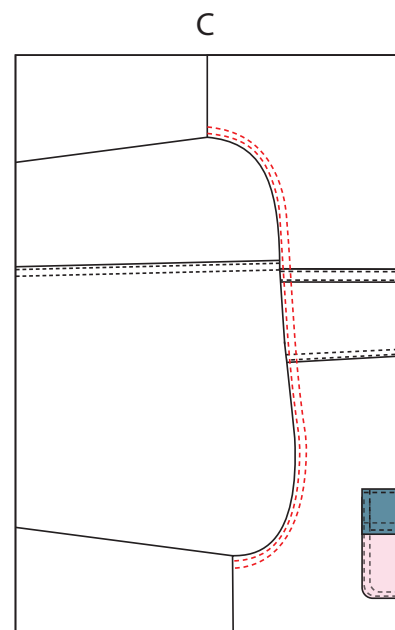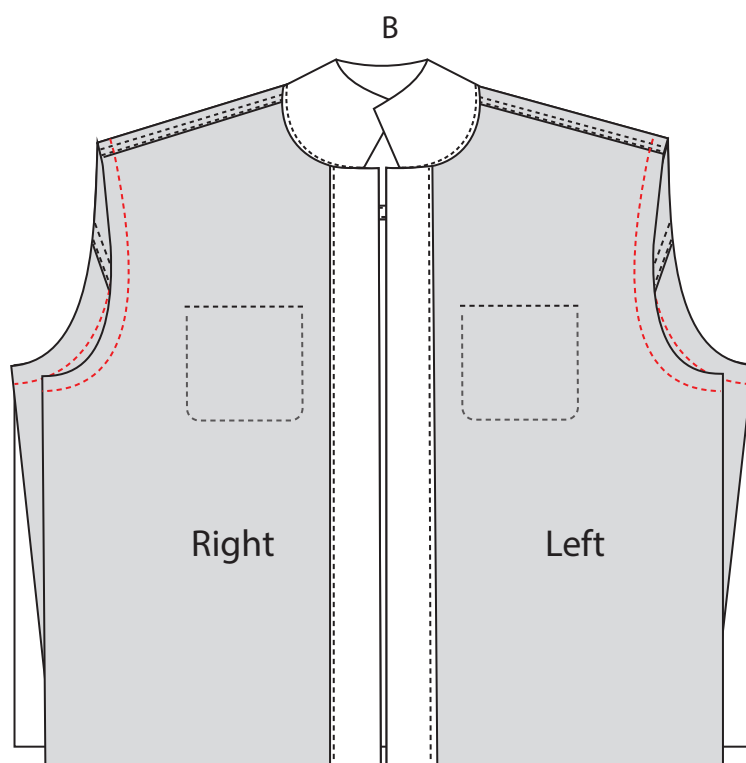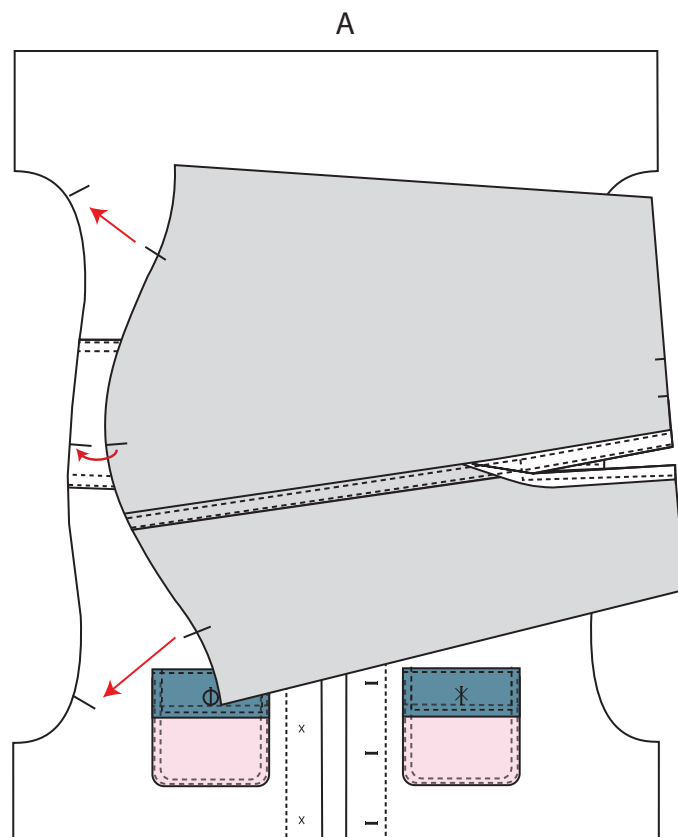

# Sewing Instructions

Note :

Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing




Pocket Right Side



Pocket's cover Right Side

## Step 11: SEWING SIDES

Match the front and back bodices with the right sides of the fabric together and aligning the underarm seams. Sew the sides and sleeve seams at 1.5 cm (5/8"). Finish the seam allowance with zigzag or serger and press to the back.

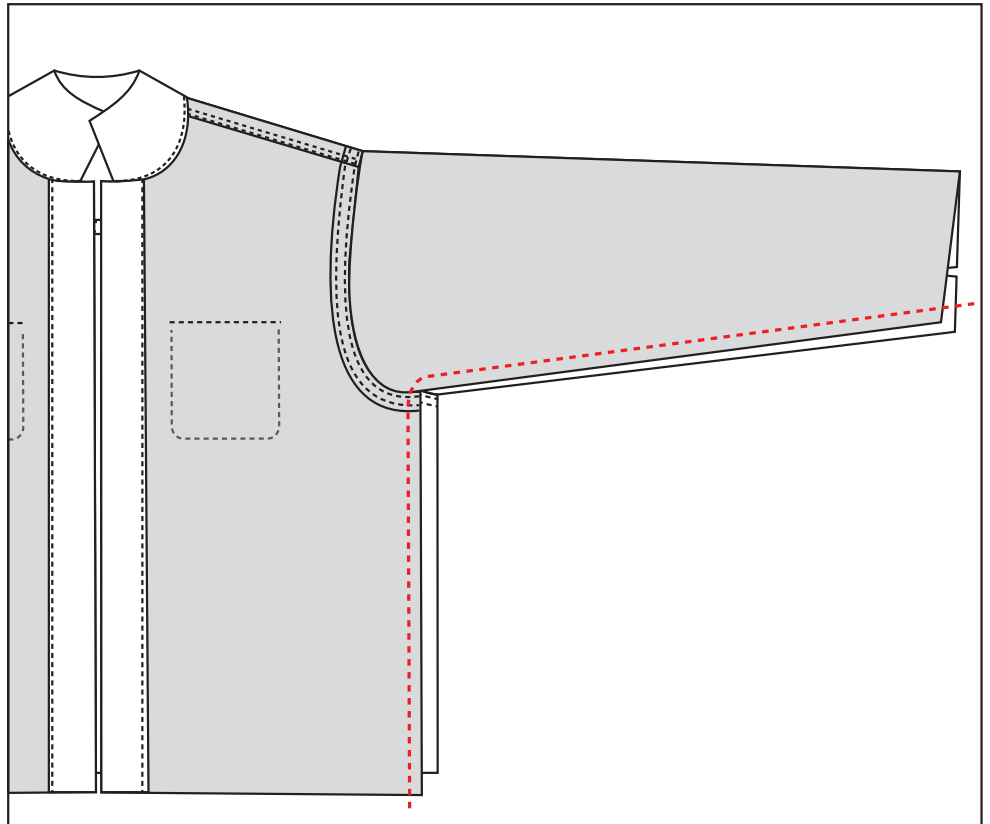

# Sewing Instructions

Note:  
Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing



Pocket Right Side




Pocket's cover Right Side

## Step 12: Folding The notches on the wrist line





Make two folds of 1 cm on the Notches towards the edge. Fold 1 cm (3/8") inwards and pin it and give a distance of 1 cm from the first folded and make the second fold and pin.

Sew the folds on the wrist line.

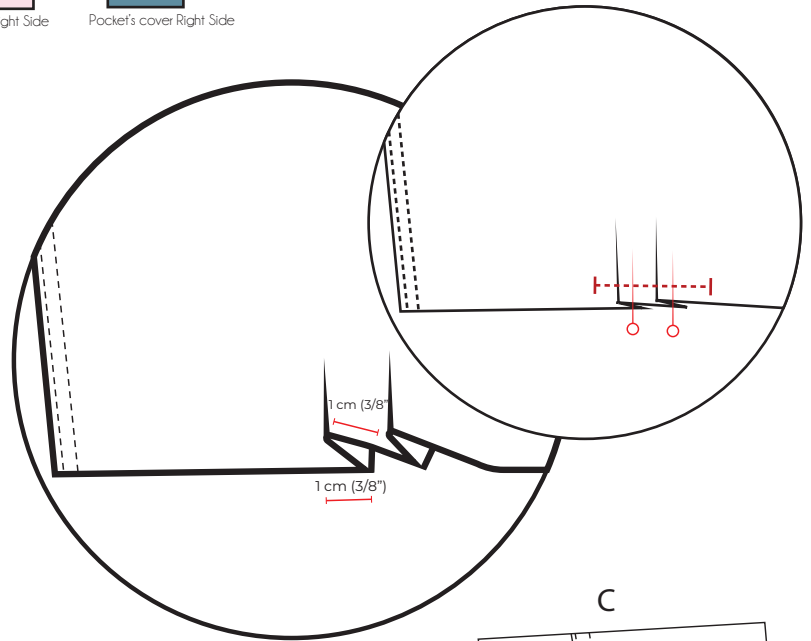


## Step 13: SEWING THE SLEEVE CUFFS

- Fold the sleeve cuffs right sides together and sew the side edges at 1 cm (3/8") and leave it 1 cm (3/8") for seam allowance.
- Turn the sleeve cuffs right sides out and Press.
- Match the sleeve cuffs to the wrist line with the right sides of the fabric together. Sew the wrist line at 1 cm (3/8"). Press the seam allowance into the sleeve cuffs.
- Fold the edge sleeve cuff at 0.8 cm (0.3") and pin to the wrist line covering the seam at 0.1 cm (0.04").
- Sew above the seam on the previous stitch, make sure the back of the sleeve cuffs is sewn.

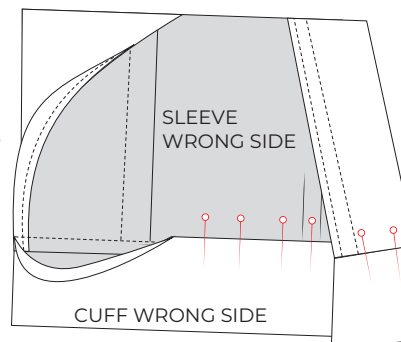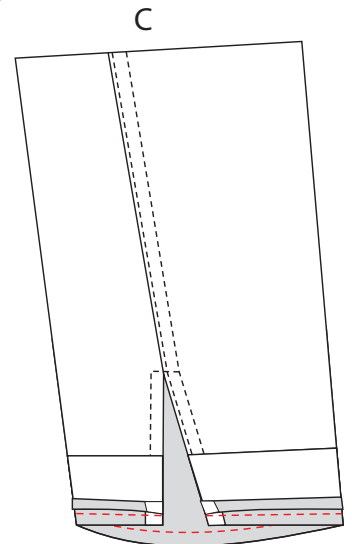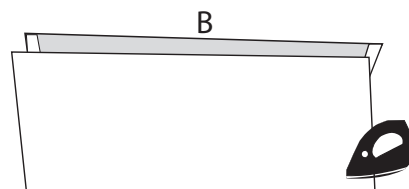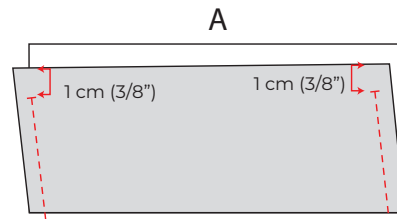

D

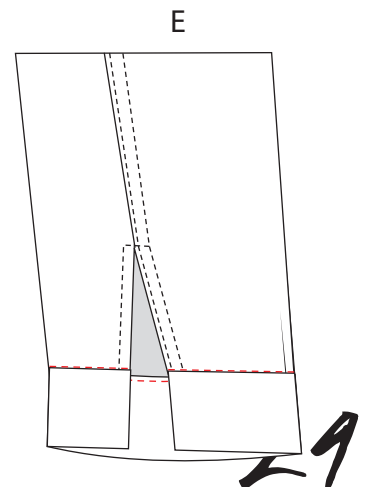

# Sewing Instructions

Note :  
Seam allowance is 3/8" (1cm) unless otherwise stated



Fabric Right Side



Fabric Wrong Side



Highlight of current step



Interfacing



Pocket Right Side




Pocket's cover Right Side

## Step 14: SEWING THE BODICE HEM




Finish the bottom of the shirt with a serger or use zigzag.

Fold the edge to the wrong-side of the fabric at 2 cm (0.8") sew at 1.8 cm (0.7") from the folded edge. Press

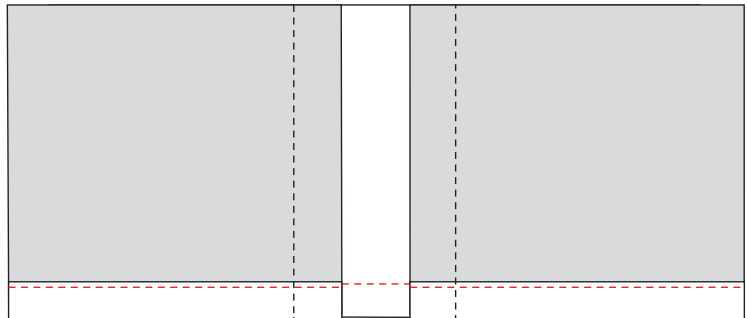

## Step 15: SEWING THE BUTTONS THE BUTTONHOLES

Sew the buttons using hand sewing needle and buttonholes using Button pattern on the sewing machine. Sew on the marks.

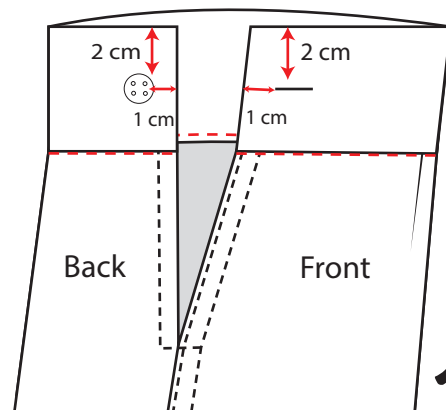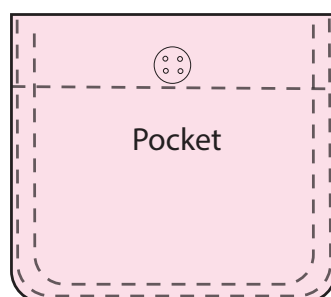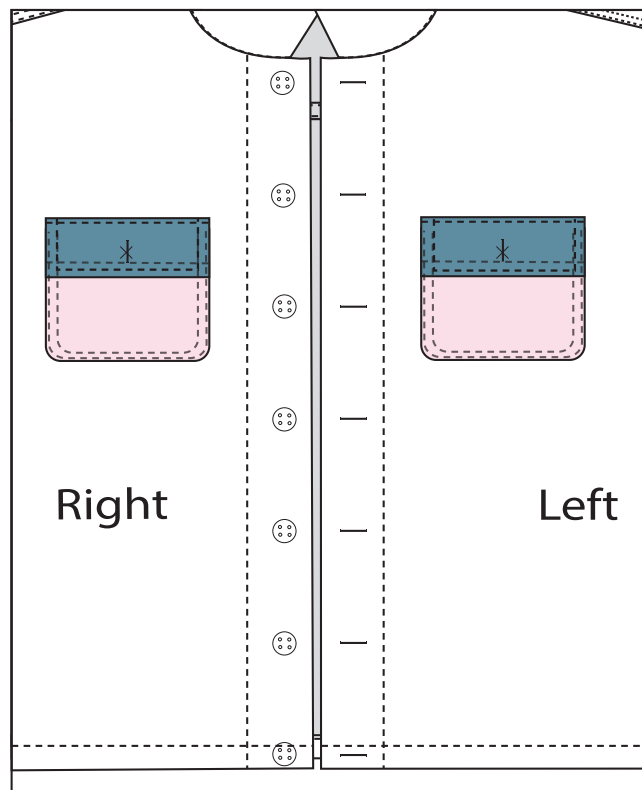

# Final Looks

We hope you have had a lot of fun with this pattern. Do not forget to share your finished result on Instagram at

@patterncouture\_

for a chance to win a free sewing pattern.

