


1. RE-ASSEMBLE WITH COUPLER AND BUS END TERMINAL ONLY.
2. SETTINGS ENTERED USING ADDRESS SWITCHES AND POWER CYCLING.
3. POWER OFF; SET X10 = 9 AND X1 = 9, APPLY POWER TO FACTORY DEFAULT THE UNIT.
4. POWER OFF; SET X10 = 3 AND X1 = 2, APPLY POWER TO SET BAUD TO 19200.
5. POWER OFF; SET X10 = 5 AND X1 = 0, APPLY POWER TO SET COUPLER WDOG TO 000MS.
6. POWER OFF; SET X10 = 6 AND X1 = 0, APPLY POWER TO SET COUPLER WDOG TO 0000MS.
7. POWER OFF AND RE-ASSEMBLE.
8. SET X10 = 0 AND X1 = 1 (NODE ID = 01)

DI1 LIM 1 ALARM (110V. A.C.)
DI2 WATCH DOG
DI3 CAM. CONT. TRI-STATE SELECTED
DI4 CAM. CONT. RS485 SELECTED
DI5 P&T CONT. 24V. SELECTED
DI6 P&T CONT. RS485 SELECTED
DI7 CONFIG. 2 SELECTED
DI8 CONFIG. 2 12V. SELECTED
DI9 SPARE
DI10 SPARE
DI11 SPARE
DI12 SPARE
DI13 SPARE
DI14 SPARE
DI15 SPARE
DI16 SPARE

DO1 CAMERA 1 SUPPLY
DO2 CAMERA 2 SUPPLY
DO3 CAMERA 3 SUPPLY
DO4 CAMERA 4 SUPPLY
DO5 CAMERA 5 SUPPLY
DO6 CAMERA 6 SUPPLY
DO7 CAMERA 7 (HD) SUPPLY
DO8 CAMERA 8 (HD) SUPPLY
DO9 ALTIMETER SUPPLY
DO10 RESPONDER SUPPLY
DO11 WATCHDOG ENABLE
DO12 LAMPS 9,10,11 & 12 110V. A.C. SUPPLY
DO13 CAMERA 5 LED ON/OFF
DO14 CAMERA 6 LED ON/OFF
DO15 RS232 PORT 12 (110V)
DO16 WATCHDOG PULSE

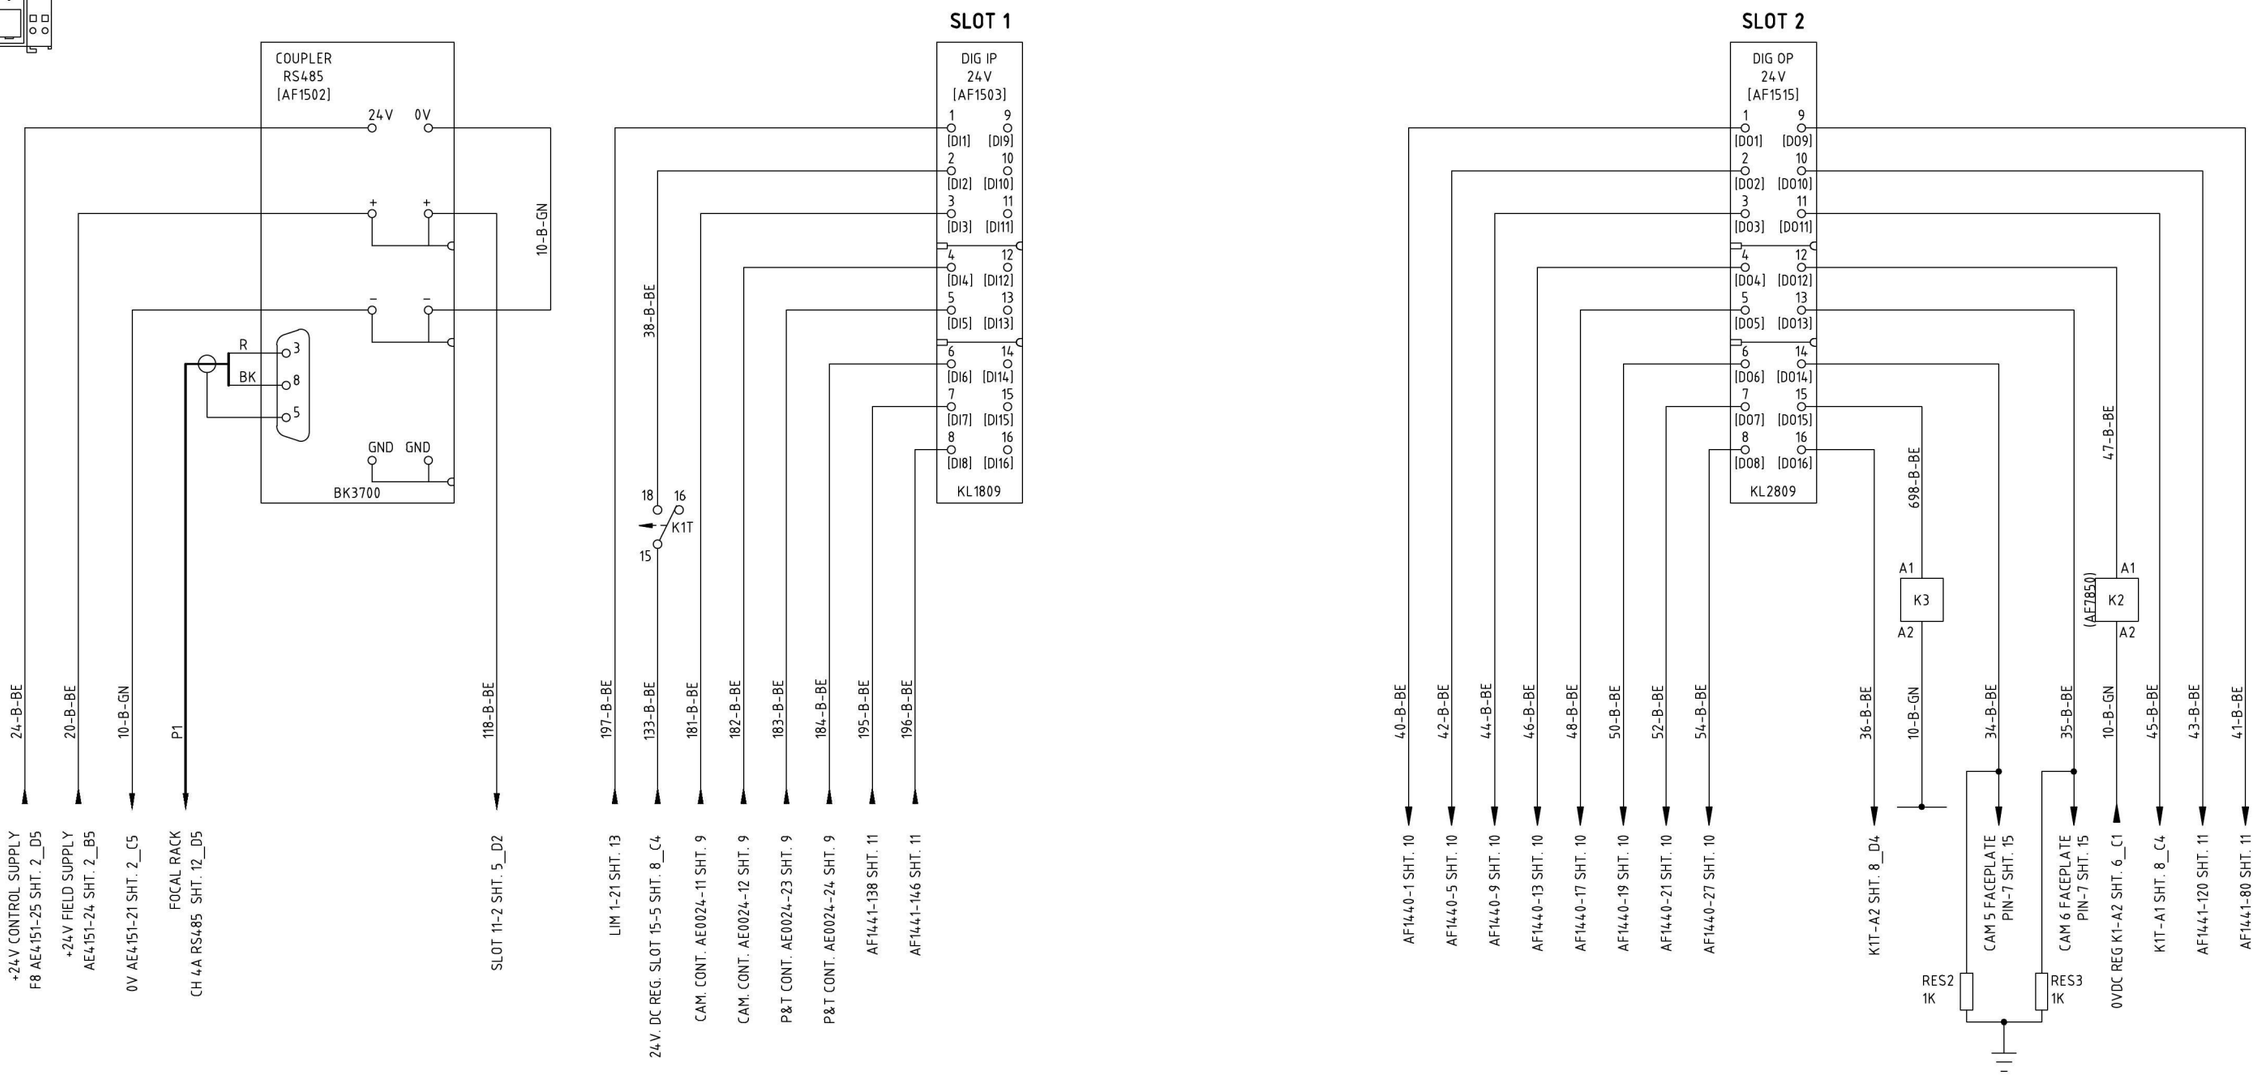

DRAWING Q CORE POD WIRING
(BECKHOFF MODULES - DIGI INPUTS / OUTPUTS)

SCHEMATIC PILOT

WR CLASS ROV 150HP

TRAINING REFERENCE · DRAWING: AH2742 · SHEET 3 OF 18

DRAWING NO: AH2742 SHEET: 3 OF 18 REV: 0