BREAKOUT BOARD DRILLING TEMPLATE - FULL SIZE 1:1

Print on US Letter at "Actual size" / 100 % (NOT "Fit", "Shrink oversized pages" or "Scale to fit"). Check both rulers before drilling.
Board rev 2.7, 162 x 134 mm. Viewed from the FRONT (parts side): tape it to the box's back wall as you'll see the board.

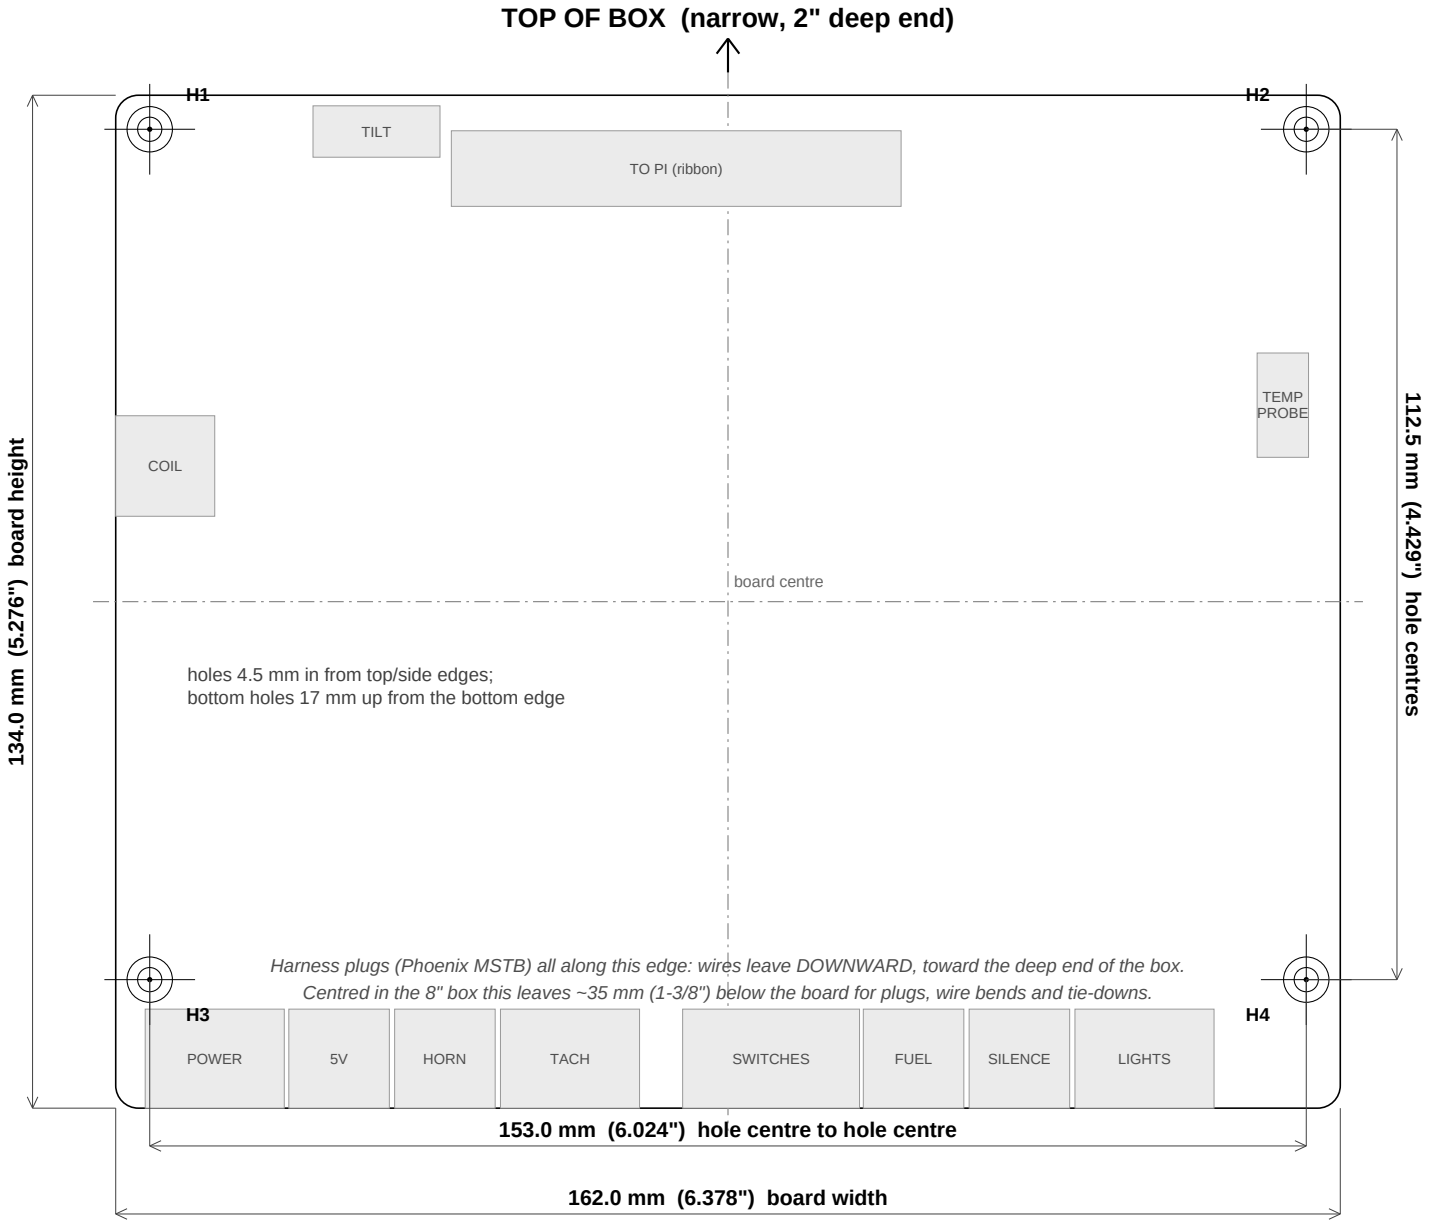



100 mm (10 cm): must measure exactly 100 mm



6 inches: must measure exactly 6 in

Before drilling: 1) Both rulers must measure exactly. Also check 153.0 mm between the H1 and H2 hole centres. If anything is off, reprint at Actual size.
2) Tape the sheet flat on the box's back wall, TOP toward the narrow end. Keep the board centre near the box centre so the 2"-deep end clears the parts.
3) Centre-punch the dot in each hole. Drill 1/8" (3.2 mm) for M3 screws through the wall, or 2.5 mm to tap M3 into thick metal.
4) Mount on M3 standoffs (10 mm or taller): the board's back needs air and must not touch the metal box. Outer circle = ~6 mm standoff footprint.
Grey zones show where each plug sits, to plan cable entry: ribbon to the Pi + TILT at the top, COIL (high voltage) on the left, TEMP PROBE on the right.