BREAKOUT BOARD DRILLING TEMPLATE - FULL SIZE 1:1

Print on US Letter at "Actual size" / 100 % (NOT "Fit", "Shrink oversized pages" or "Scale to fit"). Check both rulers before drilling.
Board rev 2.9, 162 x 159 mm (6.378 x 6.260 in). Viewed from the FRONT (parts side): tape it to the box's back wall as you'll see the board.

TOP OF BOX (narrow end) - top edge about 10 mm below the inside top wall

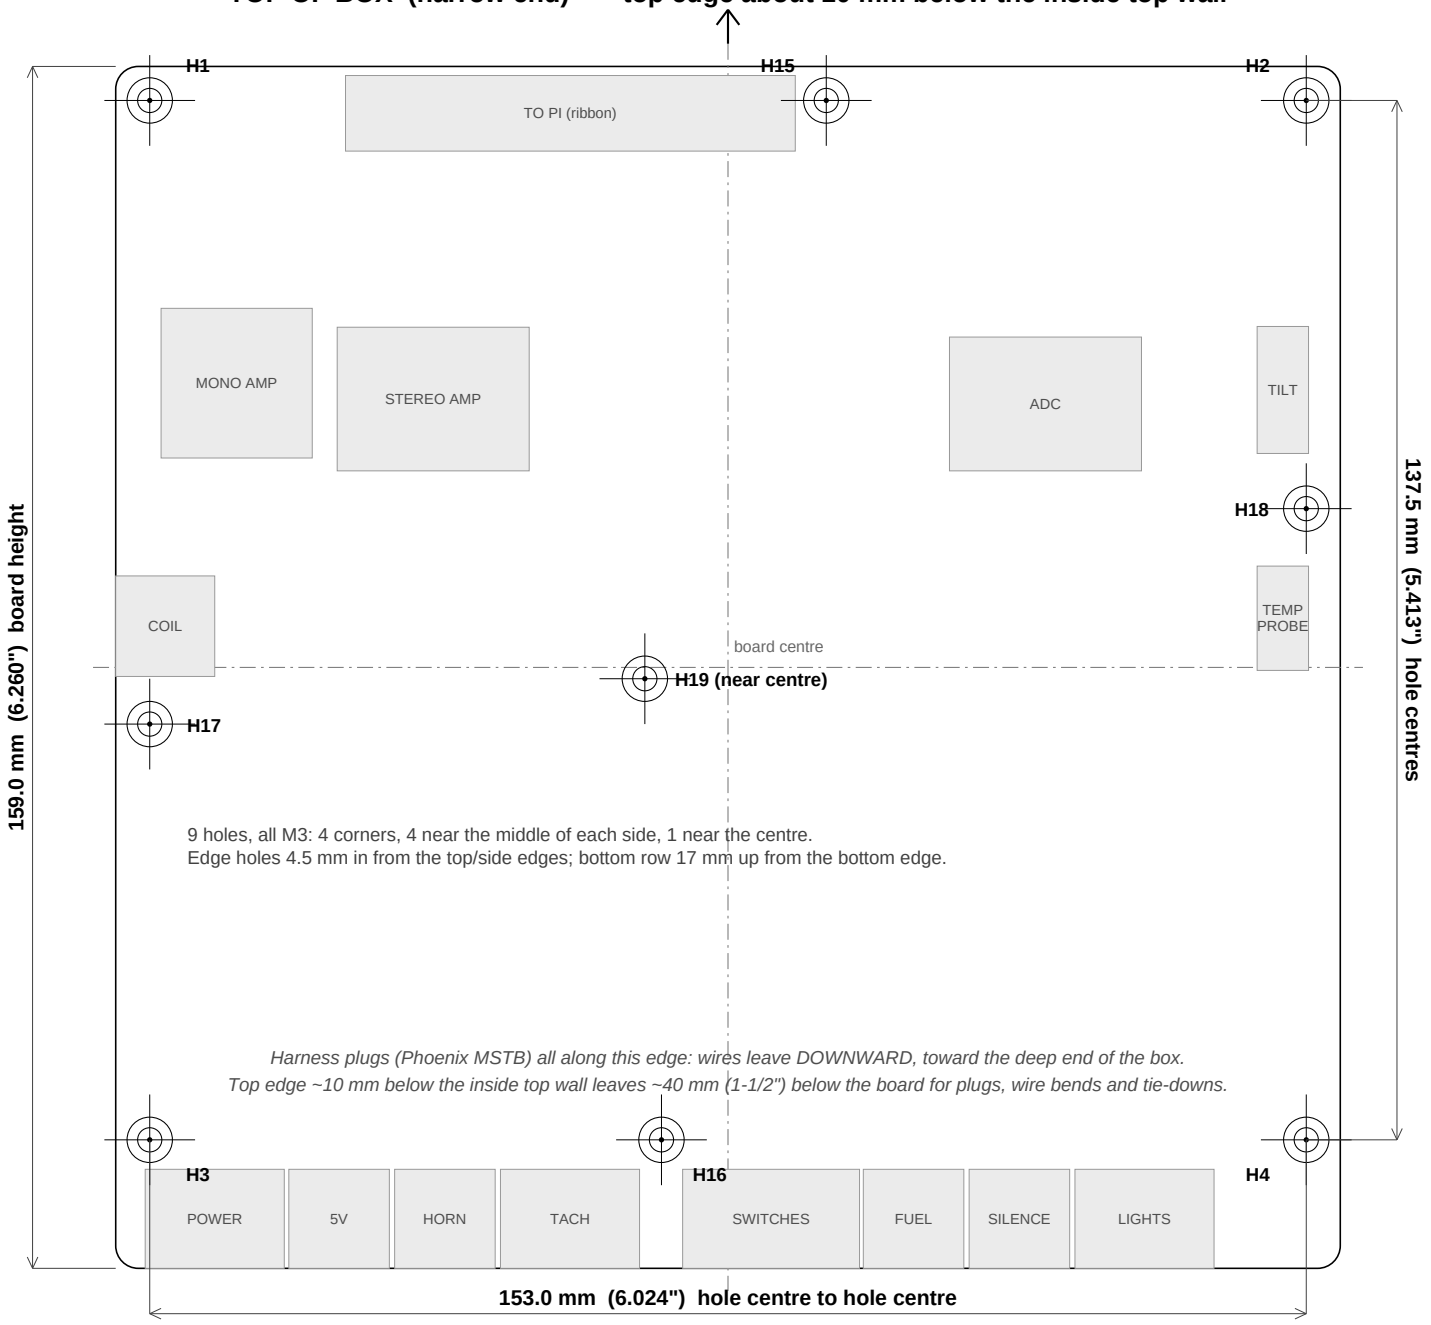

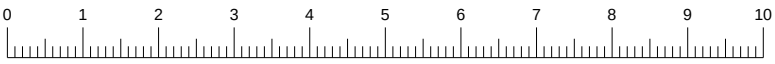

100 mm (10 cm): must measure exactly 100 mm



6 inches: must measure exactly 6 in

Before drilling: 1) Both rulers must measure exactly. Also check 153.0 mm between the H1 and H2 hole centres. If anything is off, reprint at Actual size.
2) Tape the sheet flat on the box's back wall, TOP toward the narrow end, centred left-right, its top edge ~10 mm below the inside top wall.
3) Centre-punch the dot in each hole. Drill 1/8" (3.2 mm) for M3 screws through the wall, or 2.5 mm to tap M3 into thick metal.
4) Mount on 9 M3 standoffs (10 mm or taller, all the same height): the board's back must not touch the box. Outer circle = ~6 mm standoff.
Grey zones: plugs and modules. The Pi ribbon plugs in on the top edge and goes straight up to the lid; COIL (high voltage) left, TILT and TEMP PROBE right.