


MGX ARC (S7C)


System Assembly SOP

Assembled Overview

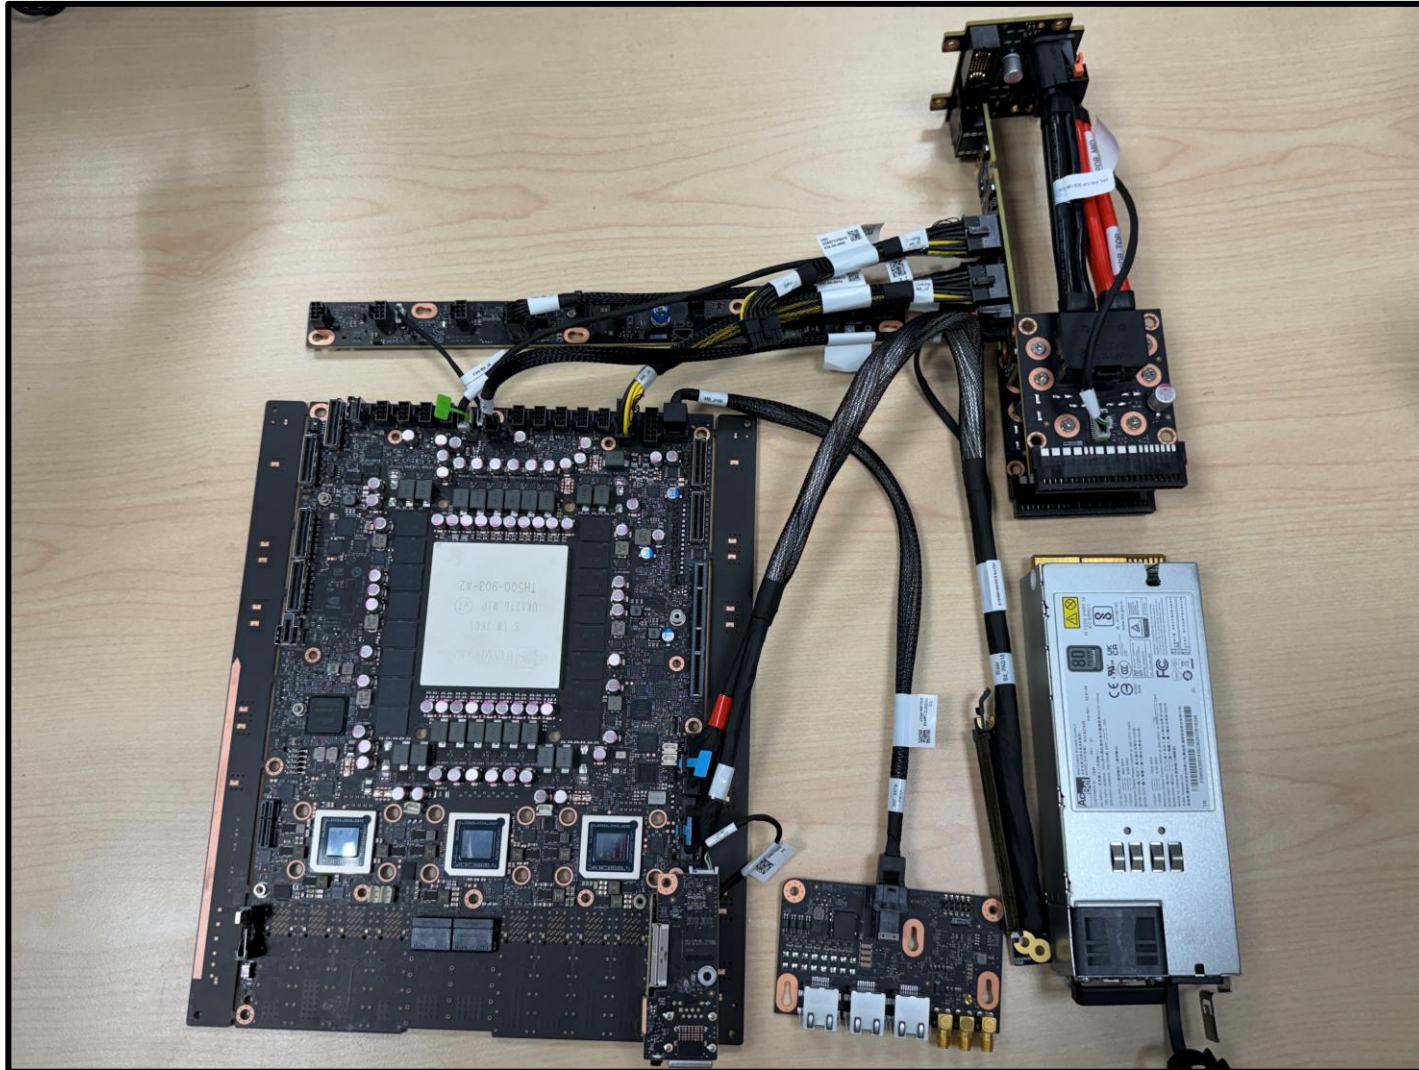


Assemble the Two PDB PSU Boards

- ① Install six standoffs onto the PDB PSU BOT.
- ② Insert the 18-pin header on the PDB PSU BOT.

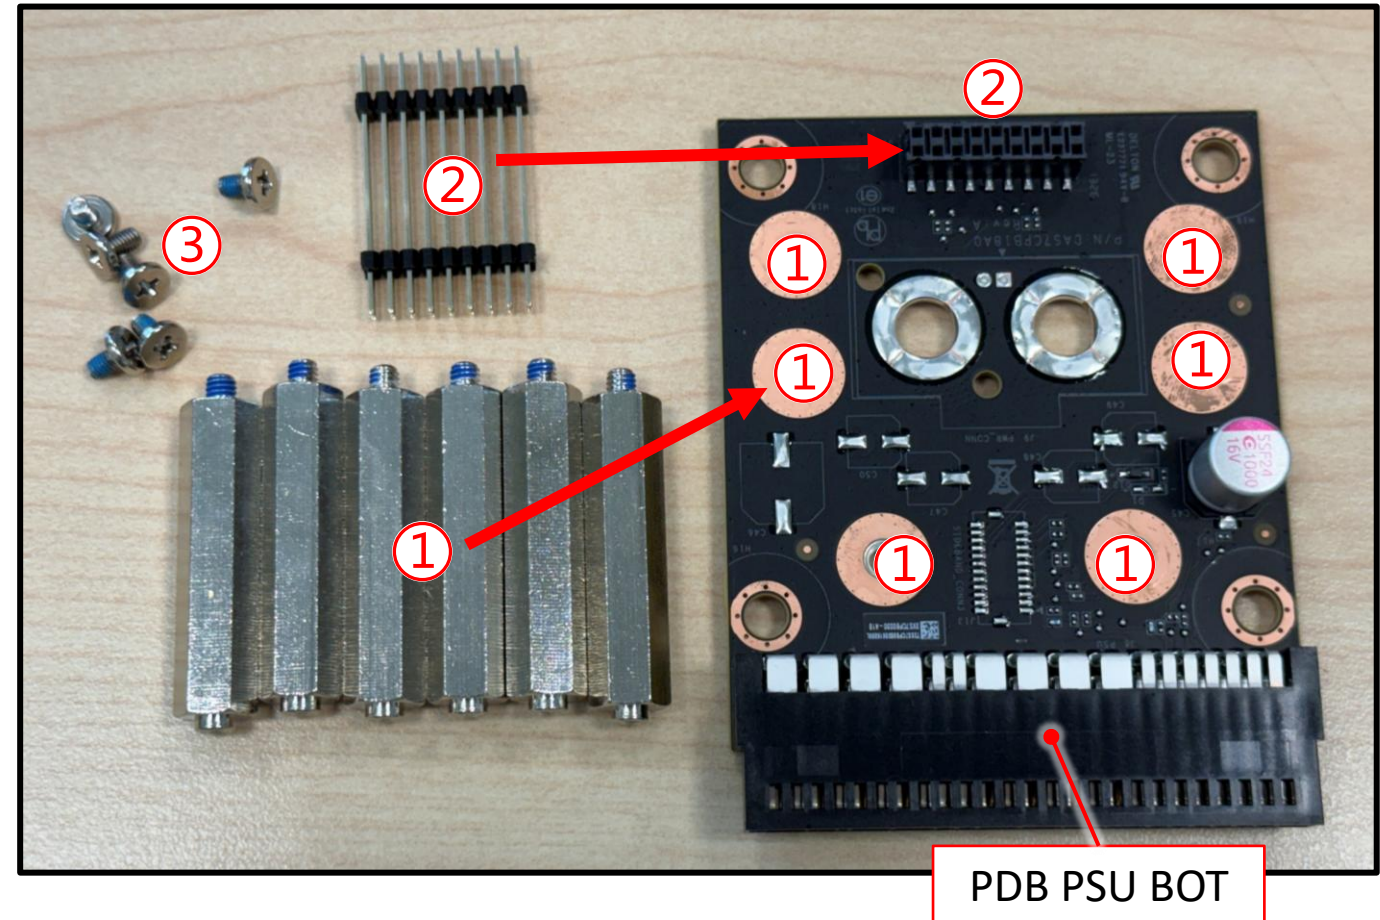

Assemble the Two PDB PSU Boards

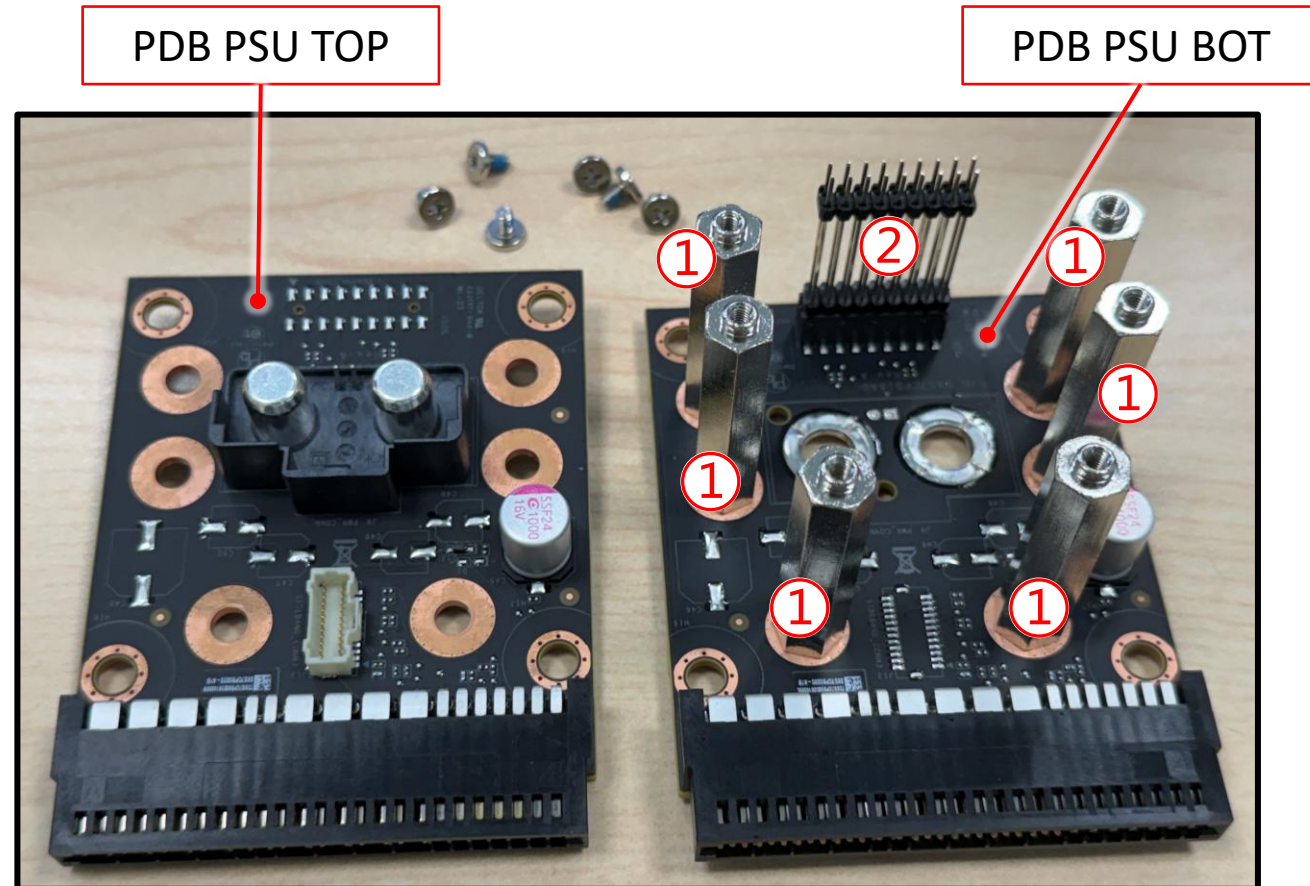


Then place the PDB PSU TOP onto the PDB PSU BOT to mate the two boards together.




Assemble the Two PDB PSU Boards

- ③ Fasten the screws of pillars onto the PDB PSU TOP.

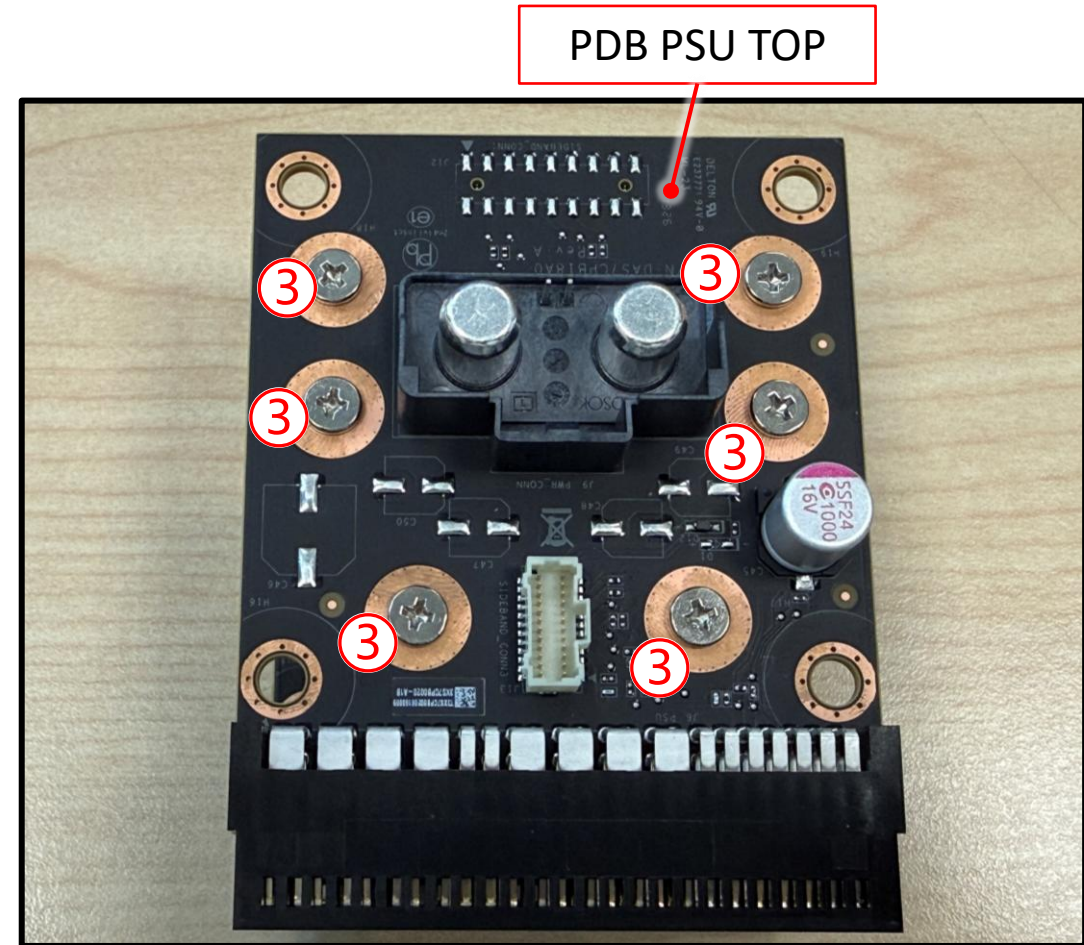

Assemble the Two PDB PSU Boards

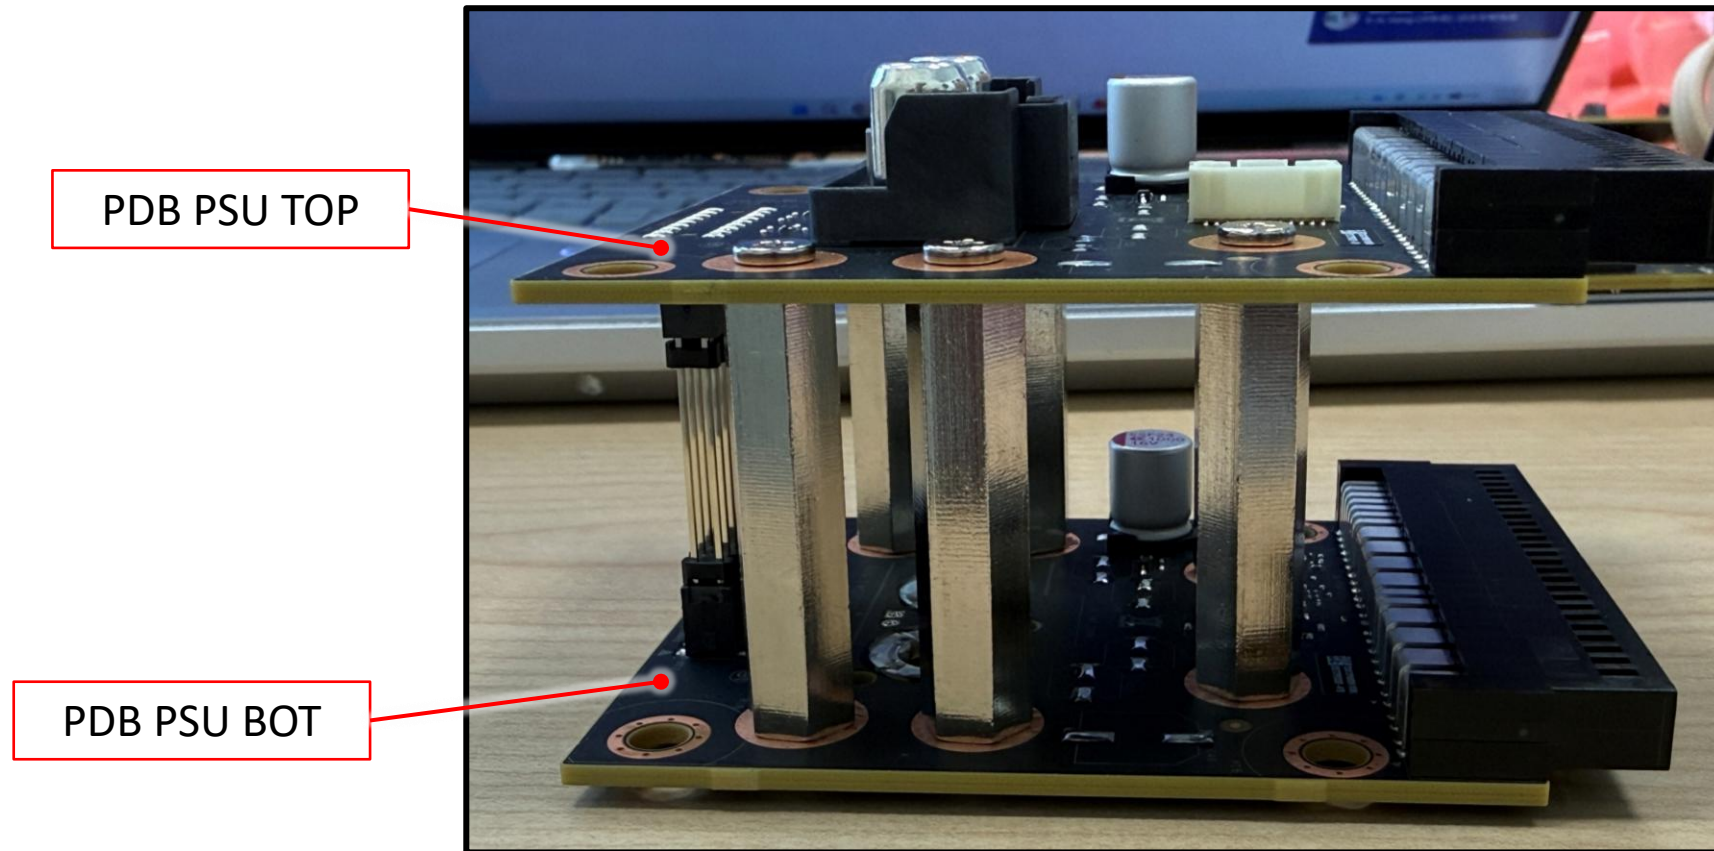

#PDB PSU = PDB PSU TOP + PDB PSU BOT







Assemble PSU PDB and PDB MID



Check all the labels on the cables before assembly.

Connect the PDB Power Cable between PDB_PSU (J9) and PDB_MID (JP1).

Connect the PDB Sideband Cable between PDB_PSU (J13) and PDB_MID (J3).

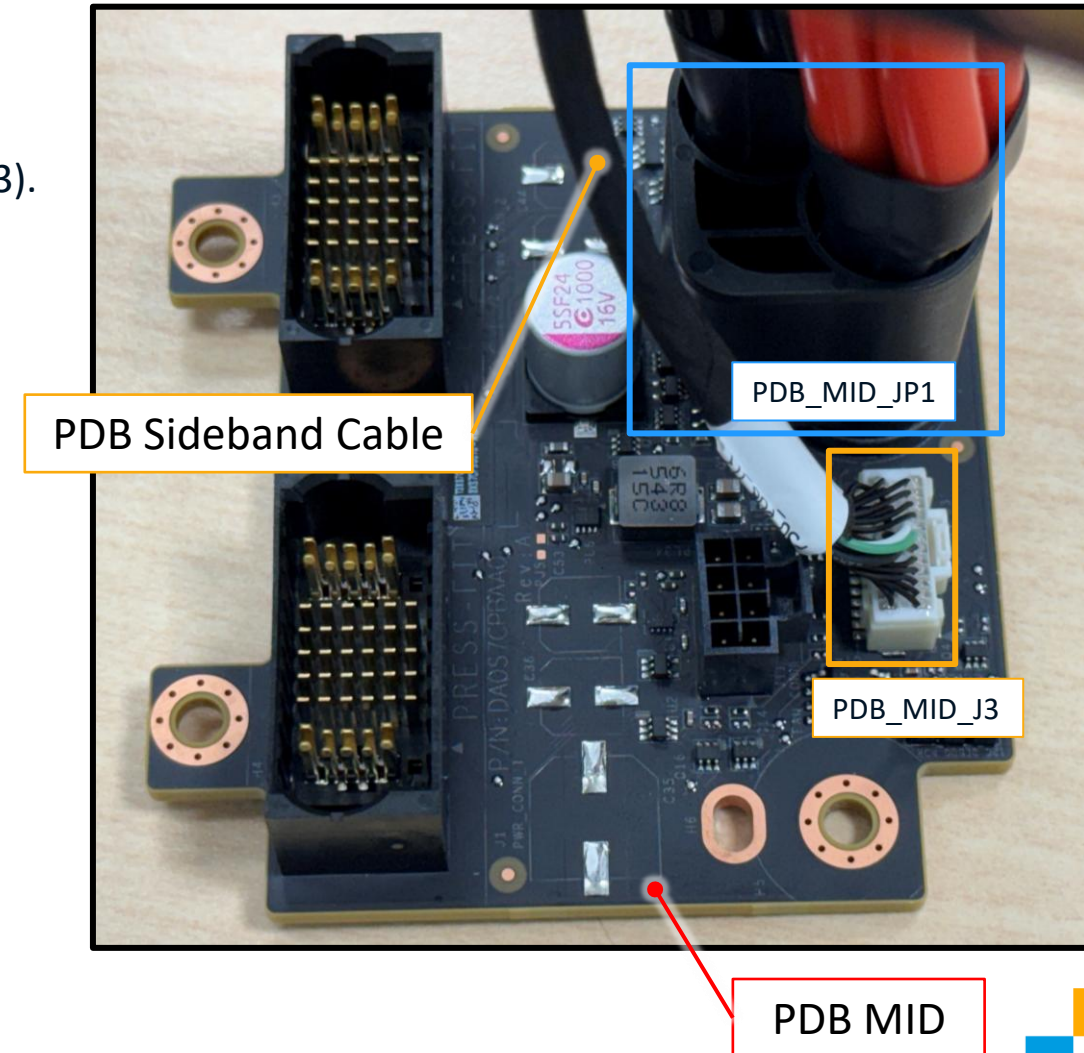
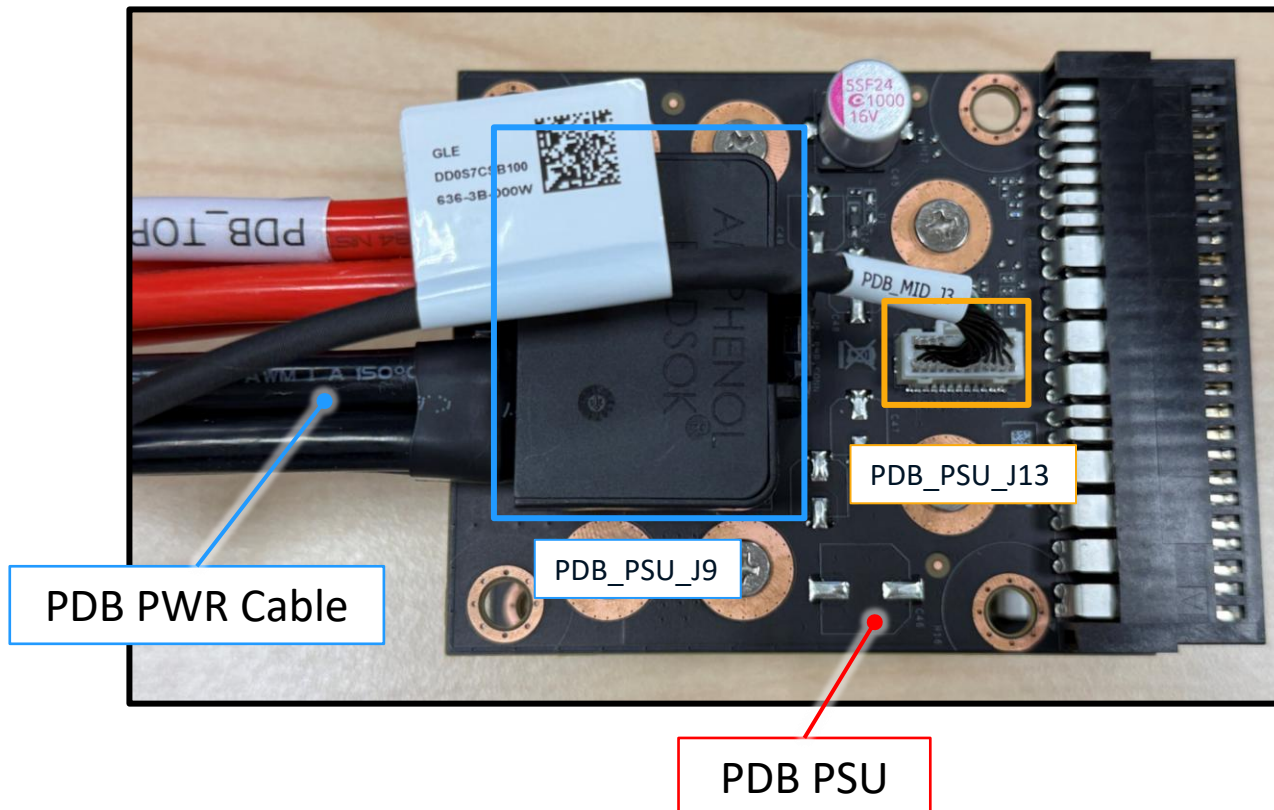


Assemble PSU PDB and PDB MID

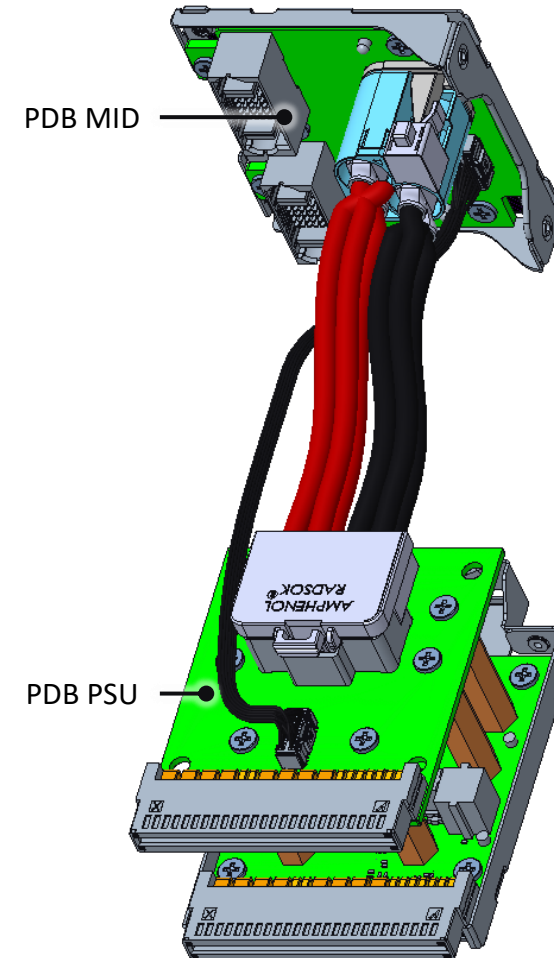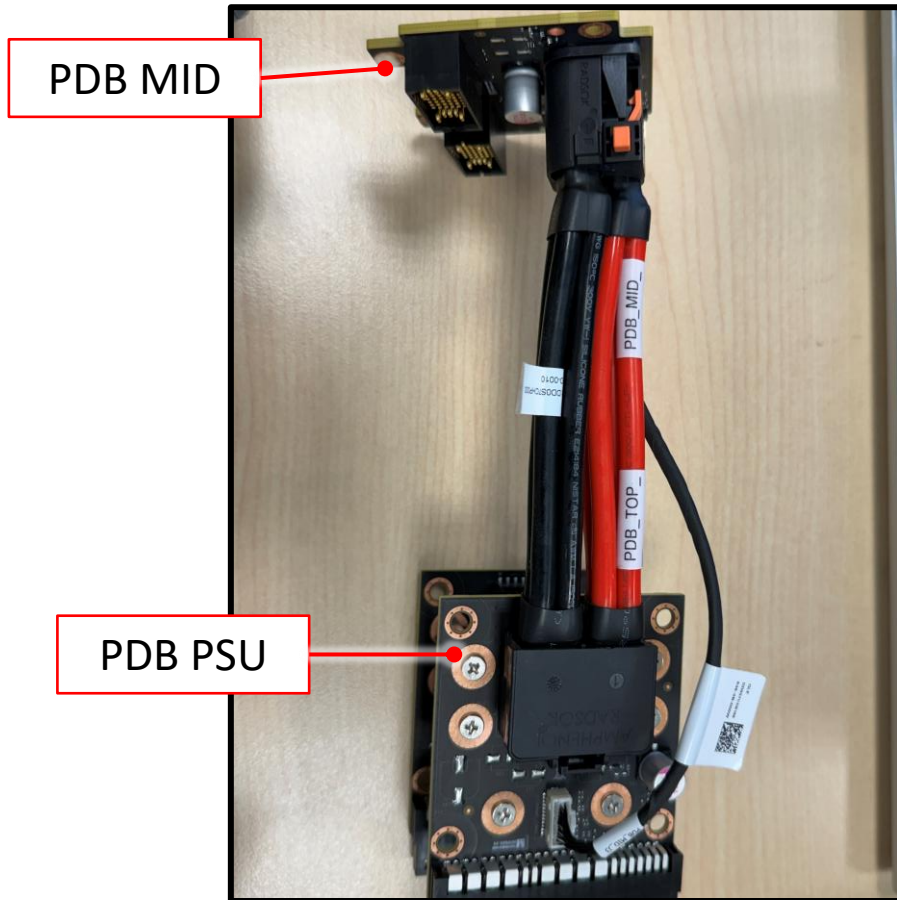


Assemble PSU MID and LINKING BD

Directly mate LINKING_BD (J7) with PDB_MID (J1).

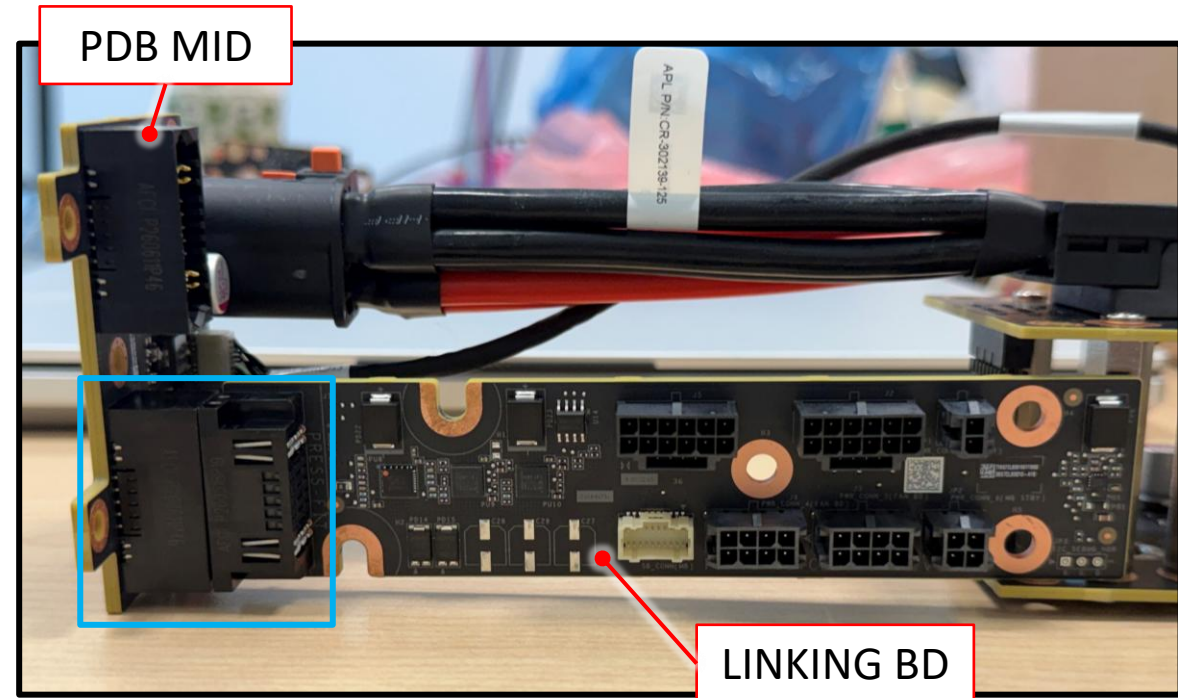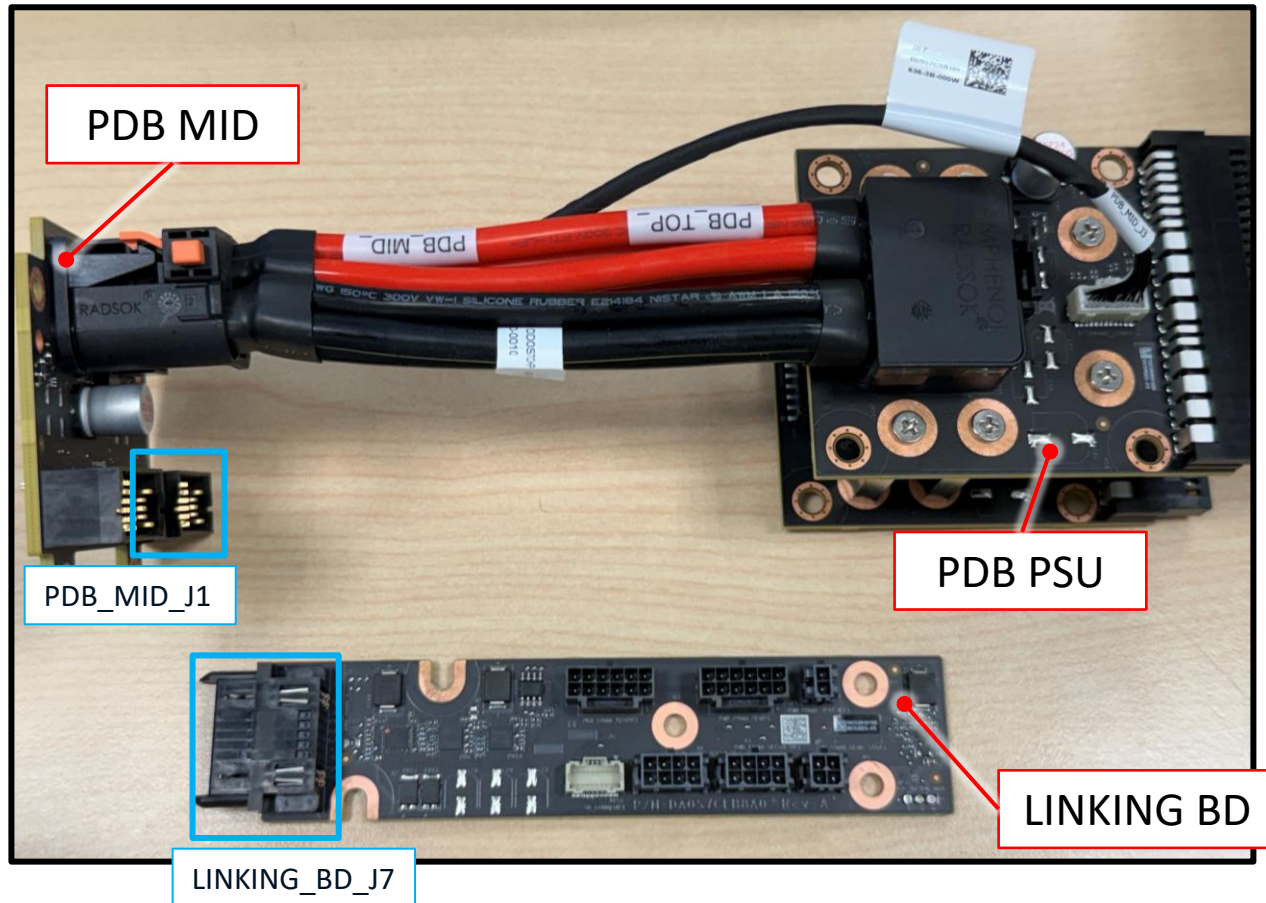


Assemble LINKING BD and FAN BD

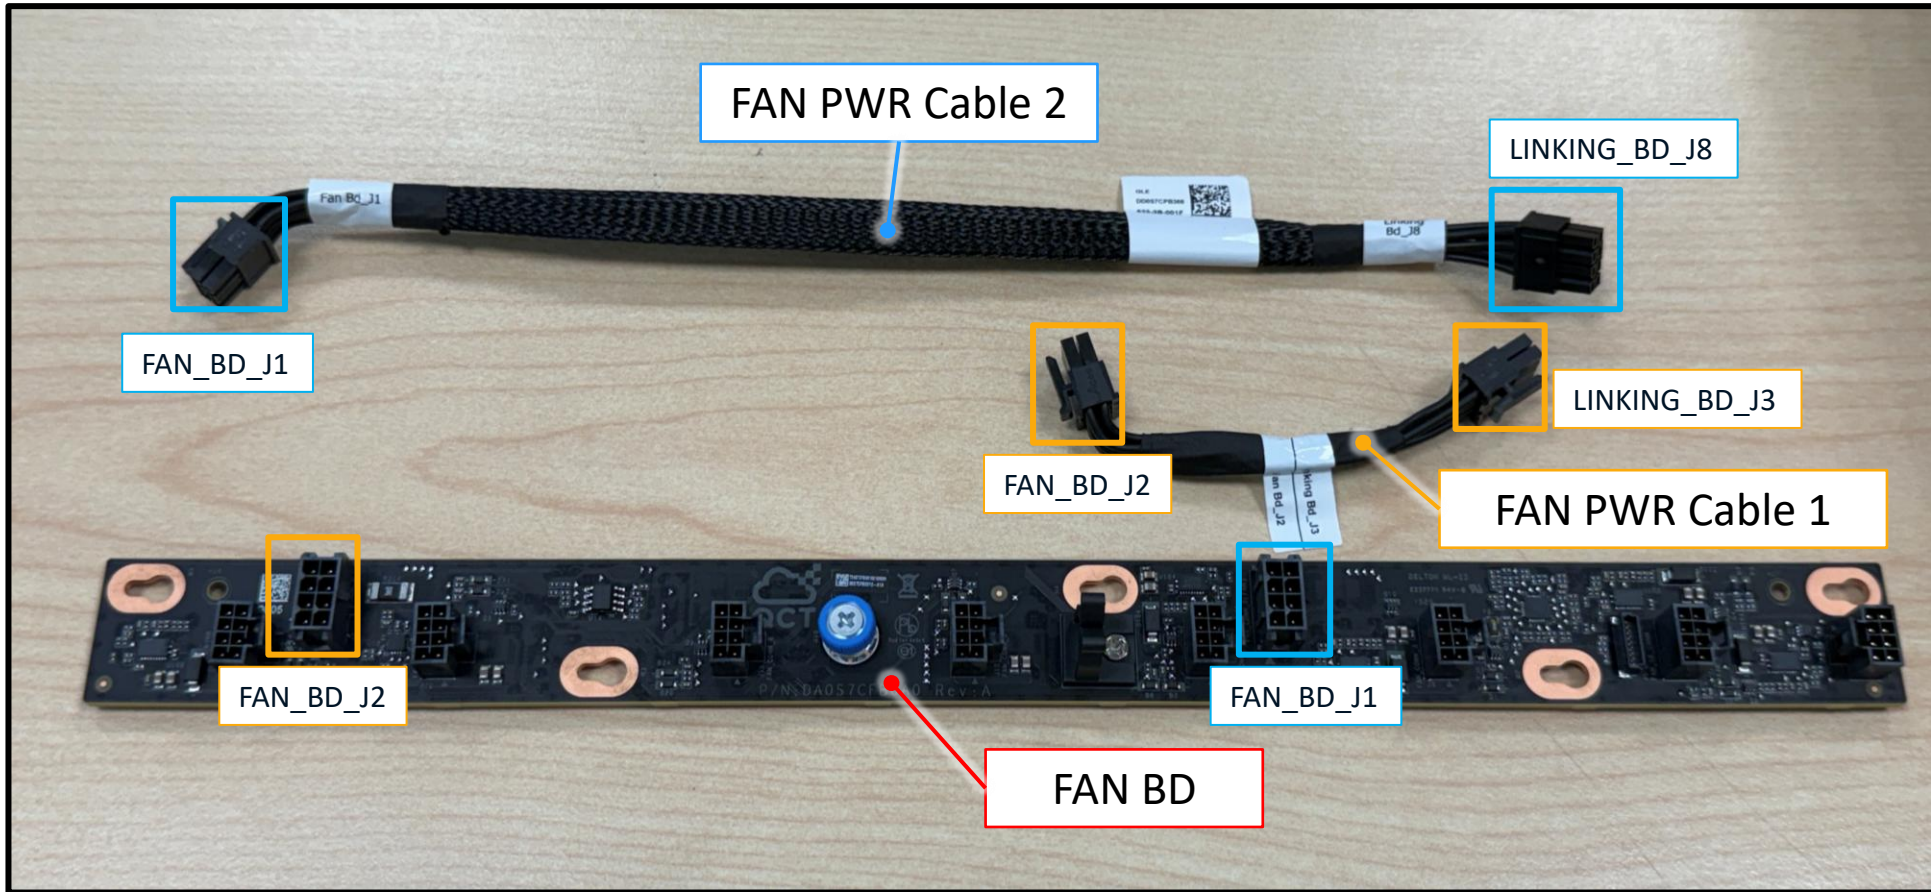


Assemble LINKING BD and FAN BD


Connect the FAN PWR Cable 1 between LINKING BD (J3) and FAN BD (J2).

Connect the FAN PWR Cable 2 between LINKING BD (J8) and FAN BD (J1).

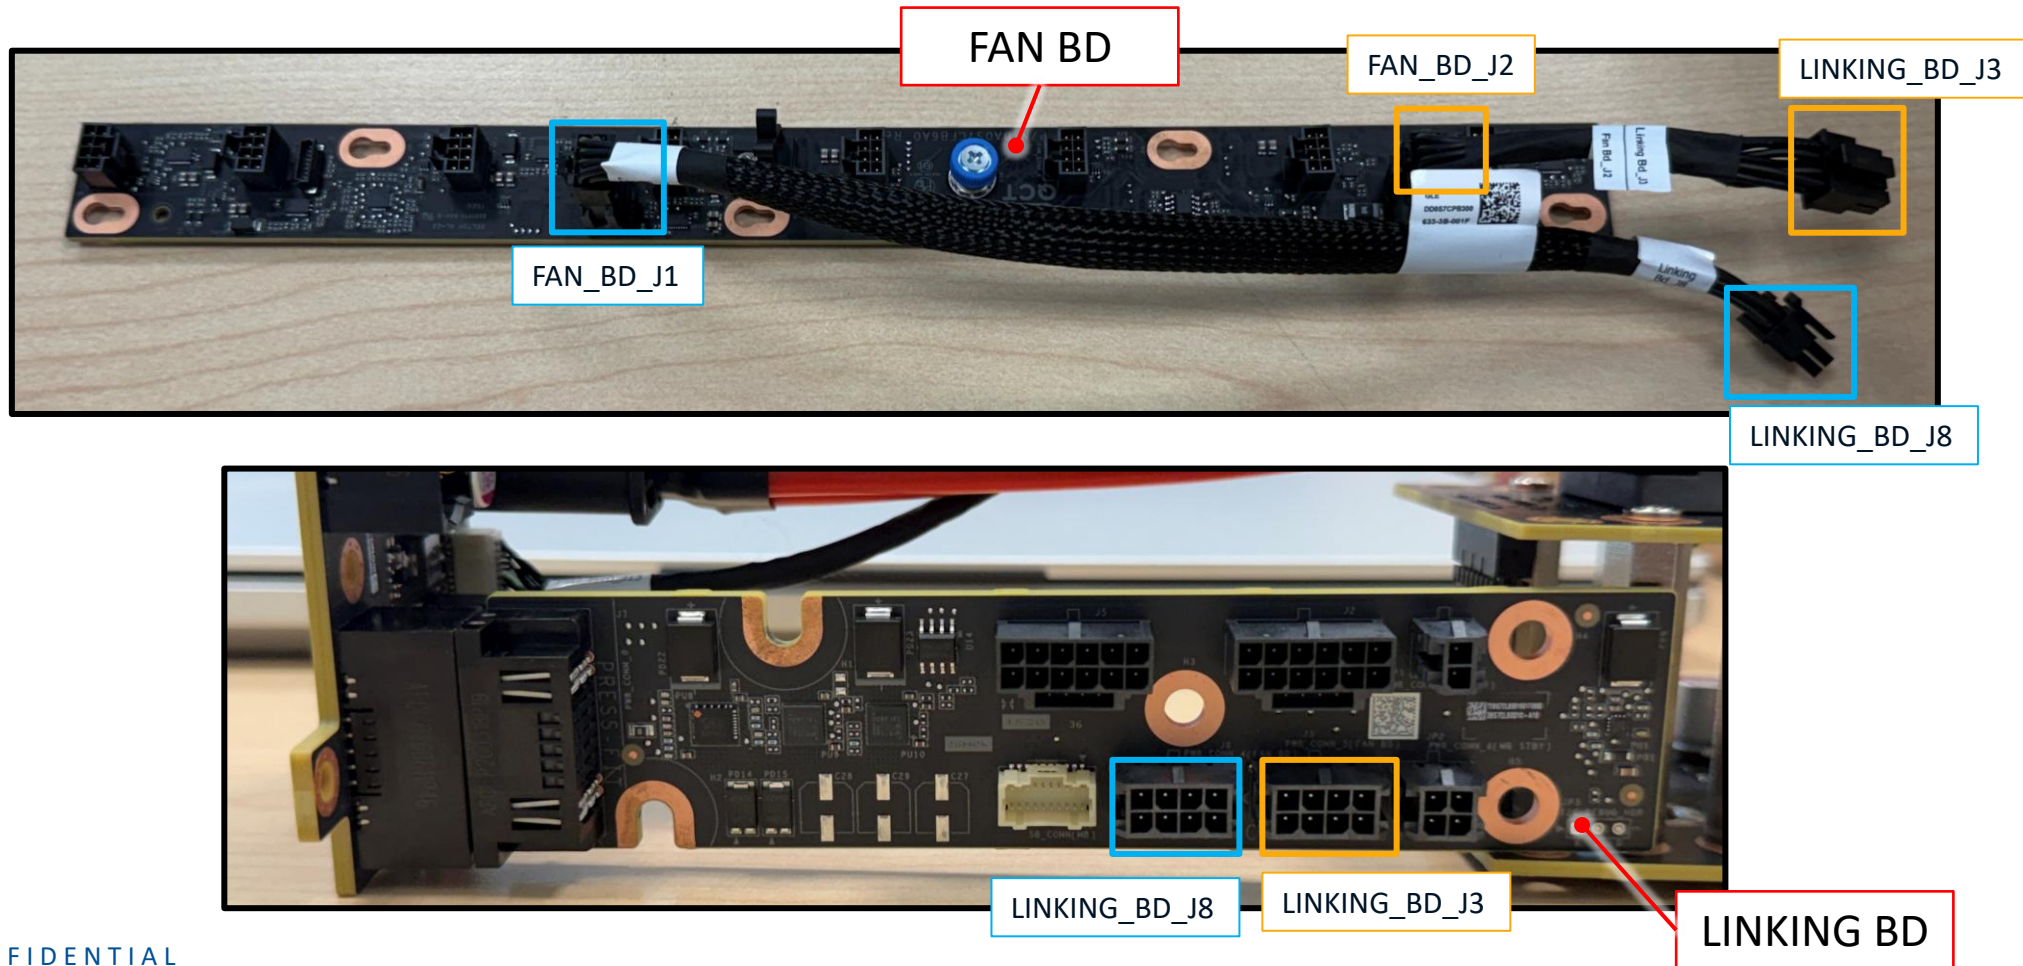

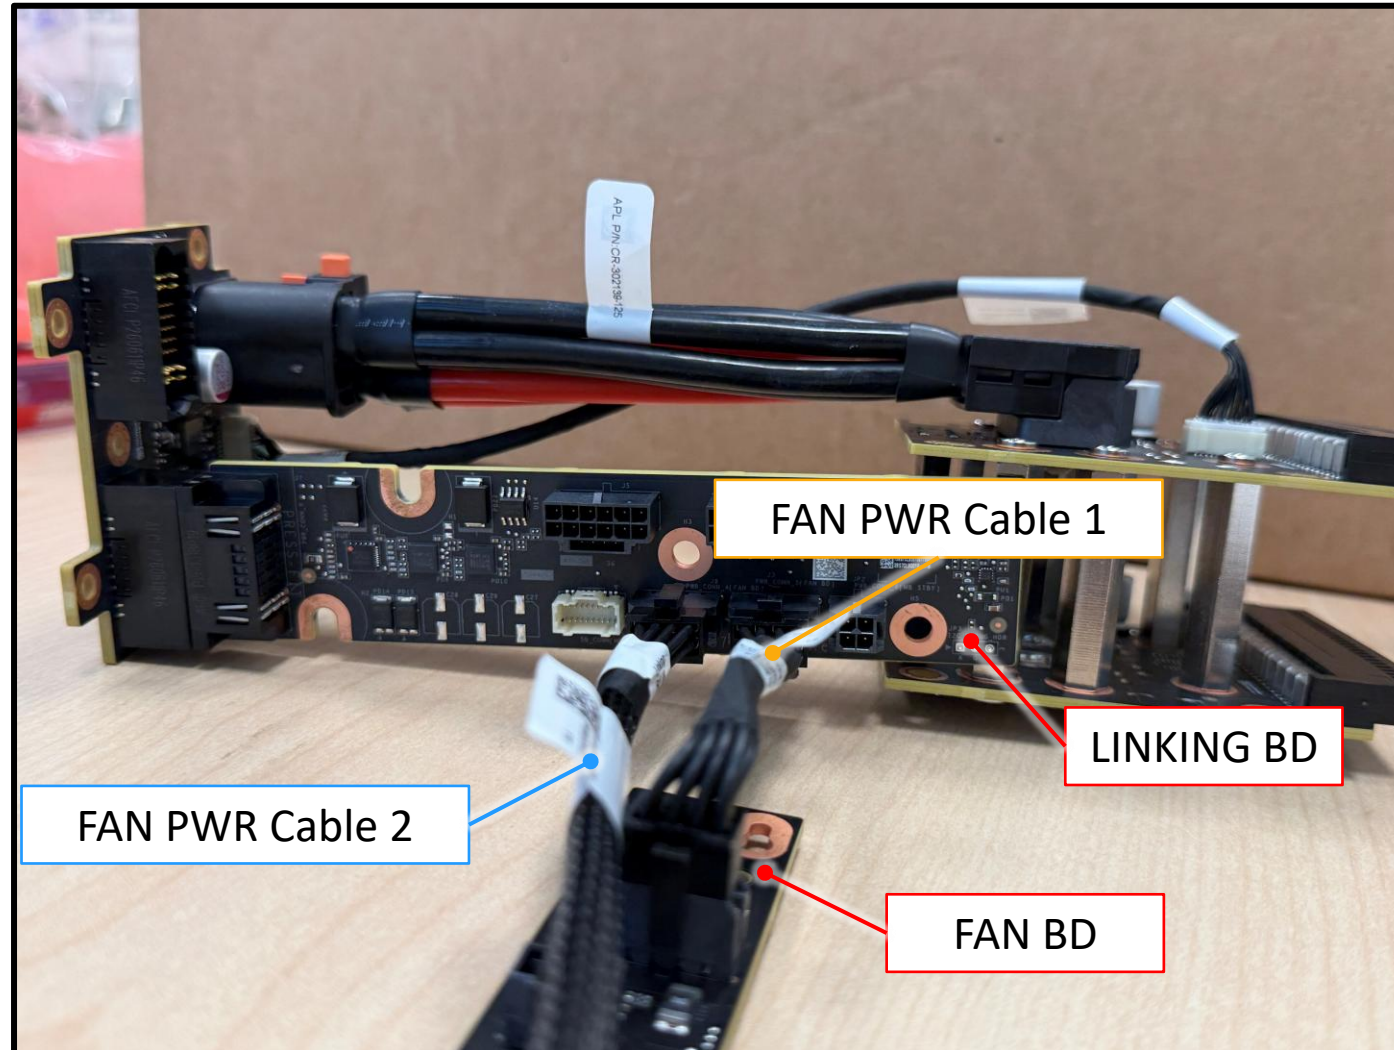


Assemble FAN BD and HPM BD

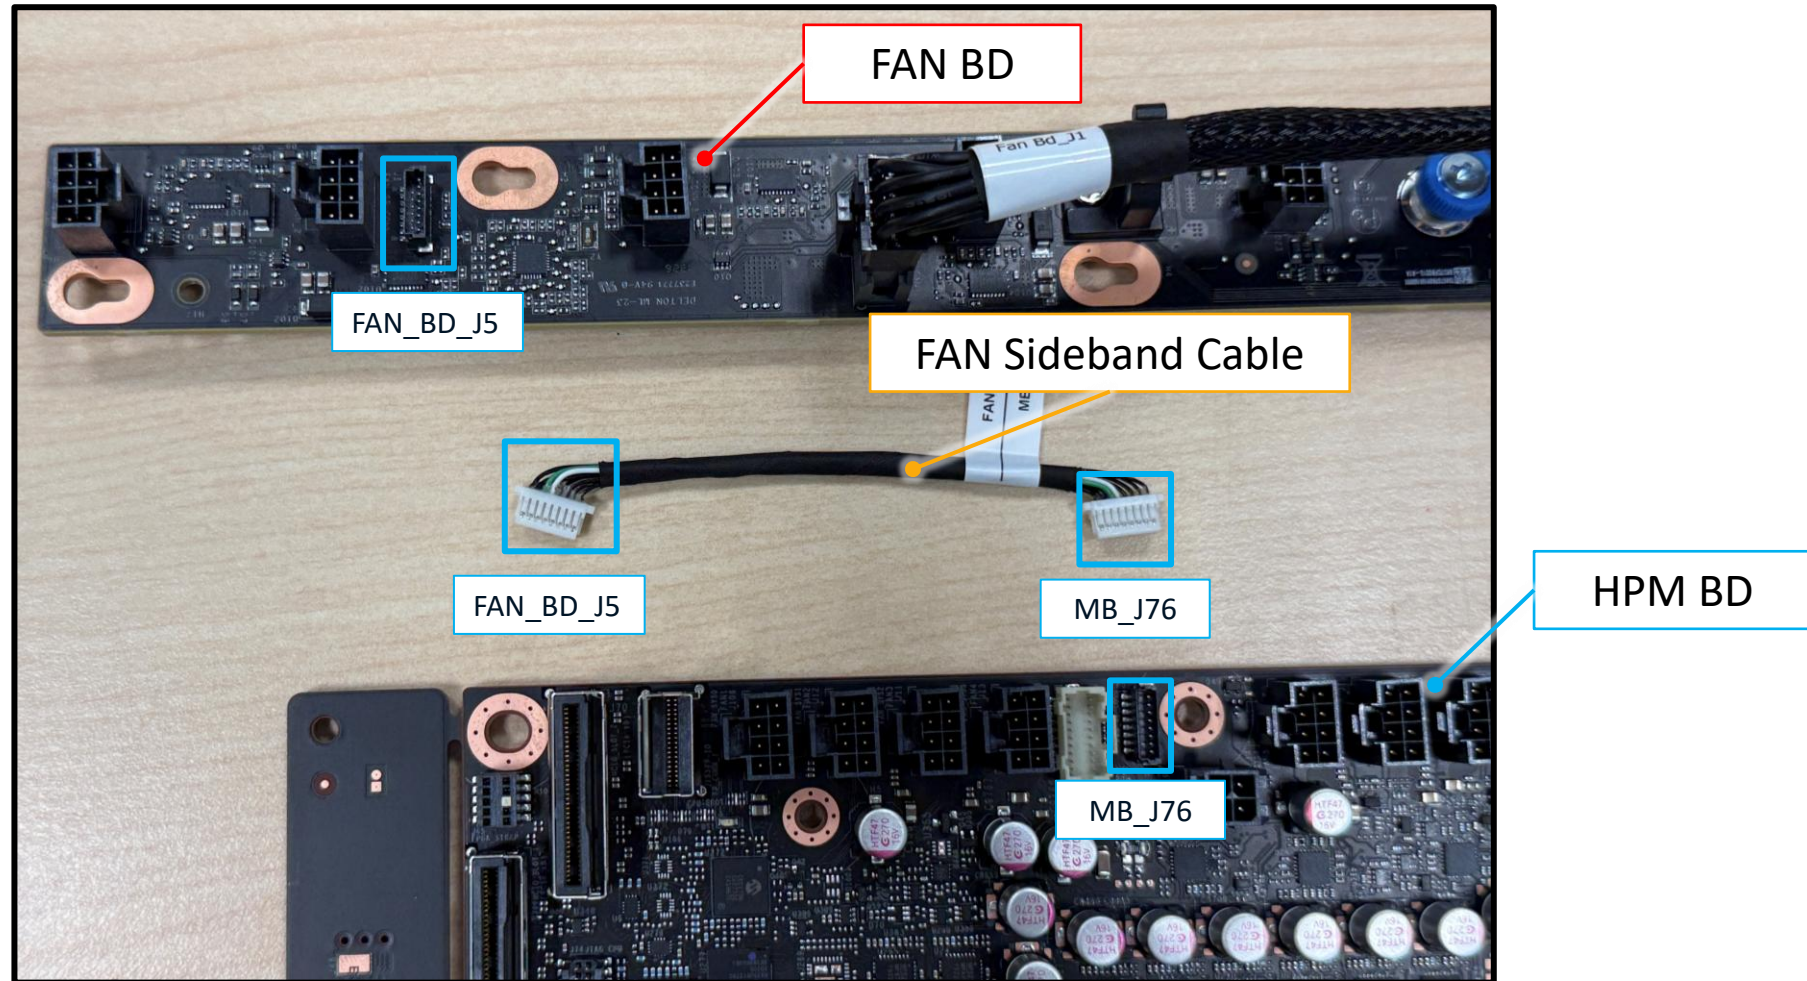


Assemble FAN BD and HPM BD

Connect the FAN Sideband Cable between HPM BD (J76) and FAN BD (J5).

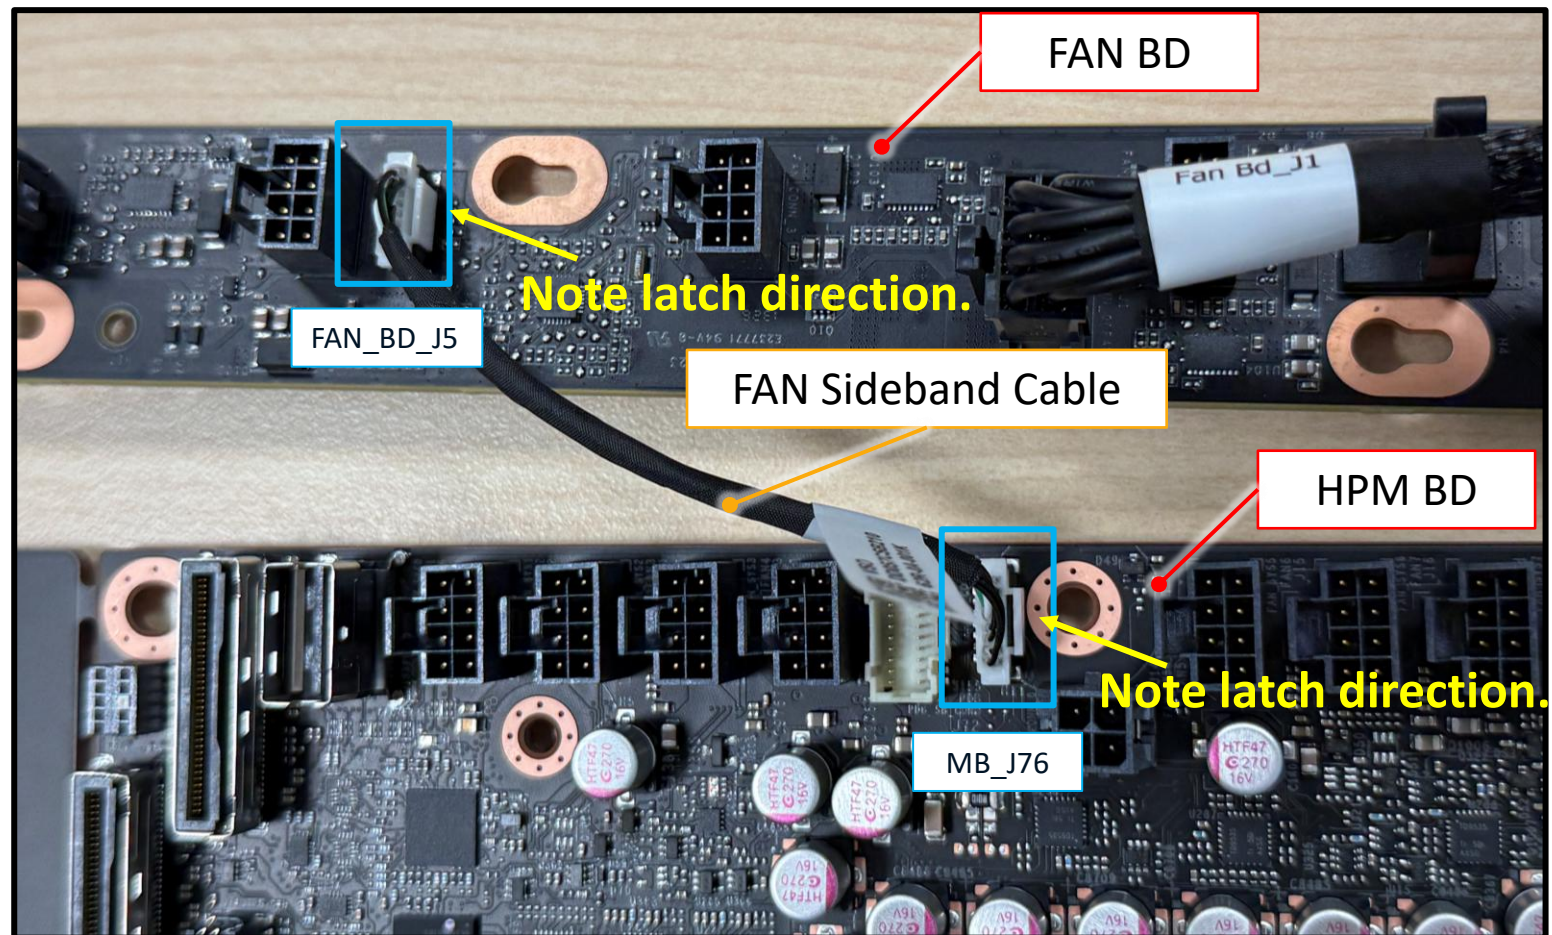


Assemble the IO_CTL and IO_CTL2

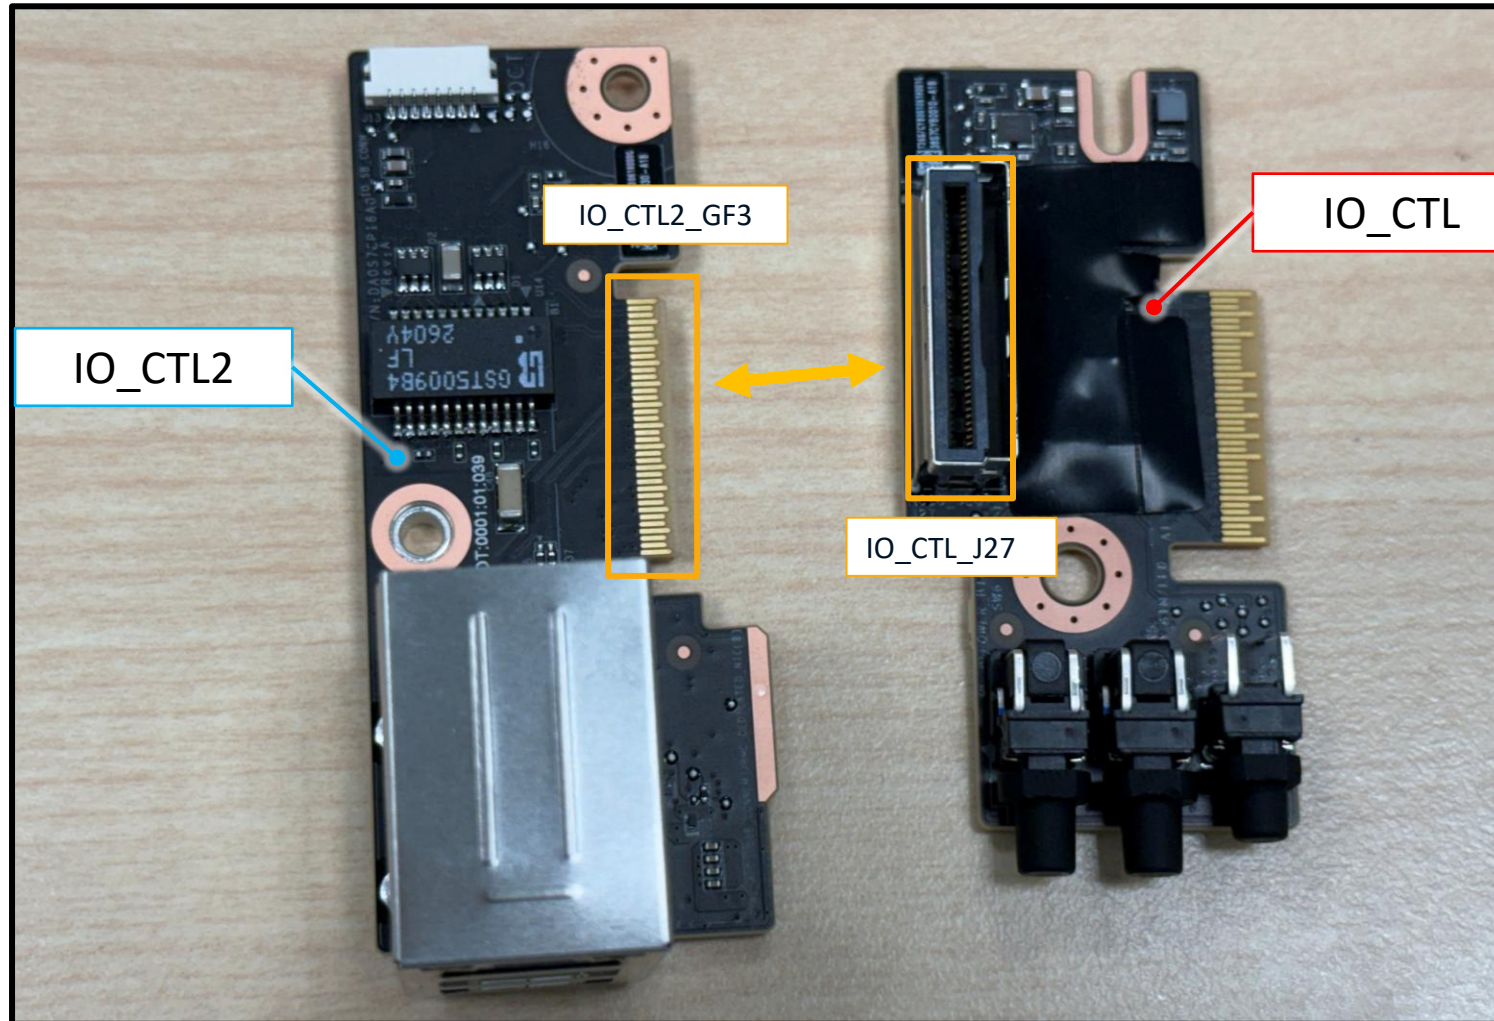


Insulation Requirements

Insulating tape should be applied to the marked areas to prevent short circuits, as mechanical fixtures are not yet installed.

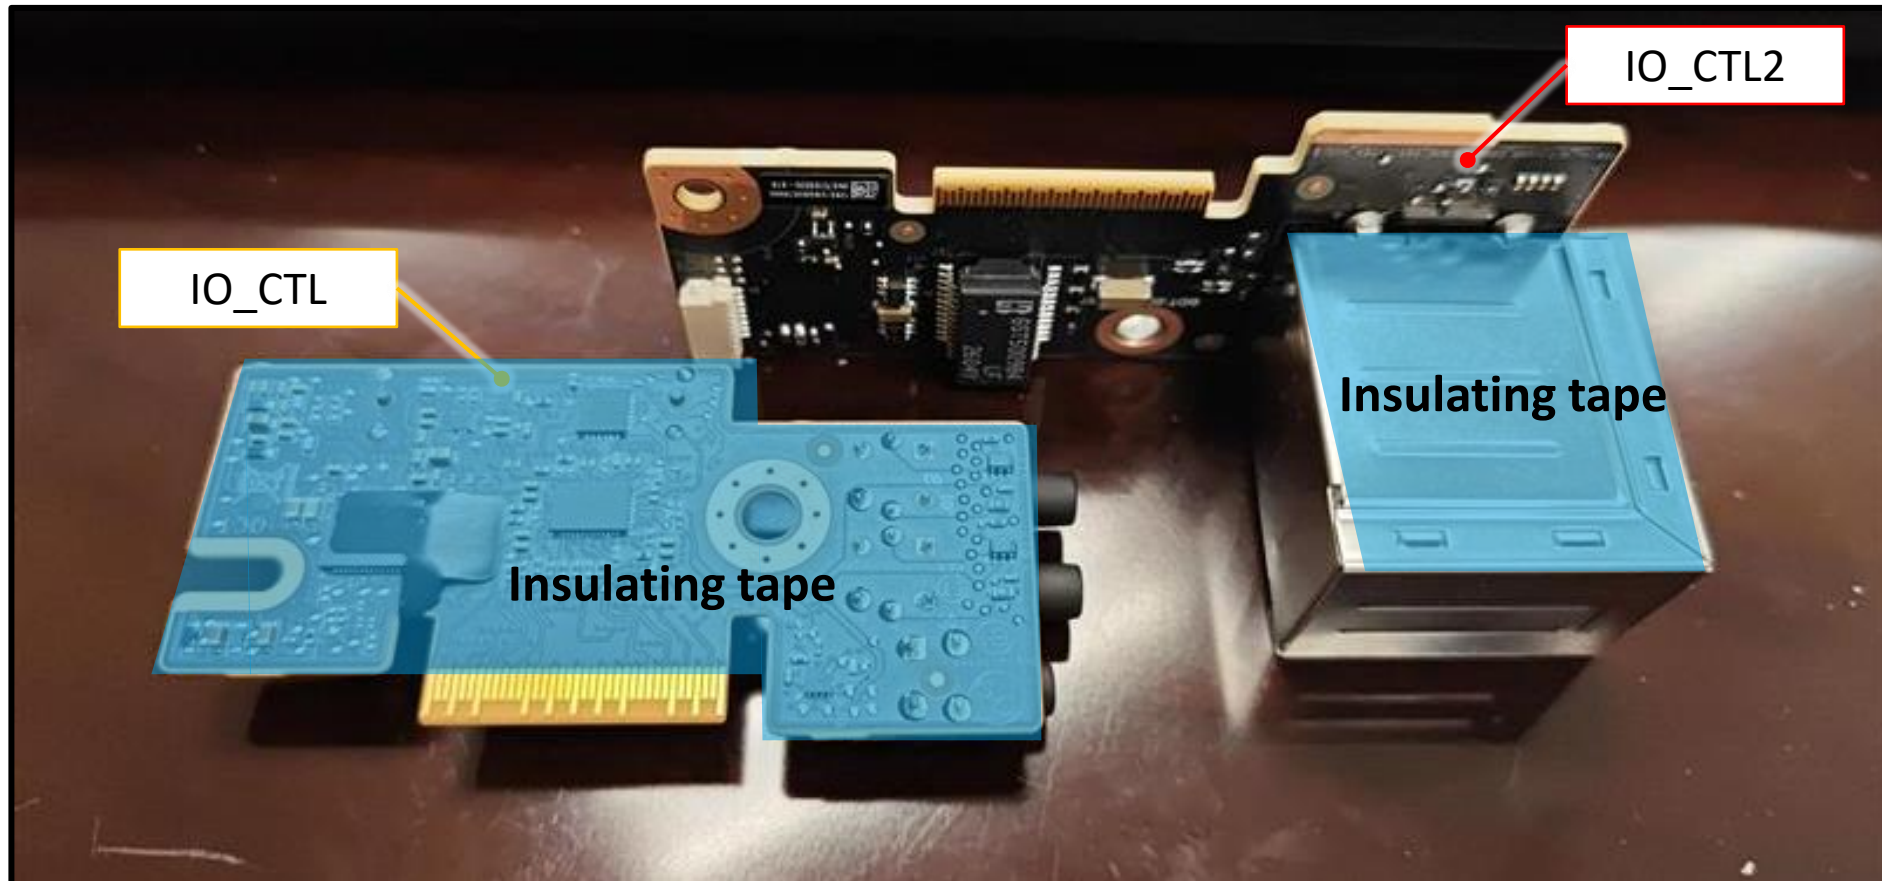



Assemble IO_CTL and IO_CTL2

Directly mate IO_CTL2 (GF3) with IO_CTL (J27).

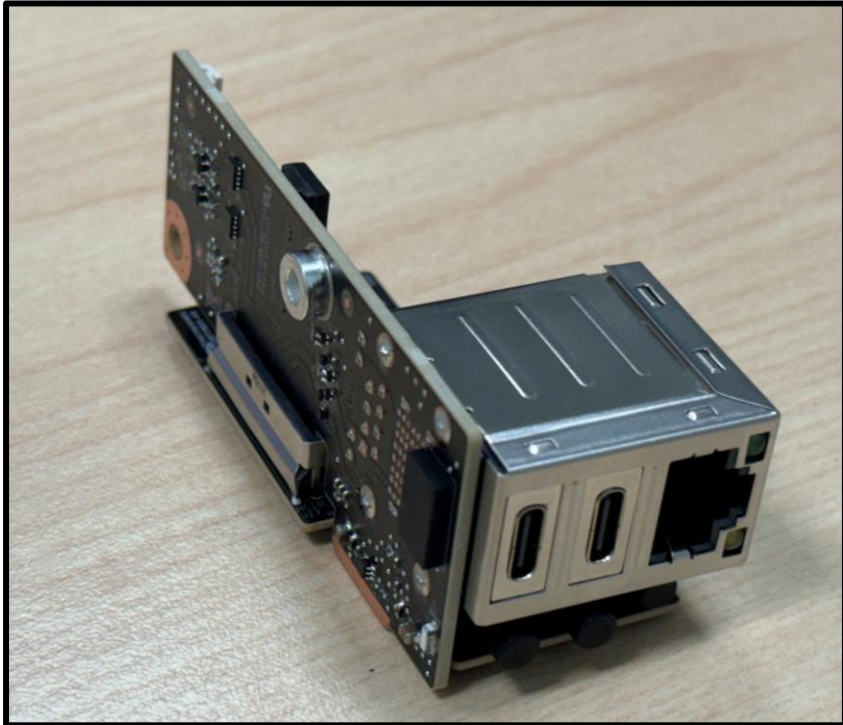

Assemble IO_CTL and HPM BD

Connect the IO PWR Cable between HPM BD (J151) and IO_CTL2 (J13).

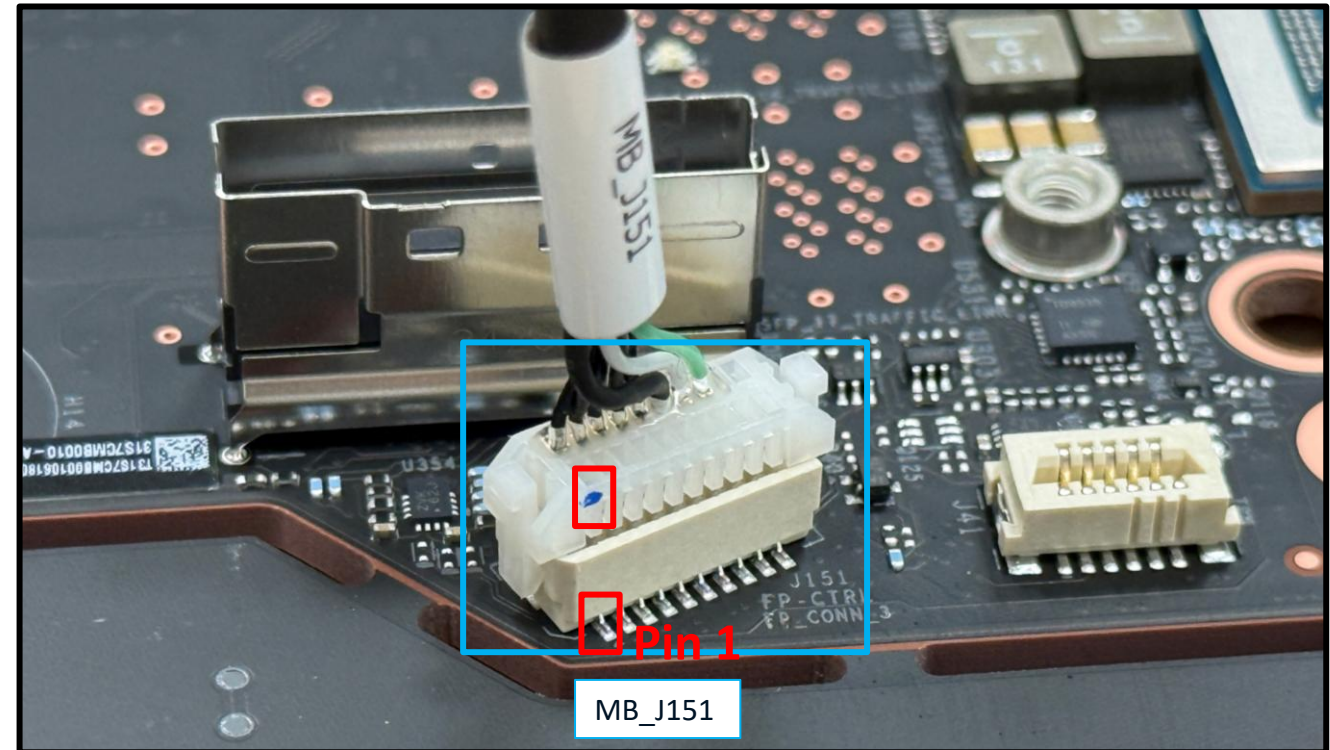
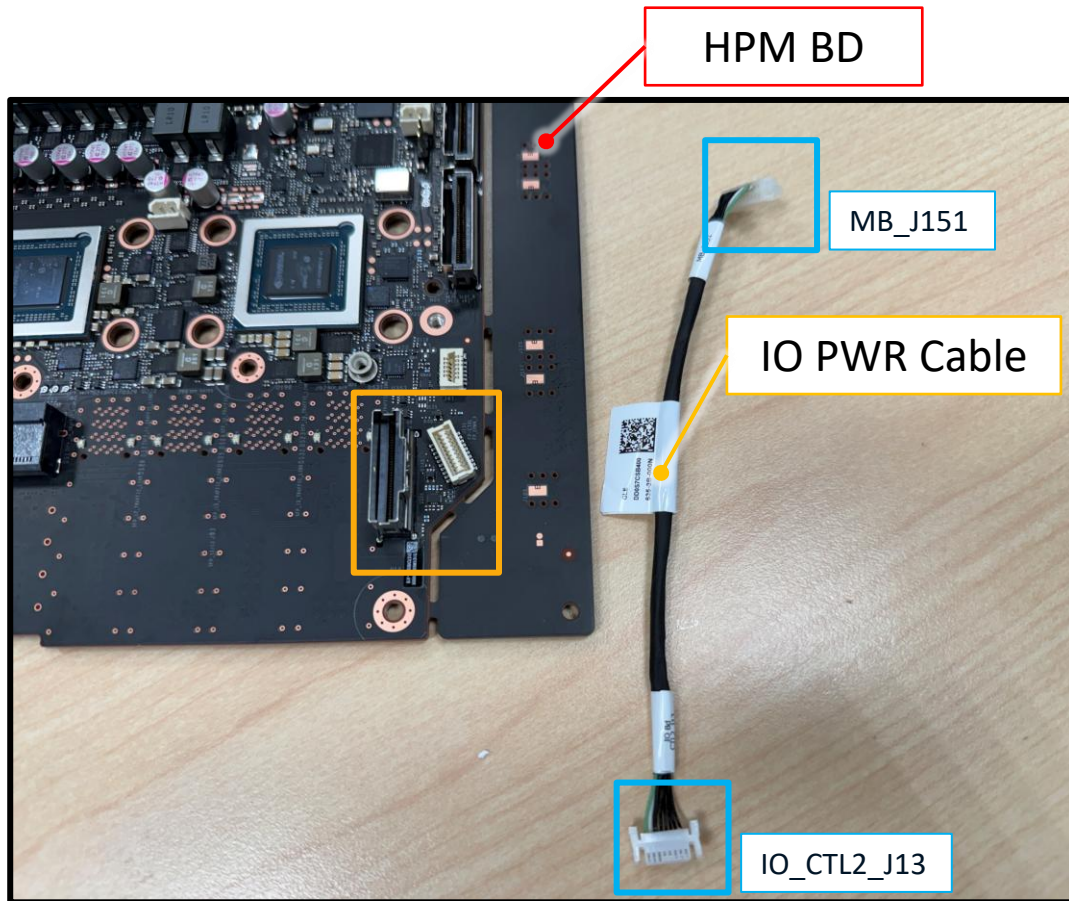


Ensure the blue mark on the cable aligns with Pin 1 of the connector.

Assemble IO_CTL and HPM BD



Connect the IO PWR Cable between HPM BD (J151) and IO_CTL2 (J13).

Ensure the blue mark on the cable aligns with Pin 1 of the connector.

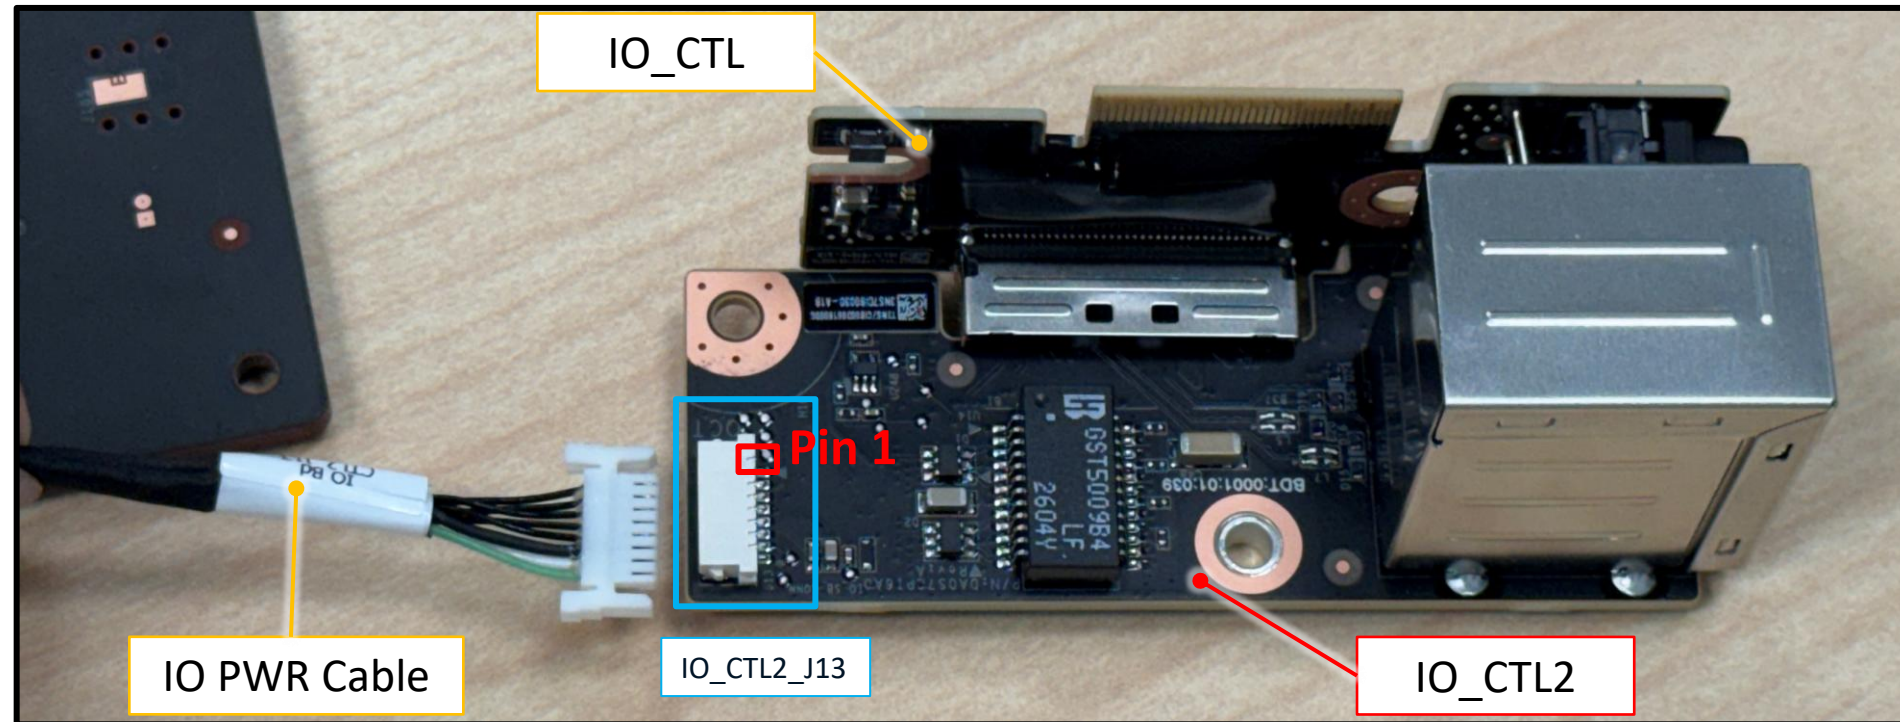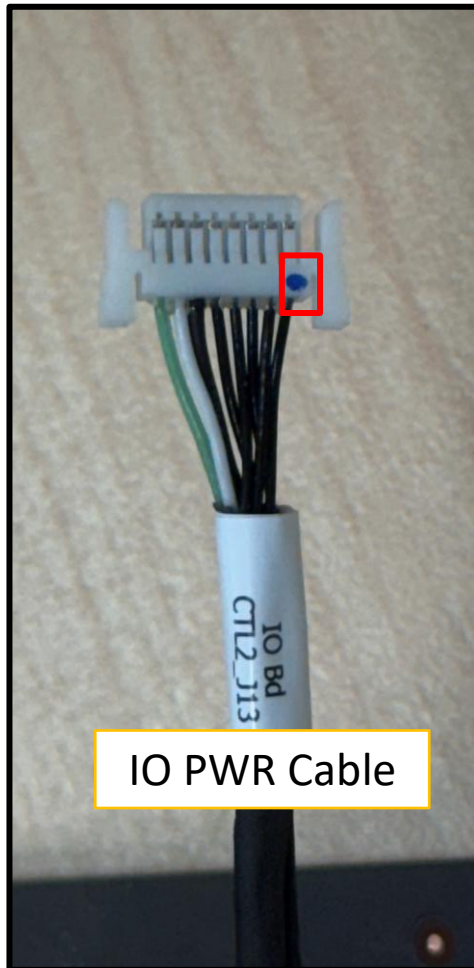



Assemble IO_CTL and HPM BD

Directly mate IO_CTL (GF2) with HPM BD (J140).

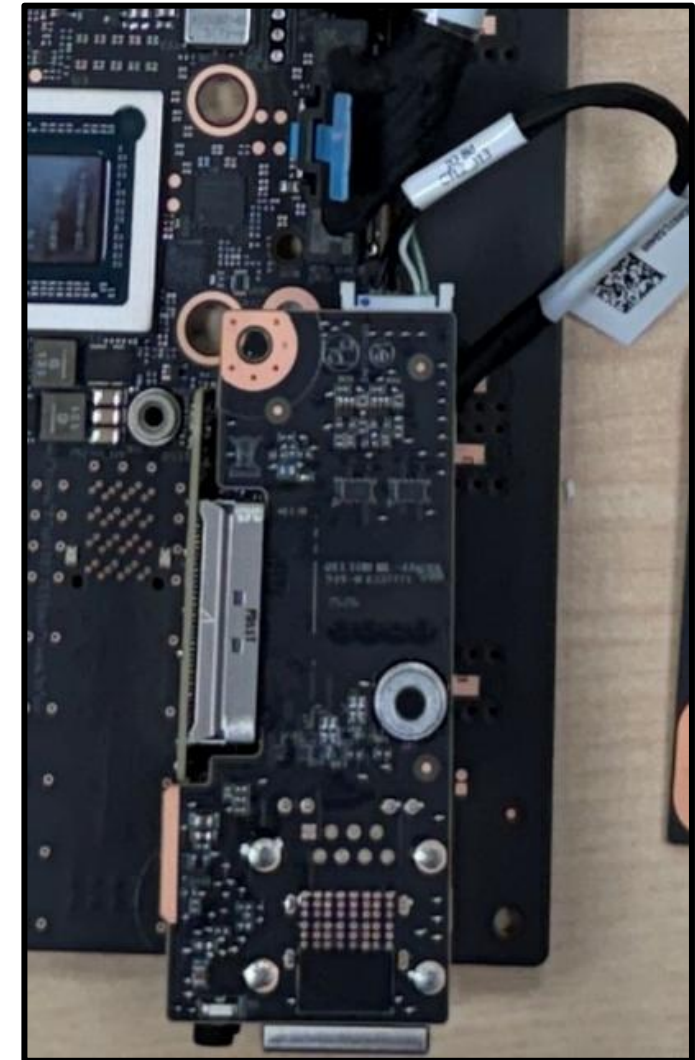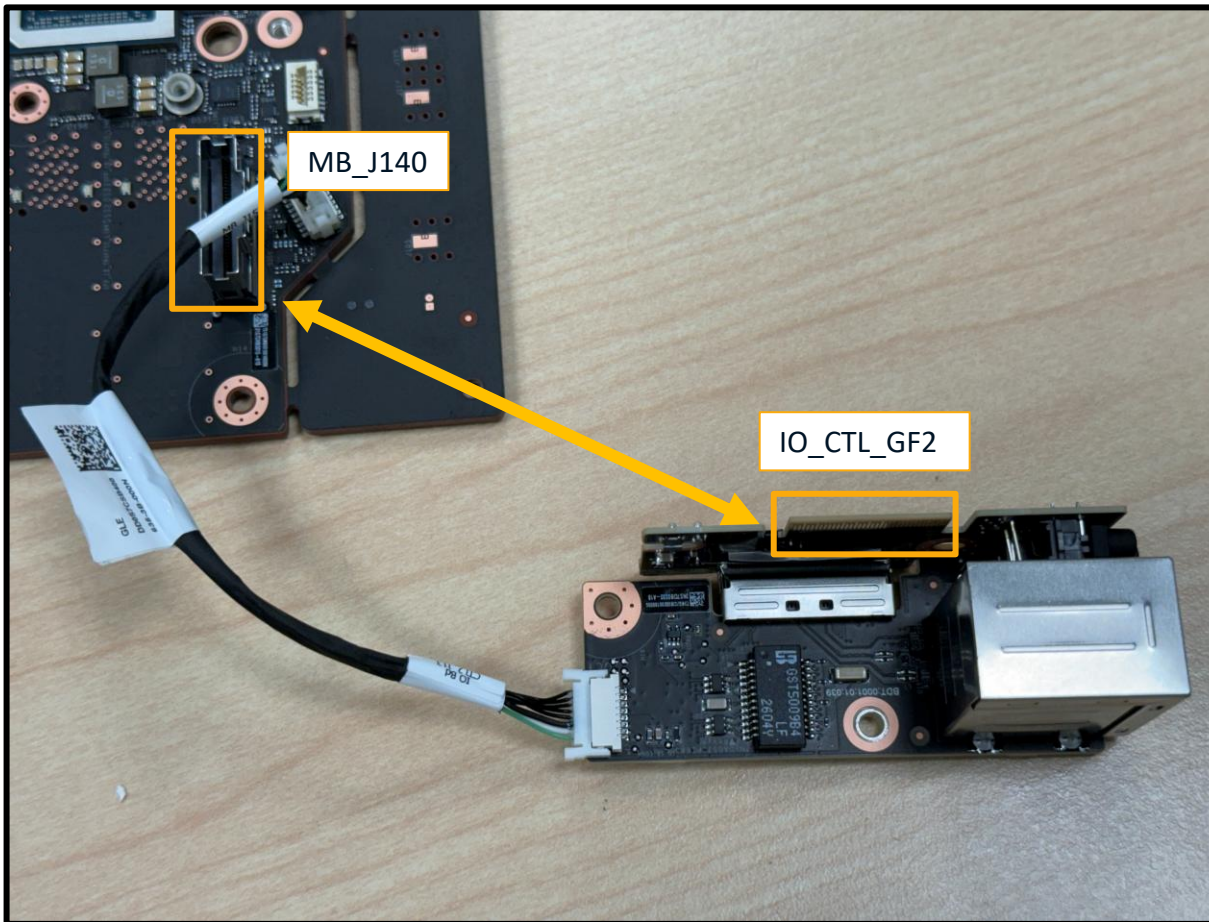


Assemble LINKING BD and HPM BD

Connect the MB Sideband Cable between HPM BD (J155) and LINKING BD (J155).

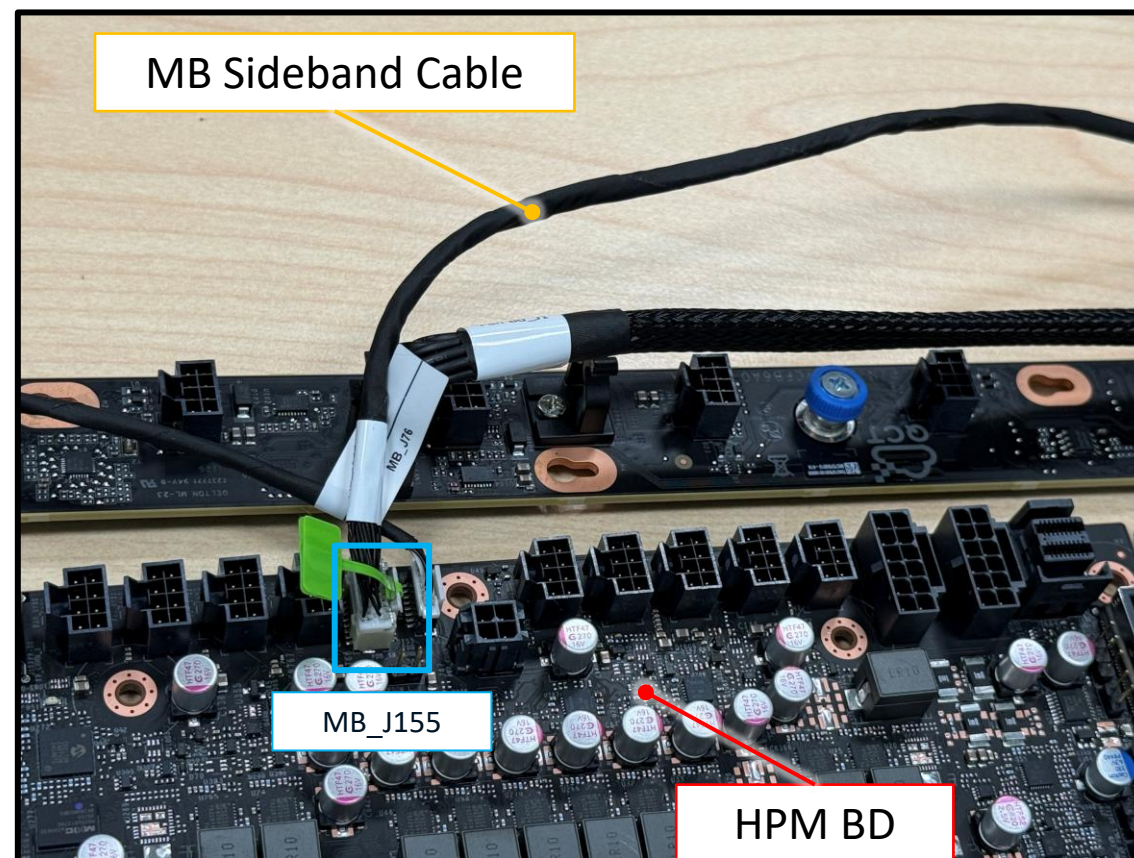
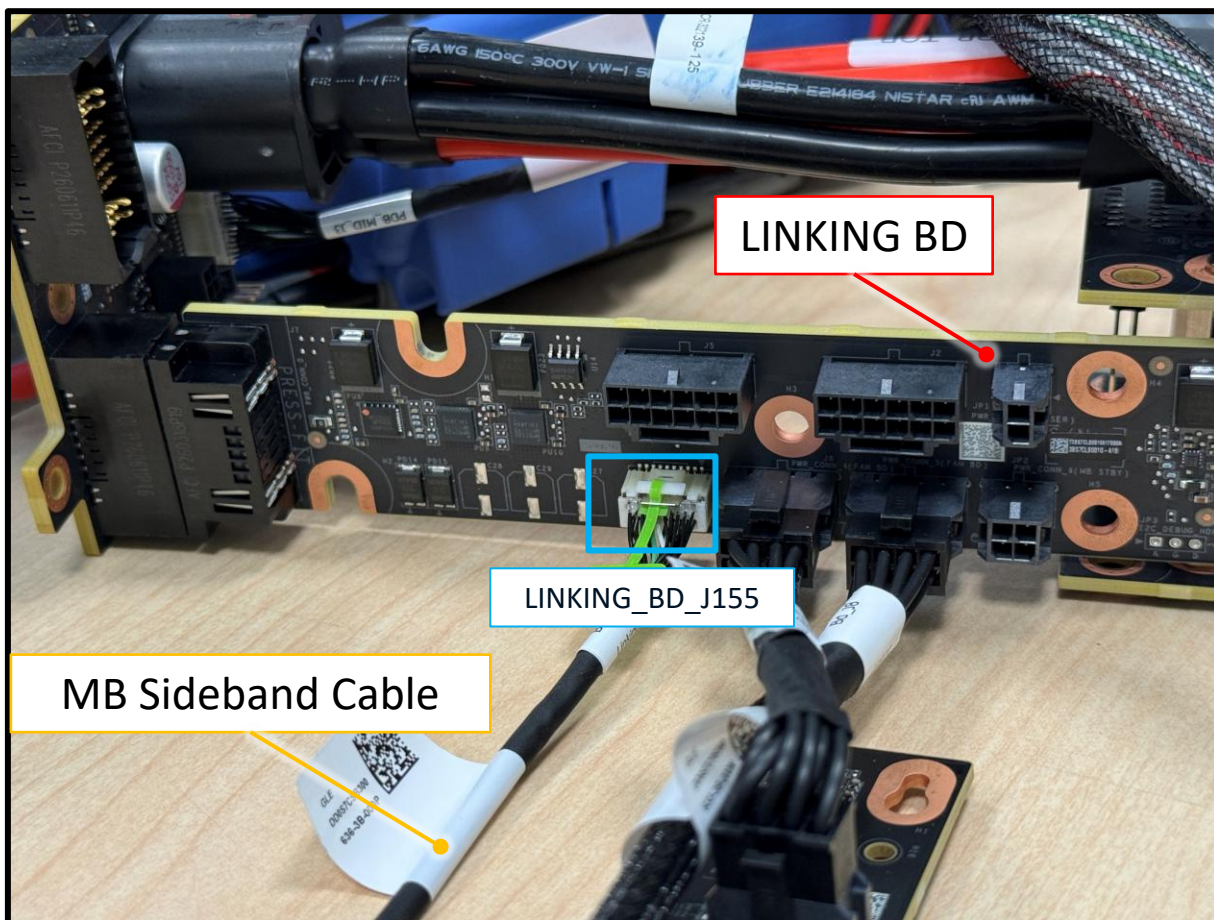


Assembled LINKING BD and HPM BD

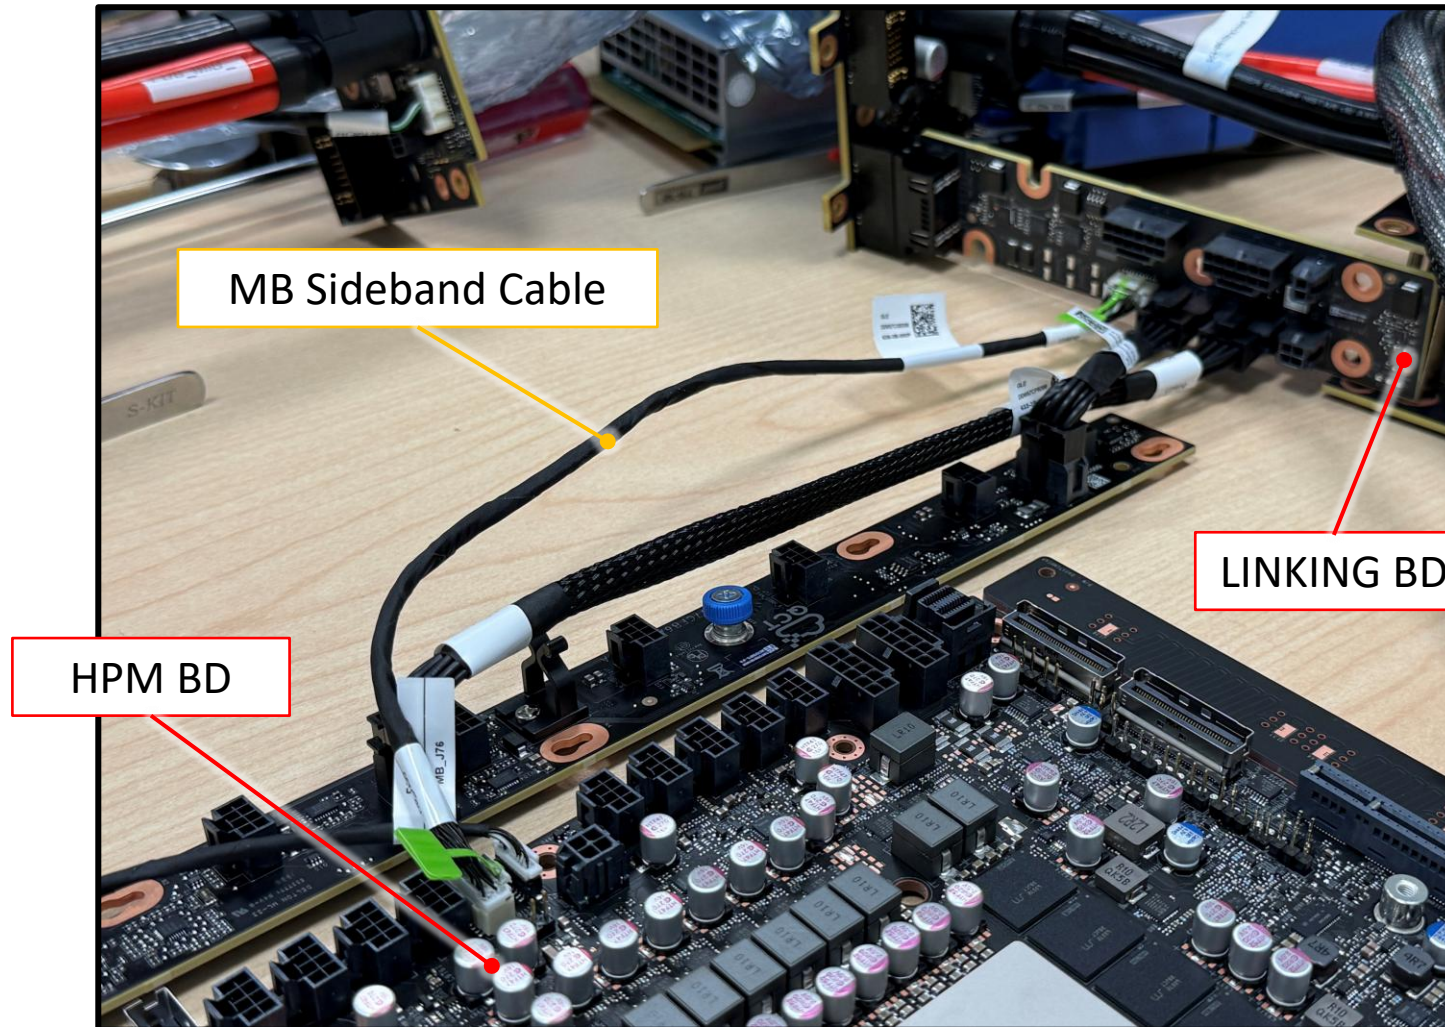


Assemble LINKING BD and HPM BD

Connect the MB PWR Cable between HPM BD (J5) and LINKING BD (J2).

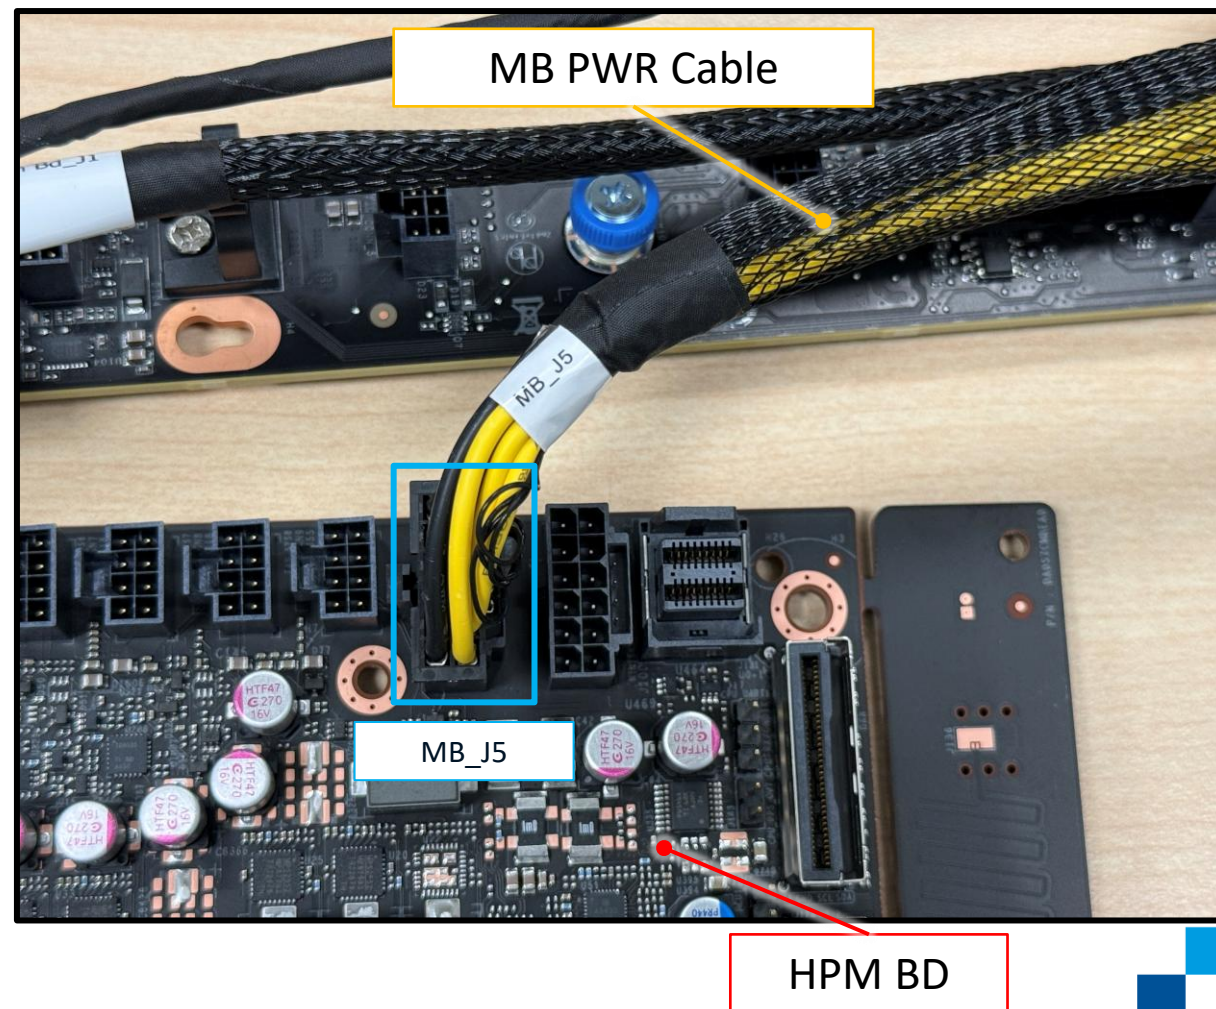
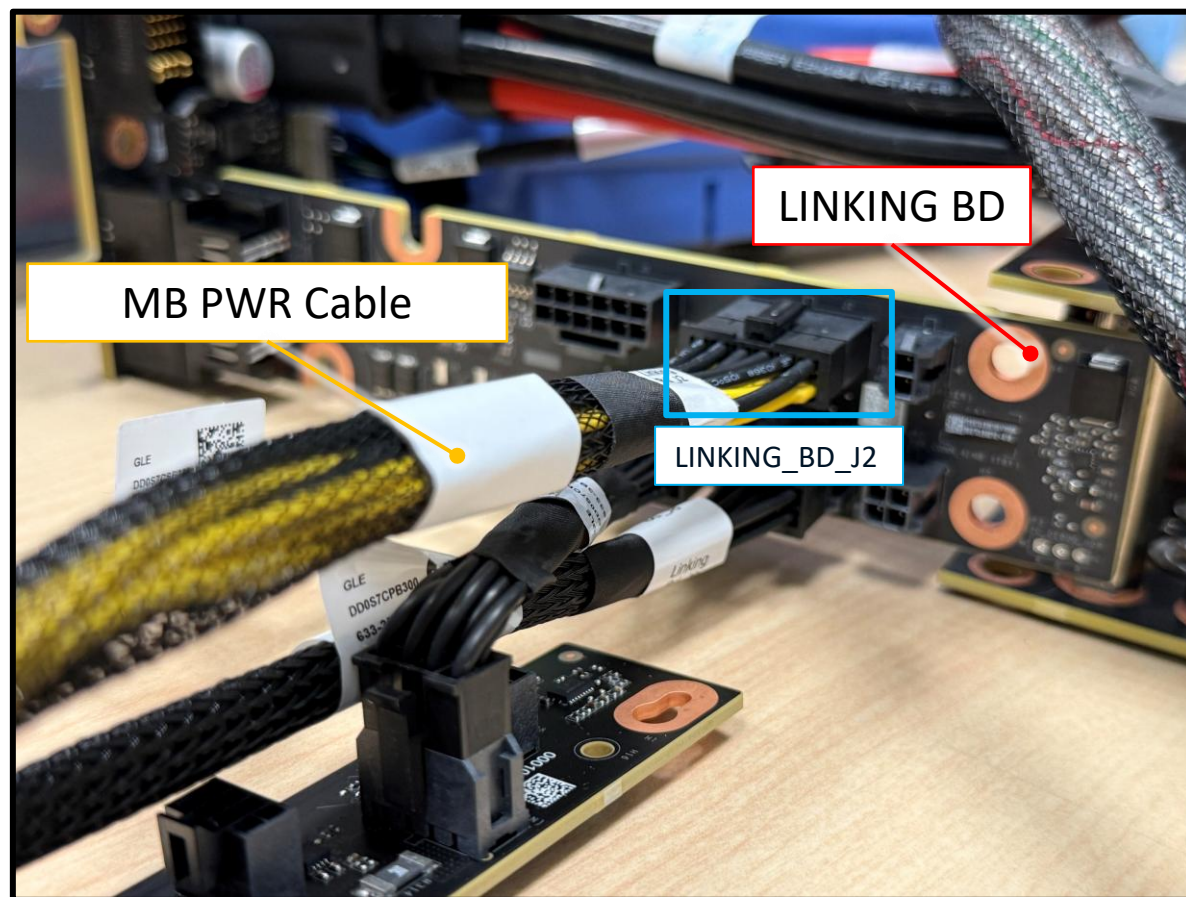


Assembled LINKING BD and HPM BD

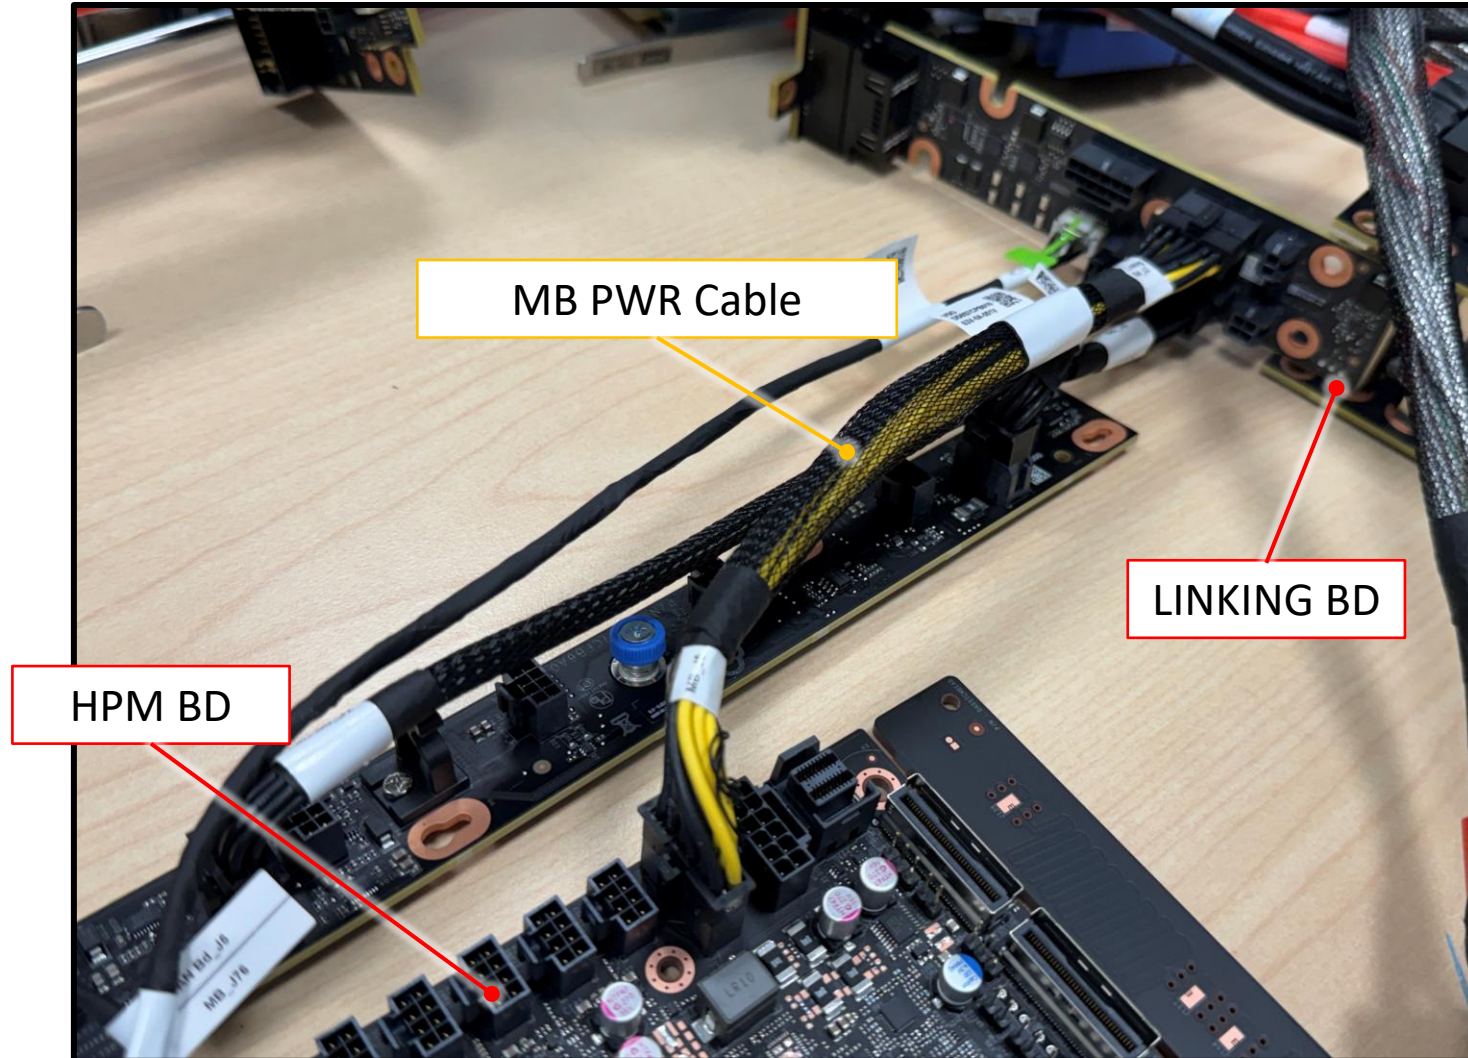


Assemble LINKING BD and HPM BD

Connect the MB STBY PWR Cable between HPM BD (J47) and LINKING BD (JP2).

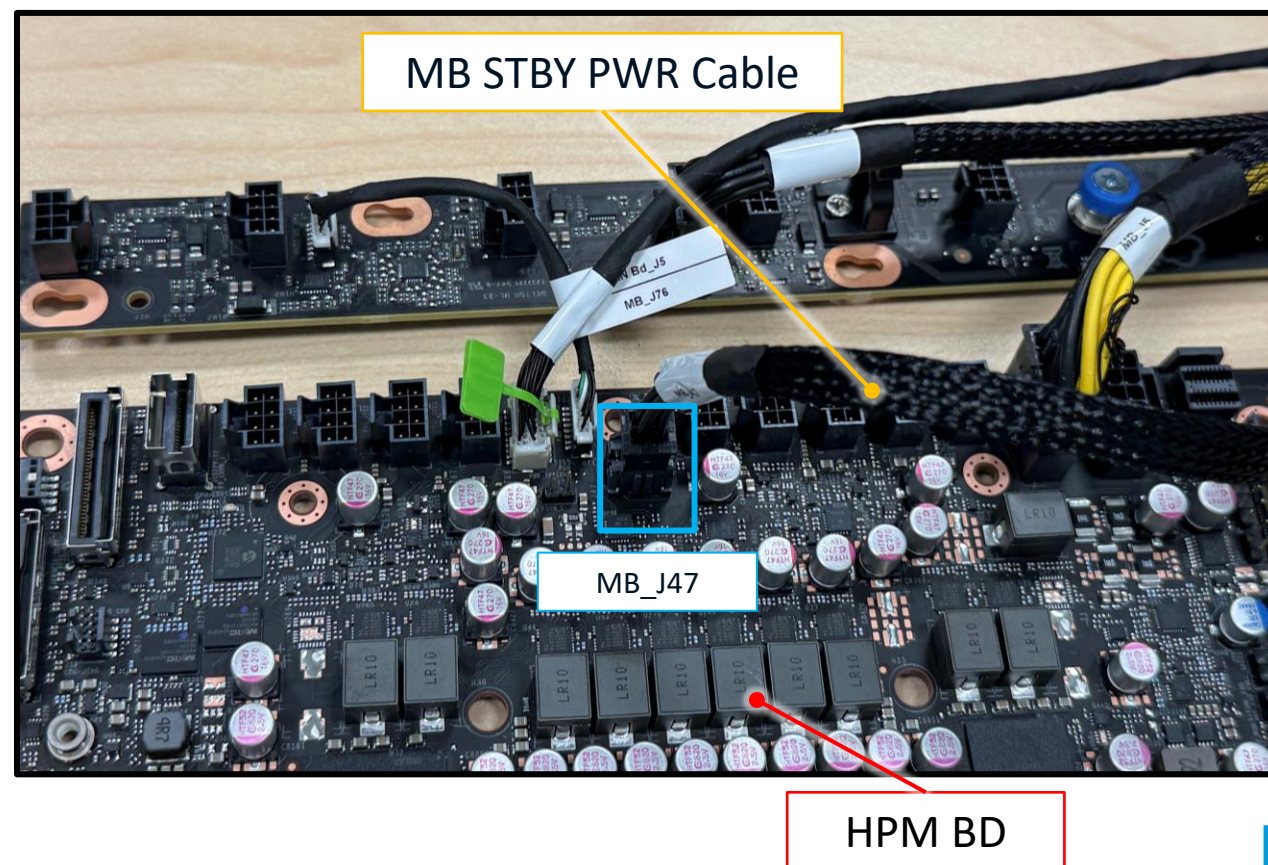
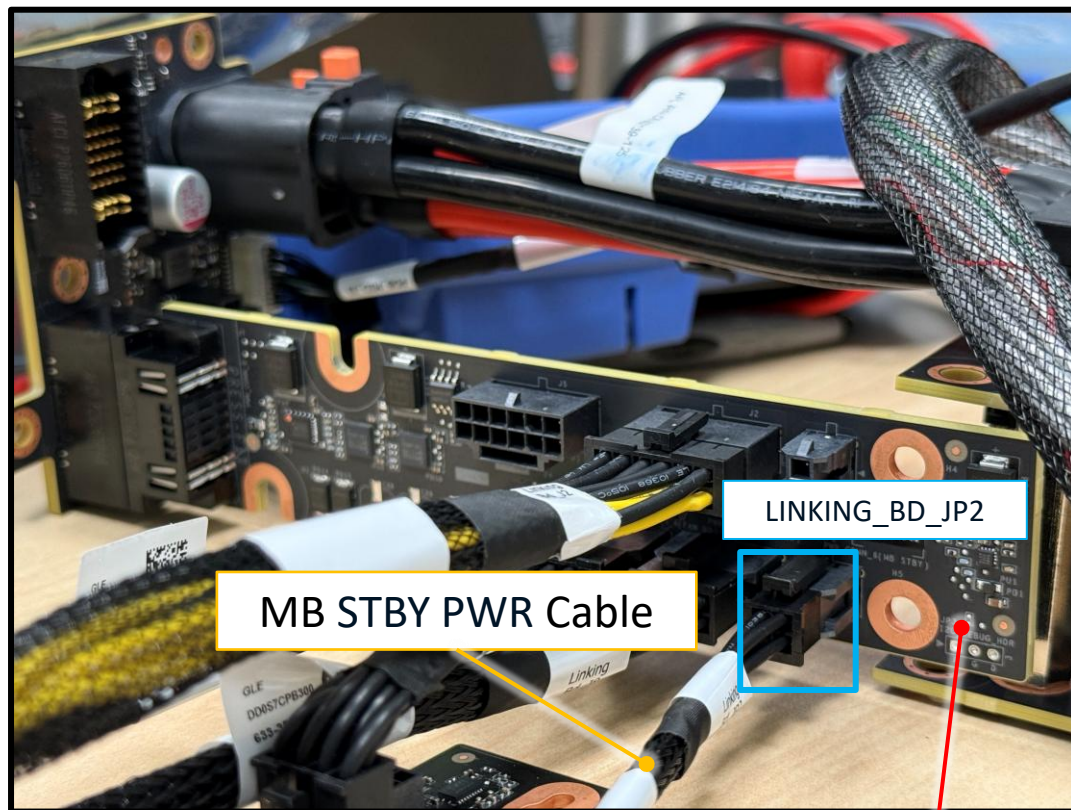


Assembled LINKING BD and HPM BD

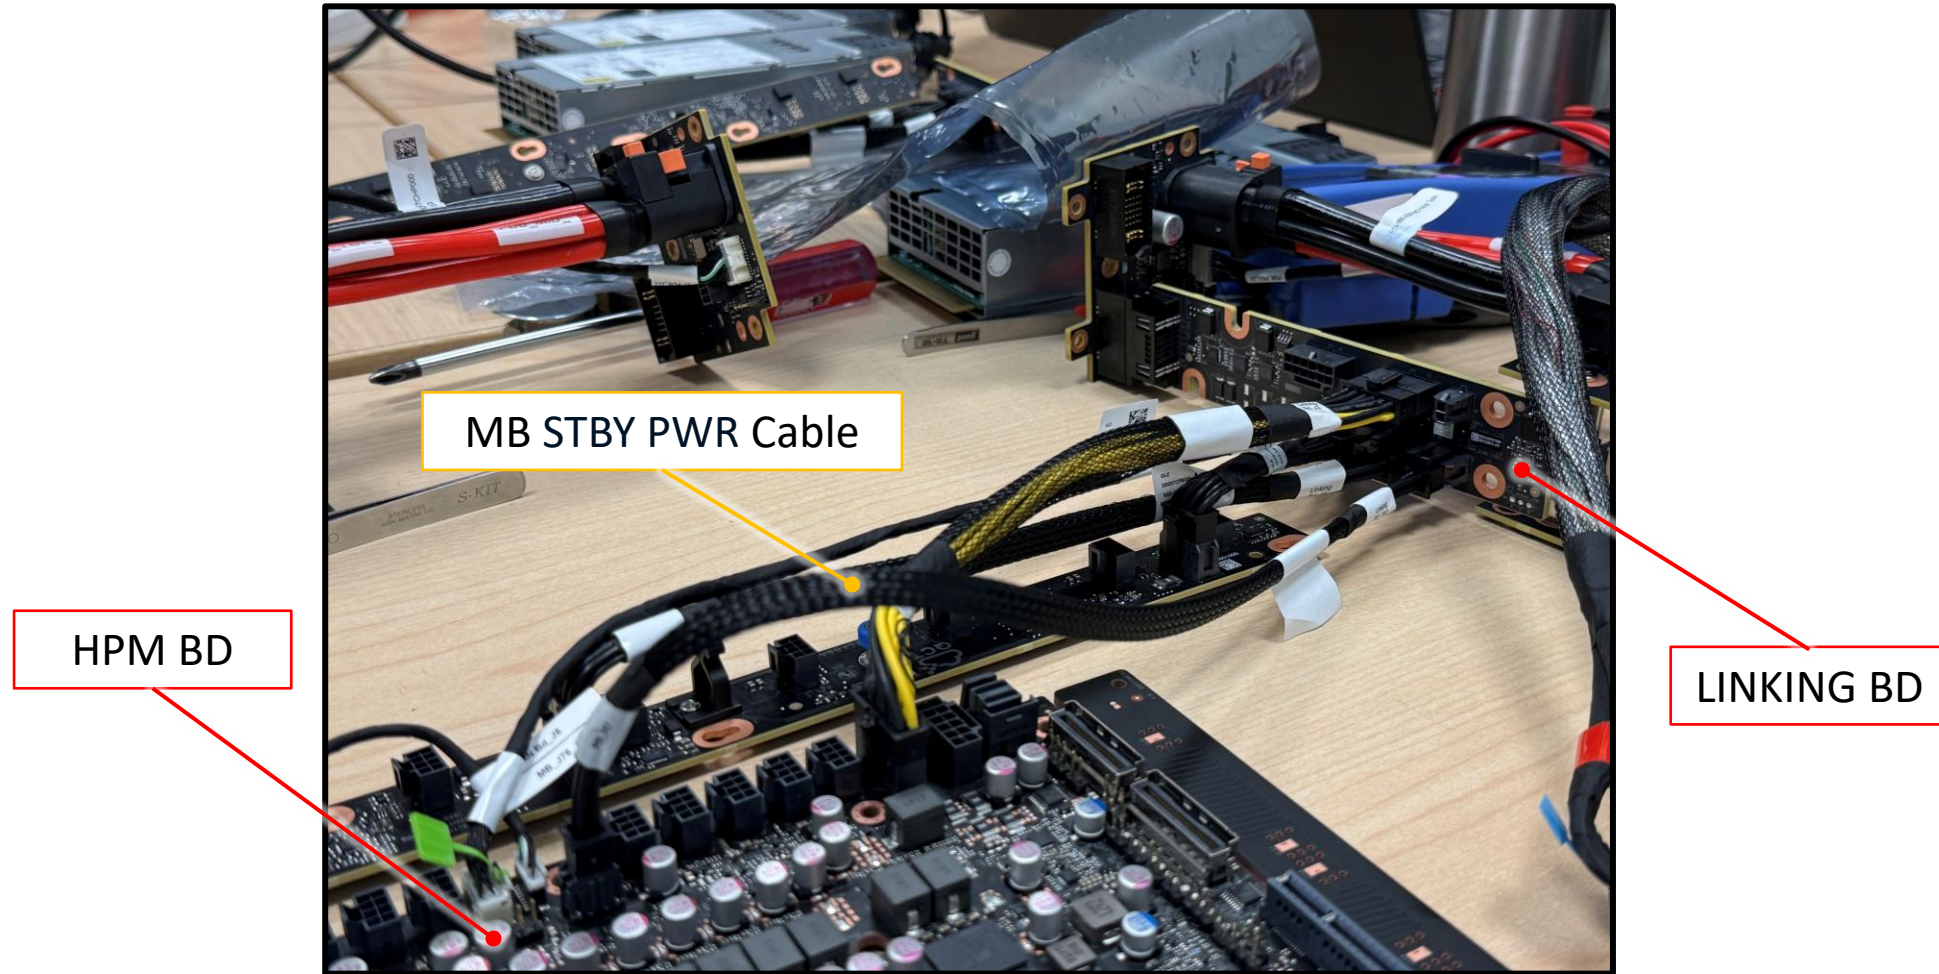


Assemble the cables for GPU

Connect the GPU PWR Cable to LINKING BD (J15).

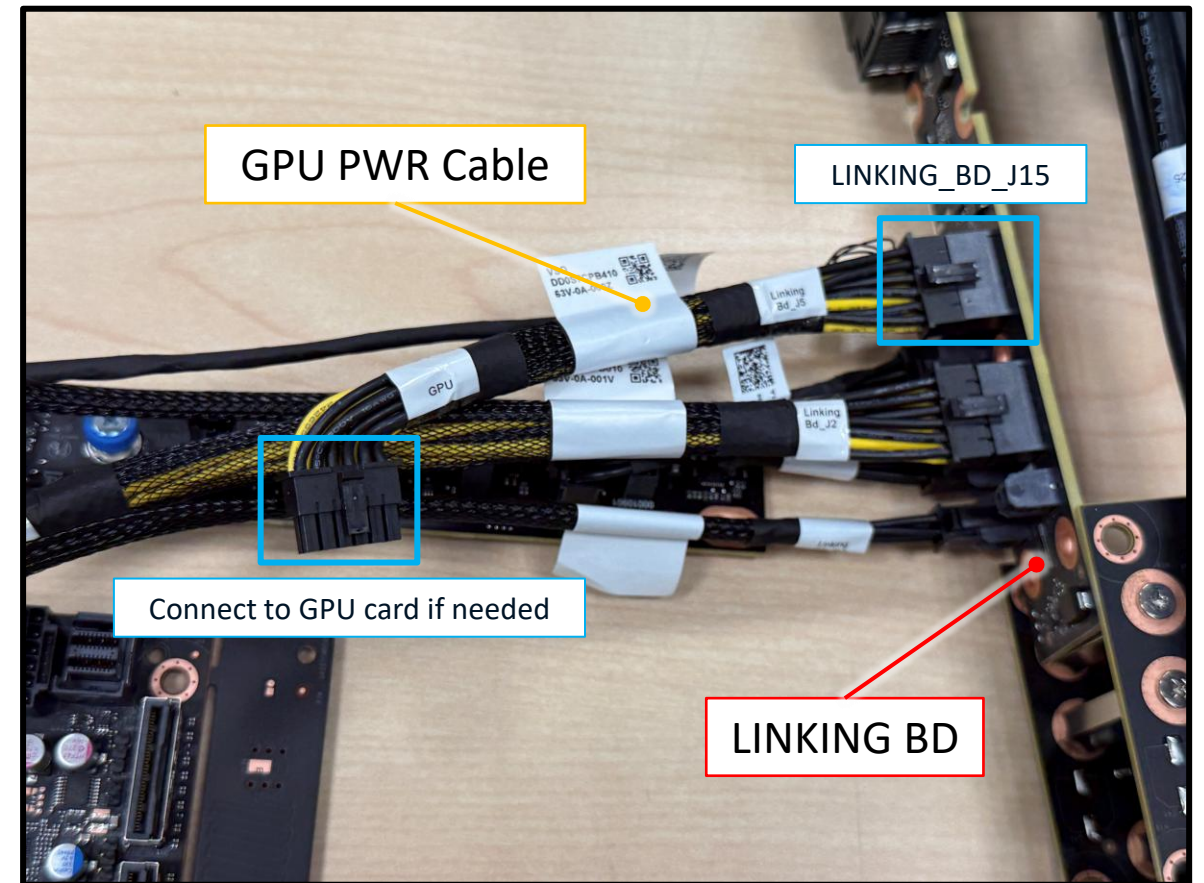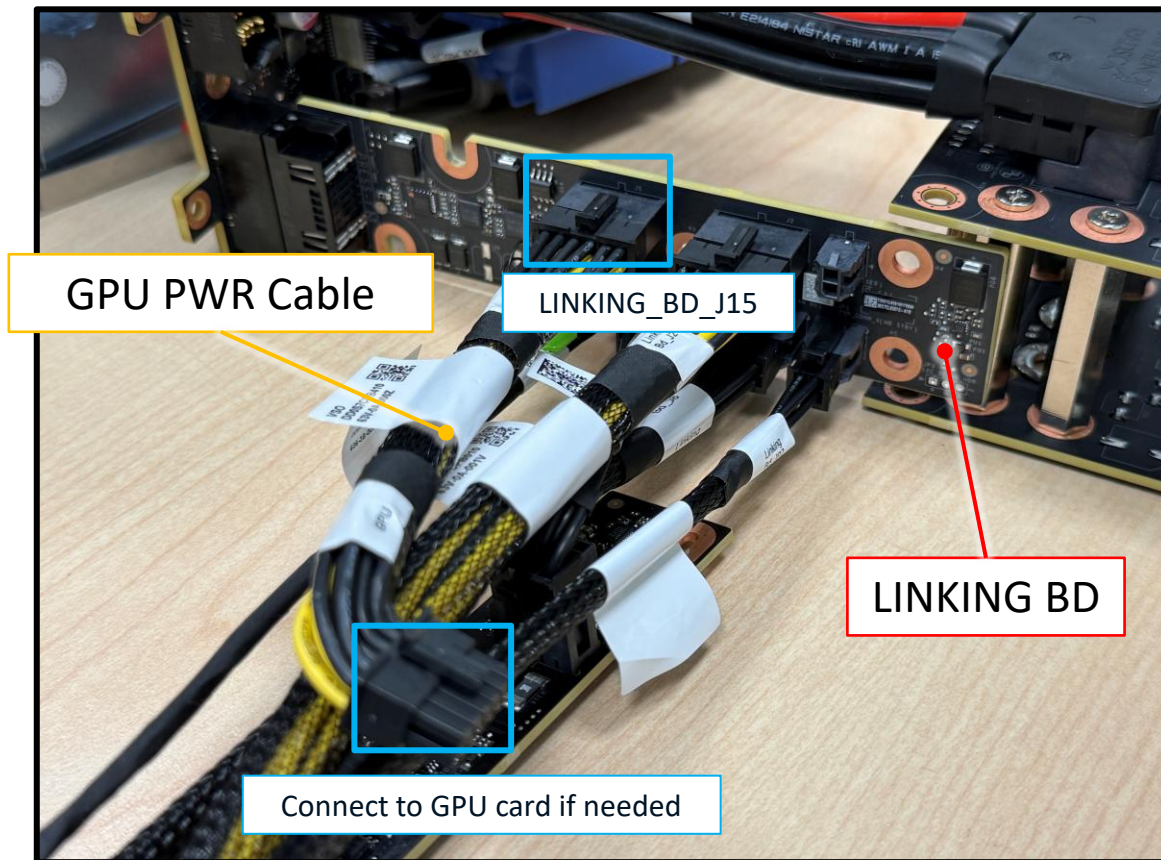


Assemble the cables for GPU

Connect the Riser Bd Cable to HPM BD (J13, J75) and LINKING BD (JP1).


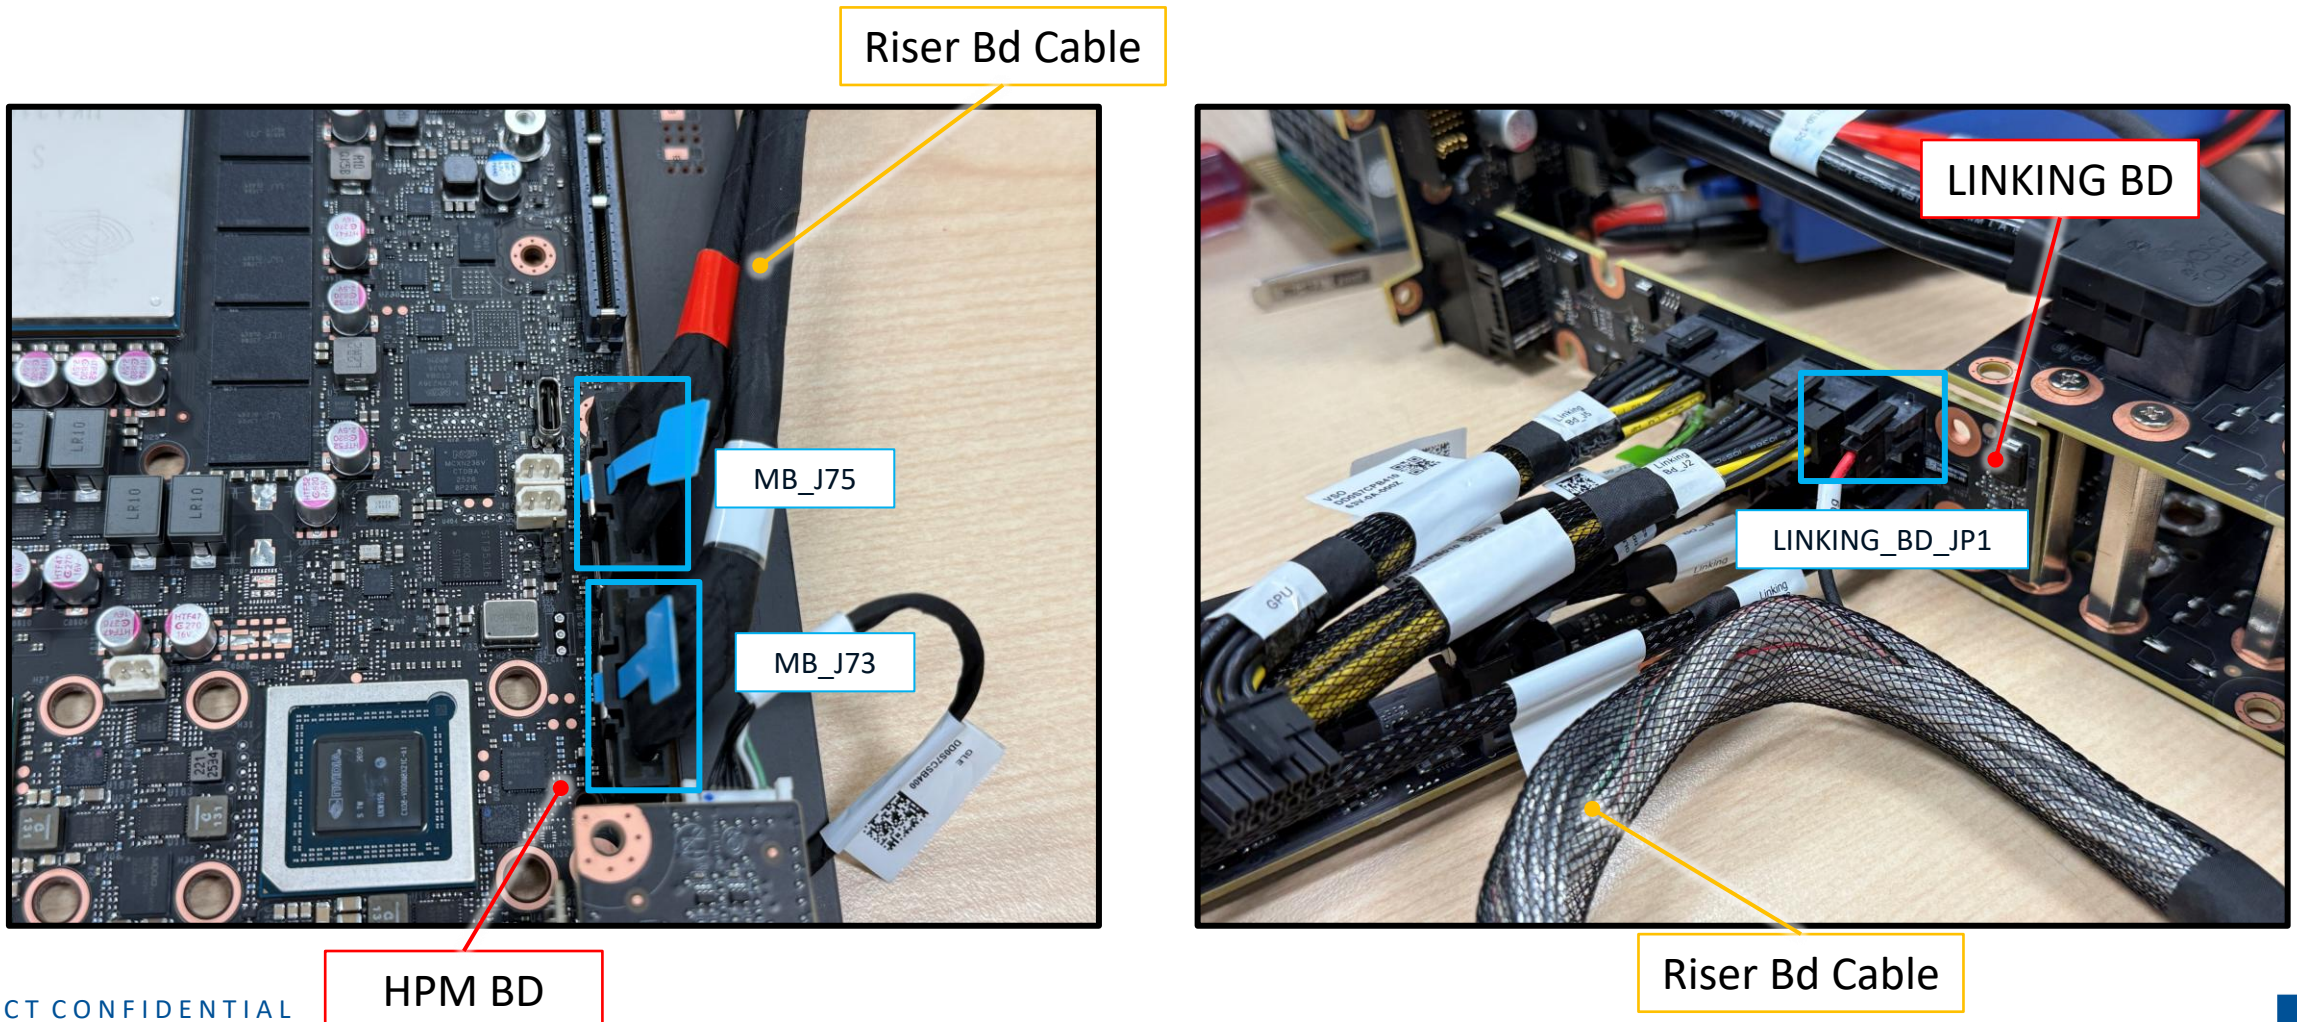


Assembled the cables for GPU

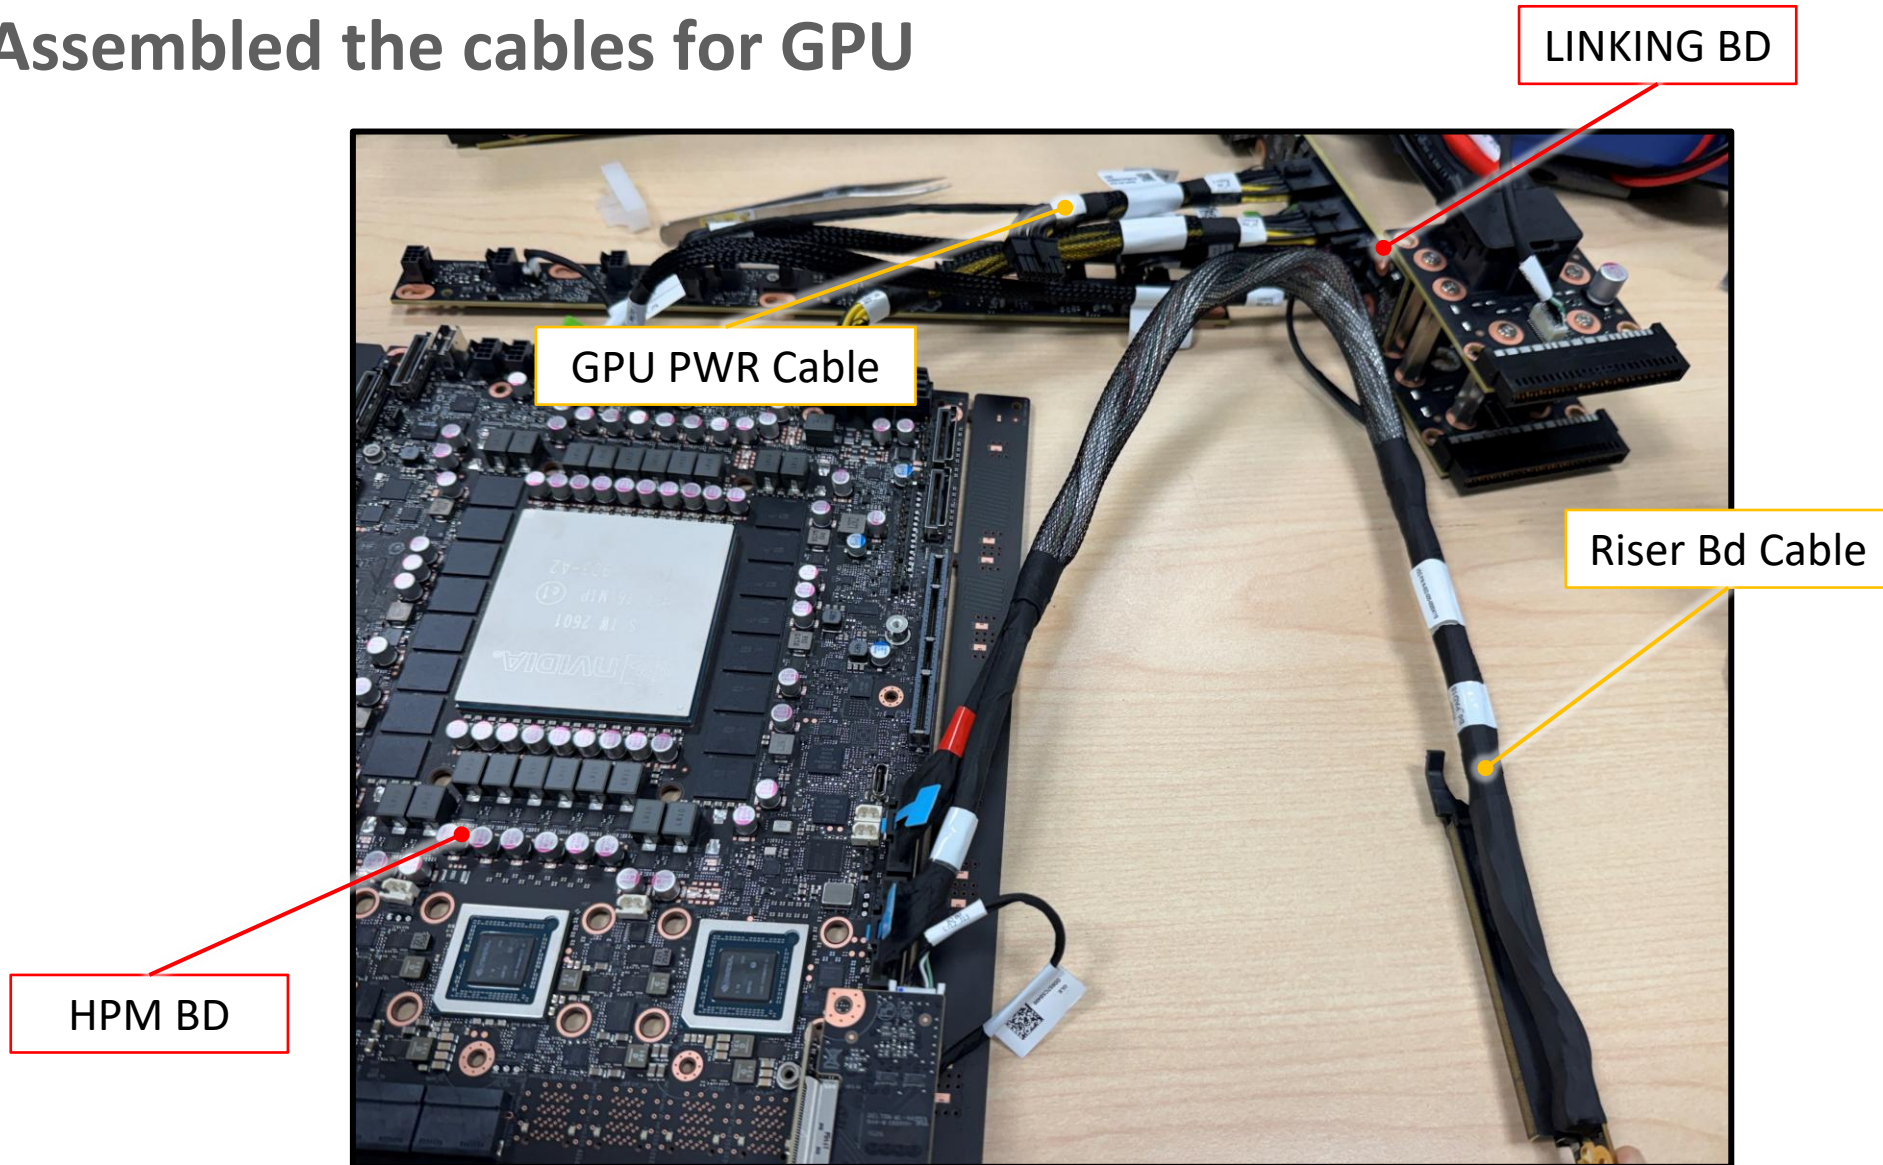


Assemble IO_RJ45 and HPM BD

Connect the IO Sideband Cable between HPM BD (J100) and IO_RJ45 (J26).

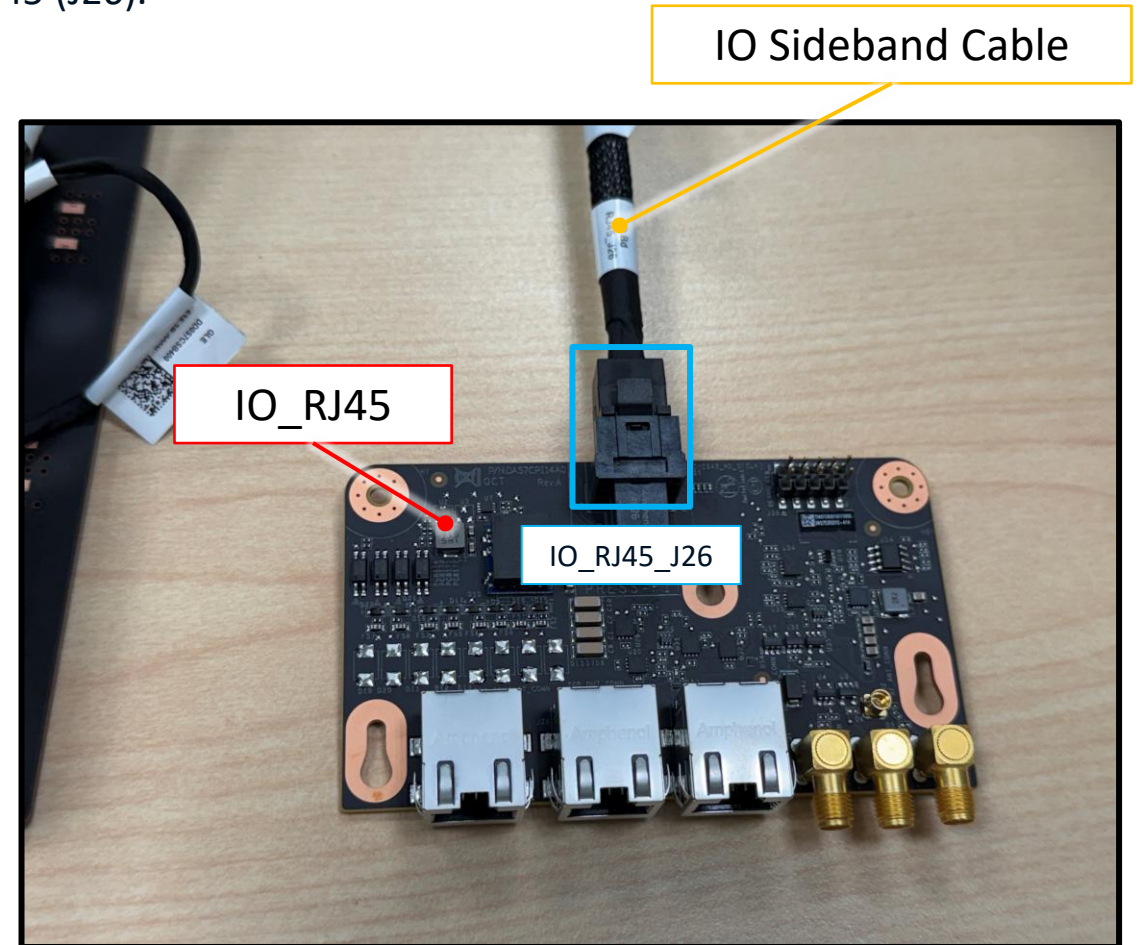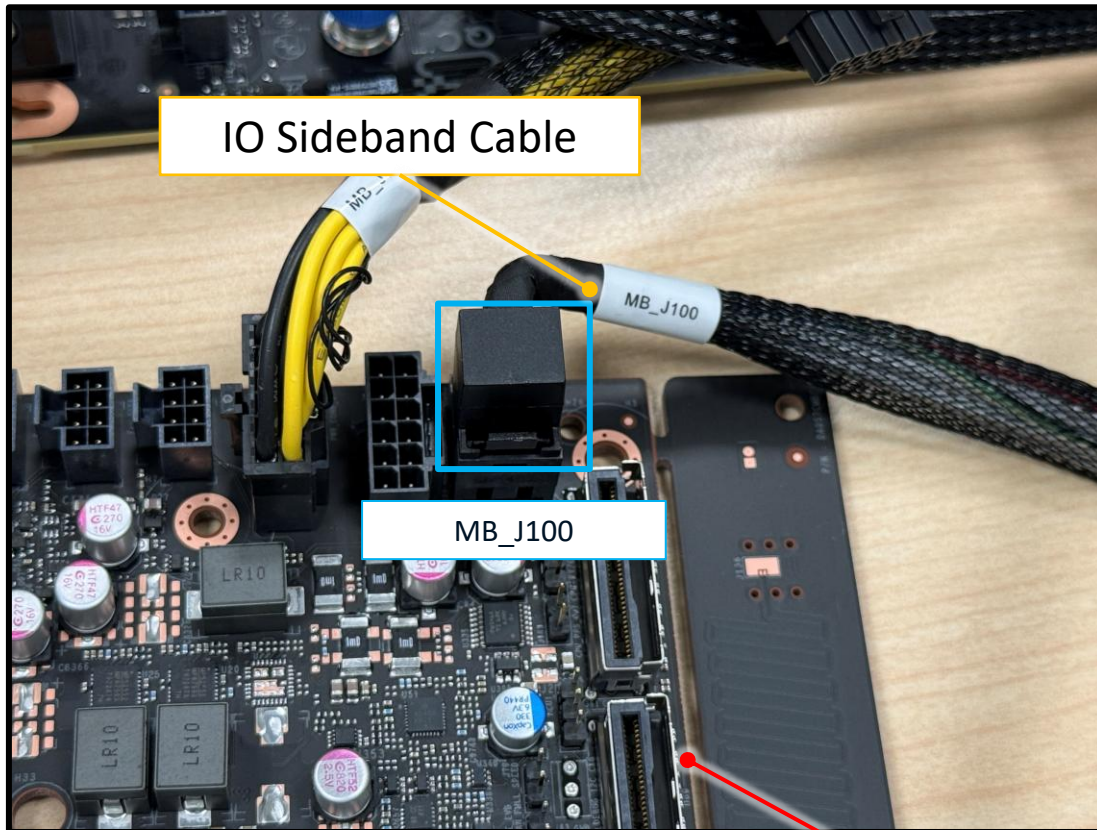

Assembled IO_RJ45 and HPM BD

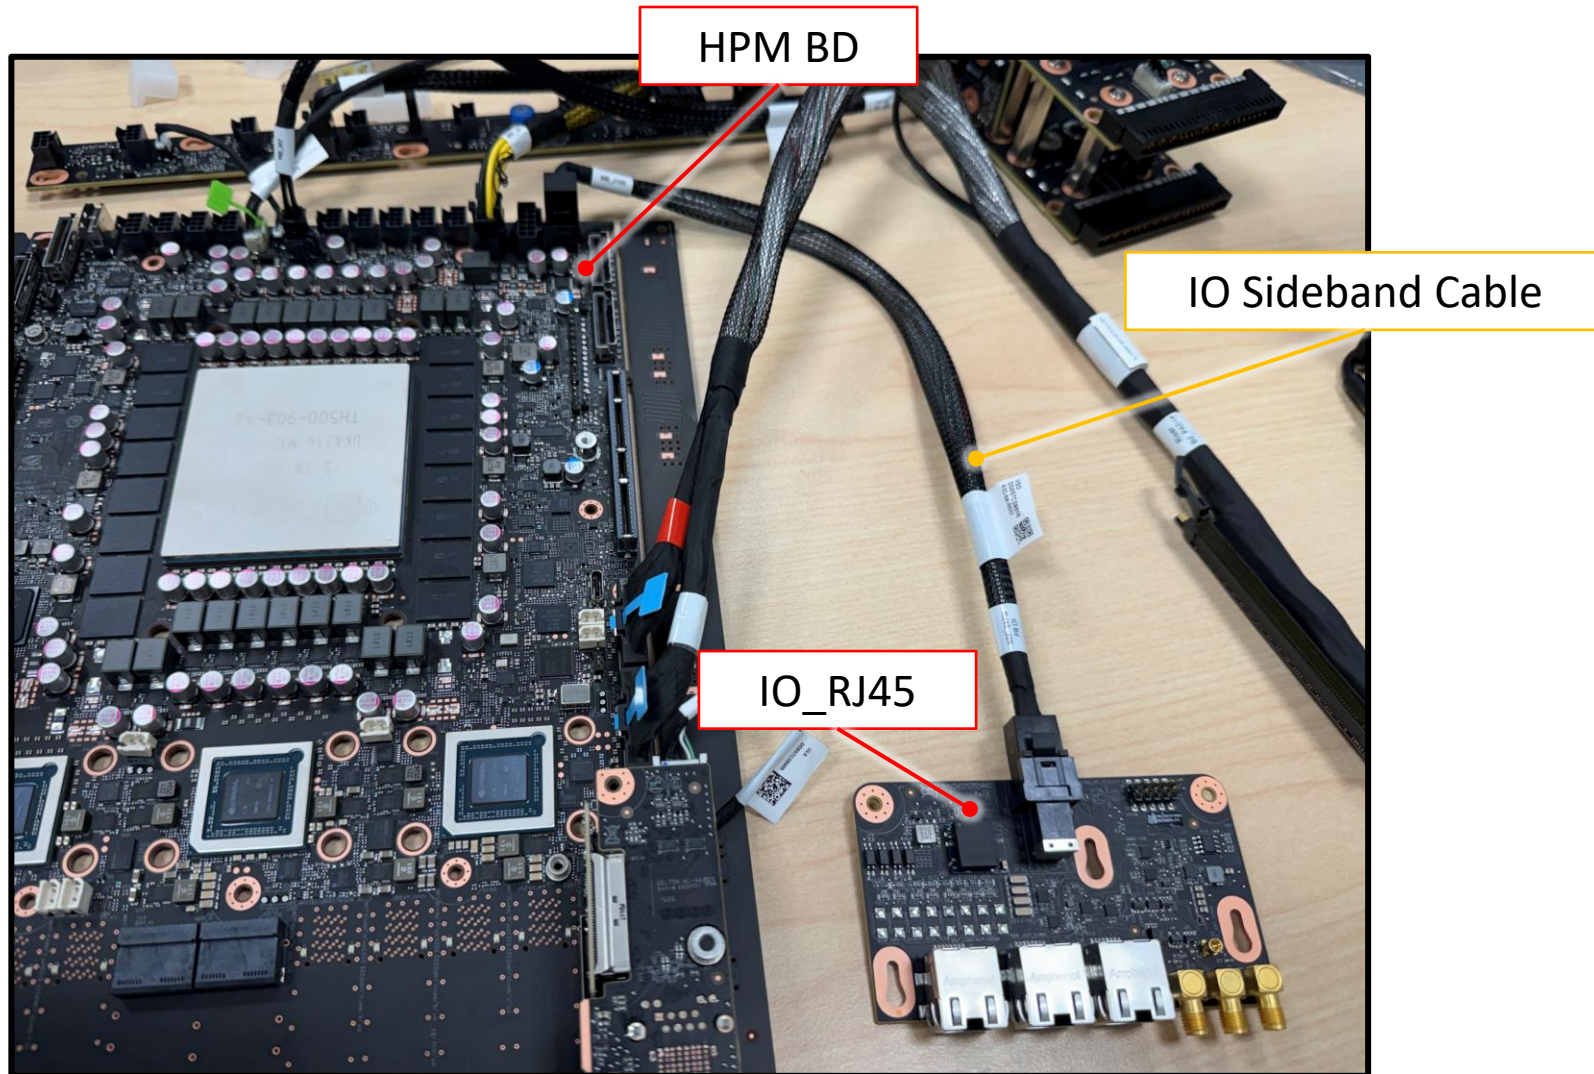



Powered by Intel® Technology.

 **Thank You** 

www.qct.io

