

AMERICAN INTERNATIONAL UNIVERSITY – BANGLADESH(AIUB)


Where leaders are created



INTRODUCTION TO TIMERS

INTRODUCTION

- A timer/counter is like a clock, and can be used to measure time events. The timer can be programmed by some special registers. The controller of the Arduino is the ATmega328 which has 3 timers, called timer0, timer1 and timer2.
- Timer0 and timer2 are **8bit** timers, whereas timer1 is a **16bit** timer. The most important difference between 8bit and 16bit timer is the **timer** resolution.
- 8-bit timer is capable of counting 28=256 steps from 0 to 255. 16 bit timer is capable of counting 216=65536 steps from 0 to 65535.

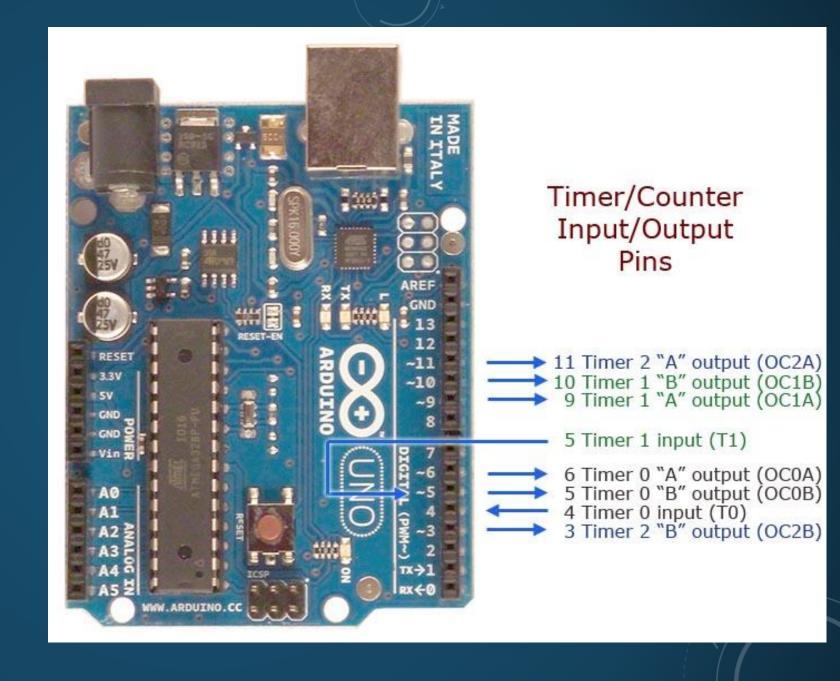

USEFULNESS OF TIMER:



- Timer is an important concept in the field of electronics. Every electronic component of a sequential logic circuit works on a time base to keep all the work synchronized.
- An advantage of the timer is that it is totally independent of the CPU. Thus, it runs
 parallel to the CPU and there is no CPU's intervention, which makes the timer quite
 accurate.
- This is why using a timer is preferred for long delays instead of simply using the delay() function. The drawback of delay() is that your loop gets halted, and functions above and below the delay() are not being executed during this interval.
- A timer approach is a little harder to implement but the main loop keeps executing and only excludes the code and functions which a programmer wants to exclude. If the programmer needs multiple tasks to occur at the same time or if the programmers' application requires that you constantly read/save data from inputs, using the delay() function should be avoided.


TIMER BASICS: OVERFLOW



 Due to this counting feature, timers are also known as counters. Once they reach their maximum possible value, the program does not stop executing and the timer count simply returns to its initial value of zero. In such a situation, we say that the timer/counter overflows.

• For example, Timer0 is an 8-bit timer, meaning that it can count up from zero to 28-1, or 255. Once that number is reached, the count resets back to zero and starts counting

again.

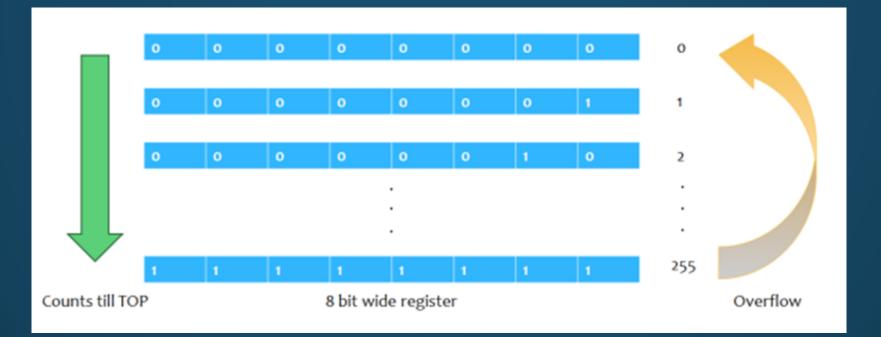

HOW TIMER WORKS:



- Timers on the Arduino count up from zero, incrementing with every clock cycle of the oscillating crystal that drives the Arduino.
- If smaller frequencies are necessary, it is possible to "divide" the clock through an approach called pre-scaling.
- How quickly timer reaches the target count depends on the clock divider. With no divider, the
 clock would go through 16 million cycles per second (16MHz), and would overflow and reset this
 counter many times per second.
- The three timers (called timer0, timer1 and timer2) of Atmega328 can be either operated in normal mode, CTC mode or PWM mode.
- For lab experiment 3 we will operate in normal mode (counter) using <u>Timer0</u>.

Table '	Table 19-9. Waveform Generation Mode Bit Description												
Mode	WGM02	WGM01	WGM00	Timer/Counter Mode of Operation	TOP	Update of OCR0x at	TOV Flag Set on ⁽¹⁾⁽²⁾						
0	0	0	0	Normal	0xFF	Immediate	MAX						
1	0	0	1	PWM, Phase Correct	0xFF	TOP	BOTTOM						
2	0	1	0	СТС	OCRA	Immediate	MAX						
3	0	1	1	Fast PWM	0xFF	BOTTOM	MAX						
4	1	0	0	Reserved	-	-	-						
5	1	0	1	PWM, Phase Correct	OCRA	TOP	BOTTOM						
6	1	1	0	Reserved	-	-	-						
7	1	1	1	Fast PWM	OCRA	BOTTOM	TOP						





- The timer can be programmed by some special registers, where we can configure the
 pre-scaler for the timer, or the mode of operation and many other things necessary for
 proper operation.
- The registers of interest for our purposes are:
 - Timer/Counter Register TCNT0 : to store timer count
 - Timer/Counter Control Register TCCR0A and TCCR0B: to define operation mode and pre-scaler
 - Timer/Counter Interrupt Flag Register— TIFR0: to observe if there is any overflow
 - Output Compare Register OCR0A and OCR0B: to match the timer count with some custom value (for CTC or PWM mode, not needed for normal mode)

TIMER BASICS: REGISTERS (TIMER0)



Timer/Counter Control Register A – TCCR0A: The bits WGM02 (from TCCRB),
 WGM01 and WGM00 decide which mode the timer will run on.

Bit	7	6	5	4	3	2	1	0	_
0x24 (0x44)	COM0A1	COM0A0	COM0B1	COM0B0	_	_	WGM01	WGM00	TCCR0A
Read/Write	R/W	R/W	R/W	R/W	R	R	R/W	R/W	
Initial Value	0	0	0	0	0	0	0	0	_

Ignore for now (related to PWM)

Set timer mode

Set prescaler

• Timer/Counter Control Register B – **TCCR0B**: The three Clock Select bits CS02, CS01, CS00 select the clock source and prescalar value to be used by the Timer/Counter.

0x25 (0x45) FOC0A FOC0B - - WGM02 CS02 CS01 CS00 TCCR0B Read/Write W W R R R/W R/W R/W R/W Initial Value 0 0 0 0 0 0 0	 Bit	7	6	5	4	3	2	1	0	_
	0x25 (0x45)	FOC0A	FOC0B	-	-	WGM02	CS02	CS01	CS00	TCCR0B
Initial Value 0 0 0 0 0 0	Read/Write	W	W	R	R	R/W	R/W	R/W	R/W	
	Initial Value	0	0	0	0	0	0	0	0	

Set timer mode



TIMER BASICS: REGISTERS (TIMERO)

	CS02	CS01	CS00	Description
/	0	0	0	No clock source (Timer/Counter stopped)
	0	0	1	clk _{I/O} /(No prescaling)
	0	1	0	clk _{I/O} /8 (From prescaler)
	0	1	1	clk _{I/O} /64 (From prescaler)
	1	0	0	clk _{I/O} /256 (From prescaler)
0	1	0	1	clk _{I/O} /1024 (From prescaler)
	1	1	0	External clock source on T0 pin. Clock on falling edge.
	1	1	1	External clock source on T0 pin. Clock on rising edge.

Please note that if you do not initialize this register, all the bits will remain as zero and the timer/counter will remain stopped.

• Timer/Counter Register – TCNT0: This is where the 8-bit counter of the timer resides. The value of the counter is stored here and increases/decreases automatically. Data can be both read/written from this register. The register resets to zero after each overflow.

Bit	7	6	5	4	3	2	1	0				
0x26 (0x46)		TCNT0[7:0]										
Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W				
Initial Value	0	0	0	0	0	0	0	0	/			

TIMER BASICS: REGISTERS (TIMER0)



• Timer/Counter Interrupt Flag Register-TIFR0: TOV0 bit is set (one) whenever TIMER0 overflows.

Bit	7	6	5	4	3	2	1	0	
0x15 (0x35)	_	-	-	_	-	DCF0B	OCF0A	TOV0	TIFR0
Read/Write	R	R	R	R	R	R/W	R/W	R/W	_
Initial Value	0	0	0	0	0	0	0	0	

- Output Compare Register OCR0A and OCR0B: Both Output Compare Registers A and B contain 8-bit values that are continuously compared with the counter value (TCNT0).
- The OCF0A or OCF0B bit in TIFR register is set (one) whenever the count matches the stored value.

Bit	7	6	5	4	3	2	1	0	_
0x27 (0x47)				OCR0.	A[7:0]				OCR0A
Read/Write	R/W	R/W	R/W	R/W	R/W	RW	RW	R/W	
Initial Value	0	0	0	0	0	0	0	0	
Bit	7	6	5	4	3	2	1	0	_
0x28 (0x48)	OCR0B[7:0]								
Read/Write	R/W	R/W	R/W	RW	R/W	R/W	R/W	R/W	•
Initial Value	0	0	0	0	0	0	0	0	

TIMER BASICS: REGISTERS (TIMER1)

- Most of the registers are very similar to Timer0.
- Timer/Counter Register TCNT1H and TCNT1L (TCNT1): The main difference between Timer0 and Timer1 is in the <u>timer/counter register</u>. The two Timer/Counter I/O locations (TCNT1H and TCNT1L, combined TCNT1) give direct access, both for read and for write operations, to the Timer/Counter unit 16-bit counter. The register resets to zero after each overflow.

Bit	7	6	5	4	3	2	1	0			
(0x85)				TCNT'	1[15:8]				TCNT1H		
(0x84)		TCNT1[7:0]									
Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W			
Initial Value	0	0	0	0	0	0	0	0			

- Other differences include:
- The output compare registers are also 16 bit and made up from two 8-bit registers.
- There is an extra Input Capture Register.
- There are several extra modes Timer1 can run on.



TIMER BASICS: TERMINOLOGY

- Definitions of some commonly used terms in Timer:
- BOTTOM: The counter reaches the BOTTOM when it becomes 0x00.
- MAX: The counter reaches its maximum when it becomes 0xFF (decimal 255) in Timer0 and 0xFFFF (decimal 65535) in Timer1.
- TOP: The counter reaches the TOP when it becomes equal to the highest value in the count sequence. The TOP value can be assigned to be the fixed value (MAX) or the value stored in the OCRnA or OCRnB Register. The assignment is dependent on the mode of operation.






- The simplest mode of operation is the Normal mode. In this mode the counting direction is always up (incrementing), and no counter clear is performed.
- The counter simply overflows when it passes its maximum value and then restarts from zero.
- In normal operation the Timer/Counter Overflow Flag (TOV0) will be set in the same timer clock cycle as the TCNT0 becomes zero.

TIMER MODES: CTC MODE

- In Clear Timer on Compare or CTC mode, the counter is cleared to zero when the counter value (TCNT0) matches either a value stored in OCR0A register.
- When the wanted value is reached a flag in a status register is set to '1'.
- This method can be more efficient than comparing bytes to detect a match as checking a single flag is simpler.

Counter Unit

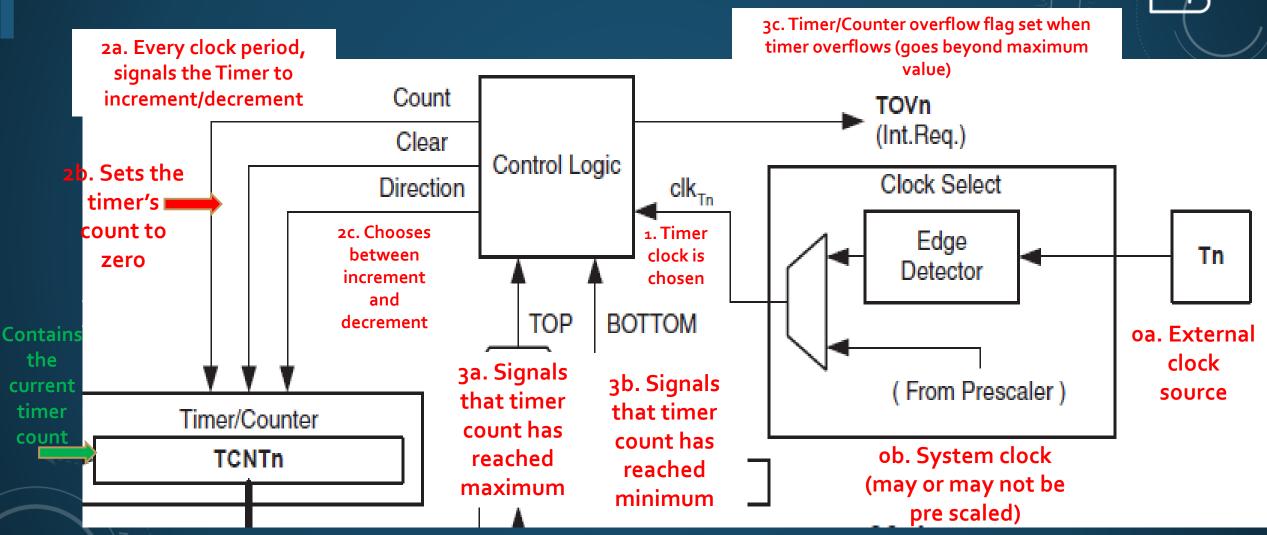


Red: signals entering/exiting a block Green: description of a block


Output Compare Unit

Red: signals entering/exiting a block (Normal mode)

Blue: signals entering/exiting a block (CTC/PWM mode)


Green: description of a block

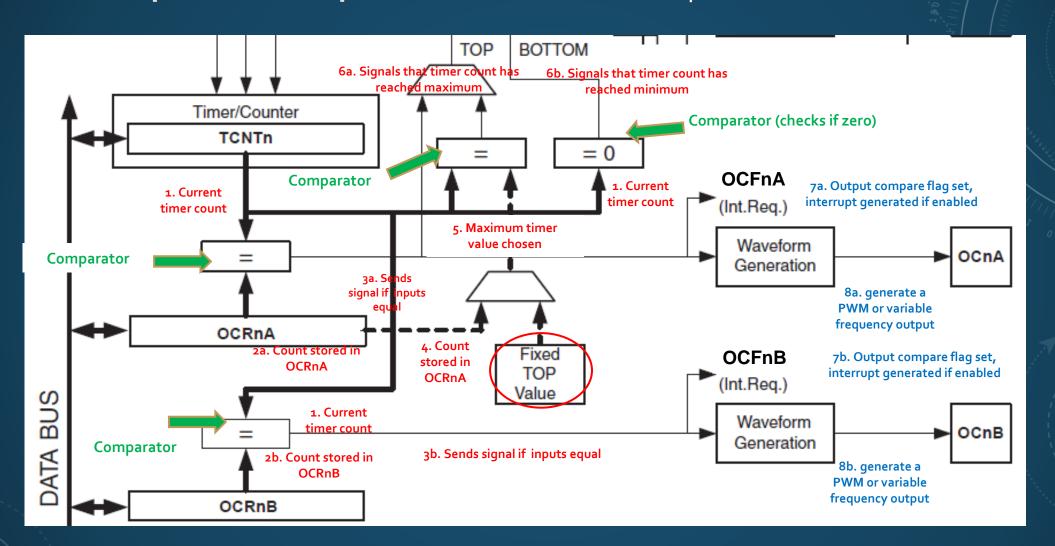

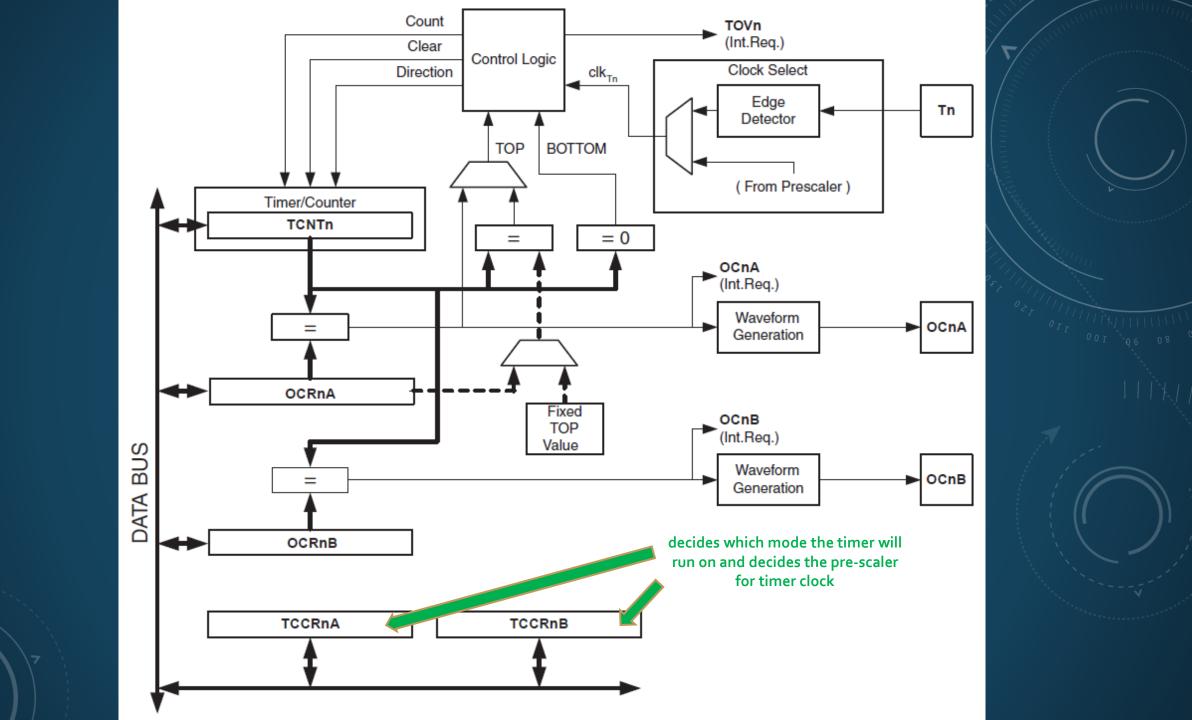

TIMER FOR DELAY: CALCULATING COUNT

- Timer needs a clock pulse for each transition from one number to the next, so we want
 to establish a formula relating the necessary timer count for a specific delay with the
 timer clock period/frequency.
- For F_CPU = 16 MHz, system clock period = 1/16M = 62.5 ns. So, if timer clock is the same as system clock, it takes only 62.5 ns for every transition (0 to 1, 1 to 2, etc.).

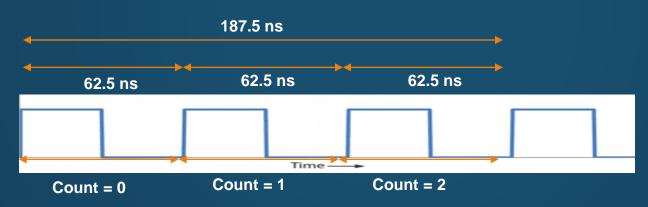

- We can see that 3 time periods are needed to count to 2, so timer count = (number of periods needed to reach the count) -1.
- Also, we can see that to get a delay of 187.5 ns, we need 3 periods lasting 62.5 ns, so
 the number of periods needed = Required delay/Timer clock period.

TIMER FOR DELAY: CALCULATING COUNT (WITHOUT PRESCALER)



 Suppose we need a delay of 1 ms. To get an idea of how long it takes, let's calculate the timer count from the following formula:

$$Timer\ count = \frac{Required\ delay}{Timer\ clock\ period} - 1$$

Or, $Timer\ count = (Required\ delay \times System\ clock\ frequency) - 1$

Here required delay = 1 ms and timer clock period = 62.5 ns, so Timer Count = (1m/62.5n)-1= 15999.

- So, the clock needs to tick **15999 times** to give a delay of only 1 ms.
- Maximum possible delay for timer0 at 16MHz: 62.5 ns * 256 = 16μs
- Maximum possible delay for timer1 at 16MHz: 62.5 ns * 65536 = 4.096 ms
- If we plan to get delays simply by directly counting at system frequency, it is difficult to use an 8-bit timer (as it has an upper limit of 255, after which it overflows and resets count to zero). Even with a 16-bit timer (which is capable of counting up to 65535), it is not possibly get longer delays.

TIMER FOR DELAY: CALCULATING COUNT (WITH PRESCALER)



• To stay in the safe side, we use the highest available prescalar and reduce timer clock frequency to 16M/1024 = 15625Hz, with a new timer clock period (= System clock period * prescalar)= 62.5ns*1024= 64 μs. Now the needed timer count = (1m/64 μ) -1 = 15.6249.Now that Timer clock frequency = System clock frequency/ prescalar, we can update the equation to:

$$Timer\ count = \frac{Required\ delay \times System\ clock\ frequency}{prescalar} - 1$$

- Maximum possible delay for timer0 at 15625Hz: 64µs * 256 = 16.384ms
- Maximum possible delay for timer1 at 15625Hz: 64µs * 65536 = 4.194304 s
- To get longer delays, we will use timer1, and for delays longer than 4s, nested if statements can be used.

OSCILLATING OPTIONS


Every microcontroller needs a clock source. The CPU, the memory bus, the peripherals—clock signals are everywhere inside a microcontroller. They govern the speed at which the processor executes instructions, the baud rate of serial-communication signals, the amount of time needed to perform analog-to-digital conversion, and so much more.

All these clocking actions go back to the source of the clock signal, namely the oscillator. Therefore, the oscillator must be able to provide the desired performance from the microcontroller. Though some oscillator options are more complex or expensive than others, so the choice of oscillator should reflect the importance of reducing cost and complexity whenever possible. CPU clock speed is a good indicator of the processor's performance. In general, a higher clock speed means a faster CPU. A CPU with a clock speed of 3.2 GHz executes 3.2 billion cycles per second.

6 June 2023


System Clock Options

The block diagram represents the principal clock systems in the AVR and their distribution. All the clocks need not be active at a given time. To reduce the power consumption, the clocks to modules not being used can be halted by using different sleep modes.

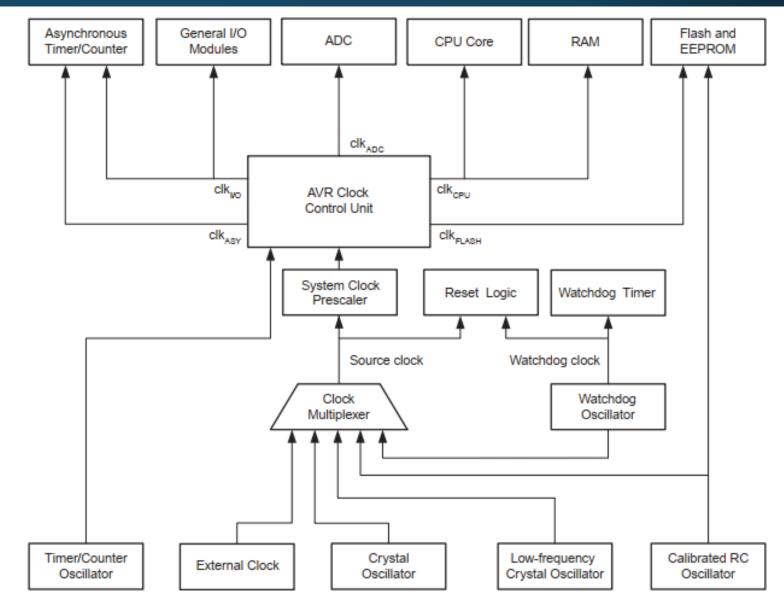

Problem Statement 1

Make an LED blink every 2 milliseconds while using Arduino system frequency (F_CPU) 16 MHz, using timer to generate the delay without any application of delay() function. Delay = 2 ms, so Timer0 can be used with pre-scalar 1024. Number of count needed to reach 2 ms = $(2,000 \mu s/64 \mu s) - 1 = 30.25 \approx 31$.

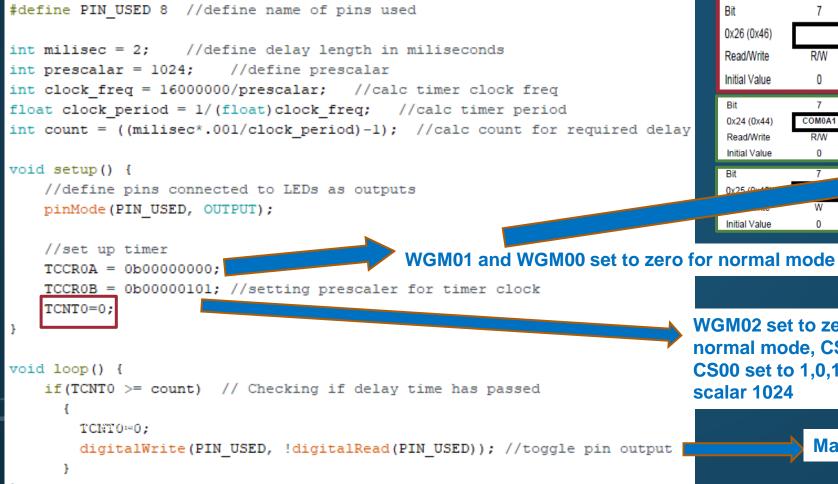

Bit	7	6	5	4	3	2	1	0	
0x26 (0x46)				TCNT	0[7:0]				TCNT0
Read/Write	R/W	R/W	R/W	R/W	R/W	RW	R/W	R/W	
Initial Value	0	0	0	0	0	0	0	0	
Bit	7	6	5	4	3	2	1	0	
0x24 (0x44)	COM0A1	COM0A0	COM0B1	COM0B0	-	-	WGM01	WGM00	TCCR0A
Read/Write	R/W	R/W	R/W	R/W	R	P	R/W	R/W	' I
Initial Value	0	0	0	0			0	0	
Bit	7	-			3	2	1	0	
0x25 (0x45)			_	-	WGM02	C\$02	CS01	C\$00	TCCR0B
	W	W	R	R	R/W	R/W	R/W	R/W	'
Initial Value	0	0	0	0	0	0	0	0	

WGM02 set to zero for normal mode, CS02, CS01 CS00 set to 1,0,1 for prescalar 1024

Make LED blink

PROBLEM STATEMENT 2

- Make an LED blink every 2 seconds while using Arduino system frequency (F_CPU)
 16 MHz, using timer to generate the delay without any application of delay() function.
- Delay = 2 s, so Timer1 can be used with prescalar 1024.
- Number of count needed to reach $2s = (2/64 \mu)-1=31249$

Code:


Same code, only register names have 1 instead of 0 and delay length changed!

```
#define PIN USED 8 //define name of pins used
int milisec = 2000: //define delay length in miliseconds
int prescalar = 1024; //define prescalar
int clock freq = 16000000/prescalar; //calc timer clock freq
float clock period = 1/(float)clock freq; //calc timer period
int count = ((milisec*.001/clock period)-1); //calc count for required delay
void setup() {
    //define pins connected to LEDs as outputs
    pinMode(PIN USED, OUTPUT);
                              Set-up registers are 8-bits even the Timer is 16-bit
    //set up timer
    TCCR1A = 0b00000000;
    TCCR1B = 0b00000101; //setting prescaler for timer clock
   TCNT1=0;
                            Bit
                                                   TCNT1[15:8]
                                                                          TCNT1H
                            (0x85)
                            (0x84)
                                                   TCNT1[7:0]
                                                                          TCNT1L
                            Read/Write
                                                       R/W
                            Initial Value
void loop() {
    if (TCNT1 >= count) // Checking if delay time has passed
        TCNT1=0:
        digitalWrite(PIN USED, !digitalRead(PIN USED)); //toggle pin output
```

QUESTIONS

Q1. Prepare the necessary registers associated with the 8-bit timer to achieve the necessary time counts. Consider the timer to be running at normal mode with highest prescaling.

Answer:

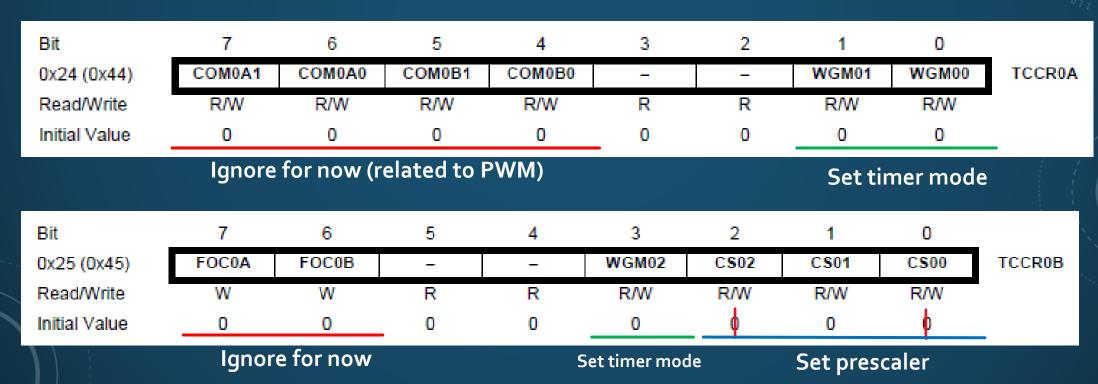

PROBLEM

Q1. In a data analysis firm, a performance-checking system has been designed centered around an Arduino Uno platform which performs a refresh operation in the cache memory at a specified time interval. It was found that the Timer modules in the Arduino platform are perfect candidates to trigger this refresh operation periodically. Apply the knowledge of Arduino to compute the required timer counts for the following time intervals required for the refresh operation: 3 s and 40 ms. The available timers are Timer0, an 8-bit timer, and Timer1, a 16-bit timer. Assume that the Arduino system clock has been set at 16 MHz and the available prescalers in the system are 1, 8, 64, 256, and 1024. Considering the given information, comment on whether the required delays can be implemented using Timer0 or not.

Q2. If malware is found in the system, the system is designed to sound an alarm every 4s. This 4s count has to be achieved from a timer directly (without the help of a loop). Select an appropriate timer from the 2 available timers and set up the necessary registers associated with the used timer to achieve the 3s time count. You may consider the clock frequency and Prescaler values mentioned in 1(a). Additionally, compute the maximum possible time which can be counted using this timer.

REFERENCES

- ATMega328 manual
- https://www.avrfreaks.net/forum/tut-c-newbies-guide-avr-timers
- http://maxembedded.com/2011/06/avr-timers-timer0/
- https://cdn.sparkfun.com/assets/c/a/8/e/4/Atmel-42735-8-bit-AVR-Microcontroller-ATmega328-328P_Datasheet.pdf.

THANKS FOR ATTENDING....



