TCA9548A mux + BMI160 on channel 0 - bench wiring

Sheet 2 of 2 - mux is the only device on the ESP32 bus - 2026-10-21 - ESP32-S3 DevKitC-1 N16R8 - 100 kHz

MUX / 0x70 + 0x68-0x69

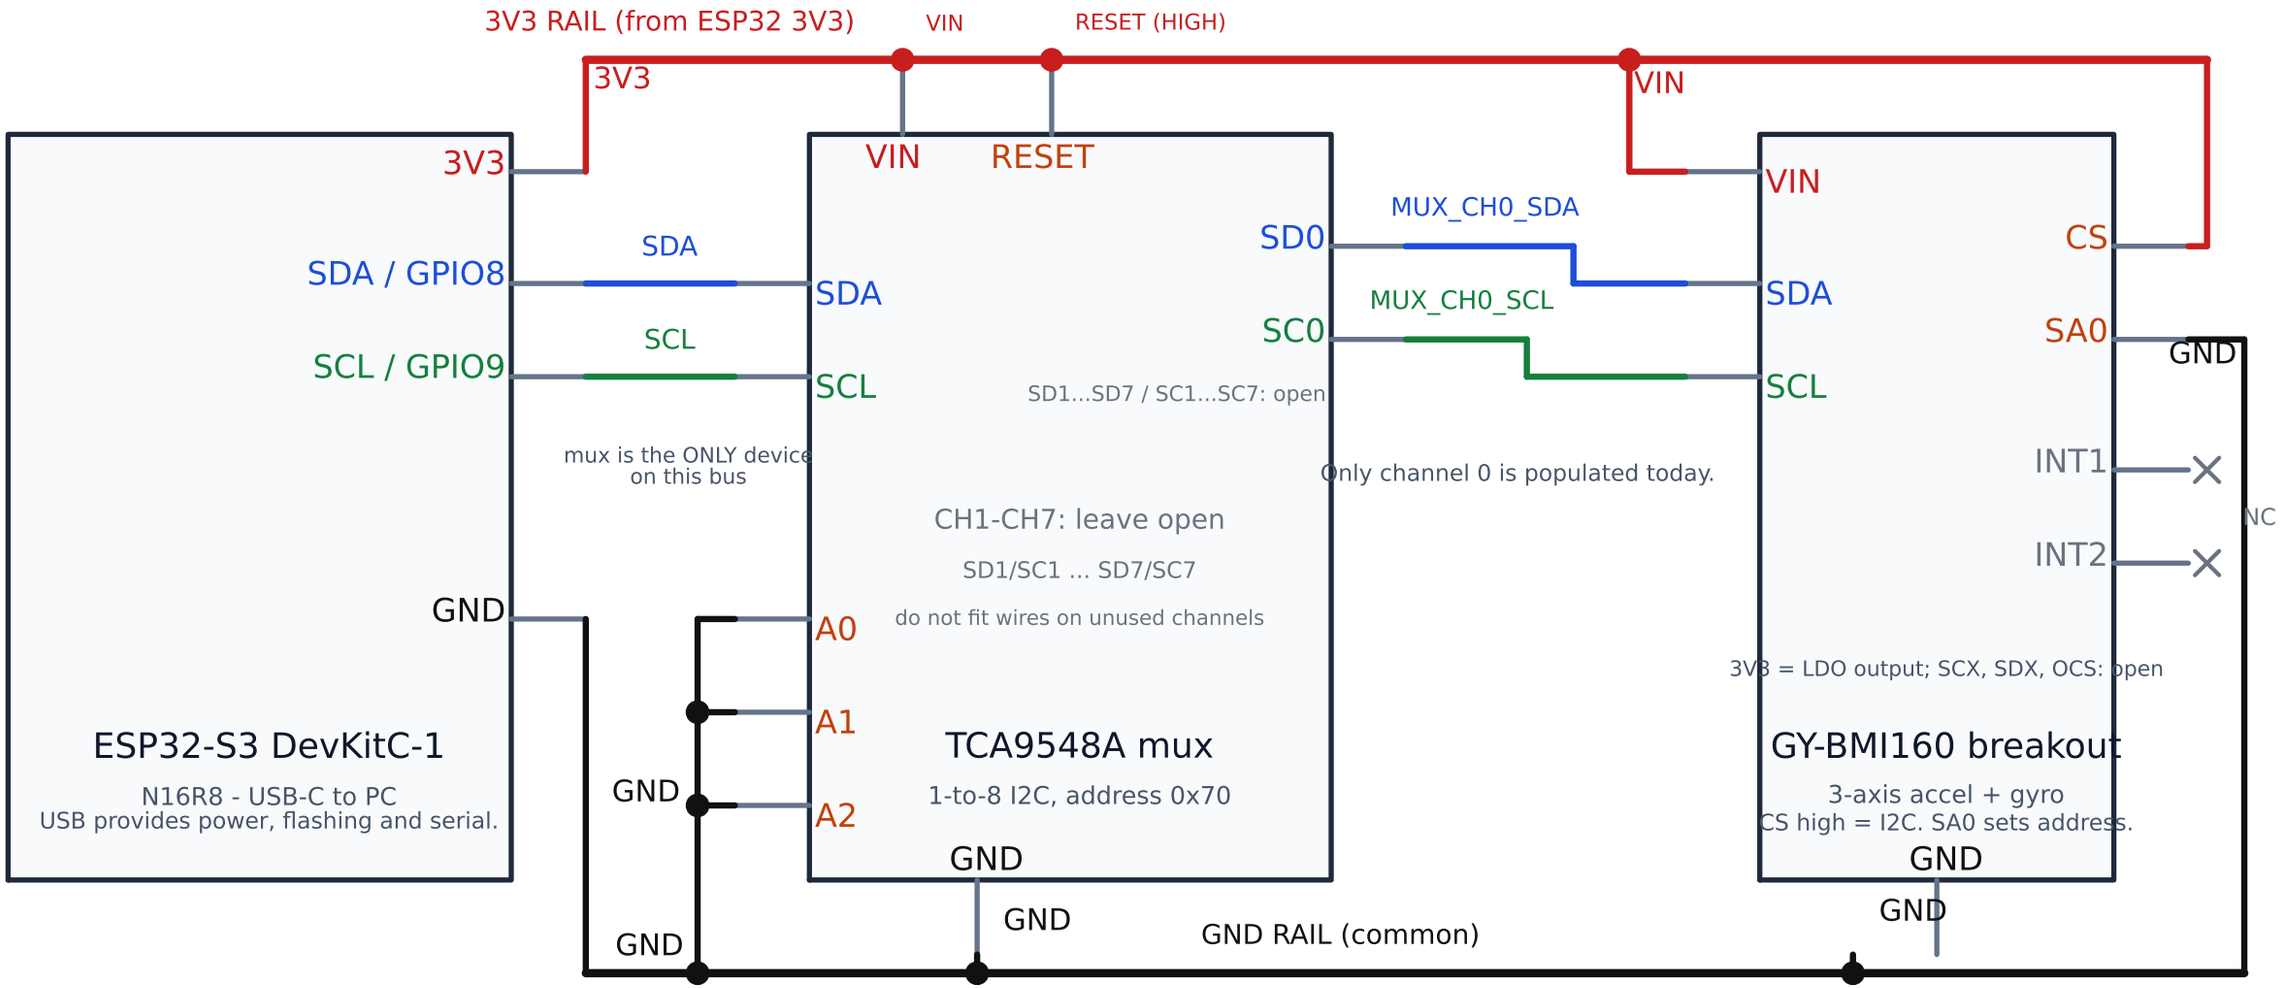

OPTIONAL - not needed for first power-up. Pull-ups: trunk only if the mux board has none.

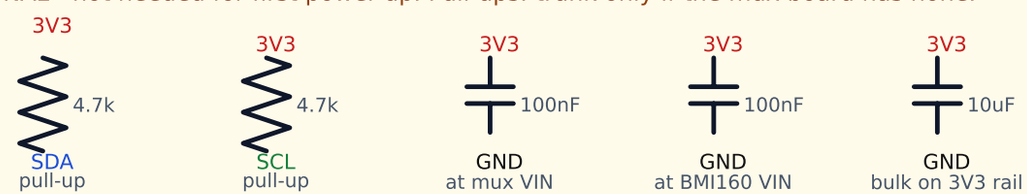

BEFORE YOU POWER UP

- Mux = 0x70 only when A0, A1 and A2 are all GND.
- RESET must be HIGH (3V3); floating resets the mux.
- CH0 only: SD0/SC0 -> BMI160 SDA/SCL.
- CH1-CH7: SD1/SC1 ... SD7/SC7 leave open.
- Do NOT wire the direct sensor at the same time.

USB connected? Verify 3V3-GND is NOT shorted before plugging in.

Unplug USB before changing wires. Direct and mux configurations are alternatives - never wire both.