


ENAMELED CAST IRON KITCHEN AND BAR SINKS

Instruction Guide

CAUTION:

Read all instructions carefully before starting the installation.

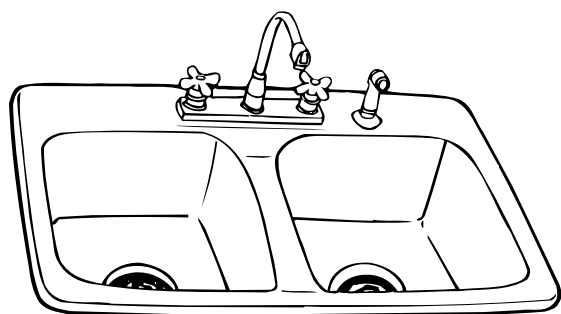

EASY-TO-FOLLOW GUIDE FOR OLD SINK REMOVAL, HOME INSTALLATION, AND MAINTENANCE

HOW THIS GUIDE WILL HELP YOU

This guide describes everything you need to know about installing your new sink. It includes drawings and descriptions of its parts. Before you begin, examine all parts and the drawings in this guide. If you read the instructions first, you will know what tools and materials you should have ready during installation.

Please handle all parts carefully to prevent scratches or breakage.

READ INSTRUCTIONS FIRST!

BEFORE YOU BEGIN

If you are installing your sink in a new or remodeled kitchen, you should make sure that you are in compliance with all local plumbing codes.

The rough-in information shown on the template enclosed with your sink will be helpful in placing the sink, water supply piping, shut-off valves, and drains in their proper positions.

REMOVING YOUR OLD SINK

1. Turn off the water supply. This is done by closing the two shut-off valves located under the sink.

If there are no shut-off valves leading to the sink, you must turn off the water at the main valve. This is usually located in the basement, garage, or near the foundation on the outside of the house. It may also be near the water meter.

Check to be sure the water is off by turning on the faucet where you are working until the water stops flowing.

If you have shut off the main valve in a two-story house or greater, you should open another faucet on the same level. Water will then drain from the entire line. This will help avoid spills. Be sure and close the faucets before you turn on the main valve again.

2. Disconnect the drain pipes. Take off as many sections as possible between the sink and the wall or floor to facilitate removal of the sink.

Place a basin under the work area to catch any water that may still be in the drain.

3. Before removing anything else, check to see if the pipes in the wall are providing support for the sink. If this is the case, use care in removing the faucet connections. The sink may fall once the faucet is disconnected, so have a helper hold it up while you work.

Detach the faucet from the shut-off valves by unscrewing the compression nut at the joints between the valves and the water supply tubes.

If the connection is corroded, you may need to cut off the nut with a hacksaw. If there is no nut or shut-off valve, use a tube cutter or hacksaw to separate the faucet from the water supply tubes. Keep the basin and sponge handy for water that remains in the pipe and faucet.

CAUTION: HANDLE WITH CARE

Your new sink is finished to an attractive high gloss. It may also be very heavy, possibly requiring two people to lift it. To protect the finish and avoid possible damage before and after installation, please handle your sink with care. Place the sink on a thick bed of newspapers when working on it before installation. Also, line the inside of your sink with newspapers until the job is done.

INSTALLING YOUR NEW SINK

NOTE: For self-rimming models, follow steps 4, 5, 6, 8, 9, 11, 12, 14, 15, 16; for models requiring a metal mounting frame (not provided) use steps 4, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16. **(THE TEMPLATE DOES NOT APPLY WHEN USING MOUNTING FRAME.)** Some installation steps will be used twice for double bowl sinks or three times for triple bowl sinks.

4. Once you have completed your countertop and determined the general location of your new kitchen sink, you are ready to cut the opening into which it will be placed.

5. A corrugated/paper template has been provided to help you cut an accurate opening. Select the template outline for your specific sink model and cut it from the template sheet. Place the template on the countertop.

6. Normally you will want your sink to be centered between the front edge of the counter and the backsplash. If your counter is more than 24" front to back, you may place the sink 2" to 3" from the counter edge. The minimum distance from the sink to the front of the counter should be 1 1/2". Be sure to take the sink rim into account when making your measurements.


7. Measure across the metal mounting frame from side to side to locate its center. Mark this on the front of the frame. Move the frame to the desired position and mark the location of the centerline on the countertop. Measure the distance from the centerline to the nearest side wall or the end of the counter.

TOOLS AND MATERIALS

You can determine which tools and materials are necessary by reading the complete installation instructions and examining the job you have to do.

These are normally needed:

scissors/utility knife
sponge
basin or pail
tape measure
flat blade screwdriver
emery cloth
hammer
saber saw
drill
metal basket strainer (double bowl sinks require two, triple bowls sinks require three)
adhesive sealant
cardboard, newspapers or a dropcloth
Plumbers Putty

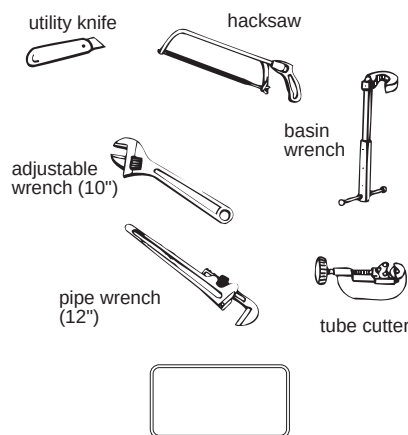

metal mounting frame with eight screw clips (for non self-rimming sinks only, provided by others)

The materials listed below are optional. They are only necessary if existing materials are unusable:

Two shut-off valves with 1/2" I.P.S. outlet. (check house piping to determine valve inlet dimension)

1/2" I.P.S. hot and cold water supply tubes with compression nut and ferrule

Drain tail pipe (two for double bowls sinks, three for triple bowl sinks), trap and additional drain pipe as required

Then measure the same distance from the side wall to locate the centerline at the back of the counter.

Line up the frame with the centerline and move it forward or back to its final location. Place a pencil against the outside of the frame as shown in Figure 1. Trace the outline of the frame accurately onto the countertop. The metal frame may have sharp edges. Handle it carefully.

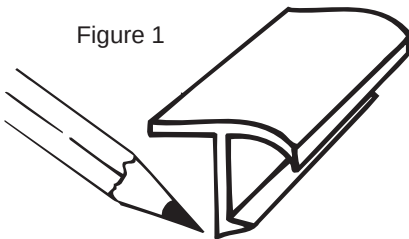


Figure 1

8. Drill a hole inside the line you have drawn. The hole should be large enough to take the blade of a key hole or saber saw. Carefully saw along the line. See Figure 2. Support the piece you are cutting out to prevent splitting when the cut is nearly complete.

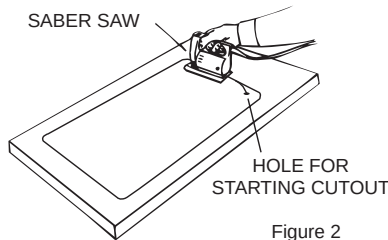


Figure 2

9. It is best to mount the basket strainer and faucet before installing your sink. Be sure to place the sink on a thick bed of newspapers while working on it to prevent scratches.

Put in the basket strainer first. Clean around the drain hole with a damp cloth to remove any dust or other particles that may interfere with a good seal. Remove the washers and nuts from the basket strainer. Pack the underside of the basket with Plumbers Putty and push it firmly in place. Put the large rubber washer over the basket treads from under the sink, followed by the thin washer (may be made of paper, fiber, or metal). Screw the large metal lock nut tightly against the washers. See Figure 3.

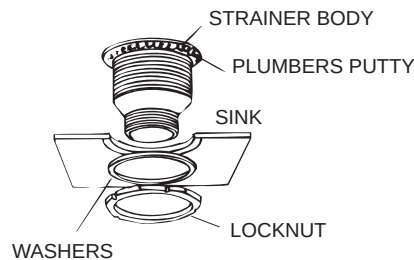


Figure 3

The excess putty that oozes out of the joint should be cleaned off immediately with a soft cloth.

Next attach the faucet according to the manufacturer's instructions. Most of the faucet installation is normally done with the sink upside down. When the faucet is securely in place, attach the new hot and cold water supply tubes to the faucet tubes.

10. Put the metal mounting frame around the sink. Bend the tabs in the frame toward the sink, so that the frame is held to the sink edges all the way around. See Figure 4.

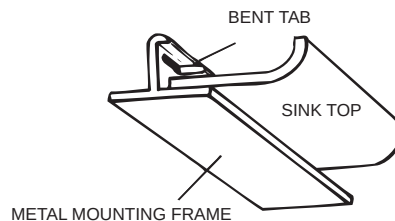


Figure 4

11. Clean the countertop surface around the hole with a damp cloth. Apply a continuous bead of sealant (included with your sink) to the surface around the hole.

12. Carefully place the sink into the hole. A helper may be necessary to lift it into position. Align the sink in the hole, then push downward at intervals all around the edge. This will cause some of the sealant to ooze out. Wipe off the excess immediately with a damp cloth. It will be difficult to remove if allowed to dry.

13. Place two screw clips on each of the four sides of the sink so that the clips lock onto the metal mounting frame as shown in Figure 5. Tighten the screws on the clips evenly all around. Check the edges for additional sealant and remove it immediately with a damp cloth.

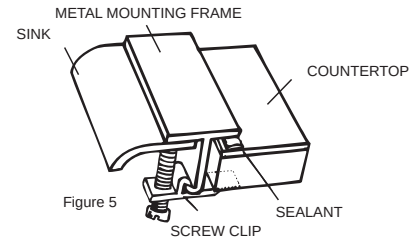


Figure 5

14. Connect the drain tailpiece to the bottom of the basket strainer, then fasten the trap and drain extension to the wall stub-out in the wall. See Figure 6. You may use metal or plastic drain pipe and trap, following the directions

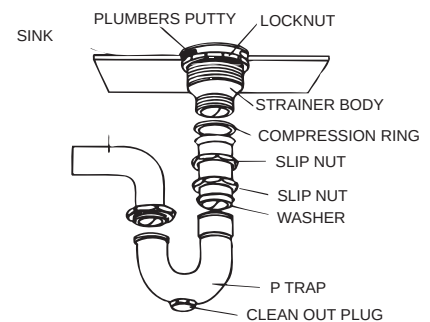


Figure 6

provided by their manufacturer.

15. Use a tube cutter to trim the free ends of the hot and cold supply tubes to at least 1/4" longer than necessary to reach into the outlets of the shut-off valves. It is better to cut the tubes longer than needed, then trim them again. Remove any burrs or sharp edges with an emery cloth.

Join the hot and cold water supplies to the shut-off valves as instructed by the faucet manufacturer.

16. Turn on the main water supply then open the shut-off valves. Check all connections for leaks. A slight tightening of about 1/4 turn will normally stop any leaks.

CARE & CLEANING TIPS ON ENAMELED CAST IRON PRODUCTS

Although cast iron is extremely durable, care must be taken when handling and cleaning. For example, dropping a cast iron tub six inches from a cement floor can result in damage which will fracture the enamel surface. This damage usually manifests itself in the form of chips, shatters, or spiderweb cracks known as "crazing." Blemishes such as stains or some surface specks may be removed with cleansers like BARKEEPERS FRIEND or ZUD cleaner.

To remove silver-wire or aluminum pot marks use BARKEEPERS FRIEND or ZUD. BARKEEPERS FRIEND or ZUD contains oxalic acid and will work well on these marks.

In certain areas where water is hard, a build-up of lime may dull the finish of the product. Restore the shine with a cleansing of BARKEEPERS FRIEND or ZUD. Again, use sparingly and do not scrub.

If rust or dirt accumulates in the PERMA-MAT slip resistant surface of the tub, remove by making a paste of BARKEEPERS FRIEND or ZUD and water and pat on the PERMA-MAT slip resistant surface. Leave on overnight and scrub off the next day.


Surface roughness or "gritty-feel" in a new cast iron product can be eliminated by lightly rubbing with a dry, #600 sandpaper.

For general cleaning use mild soap and warm water. Non-abrasive cleaners are fine. Keep in mind that cleaners containing silica or sand are abrasive and should not be used.

THE TEMPLATE

THIS TEMPLATE IS INTENDED TO BE USED AS A GUIDE ONLY! Manufacturer does not guarantee or in any way warrant installation due to the wide variance of installation practices and other conditions beyond our control.

You should inspect all products for any defects prior to installation.

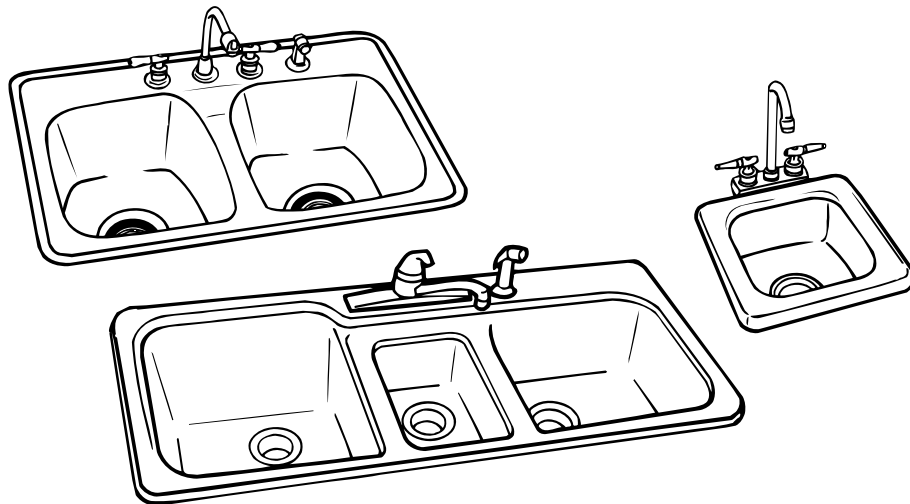

LIMITED WARRANTY

JACUZZI WHIRLPOOL BATH ("Jacuzzi Whirlpool Bath", "we", "us", "our"), warrants to the original consumer/purchaser for the applicable warranty period set forth below, that the products we sell are free from defects in material and workmanship, except as otherwise indicated below.

PRODUCTS	WARRANTY PERIOD
(commences upon date originally installed for its intended purpose)	
• All cast iron sink products with porcelain enamel finish.	Limited lifetime vessel warranty to the original consumer/purchaser only. The porcelain enamel finish is warranted for one (1) year.
• 1.6 gpf/6 ltr. china toilets.	Five (5) years.
• All other china products and kitchen sink accessories.	Two (2) years.
• All toilet seats.	One (1) year.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THESE PRODUCTS IS LIMITED IN DURATION TO THE WARRANTY PERIOD SPECIFIED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This limited warranty does not cover:

- (a) damage to any products based on or resulting from improper installation or repair, misuse or abuse (including but not limited to excessive operating conditions), or alteration or adjustment other than in conformity with our specifications or instructions, whether performed by a contractor, service company or yourself;
- (b) damages resulting from failure to reasonably clean, care for or maintain a product in accordance with our instructions/recommendations; or,
- (c) any products we sell that have been moved or removed from their original installation site.

If you believe that a product fails to meet the above limited warranty, you should notify us in writing prior to expiration of the applicable warranty period set forth above at the following address: **Jacuzzi Whirlpool Bath, PO Box 702168, Dallas, TX 75370-2168**. Notification should include a description of the product, model number and how the product fails to meet the above warranty. Upon receipt of a written claim under this limited warranty and evidence of the date of purchase or installation, and after inspection by an authorized Jacuzzi Whirlpool Bath representative, at our option and in our sole discretion, we will either repair or replace the product with a Jacuzzi Whirlpool Bath product of the same or similar type and size; provided, however, that we will not pay any costs (labor or otherwise) associated with either removing a previously installed product; installing a replacement product; or transportation or return of a product.

JACUZZI WHIRLPOOL BATH WILL NOT BE LIABLE FOR ANY OTHER LOSS OR EXPENSE(S) NOT SPECIFICALLY DESCRIBED ABOVE, AND DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.