



Installation Guide

Single-Control Kitchen Sink Faucets


K-10411

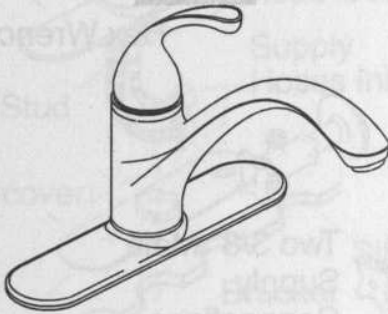


K-10412

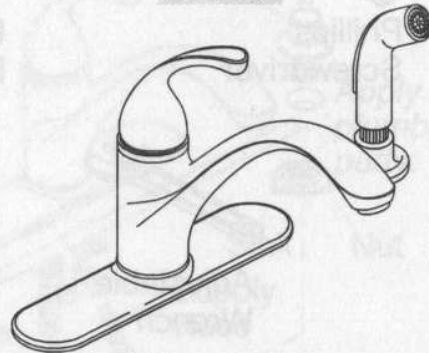


K-10413

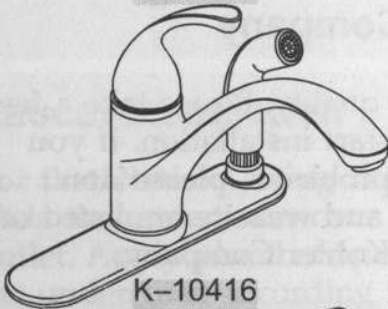

K-10415

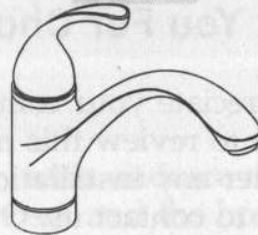

K-10416

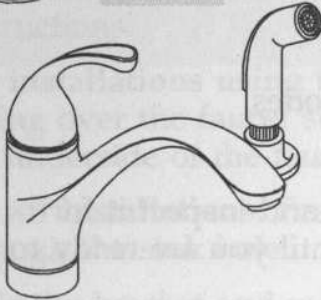

M product numbers are for Mexico (i.e. K-12345M)
Los números de productos seguidos de
M corresponden a México (Ej.
K-12345M)

Français, page "Français-1"
Español, página "Español-1"

Tools and Materials



Phillips
Screwdriver




Plumbers
Putty



Hex Wrench



Adjustable
Wrench

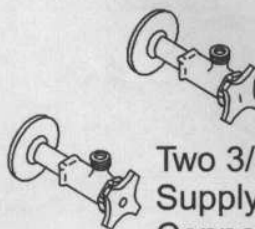


Two 3/8" Male
Supply
Connections

Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and website are listed on the back cover. Thanks again for choosing Kohler Company.

Before You Begin

- ☐ Observe all local plumbing and building codes.
- ☐ Shut off the water supplies.
- ☐ Before installation, unpack the new faucet and inspect it for damage. Return the faucet to the carton until you are ready to install it.
- ☐ Carefully inspect waste and supply tubing for any sign of damage and replace if necessary.
- ☐ For new installations, assemble the faucet to the sink before installing the sink.
- ☐ Except for plumbers putty on the undercover, do not use petroleum based products on this faucet.
- ☐ Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

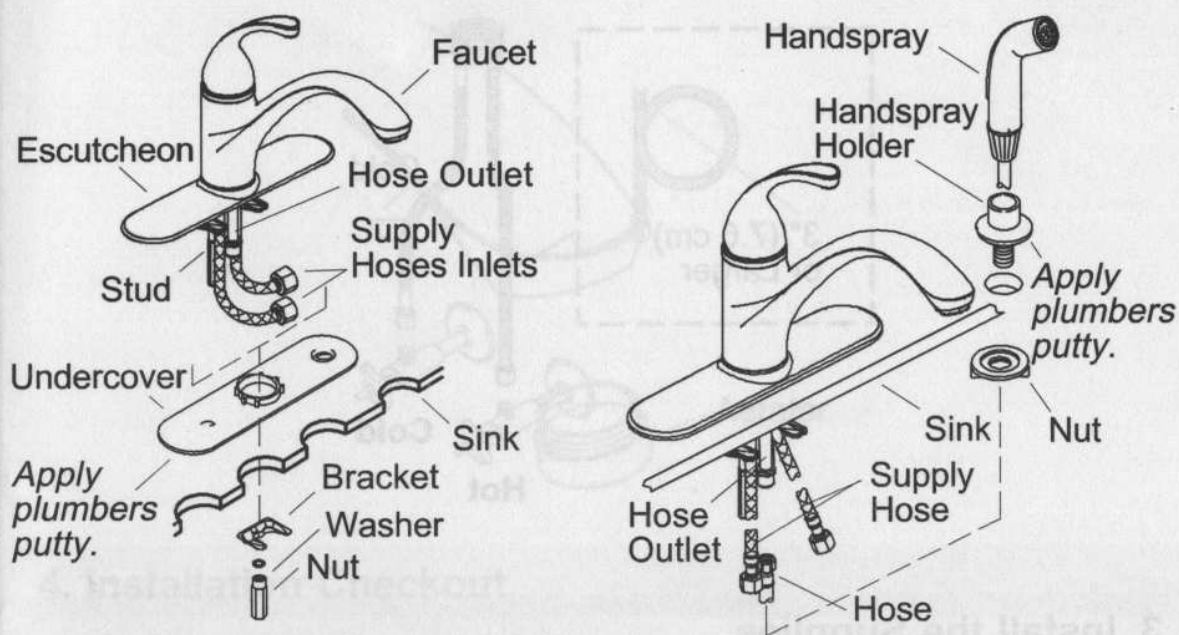


1. Faucet Installation

- ❑ **For installations using the 3-hole escutcheon with undercover:** Slide the undercover over the faucet supply hoses and the hose outlet. Apply plumbers putty or other sealant to the underside of the undercover according to the putty manufacturer's instructions.
- ❑ **For installations using the single-hole escutcheon:** Slide the O-ring over the faucet supply hoses and place into the groove in the underside of the faucet body (not shown).
- ❑ **For all installations:** Feed the faucet supply hoses and hose outlet through the sink hole.
- ❑ Slide the bracket and washer over the stud.
- ❑ Thread the nut onto the stud and tighten to secure the faucet.

2. Install the Handspray

- ❑ Apply a bead of plumbers putty or other sealant to the underside of the spray holder according to the manufacturer's instructions.
- ❑ Insert the spray holder into the sink hole.
- ❑ From under the sink, securely hand tighten the nut.
- ❑ Remove any excess putty or sealant.
- ❑ Insert the handspray hose through the spray holder.
- ❑ Connect the hose to the hose outlet and tighten.

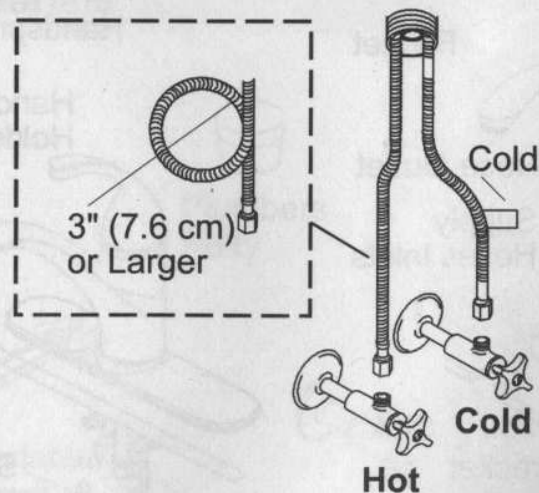

3. Install the Supplies




CAUTION: Risk of restricted waterflow and product damage.

Use extreme care when bending the supply hoses to avoid kinking and twisting. Hoses must not be taut after installation.

NOTE: If the sink is not installed, install it at this time. Be sure to follow all instructions packed with the sink.

NOTE: If the sink installation requires that you coil the supply hoses to obtain a good connection, maintain an inside coil diameter of at least 3" (7.6 cm).


- ☐ Position the hot and cold water supplies to not interfere with other hoses.
- ☐ Connect the supply hoses to the supply stops. Left is hot, right is cold.
- ☐ Tighten all connections.

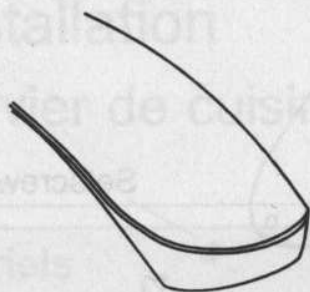

Aerator

4. Installation Checkout

- ☐ Verify that the faucet handle is in the off position and all connections are tight.
- ☐ Twist the aerator counterclockwise to remove it from the spout.
- ☐ Turn on the main water supply.
- ☐ Check all connections for leaks; repair as needed.
- ☐ Turn on the faucet to run water through the faucet.
- ☐ Check all connections for leaks; make any adjustments as needed.
- ☐ Allow water to run through the spout to remove any debris.
- ☐ Turn off the faucet.
- ☐ Remove any debris from the aerator and reinstall.

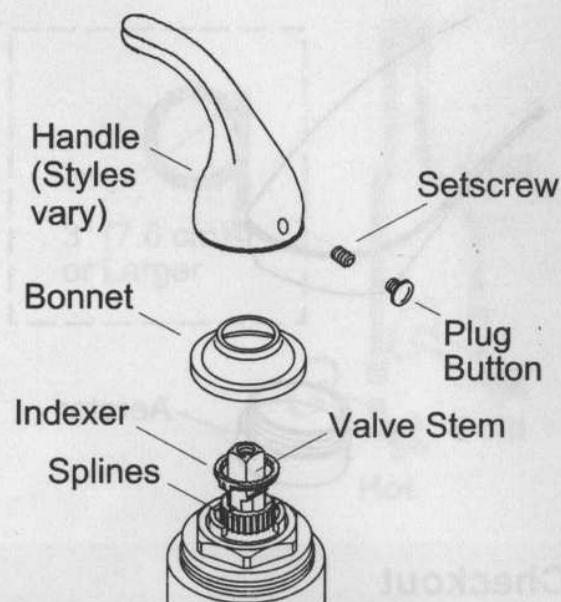


5. Water Temperature Adjustments

- ☐ Remove the plug button, setscrew, handle, and bonnet.
- ☐ Reposition the indexer to stop the valve stem at the desired maximum temperature.
- ☐ Place the handle onto the valve stem. Do not secure.
- ☐ Turn the handle to full hot and check the water temperature.
- ☐ Repeat the above procedures until the desired temperature is reached.
- ☐ Reinstall the bonnet and handle onto the faucet body. Secure with the screw.
- ☐ Reinstall the plug button.


Homeowners Guide

Single-Control Kitchen Sink Faucet


K-10411

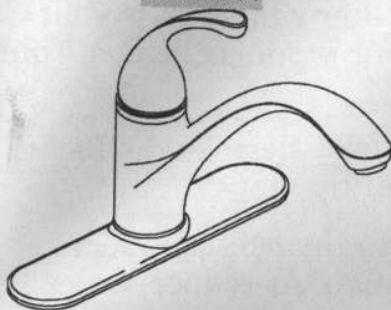


K-10412

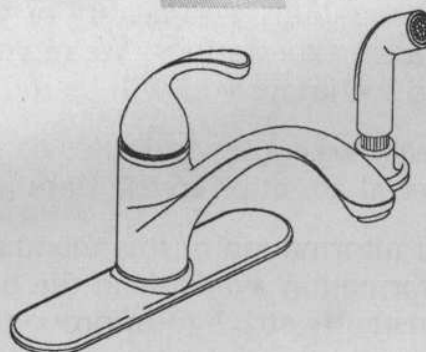


K-10413

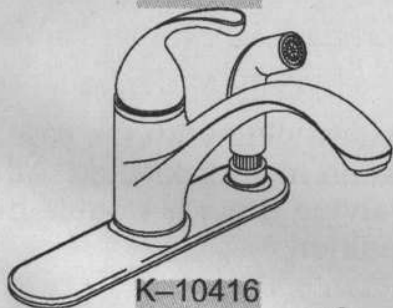

K-10415

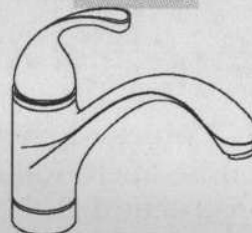

K-10416

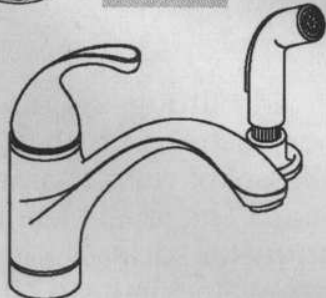

M product numbers are for Mexico (i.e. K-12345M)

Los números de productos seguidos de

M corresponden a México (Ej.

K-12345M)

Français, page "Français-1"

Español, página "Español-1"

Thank You For Choosing Kohler Company

Thank you for choosing the Bold Look of Kohler. Kohler craftsmanship offers you a rare combination of proven performance and graceful sophistication that will satisfy you for years to come. The dependability and beauty of your Kohler faucet will surpass your highest expectations. We're very proud of our products here at Kohler and we know you will be too.

Please take a few minutes to study this Homeowners Guide. Pay special attention to the Care and Cleaning instructions.

All information in this manual is based upon the latest product information available at the time of publication. At Kohler, we constantly strive to improve the quality of our products. We reserve the right to make changes in product characteristics, packaging or availability at any time without notice.

Your New Kohler Kitchen Faucet

Your new Kohler Kitchen faucet blends classic styling with the ease of single-handle operation for a unique expression in your kitchen. All metal construction and one-piece ceramic valving provide trouble-free operation even under the hardest water conditions.

Care and Cleaning

Like anything of lasting quality, Kohler faucets and fittings require a certain amount of periodic care to preserve their lustrous finish. Clean your new Kohler faucet and fittings with a mild soap, rinse thoroughly with warm water and dry with a clean, soft cloth. The ideal cleaning technique is to always blot dry any water from metal surfaces.

Allowing water to evaporate on metal will form water deposits. It is important to use a dabbing action to dry metal, not an abrasive or rubbing action.

Never use cleaners containing abrasive cleansers, ammonia, bleach, acids, or chemicals that can damage the finish. By taking the time to dry your faucet often, soap and water deposits can be prevented.

If your chrome or Vibrant® color/finish faucet gets excessively dirty, consider using the following cleaners: Windex® Original, Fantastik® All Purpose, Spic and Span Pine Liquid, or Mr. Clean Springtime Fresh Scent. **For solid color faucets and fittings,** consider using these cleaners: Fantastik® All Purpose, Spic and Span Pine Liquid, or Mr. Clean Springtime Fresh Scent.

Failure to comply with these cleaning instructions may void Kohler's warranty obligations.

Lifetime Limited Warranty — USA and Canada

For the U.S.A. and Canada Only

KOHLER® plumbing fixtures, faucets and fittings are warranted to be free of defects in material and workmanship for one year from date of installation.

Kohler Co. will, at its election, repair, replace or make appropriate adjustment where Kohler Co. inspection discloses any such defects occurring in normal usage within one year after installation. Kohler Co. is not responsible for removal or installation costs.

To obtain warranty service, contact Kohler Co. either through your Dealer, Plumbing Contractor, Home Center or E-tailer, or by writing Kohler Co., Attn.: Customer Service Department, 444 Highland Drive, Kohler, WI 53044, USA, or by calling 1-800-4-KOHLER from within the USA, 1-800-964-5590 from within Canada and 001-877-680-1310 from within Mexico.

Implied warranties including that of merchantability and fitness for a particular purpose are expressly limited in duration to the duration of this warranty, Kohler Co. disclaims any liability for special, incidental or consequential damages. Some states/provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of special, incidental or consequential damages so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.

This is our exclusive written warranty.

Notes:

1. There may be variation in color fidelity between catalog images and actual plumbing fixtures.
2. Kohler Co. reserves the right to make changes in product characteristics, packaging or availability at any time with out notice.

COPYRIGHT © 1999, 2000, 2001, 2002 BY KOHLER CO.

One-Year Warranty — Mexico

For Mexico Only

KOHLER CO.

It is recommended that at the time of purchase, you verify that all accessories and components are complete in this package.

This Kohler product is warranted to be free of defects in material and workmanship for one (1) year from the date of purchase as shown on

One-Year Warranty — Mexico (cont.)

the invoice or receipt.

1. Kohler Co. will only service its commercialized products through its authorized distributors.
2. To obtain warranty service, please present the invoice and corresponding warranty.
3. Through its authorized distributors, Kohler Co. promises to repair the defective product or provide a new replacement or an equivalent model (in those cases that the model has been discontinued) when the product is beyond repair, without any charge to the consumer.
4. The time of repair will not exceed six (6) weeks commencing on the date the product is received.
5. It is recommended that the consumer save the invoice or receipt as additional protection, as it may substitute the warranty in the case that there is a discrepancy in the validity of the warranty.

EXCEPTIONS AND RESTRICTIONS

The Warranty will not be valid in the following cases:

1. When the product is not operated in accordance with the instructions concerning use and operation set forth in the owner's manual or installation instructions, and when the recommendations and warnings included are not observed.
2. When the product has been modified or dismantled partially or totally; or has been used in a negligent fashion and as a consequence has suffered damages attributable to the consumer, individual, or hardware not authorized by Kohler Co.
3. This warranty does not cover the damages as a result of disaster such as fire or acts of God, including flooding, earthquake, or electric storms, etc. To obtain a list of distributors in your area where you can exercise your rights under this warranty, please call 001-877-680-1310.

KOHLER CO., KOHLER, WI 53044 U.S.A.

IMPORTER:

INTERNACIONAL DE CERMICA, S.A. DE C.V.

AV. CARLOS PACHECO NO. 7200

CHIHUAHUA, CHIH., MEXICO C.P. 31060

TEL: 52 (14) 29-11-11

