




Reset Button

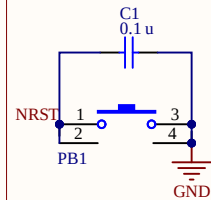



Low Speed Oscillator

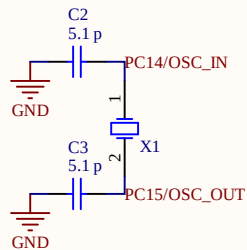


STM32 Microcontroller

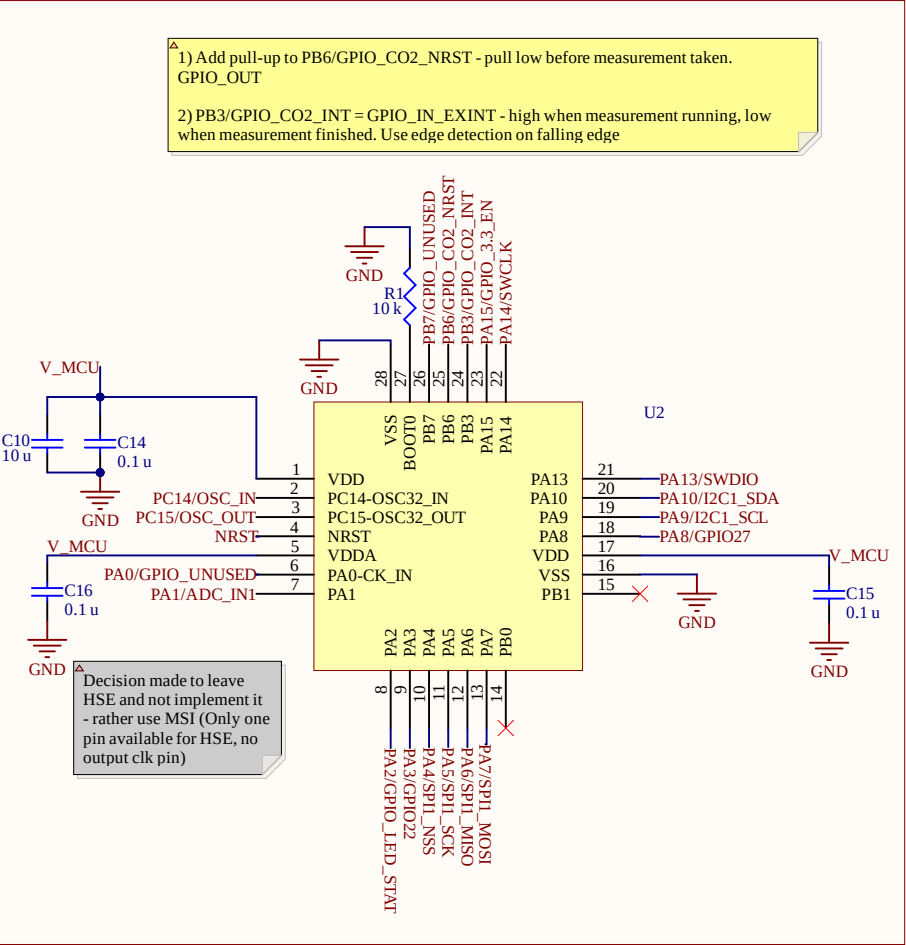

Decision made to leave HSE and not implement it - rather use MSI (Only one pin available for HSE, no output clk pin)



ST-LINK (Serial Wire Debug)

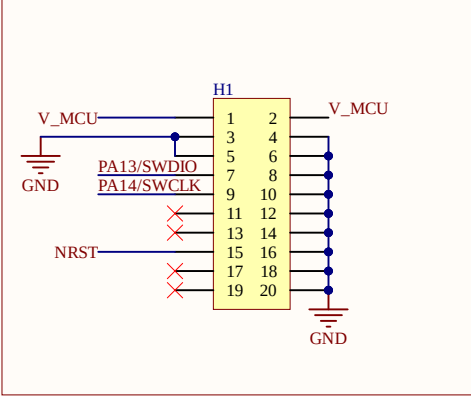


Notes on connecting to SWD:
<https://community.st.com/s/global-search/st-link%2Fv2%20stm32i031>


- force program to use HSE clock
- TDO_SWO is optional, TRACESWO (it is used for SWV trace)


1. Connect SWDIO (PA13) and SWCLK (PA14), VCC, GND to ST-Link
- BOOT0 pin should be pulled low
- NRST should be high / pulled up

LoRa Transceiver

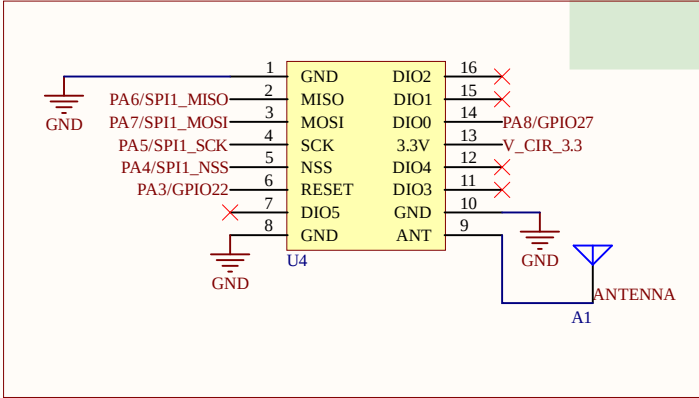

Title		
Solar air quality monitor - Telemetry and MCU		
Size	Number	Revision
A4	Rita van der Walt	
Date:	6/25/2026	Sheet of
File:	C:\Users\...\Version1.2 - Measuring Device Schematics	By:

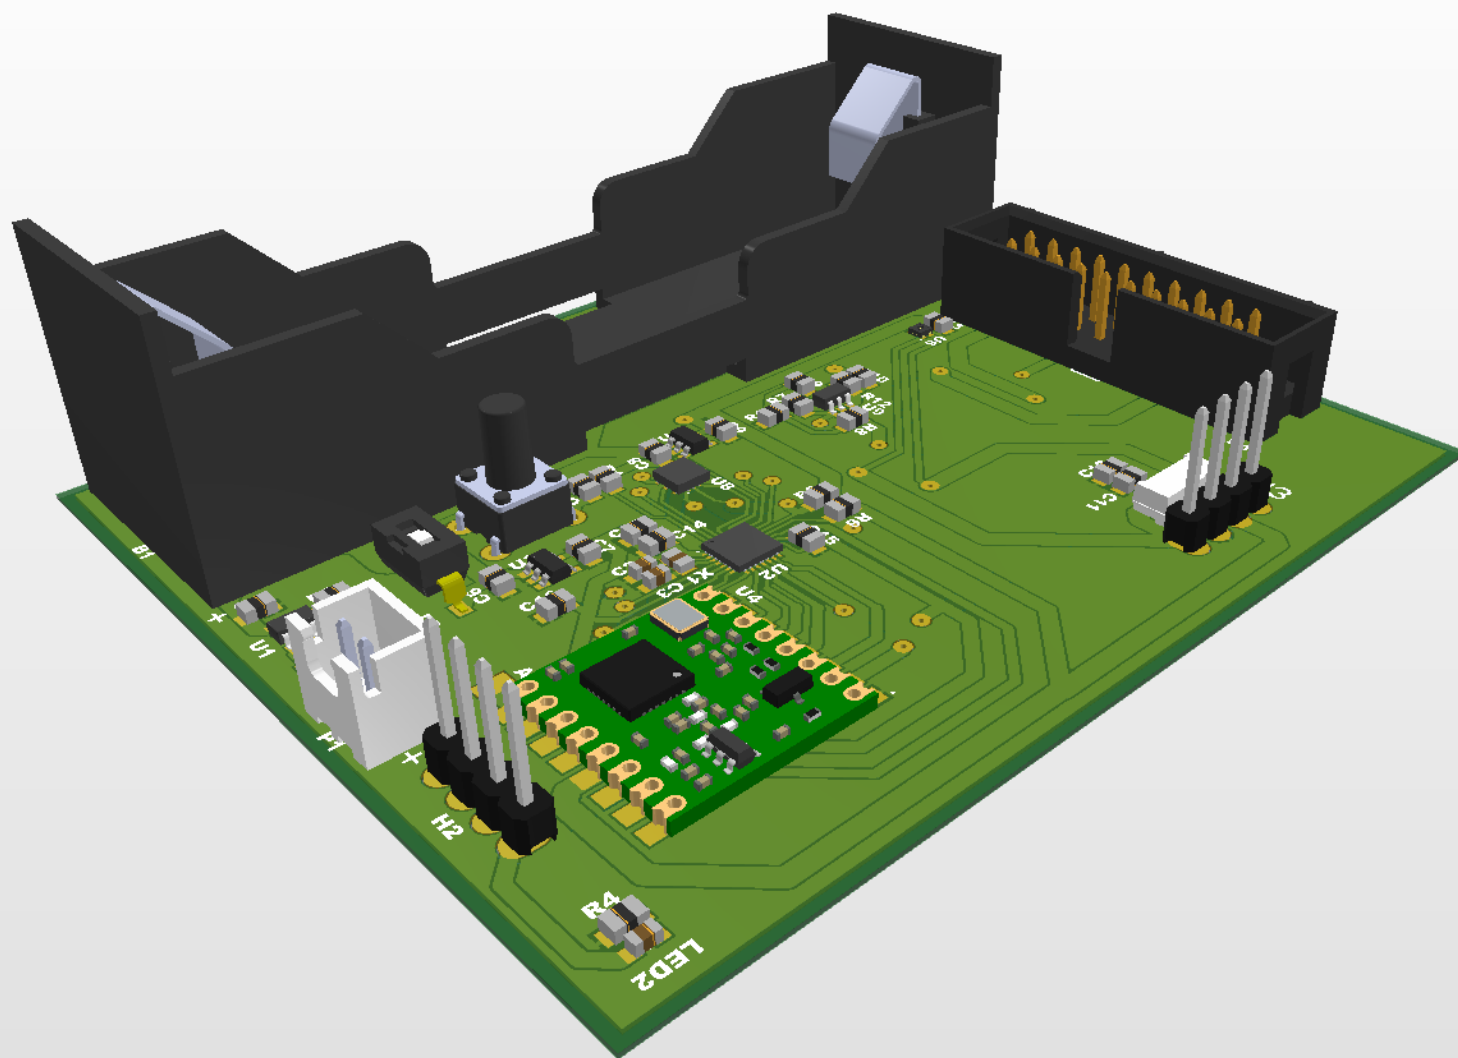

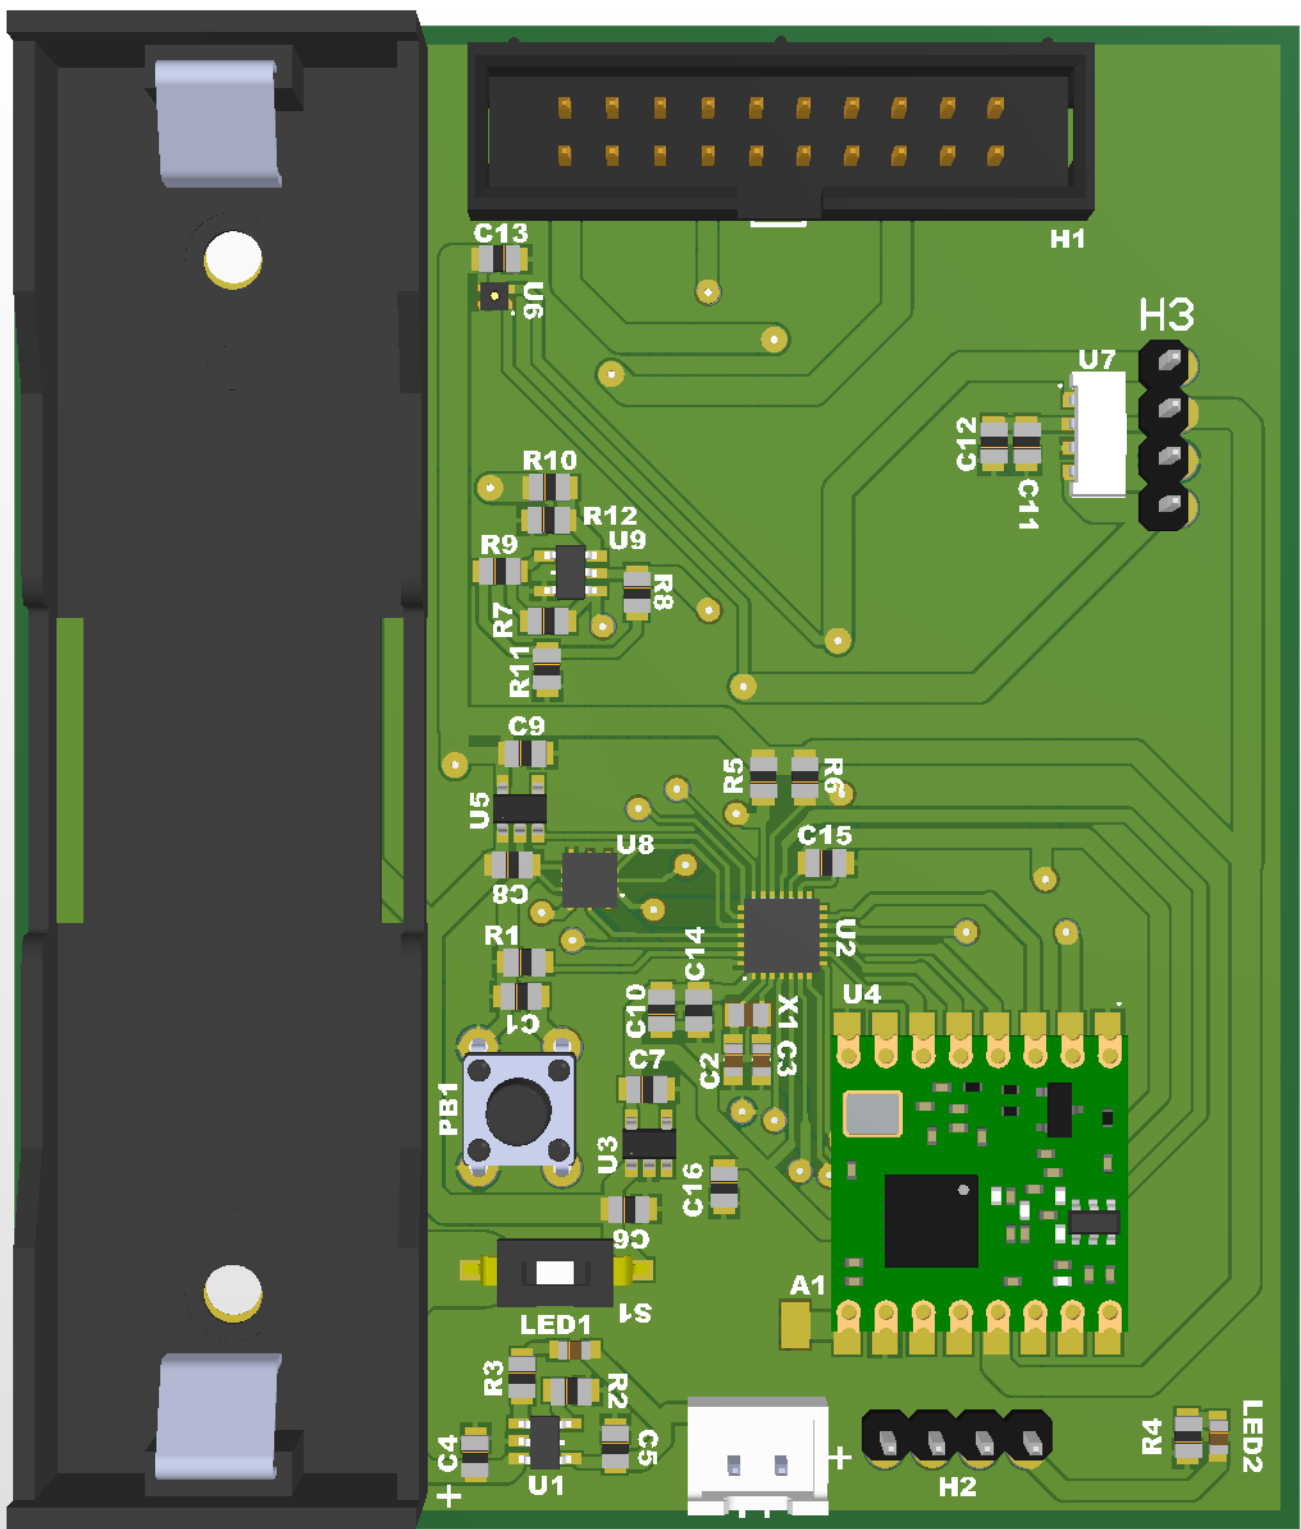

RE van der Walt Indoor Environment Analysis: Measuring Device

Version 1.2
2022

