### INORGANIC CEMENTING MATERIALS 10

INORGANIC CEMENTING MATERIALS

Inorganic cements are materials that exhibit characteristic properties of setting and hardening loss them canable of joining rigid masses (like bricks at them canable of joining rigid masses) Inorganic cements are materials that exhibit characteristic property of pointing rigid masses (like bricks, stories, when mixed to a paste with water. This makes them capable of joining rigid masses (like bricks, stories, when mixed to a paste with water. This makes them capable of joining rigid masses (like bricks, stories, when mixed to a paste with water. This makes them capable of joining rigid masses (like bricks, stories, when mixed to a paste with water. when mixed to a paste with water. This makes them capable of joining the structures and non-hydraulic and non-hydraulic structures. Inorganic cements can be divided into hydraulic and non-hydraulic structures. Inorganic cements can be divided into hydraulic and non-hydraulic structures. tiles, etc.) into coherent structures. Inorganic cements can be different types, according to the way in which they set and harden. Hydraulic cementing materials (like types, according to the way in which they set and harden; while non-hydraulic cement types, according to the way in which they set and nated water; while non-hydraulic cements (like Portland cement) are capable of setting and hardening under water; ordinary lime) harden in air and hence, cannot be used under water.

### 11 GYPSUM PLASTER

The mineral gypsum [which consists essentially of hydrated calcium sulphate, CaSO<sub>4</sub> . 2 H<sub>2</sub>O] is extensively used as raw material for the manufacture of plasters, which are almost universally used for coating the inner walls of dwellings. As mined, however, it usually contains a considerable percentage of impurities, the chief of which are clay, calcium and magnesium carbonates, and iron oxide.

Plaster of Paris [CaSO<sub>4</sub>  $\cdot \frac{1}{2}$  H<sub>2</sub>O] is produced by heating fairly pure gypsum to a temperature of about 120-160°C. If the gypsum by heated above 200°C, the anhydrous sulphate is produced, which loses the power of readily combining with water. The various changes may be depicted as follows

The operation of manufacturing plaster of Paris from gypsum consists in first crushing and grinding of gypsum, and then calcining the ground product in kilns (heated to about 150°C) and finally, pulverizing the calcined product.

Setting and hardening: When plaster of Paris is mixed with water, the powder forms a plastic mass, which quickly hardens or sets, expanding slightly in the process and regains the closely-packed crystalline structure of gypsum (CaSO4.2 H2O). Setting of plaster of Paris can be accelerated by admixing it with alkali sulphates like K<sub>2</sub>SO<sub>4</sub>, Na<sub>2</sub>SO<sub>4</sub> (or alums), which initiate as well as hasten the crystallization process.

Uses: (1) Its slight expansion on setting, renders plaster of Paris suitable for making moulds, since details are thereby accurately reproduced. (2) It is used in making castings structural tiles and in surgical bandages. (3) Its chief uses are as plaster for walls and in plaster-board, which is made up of alternate layers of a fibrous material such as felt or paper and gypsum plaster.

### 12 CEMENT

Cement may be broadly be described as "a material possessing adhesive and cohesive properties, and capable of bonding materials like stones, bricks, building blocks, etc." The principal constituents of cement used for constructional purposes are compounds of Ca (calcarious) Al + Si (argillaceous). The cements have property of setting and hardening under water, by virtue of certain chemical reactions with it and are, therefore, called 'hydraulic cements'.

CLASSIFICATION: (1) Natural cement is made by calcining a naturally occurring argillaceous limestone (i.e., 20-40% clay-containing limestone) at a high temperature and subsequently, pulverizing the calcined mass. During calcination, silica and alumina, present in sufficient quantities, combine with the calcium oxide to form the corresponding calcium silicates and aluminates.

ASPDIN Joseph (1788-20 March 1855) was an English mason, bricklayer and inventor who patented Portland cement on 21 October 1824. The eldest son of a Leeds bricklayer, he began using artificial cements made by burning ground limestone and clay together. He named it 'Portland' as he thought its colour resembled Portland Stone. This first true artificial cement was the first real improvement on cement since John Smeaton had made the first modern concrete by mixing powdered brick and adding pebbles as aggregate back in 1756.

properties: Natural cement possesses hydraulic qualities, but is quick-setting and of relatively low strength. Mortar masses of concretes such as dams and foundations. After the discovery of Portland It is also used in large masses of natural cement has been nearly dropped. It is also used to be use and production of natural cement has been nearly dropped.

(2) Puzzolana coment is among the oldest cementing materials known. It was invented by Romans (2) Puzzumin (2) Puzzumin (2) Puzzumin (3) Puzzumin (4) Puzzumin (5) Puzzumin (5) Puzzumin (5) Puzzumin (6) Puzzumin (7) P and used by the state materials which when mixes with lime, without the use of heat, form hydraulic cementing materials consist, essentially, of silicates of aluminum, iron and color. rements "are mane.".

such cements consist, essentially, of silicates of aluminum, iron and calcium. Puzzolana cements are made such cements and griding: (i) natural puzzolana (which are deposite of the provided of the pro Such cements continued and griding: (i) natural puzzolana (which are deposits of volcanic ash) consisting of a glassy by simply mixing and griding tooling of lava (a molten mixture of silicated ash) consisting of a glassy and (ii) slaked-line.

properties: Puzzolana cements possess hydraulic properties. They are seldom used as such at present time, but are mixed with Portland cement.

(3) Slag cement is made from blast furnace slag and hydrated lime. The blast furnace slag (consisting largely of a mixture of calcium and aluminium silicates) is granulated by pouring it into a stream of cold water. It is then dried and mixed with hydrated lime, and then the mixture is finely pulverized. Slag cements are slow to harden, so an accelerator like clay, salt or caustic soda is sometimes added.

Properties: Slag cements set more slowly than Portland cement. They have lower strength and are poor in abrasion-resistance. Slag cements are used, to a limited extent, for making concrete in bulk construction, where strength is relatively unimportant.

(4) Portland cement is defined as "an extremely finely ground product obtained by calcining together, at about 1.500°C, an intimate and properly proportioned mixture of argillaceous (clay-containing) and calcareous (limecontaining) raw materials, without the addition of anything subsequent to calcination, excepting the retarder gypsum".

Properties: Portland cement is the most important and reliable cementing material, used for constructional works. It was discovered in 1824 by Joseph Aspidin, a brick layer of Leeds. It was so-named, because a paste of cement with water on setting and hardening resembled in colour and hardness to Portland stone, a limestone quarried in Dorset.

### MANUFACTURE OF PORTLAND CEMENT 13

Raw materials for the manufacture of cement are : (1) Calcaerous materials, CaO [such as limestone, chalk, marl, etc.]; (2) Argillaceous materials, Al2O3 and SiO2 [such as clay, shale, slate, etc.]; (3) Powdered coal or fuel oil, and (4) Gypsum (CaSO<sub>4</sub>. 2 H<sub>2</sub>O)

Functions of the ingredients of cement: (1) Lime is the principal constituent of cement. Its proportion must be properly regulated. However, excess of lime reduces the strength of cement, because it makes the cement to expand and disintegrate. On the other hand, presence of lesser amount of lime than required also reduces the strength of cement and makes it quick-setting.

- (2) Silica imparts strength to cement.
- (3) Alumina makes the cement quick-setting. Excess of alumina, however, weakens the cement.
- (4) Calcium sulphate (gypsum) helps to retard the setting action of cement. It actually enhances the initial setting time of cement.
  - (5) Iron oxide provides: (a) colour, (b) strength, and (c) hardness to the cement.
- (6) Sulphur trioxide, in small proportion, is desirable. When present in small amount, it imparts soundness to cement. However, its excess reduces the soundness of cement.
  - (7) Alkalis, if present in excess, cause the cement efforescent.

Manufacture of Portland cement involves the following steps: (1) Mixing of raw materials can be done either by: (a) dry process or (b) wet process.

(1) Mixing of raw materials can be done on the control of the country (a) Dry process: The raw materials [limestone (or chalk) and clay (or shale)] are crushed (in

(a) Dry process: The raw materials influenced in these are ground to fine powder (in ball gyratory crushers) into roughly 2-5 cm size pieces. Then, these are ground to fine powder (in ball gyratory crushers) into roughly 2-5 cm size pieces. Then, these are ground to fine powder (in ball gyratory crushers) into roughly 2-5 cm size pieces. gyratory crushers) into roughly 2-5 cm size pieces. Then, the mills/tube mills). Each separate powdered ingredient is stored in a separate hopper. Then, the mills/tube mills). Each separate powdered ingredient is stored in powdered materials are mixed in the requited proportions to get dry 'raw mix', which is stored in powdered materials are mixed in the required proportions kiln. Raw materials are mixed in storage bins (called silos) and kept ready to be fed in a rotary kiln. Raw materials are mixed in calculated proportions so that the average composition of the final product is as follows:

Component	Percentage range by mass	
	60-69	
Lime (CaO)	17-25	
Silica (SiO <sub>2</sub> ) Alumina (Al <sub>2</sub> O <sub>3</sub> )	3–8	
Iron oxide (Fe <sub>2</sub> O <sub>3</sub> )	2–4	
Magnesium oxide (MgO)	1-5	
Sulphur trioxide (SO <sub>3</sub> )	1–3	
Alkali oxides (Na <sub>2</sub> O + K <sub>2</sub> O)	0.3-1.5	

(b) Wet process: The calcareous raw materials are crushed, powdered and stored in big storage tanks (called silos). The argilaceous material (say clay) is thoroughly mixed with water in wash mills, to remove any adhering organic matter, etc. The basin-washed clay is also stored. Powdered limestone (from silos) and washed wet-clay (from basins) are allowed to flow in a channel, in the right proportions. From the channel, the two raw materials are led to 'grinding mills', where they are mixed intimately to form a paste, called slurry [Grinding operation is carried out in either tube mill or ball mill or both]. The slurry is led to a 'correcting basin', where its chemical composition may be adjusted, if necessary. This slurry contains about 38 to 40 per cent water. The slurry is finally stored in storage tanks and kept ready for feeding to a rotary kiln.

Table 3: Merits and demerits of dry and we processes.

	Dry process	Wet process	
1.	It is adopted when the raw materials are quite hard.	It can be used for any type of raw materials.	
2.	Fuel consumption is low.	Fuel consumption is higher.	
3.	Process is slow.	Process is comparatively faster.	
4.	Cement produced is of inferior quality.	Cement produced is of superior quality.	
5.	Cost of production of cement is less.	Cost of production of cement is somewhat higher	
6.	On the whole, the process is costly.	On the whole, the process is cheaper.	

(2) Burning is usually done in rotary kiln, which is a steel tube, about 2.5 to 3.0 m in diameter and 90 to 120 m in length, lined inside with refractory bricks. The kiln is laid in slightly inclined position at a gradient of 1 in 25 to 1 in 30. This rests on roller bearings, which are supported on column of masonry or concrete. The kiln is capable of rotating at 1 r.p.m. (revolution per minute) about its longitudinal axis. Burning fuel (usually powdered coal or oil) and air are injected at the lower end. A long hot flame is produced, which heats the interior of the kiln upto a maximum temperature of about 1,750°C.

Process: The 'raw-mix' or 'corrected-slurry' is injected into the kiln at its upper end; while hot flames is forced into the kiln from the lower end. Due to slope and slow rotation of the kiln, the materials fed in move continuously towards the hottest-end at a speed of about 15 m per hour. As the mixture or slurry gradually descends, the temperature rises.

Chemistry: (i) In the upper part of kiln, where the temperature is around 400°C, most of


the water in the slurry gets evaporated (drying zone).

(ii) In the central part of kiln, where the temperature is around 1,000°C, limestone of dry mix or slurry undergoes decomposition to form quick-lime and carbon dioxide; and the latter escapes out. The material forms small lumps, called nodules [calcination zone].

$$CaCO_3 \rightleftharpoons CaO + CO_2 \uparrow$$
Limestone Quicklime

(iii) In the lower part of the kiln, the temperature is between 1,500 to 1,700°C. Here lime and clay (of nodules) undergo chemical interaction or fusion, yielding calcium aluminates and silicates (clinkering zone).

The aluminates and silicates of calcium then fuse together to form small (of about 0.5 to 1 cm diameter) hard, greyish stones, called clinkers. These clinkers are very hot (at about 1,000°C). The rotary kiln at the base is provided with another small rotary kiln. In this, hot clinkers fall and cool air is admitted from opposite direction. Air counter-blast cools the clinkers. Hot air so-produced is used for burning powdered coal/oil. The cooled clinkers are collected in small trolleys.

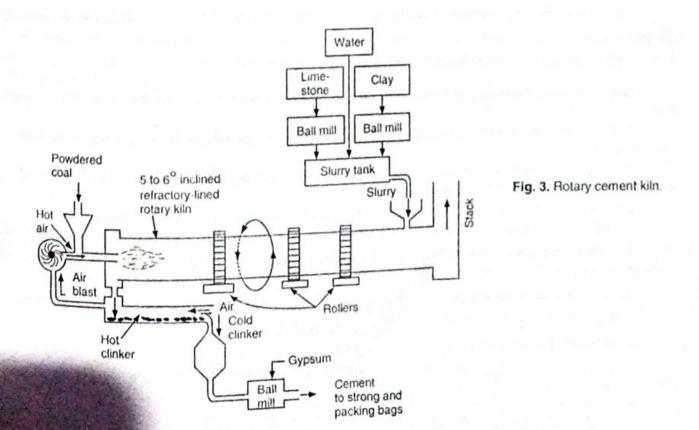

(3) Grinding: The cooled clinkers are ground to a fine powder in ball mills or tube mills (3) **Grinding**: The cooled clinkers are ground to a distribution of the mills During final grindings, a small quantity (2-3%) of powdered gypsum is added, so that the resulting During final grindings, a small quantity (2-3%) of powdered gypsum is added, so that the resulting During final grindings, a small quantity (2-5%) of powdered by a composition of powdered by a compositi After the initial set, the cement-water paste becomes stiff, but gypsum retards the dissolution agent for early setting of cement.

After the initial set, the cement-water paste becomes of C<sub>3</sub>A by forming tricalcium sulphoaluminate (3 CaO .  $Al_2O_3$  . x CaSO<sub>4</sub> . 7 H<sub>2</sub>O), which is insoluble

Thus:

Formation of insoluble tricalcium sulphoaluminate prevents too early further reactions of setting and hardening.

(4) Packing: The ground cement is stored in silos, from which it is fed to automatic packing machines. Each bag, usually, contains 50 kg of cement.

### CHEMICAL COMPOSITION OF CEMENT 14

According to I.S. 269 - 1975, composition of ordinary Portland cement shall satisfy the following conditions:

(1) Ratio of the percentage of lime (CaO) to that of silica (SiO2), alumina (Al2O3) and iron oxide (Fe2O3), when calculated by the formula:

$$\frac{\text{CaO} - 0.7 \text{ SO}_3}{2.8 \text{ SiO}_2 + 1.2 \text{ Al}_2\text{O}_3 + 0.65 \text{ Fe}_2\text{O}_3}$$

shall not be less than 0.66 and more than 1.02.

- (2) Ratio of percentage of alumina (Al<sub>2</sub>O<sub>3</sub>) to that of iron oxide (Fe<sub>2</sub>O<sub>3</sub>) shall not be less that 0.66
- (3) Weight of insoluble residue shall not exceed 2 percent.
- (4) Weight of magnesia shall not be more than 6 percent.
- (5) Total sulphur contents, calculated as sulphuric anhydride (SO<sub>3</sub>), shall not be more than 2.75 percent.
  - (6) Total loss on ignition shall not exceed 4 percent.

Notes: In the manufacture of Portland cement, great care is taken to see that the composition satisfies the above.

- (i) If too much lime is present, the cement will be 'unsound', that is, after sometime concrete made from it will expand and crack.
- (ii) If too little lime is present, the concrete will be low in strength and may 'set quickly', i.e., hardens before the mason has a chance to place it in the forms.
  - (iii) Cement in which alumina is high is also apt to be quick-setting and hard to burn uniformly.

(iv) High silica cements are, usually, very slow hardening and do not attain their full strength for a considerable period.

Physical requirements of cement: (1) Setting time: Initial: Not less than 30 minutes; Final : Not more than 600 minutes.

(2) Compressive strength (of 1:3 cement mortar cube of cement and Ennore sand):

3 days: Not less than 1.6 kg/mm<sup>2</sup> (or 16 N/mm<sup>2</sup>).

7 days: Not less than 2.2 kg/mm<sup>2</sup> (or 22 N/mm<sup>2</sup>).

(3) Soundness: By Le-Chatelier's method: It expresses the expansivity of the cement set in 24 hours between 25°C and 100°C.

Unaerated cement: Maximum 10 mm.

Aerated cement: Maximum 5 mm.

Note: Soundness: If a cement on hydration produces only very small volume changes, the cement is said to be Note: Soundness is directly related to the presence of excessive amount of crystalline magnesia (MgO), which sound Soundness. In Le-Chatelier's test, a test-piece of specific dimensions is placed in boiling water for 3.5 hours and its expansion then measured.

(4) Fineness: Not less than 215 m<sup>2</sup>/kg. Finer the grinding, the greater is the rate of reactions, thereby hastening the early development of strength. However, finer cement generates heat quickly, thereby the cement mortar/concrete is likely to develop cracks.

# CHEMICAL CONSTITUTION OF PORTLAND CEMENT

Average compound composition of Portland cement is:

Name of compound	Chemical formula	Abbreviation used	Average %	Setting time
Tricalcium silicate	3CaO . SiO <sub>2</sub>	C <sub>3</sub> S	45	7 days
Dicalcium silicate	2CaO . SiO <sub>2</sub>	C <sub>2</sub> S	25	28 days
Tricalcium aluminate	3CaO . Al <sub>2</sub> O <sub>3</sub>	C <sub>3</sub> A	1	1 day
Tetracalcium aluminoferrite	4CaO . Al <sub>2</sub> O <sub>3</sub> . Fe <sub>2</sub> O <sub>3</sub>	C <sub>4</sub> AF	9	1 day
Calcium sulphate	CaSO <sub>4</sub>		5	
Calcium oxide (free)	CaO	a ne region to	2	
Magnesium oxide	MgO	20	4	_

Characteristics of constituents: (i) Tricalcium silicate (C3S) has "medium" rate of hydration; and develops high ultimate strength quite rapidly. Moreover, its ultimate-strength is also the highest amongst all the constituents. So it is responsible for ultimate-strength. The heat of hydration is about 880 kJ/kg.

- (ii) Dicalcium silicate (C2S) has quite low early-strength, but develops ultimate-strength of slightly less than that of C3S. It hydrates very slowly. It is also responsible for ultimate-strength. It possesses the heat of hydration of 420 kJ/kg.
- (iii) Tricalcium aluminate (C3A) hydrates slowly and does not contribute much to the strength of cement, since its early-strength and ultimate-strength are poorest amongst all the constituents. Its heat of hydration is about 250 kJ/kg.

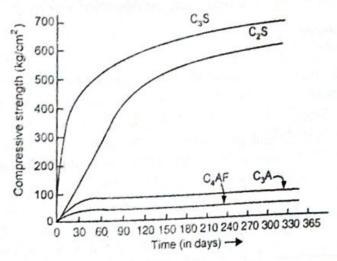


Fig. 4. Development of strength by major constituents in cement.

# SETTING AND HARDENING OF PORTLAND CEMENT

When cement is mixed with water to a plastic mass, called "cement paste", hydration reaction 16 When cement is mixed with water to a plastic mass, the interlocking of the crystals, finally begin, resulting in the formation of gel and crystalline products. The interlocking of the crystals, finally begin, resulting in the formation of get and crystalline product rock-like material. The process of solidibind the inert particles of the aggregates into a compact rock-like material. The process of solidibine the inert particles of the aggregates into a compact rock-like material. bind the inert particles of the aggregates into a compact of setting is defined as stiffening of the original fication-comprises of : (i) setting, and then (ii) hardening. 'Setting' is development of strength, due to crustally fication-comprises of: (i) setting, and then (ii) hardening" is development of strength, due to crystallization plastic mass, due to initial gel formation. "Hardening" is development of strength, due to crystallization After setting, hardening starts, due to the gradual progress of crystallization in the interior

After setting, hardening starts, due to the guidant paste at any time, depends upon the amount of gel formed of the mass. The strength developed by cement paste at any time, depends upon the amount of gel formed and the extent of crystallization.

Initial setting of cement-paste is mainly due to the hydration of tricalcium aluminate (C3A) and

+ 880 kl/kg  $C_3A + 6H_2O \longrightarrow C_3A \cdot 6H_2O$ or

Hydrated tricalcium aluminate Tricalcium (Crystalline) aluminate

 $4 \text{ CaO} \cdot \text{Al}_2\text{O}_3 \cdot \text{Fe}_2\text{O}_3 + 7 \text{ H}_2\text{O} \longrightarrow 3 \text{ CaO} \cdot \text{Al}_2\text{O}_3 \cdot 6 \text{ H}_2\text{O} + \text{CaO} \cdot \text{Fe}_2\text{O}_3 \cdot \text{H}_2\text{O} + 420 \text{ kJ/kg}$ (Gel) (Crystalline) Tetracalcium aluminoferrite

C4AF + 7 H2O - C3A . 6 H2O (crystalline) + CF . H2O (gel) + 420 kJ/kg or

Also dicalcium silicate starts hydrolysing to tobermonite gel (which possesses a very high surface area and thus, very high adhesive property), which also contributes to initial setting

$$2 [2 CaO.SiO_2] + 4 H_2O \longrightarrow 3 CaO.2SiO_2.6 H_2O + Ca(OH)_2 + 250 kJ/kg$$
  
 $2 C_2S + 4 H_2O \longrightarrow C_3S_2.6 H_2O + Ca(OH)_2 + 250 kJ/kg$ 

Discalcium silcate

or

or

Tobermonite gel Crystalline calcium hydroxide

Final setting and hardening of cement-paste is due to the formation of tobermonite gel (formed above) plus crystallization of calcium hydroxide and hydrated tricalcium aluminate.

$$2 [2 CaO.SiO_2] + 6 H_2O \longrightarrow 3 CaO.2SiO_2.3 H_2O + 3 Ca(OH)_2 + 500 kJ/kg$$


Tricalcium silicate

Tobermonite gel

Calcium hydroxide (Crystalline)

$$2 C_3 S + 6 H_2 O \longrightarrow C_3 S_2 . 3 H_2 O + 3 Ca(OH)_2 + 500 kJ/kg$$

The setting and hardening of cement may be depicted in Fig. 5.

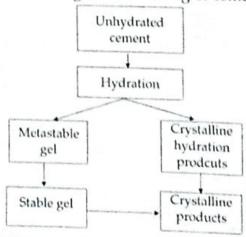

Flg. 5. Setting and hardening of cement.

 $<sup>1~{\</sup>rm g}$  of cement has a surface area of above  $10^3~{\rm cm}^3$ ; whereas  $1~{\rm g}$  of tobermonite gel has a surface area of  $10^6~{\rm cm}^3$ .

Sequence of chemical reactions during setting and hardening of cement: When water is added to coment, its various constituents undergo hydration and crystallization at different rates. (i) At first, hydration of incalcium aluminate (C<sub>3</sub>A) and tetracalcium aluminoferrite (C<sub>4</sub>AF) takes place. (ii) Next, the hydration of incalcium silicate (C<sub>3</sub>S) begins within 24 hours and gets completed in 7 days. (iii) The gel of aluminate begins incalcium silicate and at the same time, dicalcium silicate (C<sub>2</sub>S) begins to hydrate in 7 to 28 days. Thus, the initial set of cement is due to the hydration of aluminate. The development of early-strength, between 1 to 7 days, is due to the hydration of dicalcium silicate and continued hydration of tricalcium silicate.




Fig. 6. Sequence of changes during setting and hardening of cement.

Function of gypsum in cement: Tricalcium aluminate (C<sub>3</sub>A) combines with water very rapidly with the evolution of a large amount of heat.

$$C_3A + 6H_2O \longrightarrow C_3A \cdot 6H_2O + Heat$$

After the initial-set, the paste becomes somewhat stiff. However, the added gypsum retards the dissolution of C<sub>3</sub>A by forming insoluble calcium sulpho-aluminate:

This reaction prevents a high concentrations of alumina in the cement solution, thereby retarding the early initial-set of the cement.

### 17 HEAT OF HYDRATION OF CEMENT

When water is mixed with cement, hydration, hydrolysis and gelation reactions start and some heat is liberate simultaneously. On an average, 500 kJ/kg of heat is evolved during complete hydration of cement. The heats of hydrations of various constituents of cement are as follows:

Constituent of cement	C <sub>3</sub> A	C <sub>3</sub> S	C <sub>4</sub> AF	C <sub>2</sub> S
Heat of hydration (k]/kg)	880	500	420	250

Consequently, in order to avoid the shrinkage cracks on setting and hardening, it is quite necessary to pour concrete in position in such amounts that the heat liberated during hydration is dissipated as quickly as possible.

## 18 SPECIAL CEMENTS

(1) Aluminous or high-alumina cements are made by fusing a mixture of bauxite and limestone at 1,500 to 1,600°C in rotary kiln and then grinding the resulting mass to the same fineness as that of Portland cement.

Typical composition of such a cement is: 35 to 40% CaO: 35 to 55% Al<sub>2</sub>O<sub>3</sub>; 5 to 15% FeO + Fe<sub>2</sub>O<sub>3</sub>, and 5 to 10% SiO<sub>2</sub>. The most important constituents of such cements are monocalcium aluminate (CA) and tricalcium pentaluminate (C<sub>3</sub>A<sub>5</sub>), besides some dicalcium silicate (C<sub>2</sub>S) and tetracalcium aluminoferrite (C<sub>4</sub>AF). Both CA and C<sub>3</sub>A<sub>5</sub> hydrate initially to a gel, CaAl(OH)<sub>5</sub>. 3H<sub>2</sub>O, which gradually changes to a very stable crystalline complex, Ca<sub>3</sub>Al<sub>2</sub>(OH)<sub>12</sub>. 3H<sub>2</sub>O and a gel of aluminium hydroxide, Al(OH)<sub>3</sub>. The setting time of high-alumina cement is similar to that of Portland cement, but its rate of hardening is very rapid and full-strength is attained in the aluminous cement retains its strength at high temperatures. Another advantage of high-alumina cement, as compared to Portland cement, is its superior chemical-resistance to sea-water and sulphate-bearing ground water.

Moreover, such a cement is resistant to very dilute acid solutions (frequently occurring in industrial ways and to be from the combustion of sulphur-containing fuels) and to be a from the combustion of sulphur-containing fuels. Moreover, such a cement is resistant to very dilute acid solutions (100) Mayles, dilute sulphourous acid solutions (resulting from the combustion of sulphur-containing fuels) and to hydrogen the solutions.

The advantages of rapid-hardening of aluminous cement is, however, offset to some extent by a rapid desirated in a short time. This causes a considerate of the solution of th sulphide solutions.

The advantages of rapid-hardening of aluminous centers. This causes a considerable rapid evolution of heat of hydration, which cannot be easily dissipated in a short time. This causes a considerable rapid evolution of heat of hydration, which cannot be easily dissipated in a short time. This causes a considerable rapid evolution of heat of hydration, which cannot be easily dissipated in a short time. This causes a considerable rapid evolution of heat of hydration, which cannot be easily dissipated in a short time. This causes a considerable rapid evolution of heat of hydration, which cannot be easily dissipated in a short time. evolution of heat of hydration, which cannot be easily dissipated than 5 cm thickness, but it is an asset when in the temperature of the concrete mass, if in a layer of more than 5 cm thickness, but it is an asset when in the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of the concrete mass, if in a layer of the temperature of the concrete mass, if in a layer of concreting is done under freezing conditions. Flight attended to the control of t be bonded to high-alumina cement to get a strong bond.

- (2) High early-strength (H.E.S.) cements are made from materials with a high lime to silica ratio. They (2) High early-strength (H.E.S.) Centered to the contain a higher proportion of tricalcium silicate than regular Portland cements and hence, harden more quickly contain a higher proportion of tricalcium silicate than regular Portland cements and hence, harden more quickly and with greater evolution of heat. During the manufacture of such rapid hardening cements, addition of gypsum during the final grinding, is usually avoided and also such cements are grinded much finer than ordinary cements. Such cements have only 5 minutes and 30 minutes initial and final setting times respectively.
- (3) White Portland cement is white in colour, owing to the absence of iron compounds. Such cements are made from raw materials which are free from iron oxide. It is very expensive and finds useful applications, eg, repairing and joining marble pillars and blocks, manufacture of tiles and for mosaic works. For the latter purpose, the cements may be coloured by means of colouring matters like yellow ochre, venetain red, etc.
- (4) Sorel cement is made by the addition of a strong solution of magnesium chloride to finely ground calcined magnesia. The material, sometimes known a magnesium oxychloride cement [3MgO . MgCl<sub>2</sub> . 11H<sub>2</sub>O], sels hard in three to four hours. This material is principally used in composite flooring. Such floorings have the advantage of being non-slip, fire-proof, not easily scratchable, durable and capable of taking a good wax or oil polish.

The rate of hardening of cement is still increased by addition of calcium chloride or formate. The accelerated rate of setting is especially useful during cold weather. It is believed that CaCl2 accelerates the hydration of C2S and C3S, the strength-contributing components of the cement. On the other hand, the hydration of C<sub>3</sub>A is retarded. The optimum quantity of CaCl<sub>2</sub> to be used for such purposes is 1.5% by weight of the total weight of cement. However, if this is exceeded, the corrosion of the steel embedded in the concrete is promoted, especially if the concrete is less compact or porous.

- (5) Barium and strontium cements are obtained by replacing calcium by barium or stronium, So, such as a cement contains tribarium and dibarium silicates, instead of calcium silicates. Such cements show increased resistance to penetrations by radioactive radiations. Hence, they find extensive applications in concrete shields for atomic piles.
- (6) Silicate cements or acid-resistant cements are produced by mixing an inert acid-resisting aggregate (such as finely ground quartzite) with sodium or potassium or silicon ester, in suitable proportions. Their cementing propety is due to the precipitation of the silica gel, caused by adding suitable setting agents such as sodium silicon fluoride or ethyl acetate or by evaporation of water. The bond developed by silicate cement is hard, but also brittle. On drying, this cement becomes very porous and permeable to liquids. For this reason, it should always be kept wet or immersed in a liquid to prevent shrinking of the gel.
- (7) Water-proof cement: Such a cement is obtained by adding water-proofining substances (like calcium stearate, aluminium stearate and gypsum with tannic acid) to ordinary Portland cement, during grinding. The characteristics of such cements depend on the type and quantity of admixture added. A water-proof cement has to do two distinct functions, viz., (i) to make concrete impervious to water under pressure, and (ii) to resist the absorption of water. Chemically inactive substances added are like calcium soaps, aluminium soaps, resins, vegetable oils, waxes, coal-tar residues and bitumen, which acts as pore-blocking agents. These act as water-repelling agents. Moreover, they increase appreciably the resistance to the penetration of moisture.

Concrete is a building and structural material, obtained by mixing a binding material (cement or lime), ment mineral aggregates (sand, crushed stone, gravel, broken brick, slag, etc.) and water in a suitable proportion and which can be readily worked or moulded into almost any desired shape and when sel, it is compact, rigid, strong and durable.