



Property Calculations and Design Examples

Isolation Bearing Design

rivtbok Example

Proj. 0004



Contents

0.11 rivtbook Example	1
0.21 Shape Factor	2
0.31 Rubber Elastic Properties	6
0.41 Equivalent Viscous Damping	10
0.51 Hysteretic Damping	13
0.61 System Period	16



0.11 | rivtbook Example

A rivtbook is a collection of rivt files with a common subject and organized for selective addition to rivt docs and reports. A rivtbook may be published as a PDF or text report to facilitate review and selection of chapters.

rivtbooks do not need to be organized into divisions. A sequence of chapters is sufficient as chapters will be renumbered in the target report. The folder structure for rivtbooks facilitates copy-paste of chapters.

The rivt file and its source files are contained within the same folder (orange). A rivtbook chapter can be imported into a rivt report by copying the rivt file (blue) to the rivt-report folder and its source folders (green) to the rvsrc folder.

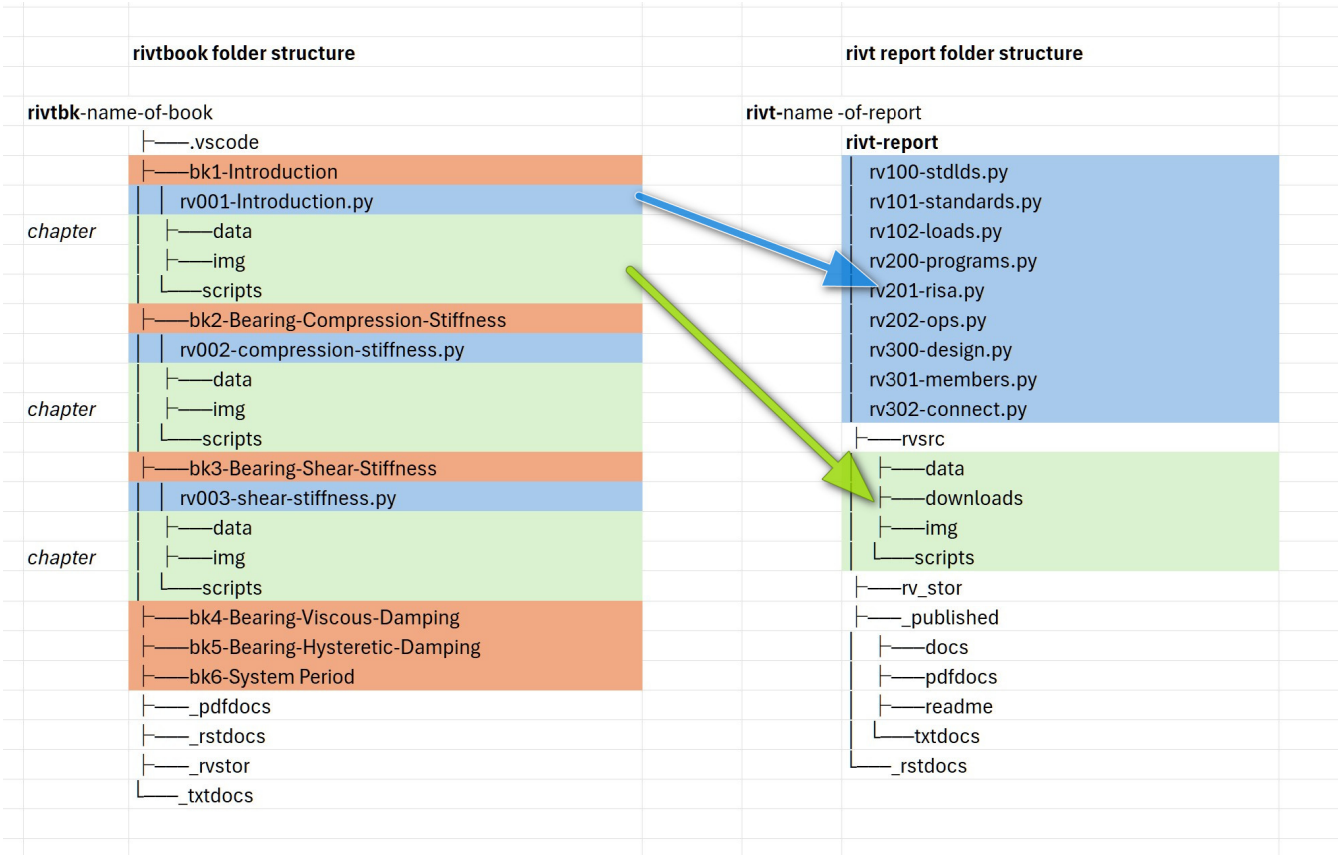


Fig. 1 - How to copy a rivtbook chapter to a rivt report



0.21 | Shape Factor

COMPRESSION BLOCK [0.2.1]

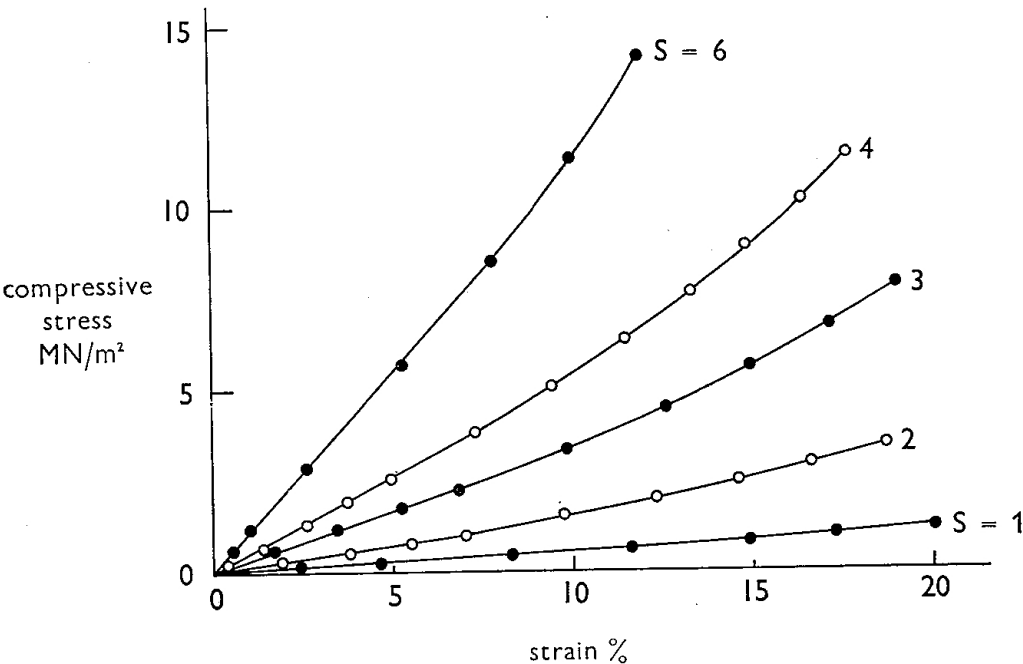


Fig. 27.—Effect of shape factor: Experimental stress-strain curves for 6.3 mm thick disks of rubber (47 IRHD) in compression. The shape factor is shown alongside each curve; the diameter in mm is 25.4 times the shape factor.

Fig. 1 - Shape Factor

Effect of shape factor: Experimental stress-strain curves for 6.3 mm thick disks of rubber (47 IRHD) in compression. The shape factor is shown alongside each curve; the diameter in mm is 25.4 times the shape factor.

The stiffness of rubber in compression, when the loaded surfaces are prevented from slipping (by bonding or by mechanical location), depends upon the shape factor S (see Fig. 1), defined as the ratio of one loaded area to the total force-free area, as shown in Fig. 2.



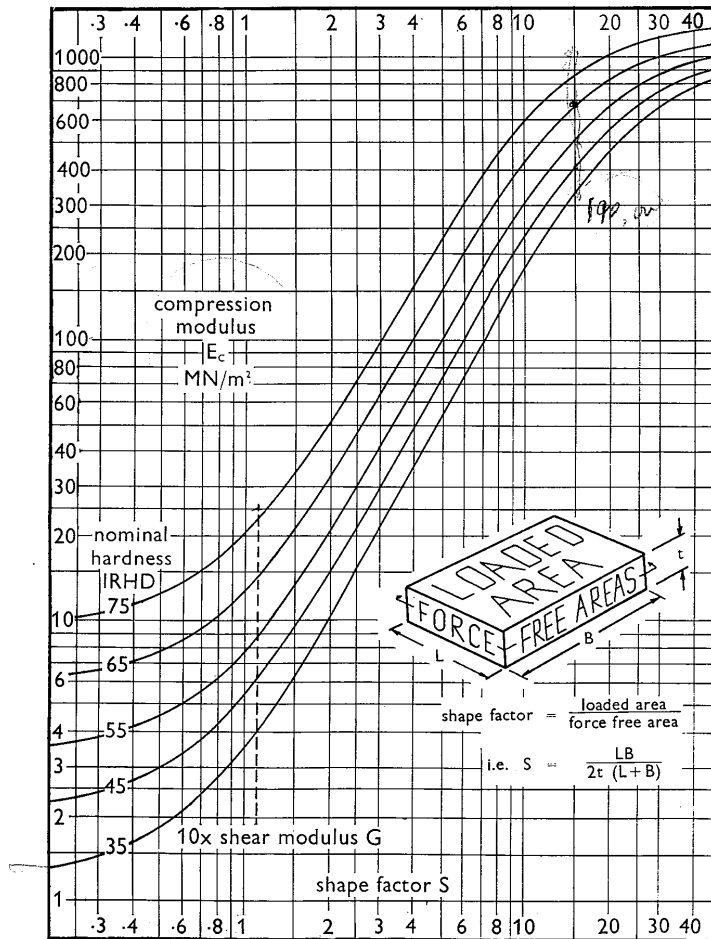


Fig. 28.—Variation of compression modulus E_c with shape factor S for natural rubbers of differing hardnesses (SRF black filler used for 55 IRHD and above).

* Although deformation due to bulk compression can normally be ignored, it can cause a noticeable reduction in E_c when the ratio E_c/E_∞ exceeds about 10%. (E_∞ is the modulus of bulk compression, from Table 3.) To allow for this reduction, use a modified compression modulus obtained by dividing E_c by $1+(E_c/E_\infty)$. If Wood and Martin's value for bulk modulus is preferred (see footnote to Table 2) then the E_∞ value in Table 3 should be doubled.

Fig. 2 - Compression Modulus

Variation of compression modulus E_c with shape factor S for natural rubbers of differing hardnesses (SRF black filler used for 55 IRHD and above). Chart shows compression modulus E_c (MN/m²) on the vertical axis (log scale, 1 to 1000) versus shape factor S on the horizontal axis (log scale, 0.3 to 40), with separate curves for nominal hardness values of 35, 45, 55, 65, and 75 IRHD, and a line labeled "10x shear modulus G ". An inset diagram illustrates a rubber block showing the "loaded area" (top and bottom faces) versus "force free areas" (side faces), with shape factor = loaded area / force free area, i.e. $S = (LB) / (2t(L+B))$.

Although deformation due to bulk compression can normally be ignored, it can cause a noticeable reduction in E_c when the ratio E_c/E_∞ exceeds about 10%. (E_∞ is the modulus of bulk compression, from Table 3.) To allow for this reduction, use a modified compression modulus obtained by dividing E_c by $1+(E_c/E_\infty)$. If Wood and Martin's value for bulk modulus is preferred (see footnote to Table 2) then the E_∞ value in Table 3 should be doubled.

0.2 - 22 | Modulus

$$S = (LB) / (2t(L+B))$$

S = shape factor t = thickness L = length B = breadth

For a block of square section (i.e. $L = B$) or circular section (diameter = L):

$$S = L / (4 \cdot t)$$

The compression modulus E_c depends upon the shape factor S (for derivation see Appendix).

$$E_c = E_0(1 + 2kS^2)$$

E_c = compression modulus E_0 = Young's modulus (from Table 3) S = shape factor k = a numerical factor (from Table 3)

See footnote on following page.

When $S > 3$ it may be more convenient to use

$$E_c \approx 5GS^2$$

where G is the shear modulus (from Table 3).

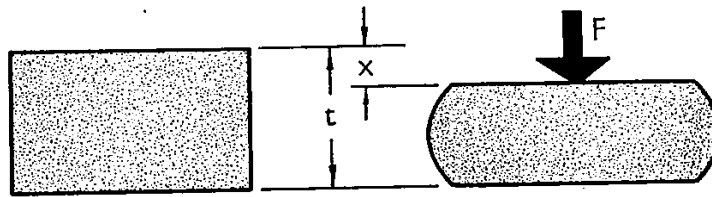


Fig. 29.—Rubber block in compression.

Fig. 3 - Compression Stiffness K_c

Rubber block in compression. Diagram shows a rectangular rubber block of thickness t , deflecting by x under a compressive load F applied to a cylindrical rubber sample.

The compression stiffness, K_c , is given by

$$K_c = F/x = E_c \cdot A/t$$

where F = compressive load E_c = compression modulus (corrected, if necessary, for the effect of bulk compression) A = cross-sectional area t = thickness x = deflexion

It is not advisable to rely on friction alone to prevent slip under a compressive load when using unbonded rubber parts, because slip may occur if $S > \mu/2$, where S is the shape factor and μ the coefficient of friction.

The load (F)—deflexion (x) curve of rubber in compression is non-linear. With no slip it has the approximate form

$$F = E_c A e \cdot (1 + e)$$

where e , the compressive strain, equals x/t . The non-linearity is usually ignored for strains up to about 10%.

There is as yet no method of calculating that a block will be stable but experience has shown that provided the thickness is less than one-quarter of the least plan dimension there should be no instability.

0.2 - 33 | Strip Analysis

COMPRESSION STRIP

When a long strip of rubber is compressed the strain in the direction of its length will be negligible.

Shape factor

$$S = b / (2 \cdot t)$$



IMAGE | img/fig30.png | Compression Strip, 80, num, not

Diagram shows a long rectangular strip of rubber of width b , thickness t , and unit length, compressed by a load F applied per unit length.

Compression modulus E_c

$$E_c = 4E_0(1 + kS^2) / 3$$

The compression stiffness per unit length, K_c , is given by

$$K_c = F/x = E_c b/t = (4bE_0(1 + kS^2)) / (3t)$$

where F = load per unit length E_c = compression modulus (corrected, if necessary, for the effect of bulk compression) E_0 = Young's modulus (from Table 3) b = width of strip t = thickness of strip x = deflexion k = a numerical factor (from Table 3) S = shape factor

The load per unit length (F)—deflexion (x) curve for a compressed strip is non-linear. It has the approximate form

$$F = E_c b e (1 + 3e/2)$$

where e , the compressive strain, equals x/t . As in the case of blocks, the non-linearity is usually ignored for strains up to about 10%.

[0.2.1]

P.B. Lindley, Engineering Design with Natural Rubber, NR Technical Bulletin. Malaysian Rubber Producers' Research Association, Brickendonbury, U.K.



0.31 | Rubber Elastic Properties

Table 1: IRHD hardness scale (MN/m²)

Hardness IRHD +/-2	Young's modulus E, MN/m ²	Shear modulus G, MN/m ²	k	Bulk modulus B(inf), MN/m ²
30	0.92	0.30	0.93	1000
35	1.18	0.37	0.89	1000
40	1.50	0.45	0.85	1000
45	1.80	0.54	0.80	1000
50	2.20	0.64	0.73	1030
55	3.25	0.81	0.64	1090
60	4.45	1.06	0.57	1150
65	5.85	1.37	0.54	1210
70	7.35	1.73	0.53	1270
75	9.40	2.22	0.52	1330

Table 2: Shore A hardness scale (lbf/in²)

Shore A (approx.)	Young's modulus lbf/in ²	Shear modulus lbf/in ²	k	Bulk modulus lbf/in ²
35	168	53	0.89	142 000
45	256	76	0.80	142 000
55	460	115	0.64	154 000
65	830	195	0.54	171 000
75	1340	317	0.52	189 000

Note

1. The majority of springs are in the hardness range 40-60 IRHD.
2. Theoretically, with a Poisson's ratio of 1/2, B should equal 3G. This is true for soft gum rubbers. For harder rubbers containing a fair proportion of non-rubber constituents, thixotropic and other effects increase 3G to about 4G.

0.3 - 22 | Shear Stiffness Example

Table 3: Bearing Specifications

variable	value	[value]	description
G_1	58.00 p_si	0.40 MPA	shear modulus
K_1	200000.00 p_si	1378.95 MPA	bulk modulus
rn1	51	51	number of rubber layers
rdia	39.50 inch	100.33 cm	bearing diameter
rthk	0.40 inch	1.02 cm	layer thickness



variable	value	[value]	description
sdia	38.00 inch	96.52 cm	shim diameter
sthk	0.09 inch	0.23 cm	11 guage shim thickness
cpi	3.1418	3.1418	contant pi

Bearing Stiffness for Circular Bearing

Eq. 1: rubber height

$$rht = rnl \cdot rthk$$

$$rht = 20.40 \text{ inch} \quad [rht] = 51.82 \text{ cm} \quad | \text{ rubber height}$$

rnl	rthk
51	0.40 inch
number of rubber layers	layer thickness
	-

Eq. 2: bearing height

$$bht = rht + sthk \cdot (rnl - 1)$$

$$bht = 24.95 \text{ inch} \quad [bht] = 63.37 \text{ cm} \quad | \text{ bearing height}$$

rnl	rht	sthk
51	20.40 inch	0.09 inch
number of rubber layers	rubber height	11 guage shim thickness
	-	

Eq. 3: shear stiffness

$$K_{s1} = \frac{G_1 \cdot cpi \cdot rdia^2}{4 \cdot rht}$$

$$K_{s1} = 3.48 \text{ k_in} \quad [K_{s1}] = 6.10 \text{ kN_cm} \quad | \text{ shear stiffness}$$

G ₁	rdia	rht	cpi
58.00 p_si	39.50 inch	20.40 inch	3.1418



<u>shear modulus</u>	<u>bearing diameter</u>	<u>rubber height</u>	<u>constant pi</u>
----------------------	-------------------------	----------------------	--------------------

Shape Factor for Circular Bearing

Eq. 4: shape factor 1

$sh_{1\ 1} = \frac{sdia}{4 \cdot rthk}$	
$sh_{1\ 1} = 24$	$[sh_{1\ 1}] = 24$ shape factor 1
<u>sdia</u>	<u>rthk</u>
<u>38 inch</u>	<u>0 inch</u>
<u>shim diameter</u>	<u>layer thickness</u>

Eq. 5: shape factor 2

$sh_{2\ 1} = \frac{bht}{rdia}$	
$sh_{2\ 1} = 1$	$[sh_{2\ 1}] = 1$ shape factor 2
<u>rdia</u>	<u>bht</u>
<u>40 inch</u>	<u>25 inch</u>
<u>bearing diameter</u>	<u>bearing height</u>

0.3 - 33 | shear

Natural Frequency

The natural frequency (n_f) in Hz of a mounted body on a spring is

$n_f = 5 / \sqrt{x}$

where x is the effective deflexion of the spring in centimetres. The effective deflexion is affected (and usually decreases) by the amplitude effect and by non-linear springs (Fig. 16).

[Figure: fig16 _static_load_deformation_curve.png] Fig. 16.-OAB is a 'static' load deformation curve. Its exact position and shape will depend on the amount of structure breakdown. The static stiffness at A is the slope of the tangent AC. When a dynamic, small amplitude deformation ED is superimposed on the static deformation at A its



stiffness is the slope of AF. Thus the effective dynamic deformation FG is smaller than CG or OG, and the natural frequency will be higher than that predicted from static behaviour. C and F are generally closer to O than illustrated, especially with gum and lightly-filled natural rubber vulcanizates.

[Figure: fig17_transmissibility_graph.png] Fig. 17.-The transmissibility of a natural rubber containing 40 parts by weight of carbon black. Temperature 19 degrees C. Experimental data of Snowdon, J. C., Brit. J. Appl. Phys, 1958, 9, 461-9. The full line is the theoretical relationship for no damping.

Transmissibility

Transmissibility (T) is the ratio of the amplitude of the vibration on the 'protected' side of the spring to that of the disturbing vibration, or when the spring is on a rigid base, the ratio of the corresponding forces. T depends on the ratio of the disturbing frequency n to the natural frequency n_f of the mounted system (see above).

Under normal operating conditions when $n > 3 \cdot n_f$ natural rubber gives attenuation comparable with materials having no damping (Fig. 17). At resonance, when $n = n_f$, the small amount of damping in natural rubber prevents the peak value of T becoming excessive.

Stiffness Characteristics

A mathematical theory of rubber-like elasticity has been developed for elastic deformations of up to several hundred per cent. The theory applies strictly only to ideal rubbers, which are completely reversible, incompressible and isotropic, but in practice actual rubber springs have been shown to conform quite well. The behaviour of certain kinds of rubber spring may therefore be calculated for deformations of any practicable amount.

However, when the deformation is complex, an exact solution may be unattainable. In some of these cases approximate relationships can be derived from the classical theory of elasticity. This theory, which is the basis of standard engineering practice, only applies to materials in which the strains are very small (a few per cent), but the errors introduced by extrapolation to strains of the order of 10-20% are not excessive. In the stiffness equations which follow, terms beyond the first have only been given where their contribution is likely to exceed the variability of the elastic constants. Calculated stiffnesses should be within $\pm 15\%$ of the actual stiffness in most cases; small adjustments can be obtained by slight changes of rubber hardness.

In general, stiffness is particular to a given direction, the stiffnesses in other directions may sometimes be an order of magnitude different as, for example, in bridge bearings. By the suitable selection and location of two or more units the stiffness of a composite spring in three different directions can be varied independently. The design of such springs, of which the inclined shear mounting is a typical example, requires only a knowledge of mechanics and the principal stiffnesses of the units.

SHEAR MOUNTING

[Figure: fig18_shear_mounting.png] Fig. 18. Shear mounting.



0.41 | Equivalent Viscous Damping

Equivalent viscous damping is the simplest form of damping for analysis since the governing differential equation of motion is linear and hence amenable to analytical solution. This section determines the damping coefficient for viscous damping so that it is equivalent in some sense to the combined effect of all damping mechanisms present in the actual structure. [0.4.1]

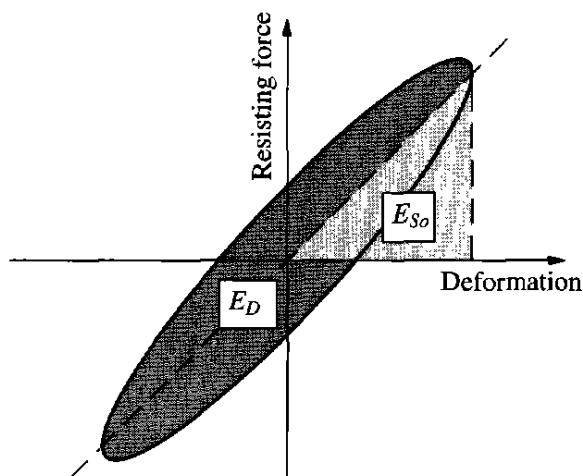


Fig. 1 - Viscous Damping Model

The simplest definition of equivalent viscous damping is based on the measured response of a system to harmonic force at exciting frequency ω equal to the natural frequency ω_n of the system. The damping ratio ζ_{eq} is calculated from Eq. (3.4.1) using measured values of u_o and $(u_{st})_o$. This is the equivalent viscous damping since it accounts for all the energy-dissipating mechanisms that existed in the experiments.

0.4 - 22 | New Section

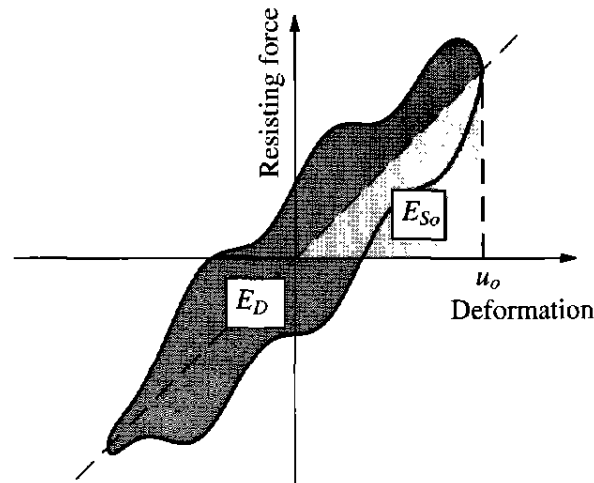


Fig. 2 - Viscous Damping Model

[Figure 3.9.1 - image file: figures/fig_3_9_1.png - Plot of Resisting force (vertical axis) versus Deformation (horizontal axis), showing an irregularly shaped hysteresis loop determined from experiment. The area E_D is the energy dissipated in a cycle of harmonic vibration, the area E_{So} is the maximum strain energy, and u_o marks the deformation amplitude on the horizontal axis.]

The most common method for defining equivalent viscous damping is to equate the energy dissipated in a vibration cycle of the actual structure and an equivalent viscous system. For an actual structure the force-displacement relation obtained from an experiment under cyclic loading with displacement amplitude u_o is determined; such a relation of arbitrary shape is shown schematically in Fig. 3.9.1. The energy dissipated in the actual structure is given by the area E_D enclosed by the hysteresis loop. Equating this to the energy dissipated in viscous damping given by Eq. (3.8.1) leads to

Eq.1

$$4\pi\zeta_{eq}\frac{\omega}{\omega_n}E_{So} = E_D$$

or, equivalently,

Eq.2:

$$\zeta_{eq} = \frac{1}{4\pi} \cdot \frac{1}{\left(\frac{\omega}{\omega_n}\right)} \cdot \frac{E_D}{E_{So}}$$

where the strain energy, $E_{So} = ku_o^2/2$, is calculated from the stiffness k determined by experiment.

The experiment leading to the force-deformation curve of Fig. 3.9.1 and hence E_D should be conducted at $\omega = \omega_n$, where the response of the system is most sensitive to damping. Thus Eq. (3.9.1) specializes to

$$\zeta_{eq} = (1/(4\pi)) (E_D/E_{So}) \dots (3.9.2)$$

The damping ratio ζ_{eq} determined from a test at $\omega = \omega_n$ would not be correct at any other exciting frequency, but it would be a satisfactory approximation (Section 3.10.2).

It is widely accepted that this procedure can be extended to model the damping in systems with many degrees of freedom. An equivalent viscous damping ratio is assigned to each natural vibration mode of the system (defined in Chapter 10) in such a way that the energy dissipated in viscous damping matches the actual energy dissipated in the system when the system vibrates in that mode at its natural frequency.

In this book the concept of equivalent viscous damping is restricted to systems vibrating at amplitudes within the linearly elastic limit of the overall structure. The energy dissipated in inelastic deformations of the structure have also been modeled as equivalent viscous damping in some research studies. This idealization is generally not satisfactory, however, for the large inelastic deformations of structures expected during strong earthquakes. We shall account for these inelastic deformations and the associated energy dissipation by nonlinear force-deformation relations, such as those shown in Fig. 1.3.4 (see Chapters 5 and 7).

[0.4.1]

Anil K. Chopra, Dynamics of Structures: Theory and Applications to Earthquake Engineering. Englewood Cliffs, NJ, USA: Prentice Hall, 1995.



0.51 | Hysteretic Damping

3.10 HARMONIC VIBRATION WITH RATE-INDEPENDENT DAMPING [0.5.1]

3.10.1 Rate-Independent Damping

Experiments on structural metals indicate that the energy dissipated internally in cyclic straining of the material is essentially independent of the cyclic frequency. Similarly, forced vibration tests on structures indicate that the equivalent viscous damping ratio is roughly the same for all natural modes and frequencies. Thus we refer to this type of damping as rate-independent linear damping. Other terms used for this mechanism of internal damping are structural damping, solid damping, and hysteretic damping. We prefer not to use these terms because the first two are not especially meaningful and the third is ambiguous because hysteresis is a characteristic of all materials or structural systems that dissipate energy.

Rate-independent damping is associated with static hysteresis due to plastic strain, localized plastic deformation, crystal plasticity, and plastic flow in a range of stresses within the apparent elastic limit. On the microscopic scale the inhomogeneity of stress distribution within crystals and stress concentration at crystal boundary intersections produce local stress high enough to cause local plastic strain even though the average “global” stress may be well below the elastic limit. This damping mechanism does not include the energy dissipation in global plastic deformations, which, as mentioned earlier, is handled by a nonlinear relationship between force f_S and deformation u .

The simplest device that can be used to represent rate-independent linear damping is to assume that the damping force is proportional to velocity and inversely proportional to frequency:

$$f_D = (\eta k / \omega) \dot{u} \dots (3.10.1)$$

where k is the stiffness of the structure and η is a damping coefficient. The energy dissipated by this type of damping in a cycle of vibration at frequency ω is independent of ω (Fig. 3.10.1). It is given by Eq. (3.8.1) with c replaced by $\eta k / \omega$:

$$ED = \pi \eta k u_0^2 = 2\pi \eta E_S o \dots (3.10.2)$$

In contrast, the energy dissipated in viscous damping increases linearly with the forcing frequency, as shown in Fig. 3.10.1.

Rate-independent damping is easily described if the excitation is harmonic and we are interested only in the steady-state response of this system. Difficulties arise in translating this damping mechanism back to the time domain. Thus it is most useful in the frequency-domain method of analysis (Section 1.10.3). The complex term $k(1 + i\eta)/\omega$ represents both the elastic and damping forces at the same time; $k(1 + i\eta)$ is the complex stiffness of the system. There are advantages in this terminology if the reader is familiar with complex-variable notation. The complex stiffness has no physical meaning, however, in the same engineering sense as the elastic stiffness.

[Figure 3.10.1 - Energy dissipated in viscous damping and rate-independent damping. Plot of energy dissipated ED (vertical axis) versus forcing frequency ω (horizontal axis). A straight line through the origin, labeled “Viscous damping,” rises linearly with ω . A horizontal line, labeled “Rate-independent damping,” stays constant with ω . The two lines cross at $\omega = \omega_n$. Image file: images/fig_3.10.1_energy_dissipated.png]

3.10.2 Steady-State Response to Harmonic Force

The equation for an SDF system with rate-independent linear damping, denoted by a crossed box in Fig. 3.10.2, is Eq. (3.2.1) with the damping term replaced by Eq. (3.10.1):

$$m\ddot{u} + (\eta k / \omega)\dot{u} + ku = p(t) \dots (3.10.3)$$

The mathematical solution of this equation is quite complex for arbitrary $p(t)$. Here we consider only the steady-state motion due to a sinusoidal forcing function, $p(t) = p_0 \sin(\omega t)$, which is described by

$$u(t) = u_0 \sin(\omega t - \phi) \dots (3.10.4)$$

The amplitude u_0 and phase angle ϕ are

$$u_0 = (u_{st})_0 \frac{1}{\sqrt{(1 - (\omega/\omega_n)^2)^2 + \eta^2}} \dots (3.10.5)$$

$$\phi = \arctan(\eta / (1 - (\omega/\omega_n)^2)) \dots (3.10.6)$$



These results are obtained by modifying the viscous damping ratio in Eqs. (3.2.11) and (3.2.12) to reflect the damping force associated with rate-independent damping, Eq. (3.10.1). In particular, ζ was replaced by

$$\zeta = c/c_c = (\eta k/\omega) / (2m\omega_n) = \eta / (2(\omega/\omega_n)) \dots (3.10.7)$$

Shown in Fig. 3.10.3 by solid lines are plots of $u_0/(u_{st})_0$ and ϕ as a function of the frequency ratio ω/ω_n for damping coefficient $\eta = 0, 0.2$, and 0.4 ; the dashed lines are described in the next section. Comparing these results with those in Fig. 3.2.6 for viscous damping, two differences are apparent: First, resonance (maximum amplitude) occurs at $\omega = \omega_n$, not at $\omega < \omega_n$. Second, the phase angle for $\omega = 0$ is $\phi = \arctan(\eta)$ instead of zero for viscous damping; this implies that motion with rate-independent damping can never be in phase with the forcing function.

These differences between forced vibration with rate-independent damping and forced vibration with viscous damping are not significant, but they are the source of some difficulty in reconciling physical data. In most damped vibration, damping is not viscous, and to assume that it is without knowing its real physical characteristics is an assumption of some error. In the next section this error is shown to be small when the real damping is rate independent.

[Figure 3.10.2 - SDF system with rate-independent linear damping. Schematic: a mass m rests on a friction-free surface (shown with rollers), connected to a fixed wall by a spring of stiffness k and, in parallel, a crossed-box symbol labeled η (representing the rate-independent damping element). The mass displaces by u (arrow pointing right, labeled “ u ”) under applied force $p(t)$ (arrow pointing right, labeled “ $p(t)$ ”). Image file: images/fig_3.10.2_sdf_system.png]

[Figure 3.10.3 - Response of system with rate-independent damping: exact solution and approximate solution using equivalent viscous damping. Top plot: Deformation response factor $R_d = u_0/(u_{st})_0$ (vertical axis, 0 to 5) versus frequency ratio ω/ω_n (horizontal axis, 0 to 3). Solid curves show rate-independent damping for $\eta = \zeta = 0$ (sharp peak at $R_d = 5$ at $\omega/\omega_n = 1$), $\zeta = 0.1$ with $\eta = 0.2$ (lower peak), and $\zeta = 0.2$ with $\eta = 0.4$ (peak near $R_d = 2.5$). Dashed curves show the equivalent-viscous-damping approximation overlaid on each case. Bottom plot: Phase angle ϕ (vertical axis, 0° to 180°) versus the same frequency ratio ω/ω_n . Curves rise from a small angle at $\omega/\omega_n = 0$, pass through 90° at $\omega/\omega_n = 1$, and approach 180° for large ω/ω_n , again with solid (rate-independent) and dashed (equivalent viscous) curves for $\eta = \zeta = 0$, $\eta = 0.2/\zeta = 0.1$, and $\eta = 0.4/\zeta = 0.2$. Image file: images/fig_3.10.3_response_factor.png]

3.10.3 Solution Using Equivalent Viscous Damping

In this section an approximate solution for the steady-state harmonic response of a system with rate-independent damping is obtained by modeling this damping mechanism as equivalent viscous damping.

Matching dissipated energies at $\omega = \omega_n$ (Fig. 3.10.1) led to Eq. (3.9.2), where ED is given by Eq. (3.10.2), leading to the equivalent viscous damping ratio:

$$\zeta_{eq} = \eta/2 \dots (3.10.8)$$

Substituting this ζ_{eq} for ζ in Eqs. (3.2.10) to (3.2.12) gives the system response. The resulting amplitude u_0 and phase angle ϕ are shown by the dashed lines in Fig. 3.10.3. This approximate solution matches the exact result at $\omega = \omega_n$ because that was the criterion used in selecting ζ_{eq} . Over a wide range of excitation frequencies the approximate solution is seen to be accurate enough for many engineering applications. Thus Eq. (3.10.3) - which is difficult to solve for arbitrary force $p(t)$ that contains many harmonic components of different frequencies ω - can be replaced by the simpler Eq. (3.2.1) for a system with equivalent viscous damping defined by Eq. (3.10.8). This is the basic advantage of equivalent viscous damping.

3.11 HARMONIC VIBRATION WITH COULOMB FRICTION

3.11.1 Equation of Motion

Shown in Fig. 3.11.1 is a mass-spring system with Coulomb friction force $F = \mu N$ that opposes sliding of the mass. As defined in Section 2.4, the coefficients of static and kinetic friction are assumed to be equal to μ , and N is the normal force across the sliding surfaces. The equation of motion is obtained by including the exciting force in Eqs. (2.4.1) and (2.4.2) governing the free vibration of the system:

$$m\ddot{u} + ku \pm F = p(t) \dots (3.11.1)$$



The sign of the friction force changes with the direction of motion; the positive sign applies if the motion is from left to right ($\dot{u} > 0$) and the negative sign is for motion from right to left ($\dot{u} < 0$). Each of the two differential equations is linear, but the overall problem is nonlinear because the governing equation changes every half-cycle of motion. Therefore, exact analytical solutions would not be possible except in special cases.

[Figure 3.11.1 - SDF system with Coulomb friction. Schematic: a mass m , connected to a fixed wall by a spring of stiffness k , rests on a surface exerting friction force $\pm F$. The mass is subjected to applied force $p(t)$ (arrow pointing right, labeled “ $p(t)$ ”). Image file: images/fig_3.11.1_coulomb_friction_sdf.png]

3.11.2 Steady-State Response to Harmonic Force

An exact analytical solution for the steady-state response of the system of Fig. 3.11.1 subjected to harmonic force was developed by J. P. Den Hartog in 1933. The analysis is not included here, but his results are shown by solid lines in Fig. 3.11.2; the

dashed lines are described in the next section. The displacement amplitude u_0 , normalized relative to $(u_{st})_0 = p_0/k$, and the phase angle ϕ are plotted as a function of the frequency ratio ω/ω_n for three values of F/p_0 . If there is no friction, $F = 0$ and $u_0/(u_{st})_0 = (Rd)_\zeta=0$, the same as in Eq. (3.1.11) for an undamped system. The friction force reduces the displacement amplitude u_0 , with the reduction depending on the frequency ratio ω/ω_n .

[Figure 3.11.2 - Deformation response factor and phase angle of a system with Coulomb friction excited by harmonic force. Exact solution from J. P. Den Hartog; approximate solution is based on equivalent viscous damping. Top plot: Deformation response factor $Rd = u_0/(u_{st})_0$ (vertical axis, 0 to 3.5) versus frequency ratio ω/ω_n (horizontal axis, 0 to 2.0). Solid curves (Coulomb friction) are shown for $F/p_0 = 0, 0.5, 0.7, \pi/4$, and 0.8 , each rising to a peak near $\omega/\omega_n = 1$ and diverging to infinity at $\omega/\omega_n = 1$ for the lower friction values; the $F/p_0 = 0.8$ curve shows a rounded peak around $Rd \approx 1.6$ near $\omega/\omega_n \approx 0.85$ and then drops off. Dashed curves (equivalent viscous damping) approximate each solid curve. Bottom plot: Phase angle ϕ (vertical axis, 0° to 180°) versus the same frequency ratio. Curves for $F/p_0 = 0$ ($\phi = 0$ for $\omega/\omega_n < 1$, jumping to $\sim 180^\circ$ above resonance), and for $F/p_0 = 0.5, 0.7, 0.8$, with corresponding dashed equivalent-viscous-damping approximations. Image file: images/fig_3.11.2_coulomb_response.png]

[0.5.1]

Anil K. Anil K. Chopra, Dynamics of Structures: Theory and Applications to Earthquake Engineering. Englewood Cliffs, NJ, USA: Prentice Hall, 1995.



0.61 | System Period

CLOUGH, PENZIEN - Dynamics of Structures, page 178

Use flexibility formulation [\[0.6.1\]](#) (see page 182)

Also see [\[0.6.2\]](#)

calioPY Procedure Output - Example 6 This example illustrates arrays and plotting.

```
1. set up mass and stiffness arrays m = PL.array([[1.0,0.0],[0,1.5,0],[0,0,2.0]],float) [1] k1 =
600·PL.array([[1,-1,0.0],[-1,3,-2],[0,-2,5]],float) [2]
2. flexibility and dynamic matrix f = PL.inv(k1) [3] d = PL.inner(f,m) [4]
3. eigenvalues eigen = PL.eig(d) [5] evalu = eigen[0] [6] . evalu = [ 0.00474 0.00104 0.00047] nat_freq =
1/(evalu^.5) [7] . nat_freq = [ 14.52482 31.00868 46.12656]
4. normalize and scale eigenvectors evec = PL.array(eigen[1]) [8] . evec = [[-0.813 -0.739 0.273] [-0.527 0.449
-0.694] [-0.246 0.502 0.666]]
[py] for i in range(len(nat_freq)): [py] evecct = PL.transpose(evec) [py] evecct[i] = evecct[i]/evecct[i][0]
```

0.6 - 22 | Eigenvectors and Eigenvalues

normalized eigenvectors

```
[[ 1. 0.648 0.303] [ 1. -0.608 -0.679] [ 1. -2.542 2.44 ]] SUMMARY TABLES
```

mass matrix 1.0 0.0 0.0 0.0 1.5 0.0 0.0 0.0 2.0

stiffness matrix 600.0 -600.0 0.0 -600.0 1800.0 -1200.0 0.0 -1200.0 3000.0

flexibility matrix 0.0031 0.0014 0.0006 0.0014 0.0014 0.0006 0.0006 0.0006 0.0006

dynamic matrix 0.003 0.002 0.001 0.001 0.002 0.001 0.001 0.001 0.001

```
xx = NP.concatenate((evals,evec),1) yy = ["freq","level 3","level 2","level 1"] tt = NP.vstack((yy,xx)) . tt =
[['freq' 'level 3' 'level 2' 'level 1' ['14.52482' '1.0' '1.0' '1.0'] ['31.00868' '0.648' '-0.608' '-2.542'] ['46.12656'
'0.303' '-0.679' '2.44']]
```

eigenvectors and eigenvalues freq level 3 level 2 level 1 14.52482 1.0 1.0 1.0 31.00868 0.648 -0.608 -2.542
46.12656 0.303 -0.679 2.44



0.6 - 33 | Plot Mode Shapes

```

1. set up mass and stiffness arrays
[1] m = PL.array([[1.0,0,0],[0,1.5,0],[0,0,2.0]],float)
[2] k1 = 600*PL.array([[1,-1,0.0],[-1,3,-2],[0,-2,5])

2. flexibility and dynamic matrix
[3] f = PL.inv(k1)
[4] d = PL.inner(f,m)

3. eigenvalues
[5] eigen = PL.eig(d)
[6] evalu = eigen[0] ?5
[7] nat_freq = 1/(evalu**.5) ?5

4. normalize and scale eigenvectors
[8] evec = PL.array(eigen[1]) ?

-pycode-
for i in range(len(nat_freq)):
    evec = PL.transpose(evec)
    evec[i] = evec[i]/evec[i][0]
-insert-

normalized eigenvectors
[] evec ?3

SUMMARY TABLES

-table-02 m ?4; mass matrix;

-table-02 k1 ?4; stiffness matrix;

-table-02 f ?4; flexibility matrix ;

-table-02 d ?3; dynamic matrix ;

-k-
# use reshape to transpose 1d array (list)

evals=PL.reshape(nat_freq, (len(nat_freq),1))
xx = NP.concatenate((evals,evec),1)
yy = ["freq","level 3","level 2","level 1"]
tt = NP.vstack((yy,xx)) ?
-table-01 tt ?3; eigenvectors and eigenvalues;
.
# initialize eigenvector array (need (x,1) shapes for plotting
ms = PL.shape(evec)
zz = PL.zeros((ms[0],1))
x1=PL.concatenate((evec,zz),1)
-pycode-
#plot mode shapes using pylab
y=PL.array([0,1,2,3])
m3=x1[2]*.35+3

```



```
m2=x1[1]*.35+2
m1=x1[0]*.35+1
m=PL.concatenate((m1,m2,m3))
PL.clf()
PL.plot(m1,y)
PL.plot(m2,y)
PL.plot(m3,y)
PL.xlim(.5,4.)
PL.xlabel('mode')
PL.ylabel('levels')
PL.title("Mode Shapes
gh\Penzien (page 178)")
PL.grid()
PL.savefig(_cypath+"/figs/p178a.png")
```

[0.6.1]

R.W. Clough and J. Penzien, Dynamics of Structures. New York, NY, USA:McGraw-Hill, 1975.

[0.6.2]

Anil K. Chopra, Dynamics of Structures: Theory and Applications to Earthquake Engineering. Englewood Cliffs, NJ, USA: Prentice Hall, 1995.

