


LoRa Concentrator EVK 20x2 Pinout details



CON1 Pin out

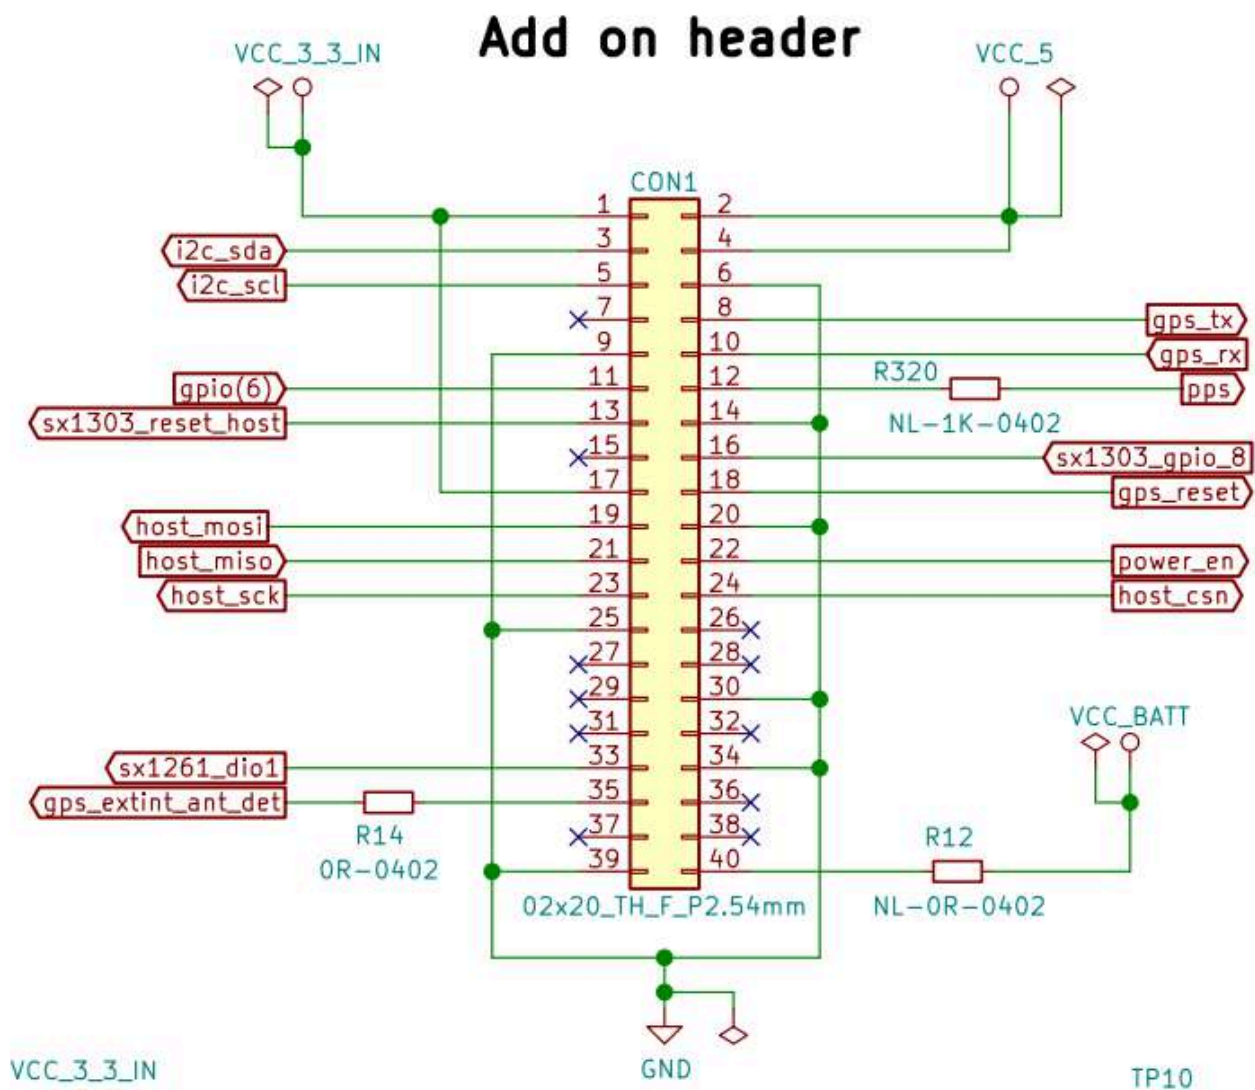

Sr No	CON1 pin number	Pin details	Description
1	CON1.1	VCC_3_3_IN	3.3 V Supply Voltage
2	CON1.2	VCC_5	5 V Supply Voltage
3	CON1.3	i2c_sda	I ² C SDA, Connect with Temperature Sensor AT30TS74-XM8M-B
4	CON1.4	VCC_5	5 V Supply Voltage
5	CON1.5	i2c_scl	I ² C SCL, Connect with Temperature Sensor AT30TS74-XM8M-B
6	CON1.6	GND	Ground
7	CON1.7	NC	No Connection
8	CON1.8	gps_tx	Connected to GPS Module's UART_RXD
9	CON1.9	GND	No Connection
10	CON1.10	gps_rx	Connected to GPS Module's UART_TXD
11	CON1.11	Gpio(6)	Connected with SX1303's GPIO6 pin
12	CON1.12	pps	Connected with SX1303's PPS pin
13	CON1.13	sx1303_reset_host	Connected with SX1303's reset pin
14	CON1.14	GND	Ground
15	CON1.15	NC	No Connection
16	CON1.16	sx1303_gpio_8	Connected with SX1303's GPIO6 pin
17	CON1.17	VCC_3_3_IN	3.3 V Supply Voltage
18	CON1.18	gps_reset	Connected with GPS reset pin
19	CON1.19	host_mosi	Connected to SX1301's SPI_MOSI
20	CON1.20	GND	Ground

21	CON1.21	host_miso	Connected to SX1301's SPI_MISO
22	CON1.22	power_en	Connected with LDO Enable pin.
23	CON1.23	host_sck	Connected to SX1301's SPI_CLK
24	CON1.24	host_csn	Connected to SX1301's SPI_CS.
25	CON1.25	GND	Ground
26	CON1.26	NC	No Connection
27	CON1.27	NC	No Connection
28	CON1.28	NC	No Connection
29	CON1.29	NC	No Connection
30	CON1.30	GND	Ground
31	CON1.31	NC	No Connection
32	CON1.32	NC	No Connection
33	CON1.33	sx1261_dio1	Connected with SX1303's GPIO7 pin
34	CON1.34	GND	Ground
35	CON1.35	gps_extint_ant _det	Connected with GPS's External interrupt pin
36	CON1.36	NC	No Connection
37	CON1.37	NC	No Connection
38	CON1.38	NC	No Connection
39	CON1.39	GND	Ground
40	CON1.40	VCC_BATT	Connected with GPS's Backup battery voltage pin (Voltage Range: 1.4V to 3.6V)