



TOOL BOX

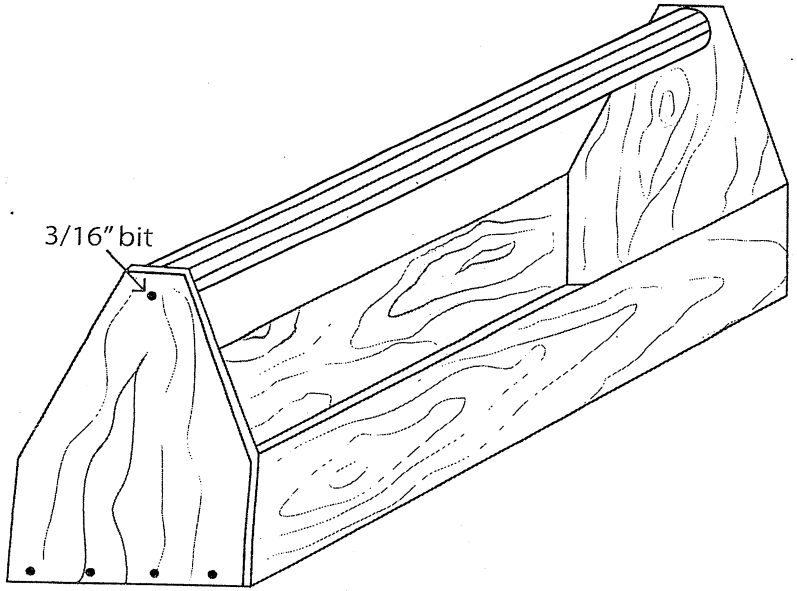


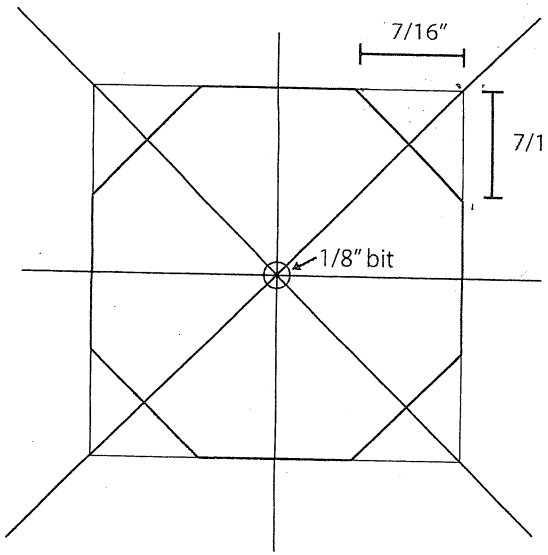


Dowels will be drilled on center of each end before assembled with 2 1/2" screws

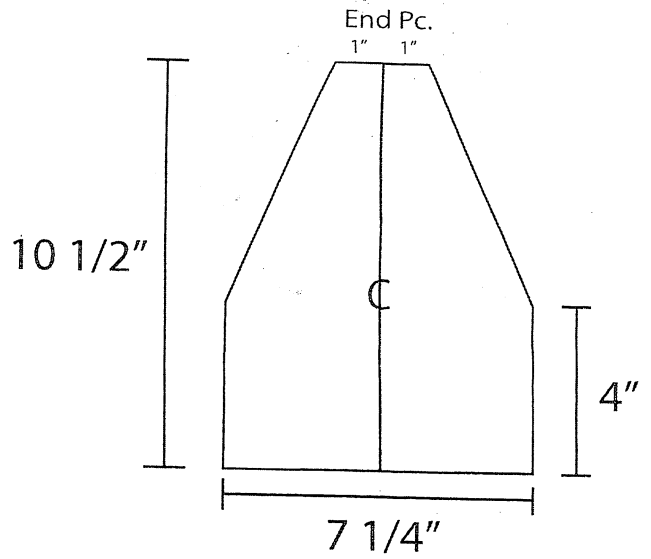

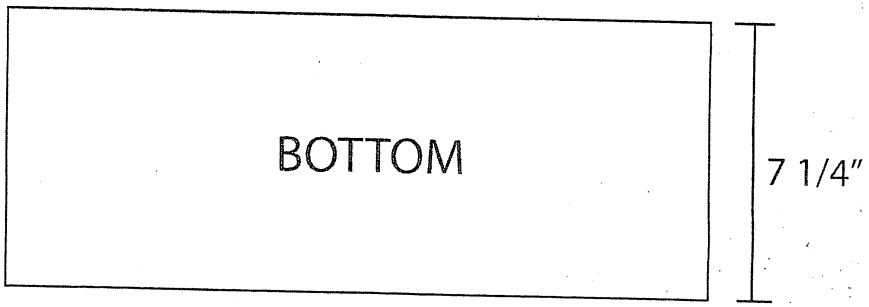

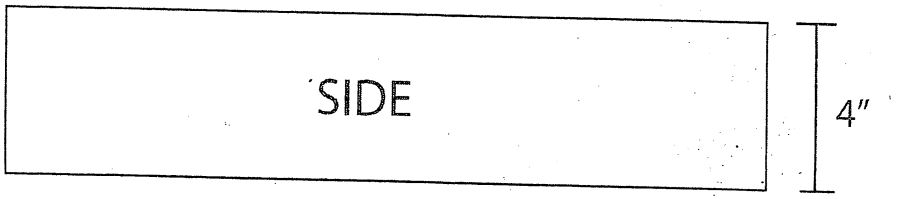

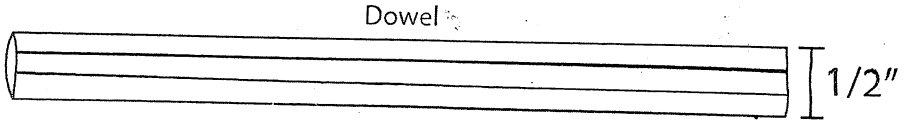


DOWEL INSTRUCTIONS


* Find center on each end of dowel
* Mark 7/16" along the sides of dowel on both sides of all 4 edges from end to end
* Use block plane to bring edges down to lines made

Tool Box Assembly Instructions:

1. Nail end pieces to bottom pc. with 6D common nails. Space nails as instructed in pic. 1
2. Drill a hole 7/8" down from top of end piece on center for screw.
3. Drill a hole on each end of dowel on center for screw.
4. Assemble the dowel on the box with a 2 1/2" screw on each end.
5. Glue and nail side pieces ono box using 4D box nails. Space nails as instructed in pic. 2

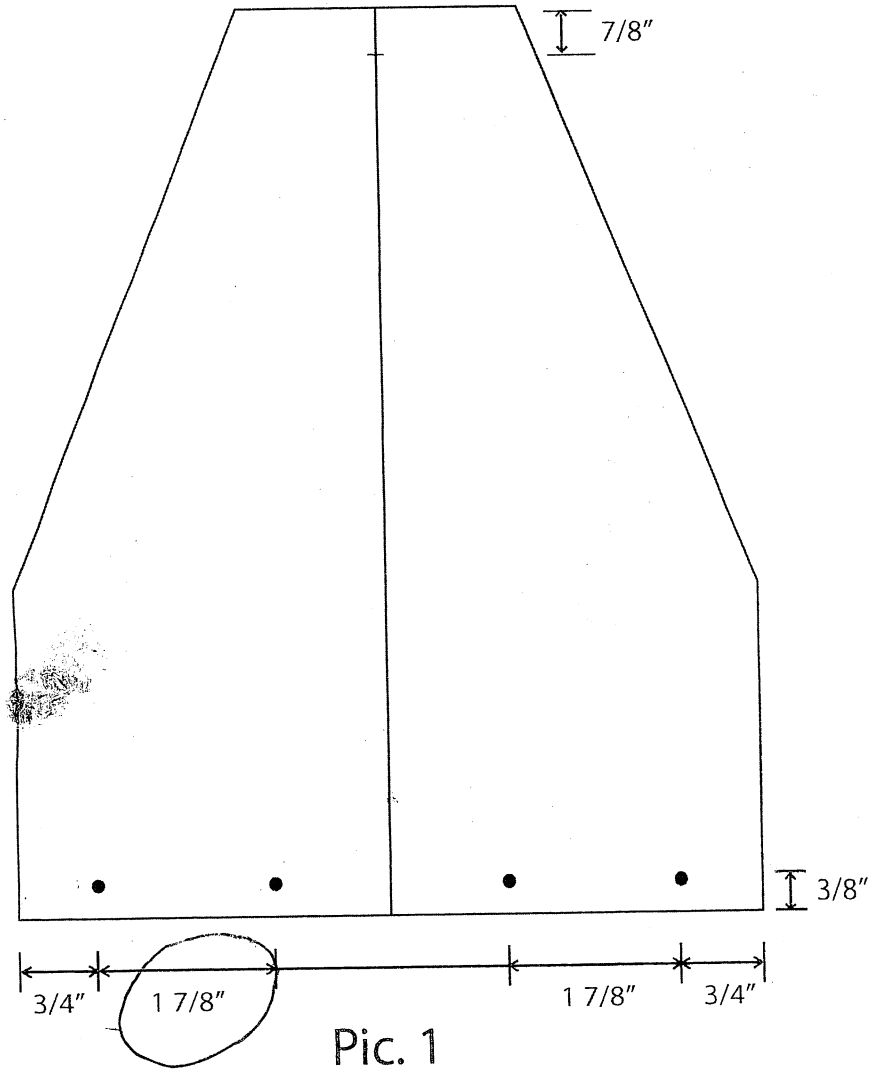

Pic. 1

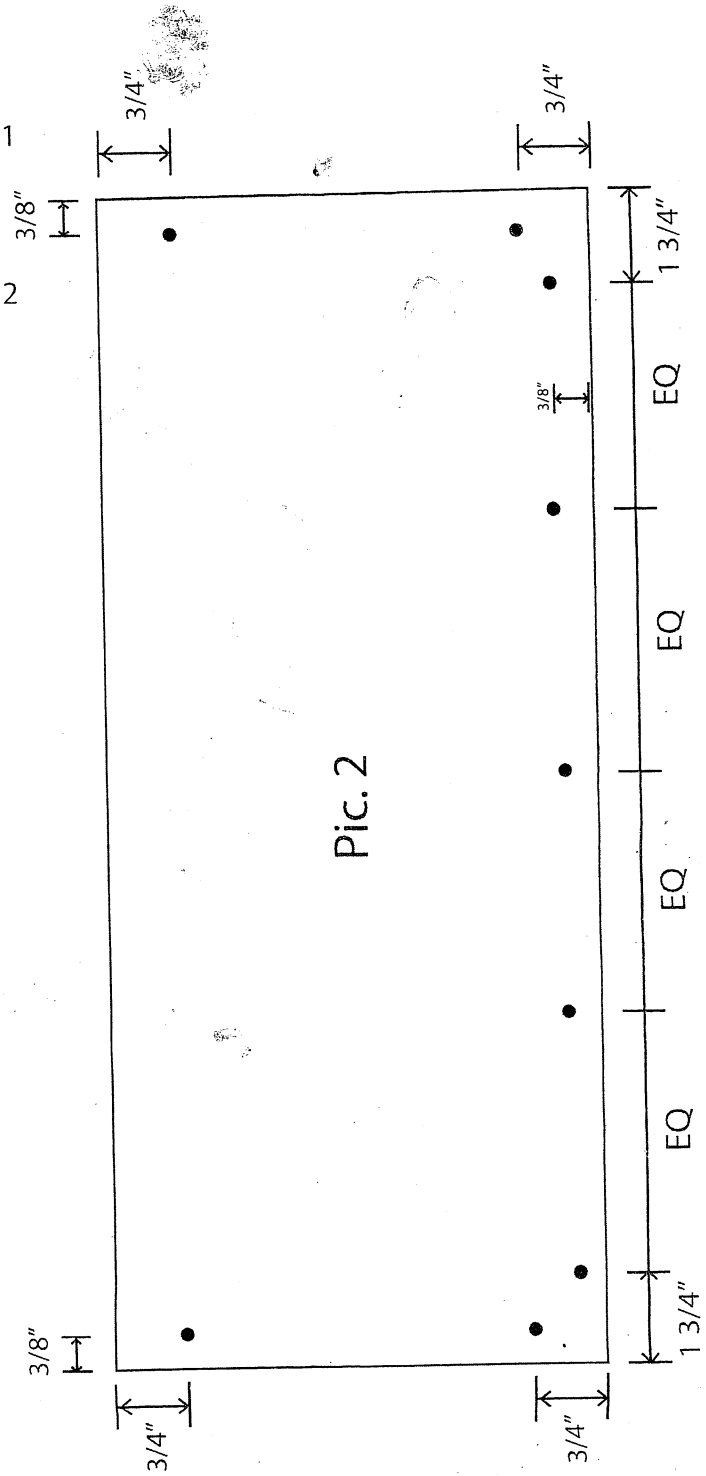

Pic. 2