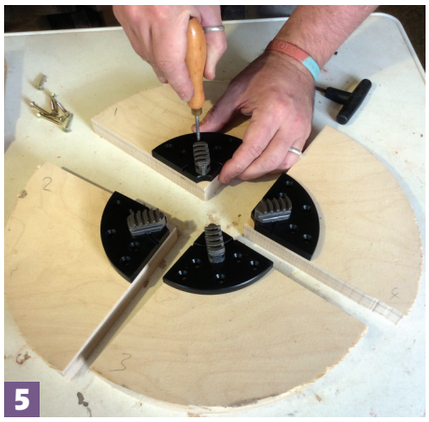
5

6

7

8

9

10

11

12

5 Attach the accessory mounting jaws to the plate jaws. Making sure to match the numbers all around, position the jaws over the ply quadrants and bradawl mark the screw positions before attaching with screws

6 Now that everything has been cut and screwed together we can attach the jaws to the chuck. As you can see here, using a long chuck key is a must

7 To turn the first recess in your plate jaw you first need to make sure the jaw is firm; this means holding something in the jaws. I hold a small piece of 10mm dowel which gives me a small gap between the jaws at the perfect circle as this allows greater room for error when sizing a bowl to fit. This step is also essential for safety reasons – you don't want to be turning the ply face with the jaw loose in the chuck

8 I'm going to cut a recess in the plate jaws to take this cherry (*Prunus avium*) bowl, which measures 270mm in diameter

9 I can now transfer this measurement onto the wood plate jaws with my dividers by taking half the bowl diameter and marking from the centre of the jaws as you can see here

10 Now that the jaws have been marked out you are free to cut the groove in the ply using a 3mm parting tool to a depth of 5mm. After making this cut you will have to open the groove with another cut with your parting tool or with a bowl gouge. Once the opening is big enough cut the edge of the groove to a dovetail using a skew chisel flat on the toolrest

11 Using a long chuck key you can offer up your bowl and test fit for the first time. If it has gone to plan, you can then tighten up the chuck. It's a good idea to tap slightly as you tighten to check the security

12 The bowl is now ready for a finishing cut which is best achieved with a 6mm bowl gouge using the push cut method. When you have the shape you require, you are ready to sand and seal

HANDY HINTS

1. Learn how to rub the bevel and you'll never look back
2. When sanding, try to mix hand sanding with rotary sanding as this will speed up the sanding process
3. If you're new to bowl turning start small!
4. Small 25mm or 50mm power-sanding pads can be used in your cordless drill to finish the bottom of your bowl
5. Long chuck keys are a must when using button or woodplate jaws

WT_288_15_19_COLWIN_WAYckjrbdCWmbSD.indd 17 09/12/2015 12:59