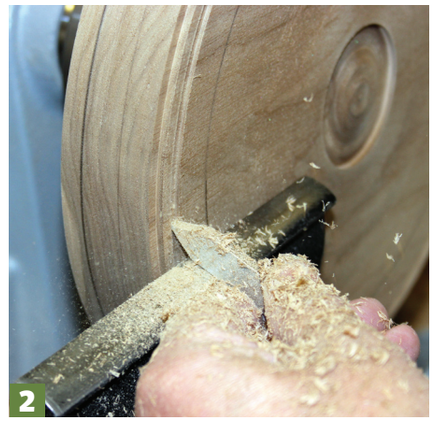

1 Mount your blank on the chuck using a screw chuck or drilled recess. Then, using a bowl gouge with a swept-back grind, true up the outside of the blank and the face. Once clean, mark the diameter for the chuck recess needed to hold the wood later and also mark a rough guide for the rim thickness. Next use the bowl gouge to remove most of the waste for the chucking recess, then use the point of the skew chisel to cut the shape needed for your jaws

2 Now to shape the rim of the candelabra. This design needs little measurement as you can the tools you have to form the design. My parting tool is 3mm wide so the design will be in 3mm increments. With the left side of the parting tool at the outer edge of the rim, part in 3mm deep. This is the first part of the rim detail. Leave a 3mm space, which will form the bead. Now part in at the other side of this to a depth of 3mm. This is the second part of the rim detail

3 Cut a bead on the section just created. I used a bead 3mm forming tool, but you could use another tool to create your bead

4 You now have a 9mm-wide design. Start to part through at the side of the groove you produced with the parting tool earlier. When you have parted about 6mm deep, slide the parting tool out on the toolrest and take a second clearance cut to the right of the first cut to prevent tool binding. Part in about halfway, this will be around 17mm. Sand and seal the detailed area

5 Next, reverse the work and affix it in the chuck. Move the toolrest close to the face of the disc and check for run out on the face and also on the outer rim. Adjust until it is running true in both planes. Then, use a bowl gouge to clean up the face of the disc, and thin it down in width to around 34mm thick

6 Start to shape the side detail to match the other side of the face. This needs to match perfectly or it will be very noticeable when the ring is cut in half. Line up the left point of the parting tool with the outer edge of the disc and part in 3mm

7 Now cut the bead next to the last cut. Remember, this tool is 3mm wide, so this now makes the detail area 6mm wide. Use the parting tool to cut to the right of the bead, line up the left-hand point of the parting tool and cut in 3mm. The detail is now all finished. Double-check that this matches the other side. Sand and seal all the area

8 Use small pieces of card to fill the gap left by the parting tool; I have placed four pieces evenly round the disc. Now tape over the packing pieces – masking tape is strong enough to hold. This will stop the parting tool jamming when parting from the other side

WT_289_87_90_PHILIP_GREENWOOD_bd, MBJRpgS.indd 89 22/12/2015 10:28