

Hamilton T1 Ventilator Initial Use Setup **Used for Intubated or BiPAP/CPAP Patients**



ITEMS NEEDED

- Hamilton T1 Ventilator
- Hamilton Ventilator Circuit with flow sensor and Expiratory Valve



Attach flow sensor lines here.

Attach expiratory valve here.

Insert and twist to lock in place. BE SURE MEMBRANE STAYS IN PLACE!!




Attach blue and clear lines to the posts.


SETUP

1. Attach Expiratory Valve to Hamilton T1 ensuring the rubber membrane remains fully seated
2. Attach the inspiratory and expiratory limbs to the ventilator
3. Attach the flow sensor supply lines to the ventilator
 - Blue line to blue post
 - Clear line to white post


Hamilton T1 Ventilator Initial Use Setup Used for Intubated or BiPAP/CPAP Patients

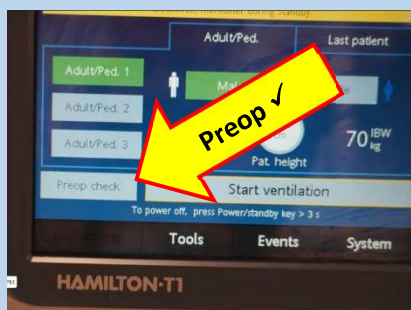

Initial startup screen

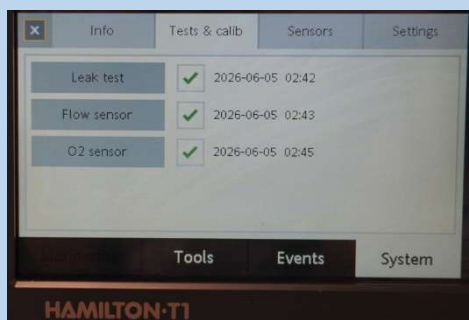


Preop Checks

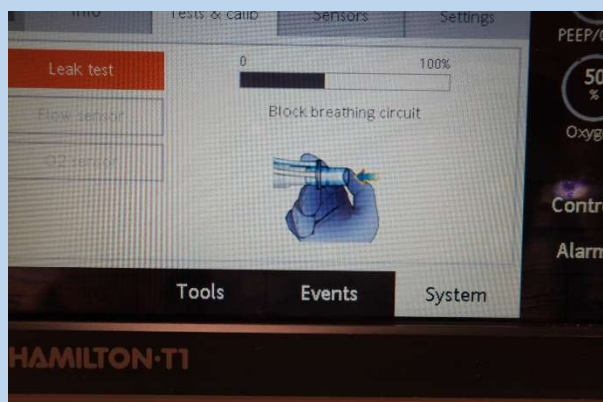

Block the circuit to allow for pressurization and test for any leak. If test fails, recheck all connections and ensure they are tight and in the correct positions

Perform the flow sensor test by flipping the ENTIRE BLUE flow sensor. Follow the on screen instructions for calibration

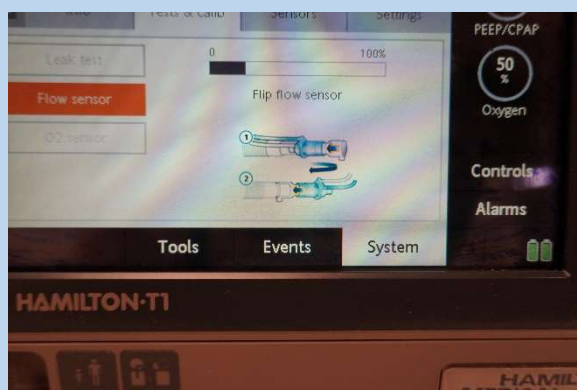

The Hamilton T1 and Circuit are now ready for ventilation or BiPAP/CPAP.

Setup
Video Link



Preop Checks

- Perform the leak test to determine the circuit's continuity
- Perform the flow sensor test to calibrate the flow sensor
- **DO NOT PERFORM THE O2 SENSOR TEST**