HEMOSPHERE CONTINUOUS CARDIAC OUTPUT WITH SWAN GANZ CATHETER

SET UP GUIDE

Equipment:

- Hemosphere monitor with Swan Ganz enabled
- Continuous cardiac output cable
- Oximetery cable
- Edwards pressure cable
- Swan Ganz Catheter
- Black ECG cable to slave data from Hemosphere to Phillips Monitor. Black analogue cable to connect Hemosphere to Phillip's monitor for Mean arterial pressure.

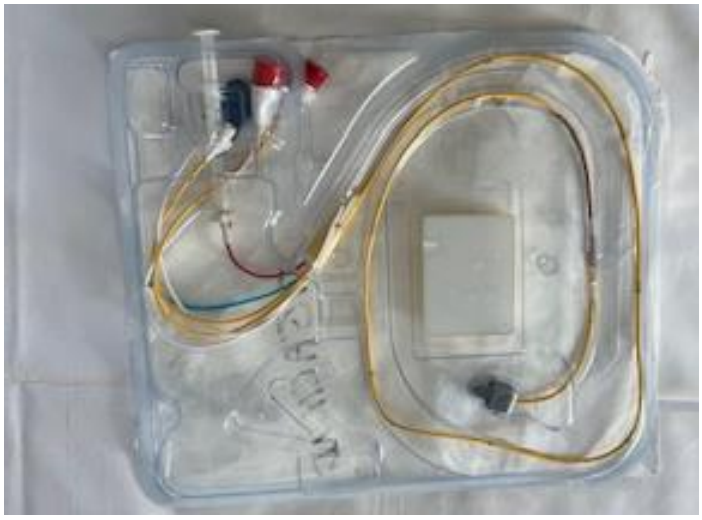

Set up :

Turn on Hemosphere.

Add patient data including age, height and weight.

Select Invasive monitoring

Connect continuous cardiac catheterisation cable :

Connect Oximetry cable :

Access settings

Perform Patient CCO cable test as below:

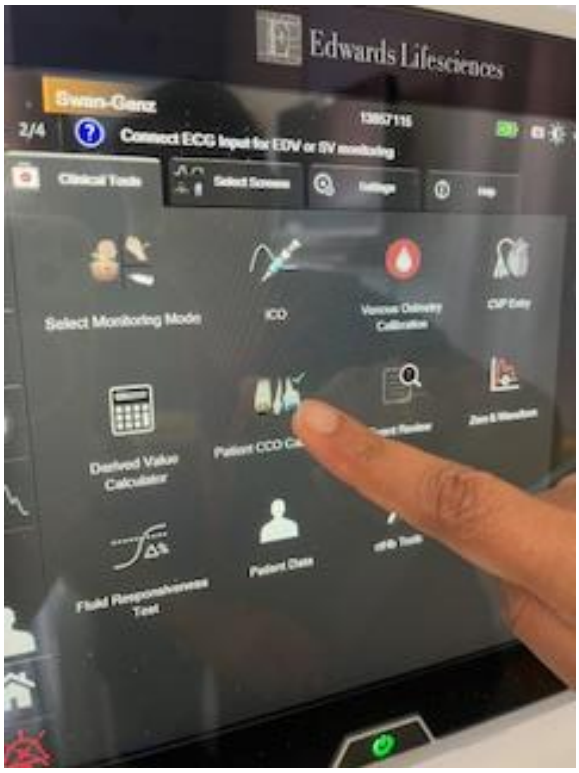

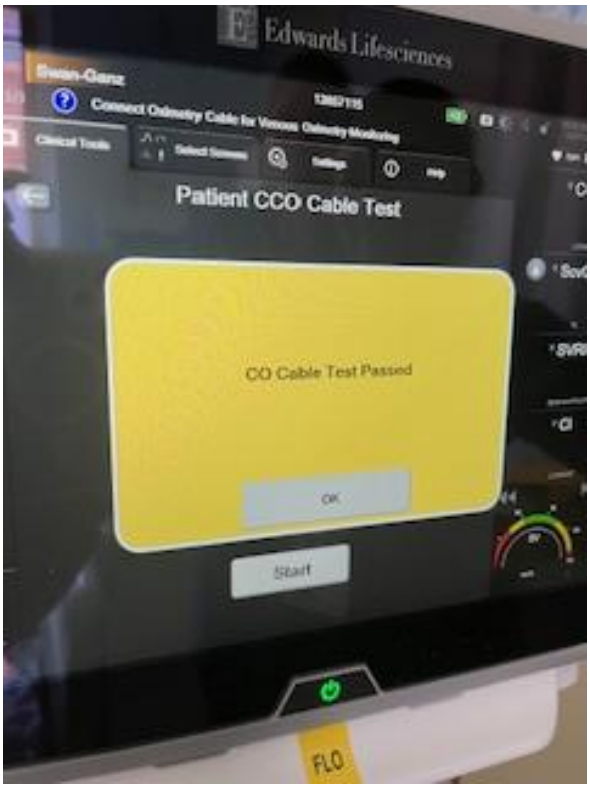

Return to home page

Connect Swan Ganz Catheter module to Edwards Monitor

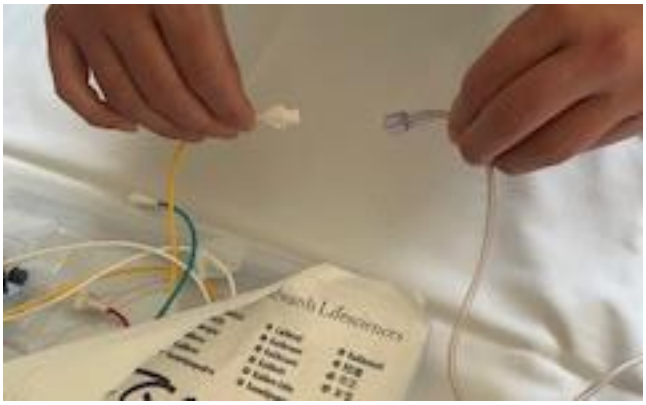

Attach Swan Ganz Catheter to transducer

Connect the rest of the cables to the Hemosphere monitor

Once connected select Venous Oximetry calibration from settings screen

This will perform the patient CCO cable test

Press **In Vitro calibration**

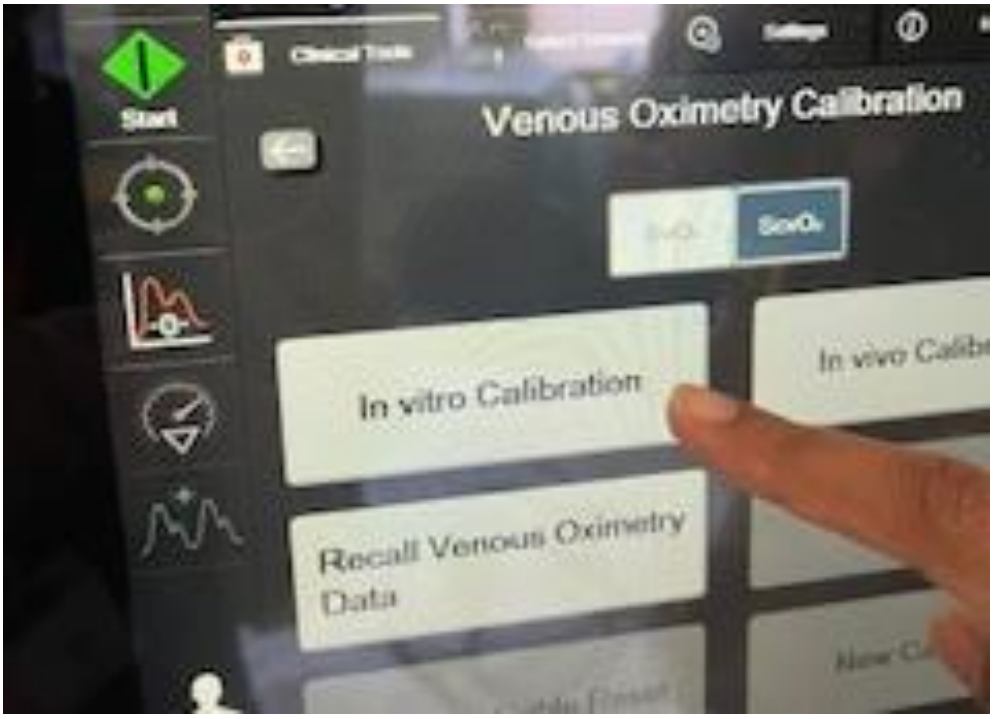

Add Haemoglobin and Haematocrit levels based on most recent bloods

Medical staff can now insert the Swan Ganz Catheter into the patient as it is calibrated and ready to use.

The following waveform will appear on insertion as the line travels through the heart.

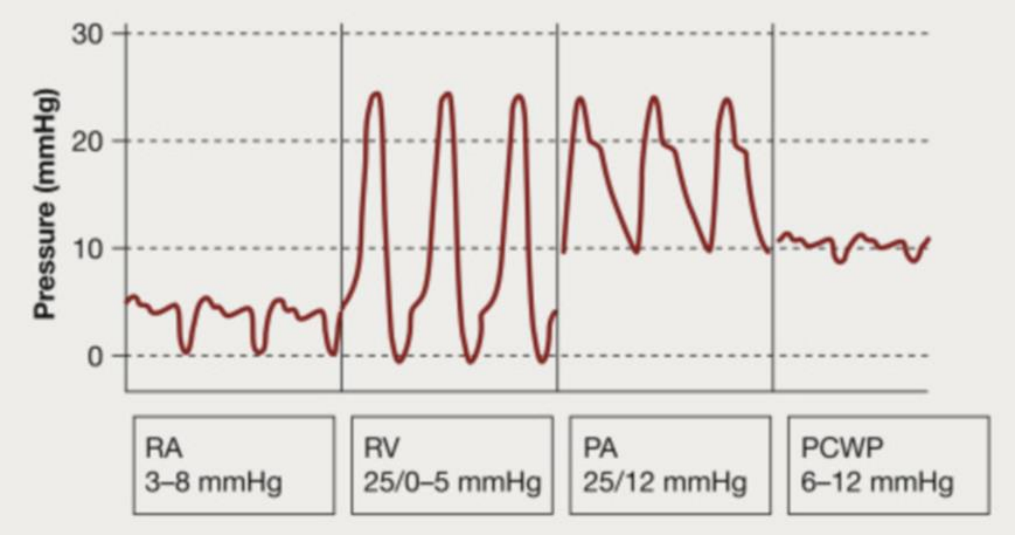

The Pulmonary artery trace on the monitor should look like this:

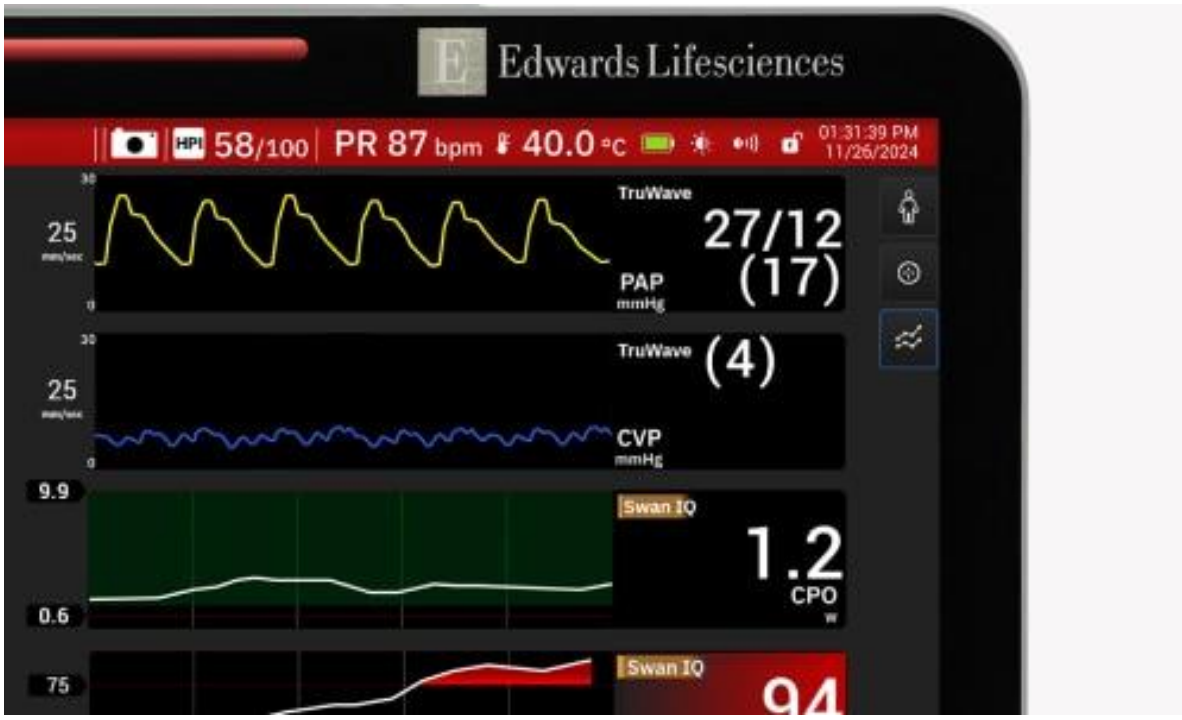

Connect analogue cables to hemosphere and Phillips monitor

Connect ECG cables to hemosphere and Phillips

Click on advanced set up to connect analogue data from Arterial blood pressure and CVP measurements.

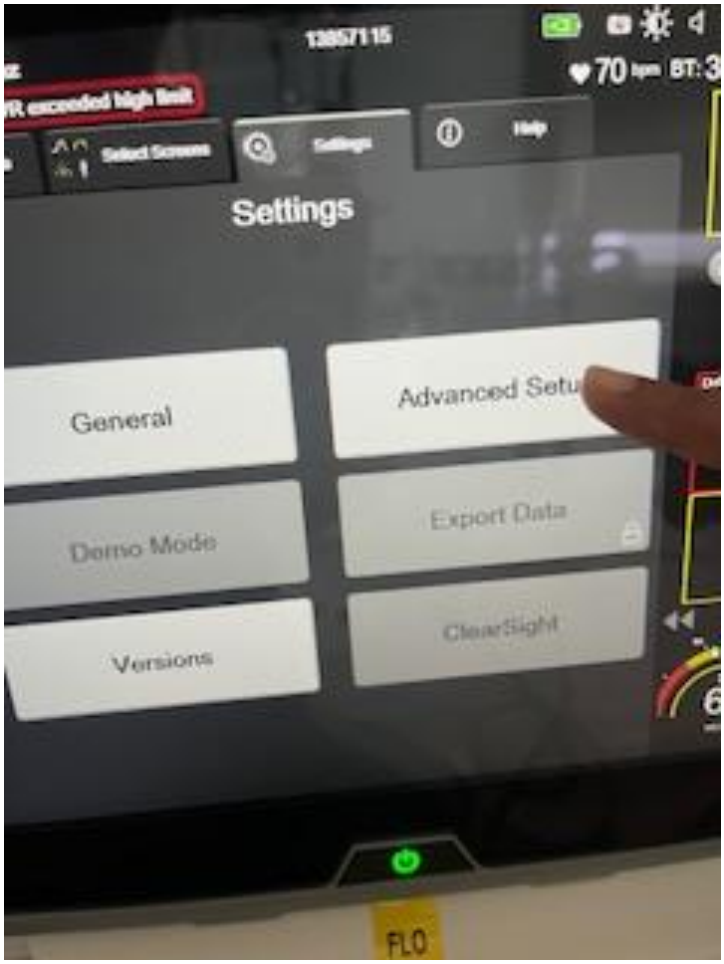

Enter eight 5 s as the password

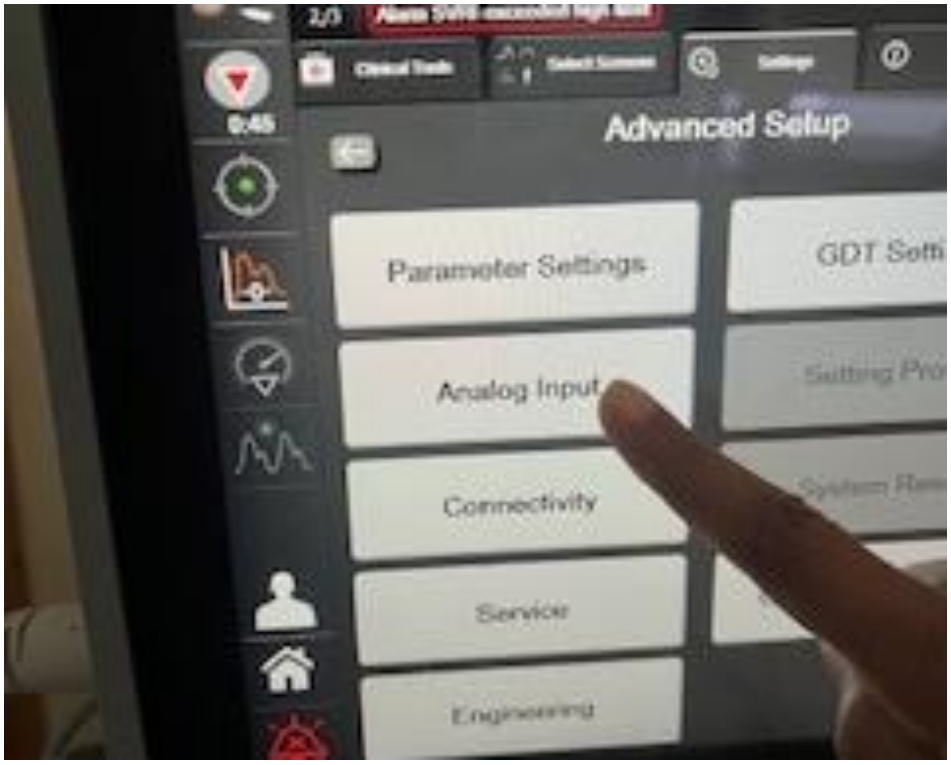

select parameter as MAP or CVP

Click on CVP measurement on Hemosphere screen (top left hand corner).

Enter CVP via choice of 2 methods :

1. Use analogue cable if required – attach to Phillips module via analogue cable – change label accordingly.
2. 2. Flip to CVP entry and enter numeric data in box below – this numeric will be used for all measurements until altered.

Go back to home screen
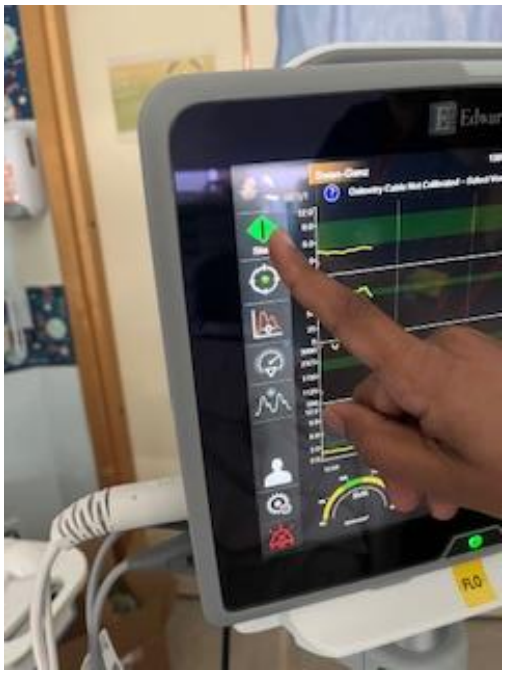
Press start to commence monitoring.