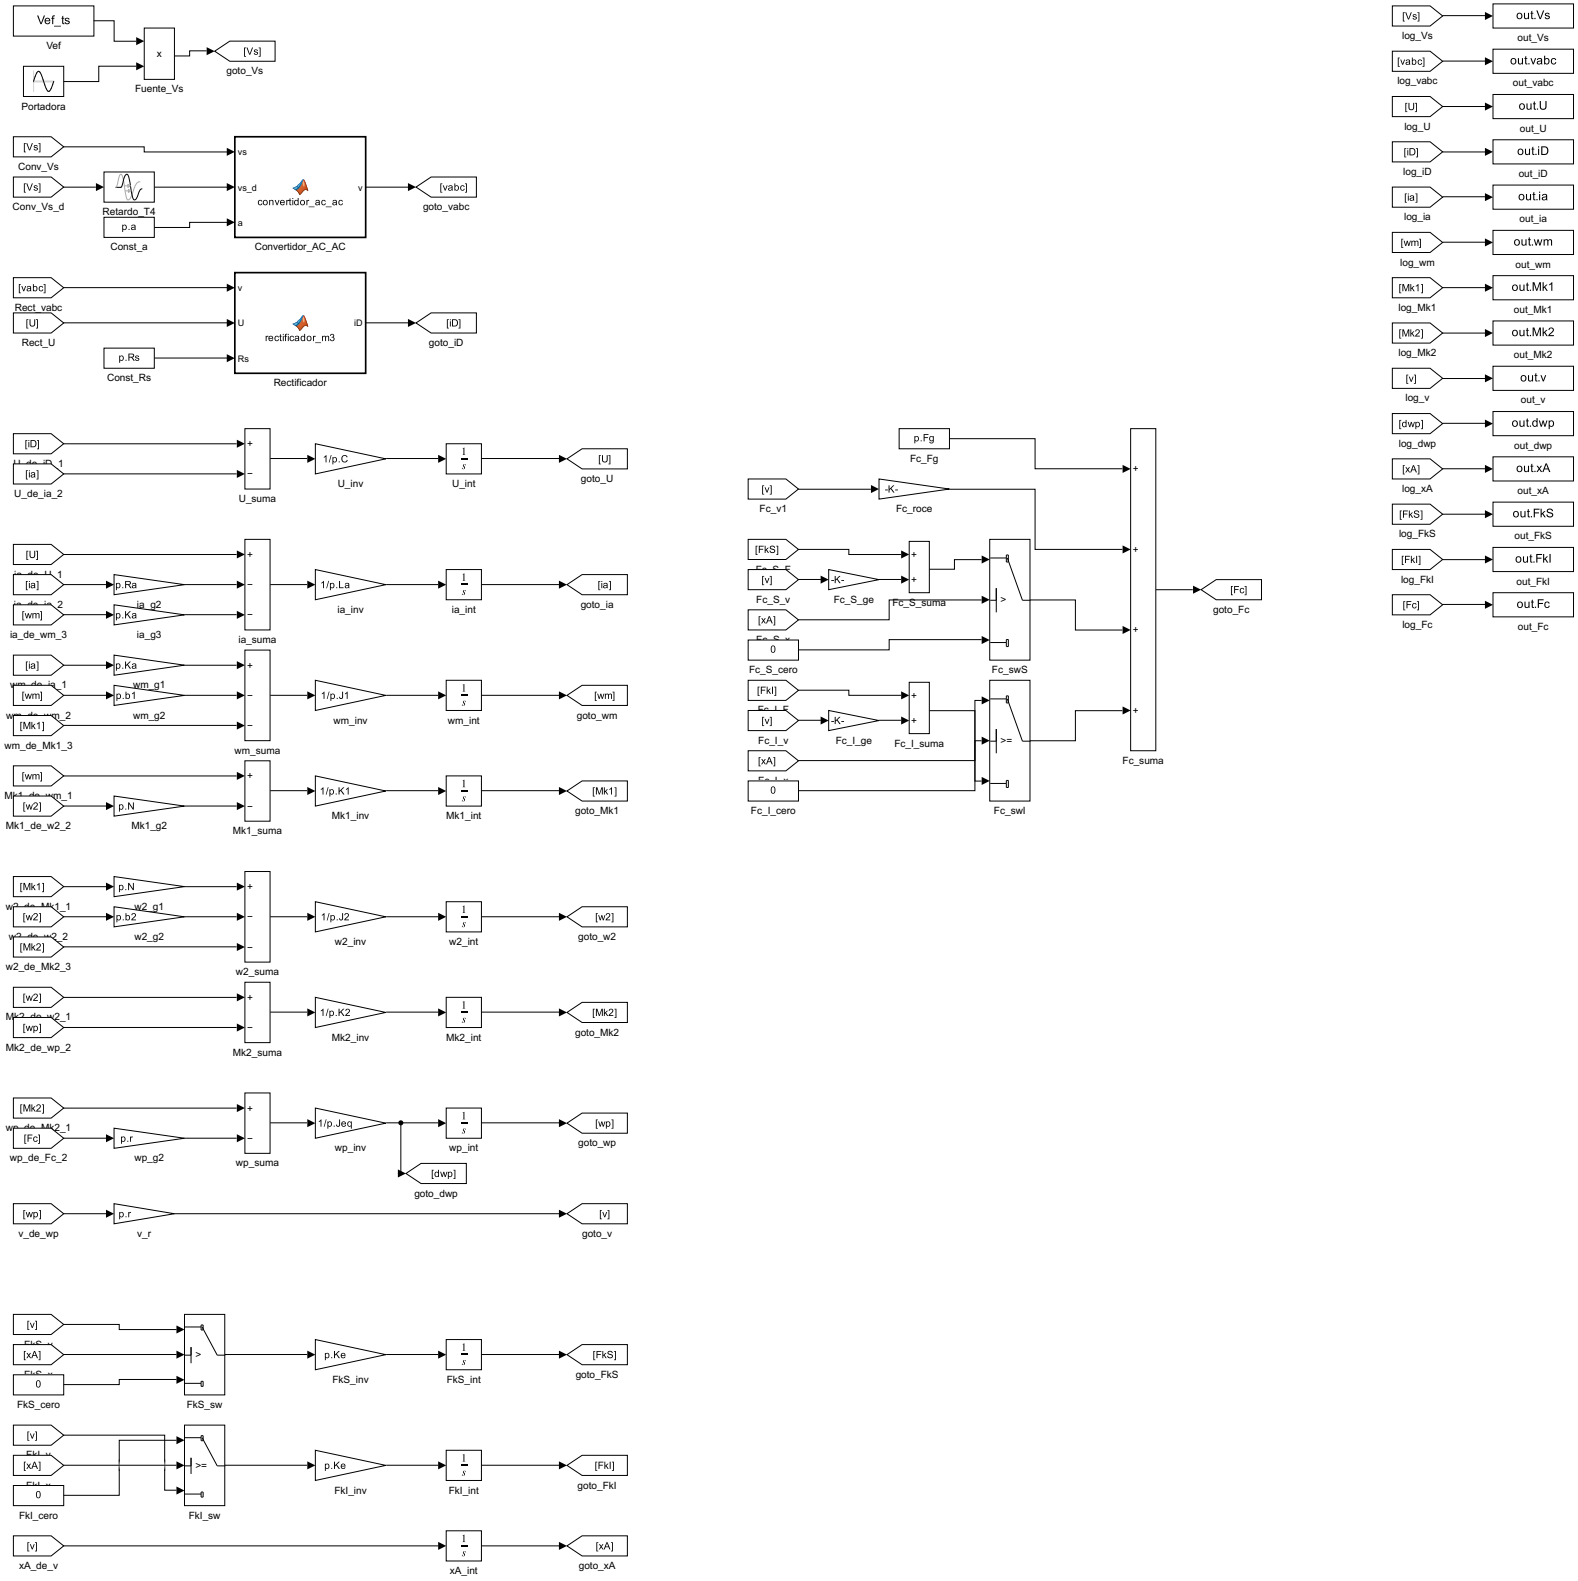

Vef_ts
Vef
x
[Vs]
goto_Vs
Portadora
Fuente_Vs
[Vs]
Conv_Vs
[Vs]
Conv_Vs_d
Retardo_T4
p.a
Const_a
vs
vs_d
a
convertidor_ac_ac
v
[vabc]
goto_vabc
Convertidor_AC_AC
[vabc]
Rect_vabc
[U]
Rect_U
p.Rs
Const_Rs
v
U
Rs
rectificador_m3
iD
[iD]
goto_iD
Rectificador
[iD]
U_de_ia_2
U_suma
1/p.C
U_inv
1/s
U_int
[U]
goto_U
[U]
[ia]
ia_de_wm_3
p.Ra
ia_g2
p.Ka
ia_g3
ia_suma
1/p.La
ia_inv
ia_int
[ia]
goto_ia
[ia]
[wm]
wm_de_Mk1_3
p.Ka
wm_g1
p.b1
wm_g2
wm_suma
1/p.J1
wm_inv
wm_int
[wm]
goto_wm
[wm]
[w2]
Mk1_de_w2_2
p.N
Mk1_g2
Mk1_suma
1/p.K1
Mk1_inv
Mk1_int
[Mk1]
goto_Mk1
[Mk1]
[w2]
[Mk2]
w2_de_Mk2_3
p.N
w2_g1
p.b2
w2_g2
w2_suma
1/p.J2
w2_inv
w2_int
[w2]
goto_w2
[w2]
[wp]
Mk2_de_wp_2
Mk2_suma
1/p.K2
Mk2_inv
Mk2_int
[Mk2]
goto_Mk2
[Mk2]
[Fc]
wp_de_Fc_2
p.r
wp_g2
wp_suma
1/p.Jeq
wp_inv
wp_int
[wp]
goto_wp
[dwp]
goto_dwp
[wp]
v_de_wp
p.r
v_r
[v]
goto_v
[v]
[xA]
0
FkS_cero
FkS_sw
p.Ke
FkS_inv
FkS_int
[FkS]
goto_FkS
[v]
[xA]
0
Fkl_cero
Fkl_sw
p.Ke
Fkl_inv
Fkl_int
[Fkl]
goto_Fkl
[v]
xA_de_v
1/s
xA_int
[xA]
goto_xA
p.Fg
Fc_Fg
[v]
Fc_v1
-K-
Fc_roce
[FkS]
[v]
Fc_S_v
-K-
Fc_S_ge
Fc_S_suma
[xA]
0
Fc_S_cero
Fc_swS
[Fkl]
[v]
Fc_l_v
-K-
Fc_l_ge
Fc_l_suma
[xA]
0
Fc_l_cero
Fc_swl
Fc_suma
[Fc]
goto_Fc
[Vs]
log_Vs
out.Vs
out_Vs
[vabc]
log_vabc
out.vabc
out_vabc
[U]
log_U
out.U
out_U
[iD]
log_iD
out.iD
out_iD
[ia]
log_ia
out.ia
out_ia
[wm]
log_wm
out.wm
out_wm
[Mk1]
log_Mk1
out.Mk1
out_Mk1
[Mk2]
log_Mk2
out.Mk2
out_Mk2
[v]
log_v
out.v
out_v
[dwp]
log_dwp
out.dwp
out_dwp
[xA]
log_xA
out.xA
out_xA
[FkS]
log_FkS
out.FkS
out_FkS
[Fkl]
log_Fkl
out.Fkl
out_Fkl
[Fc]
log_Fc
out.Fc
out_Fc