

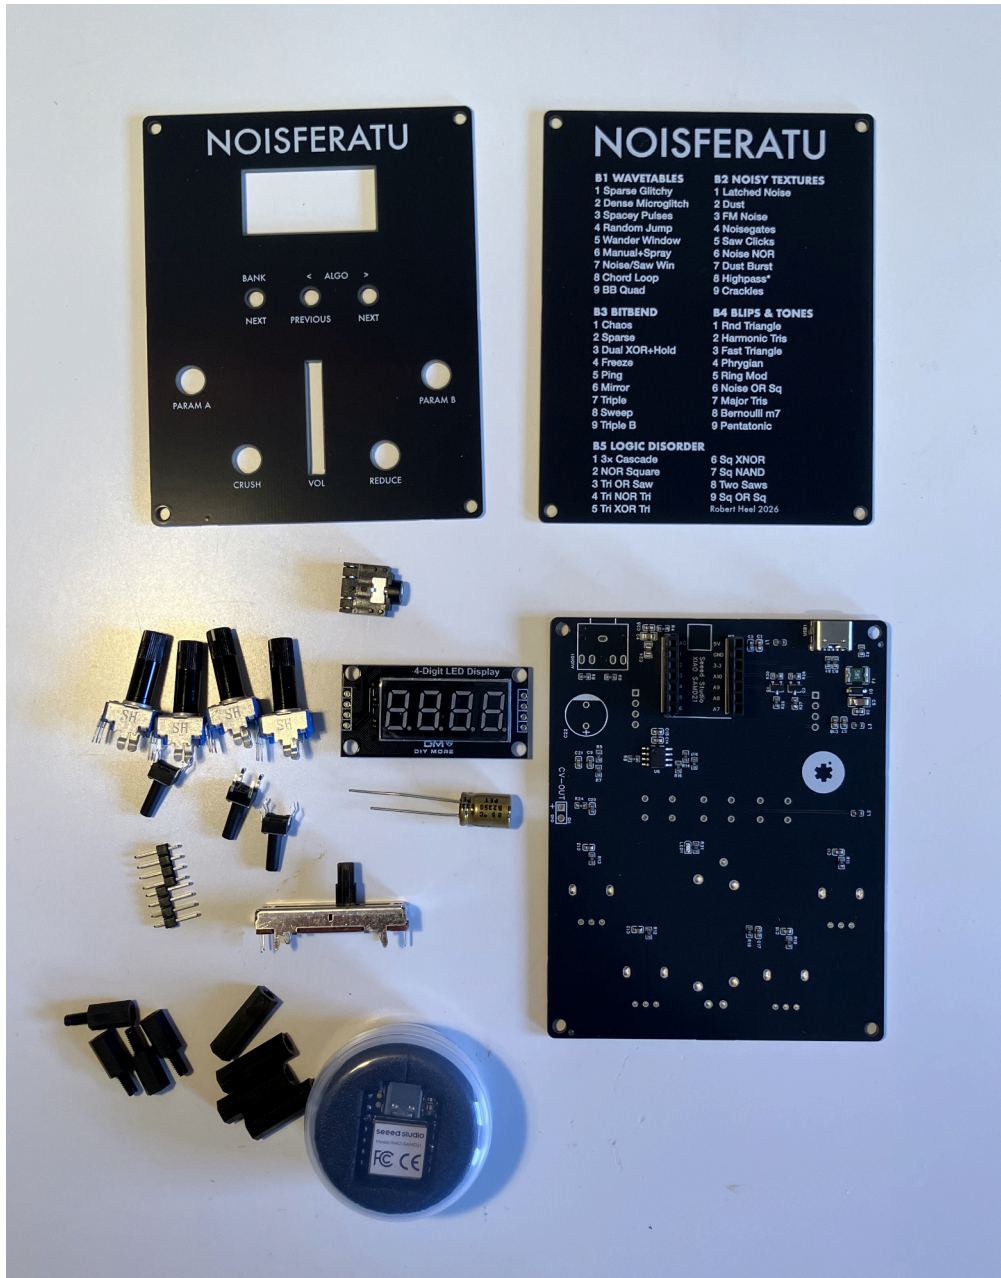




NOISFERATU

Buildguide


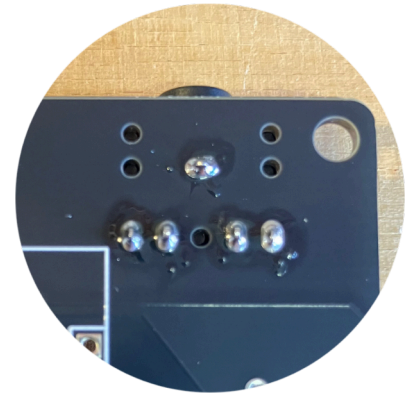


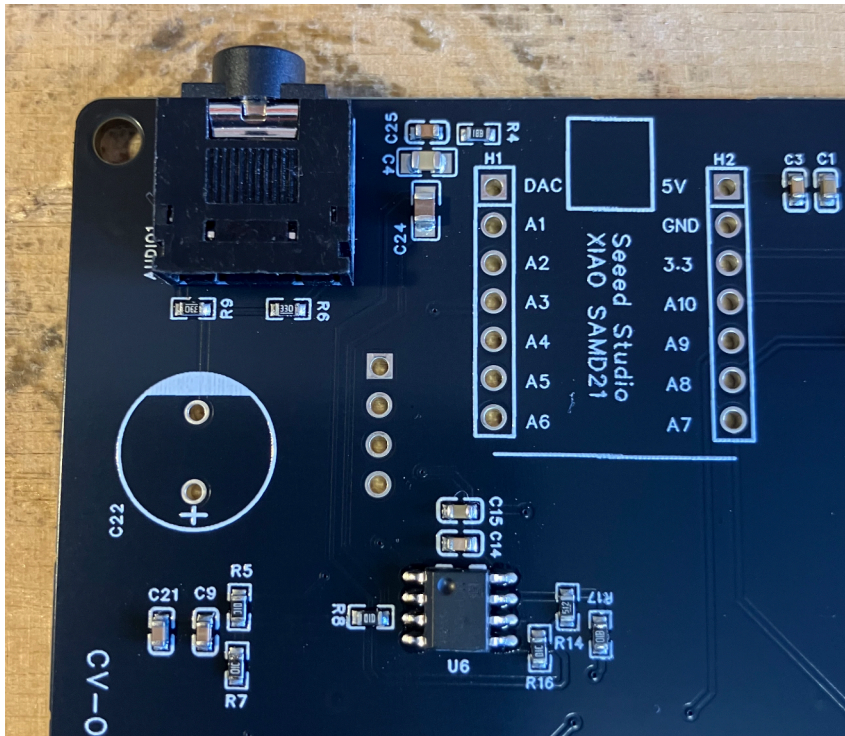

Solder the Stereo jack on the pcb.

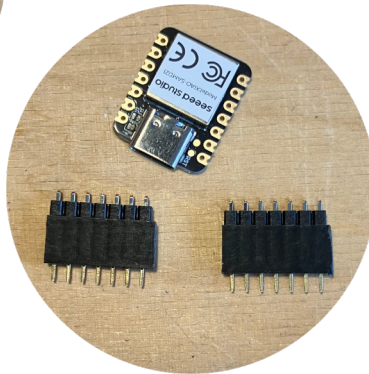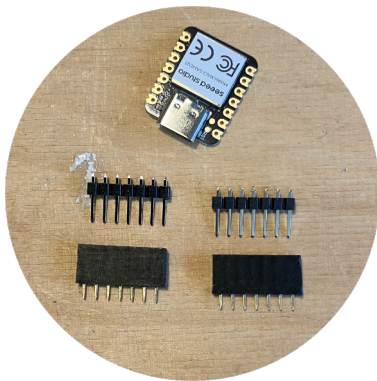



Push the 7 pin male headers into the female headers. The male headers are in the samd21 box underneath the MCU/ foam.

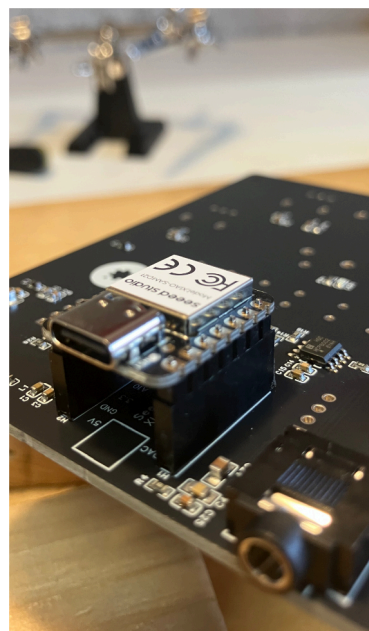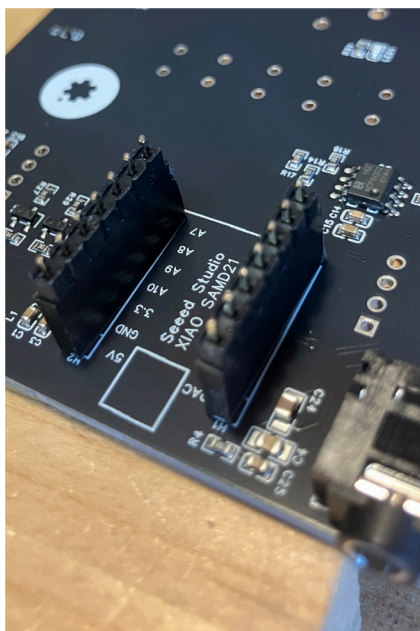


Place the female headers onto the pcb with the male headers facing upwards and place the samd21 on top, with the usb socket facing the edge of pcb.




Solder the two outer pins, check alignment, then solder all remaining pins.

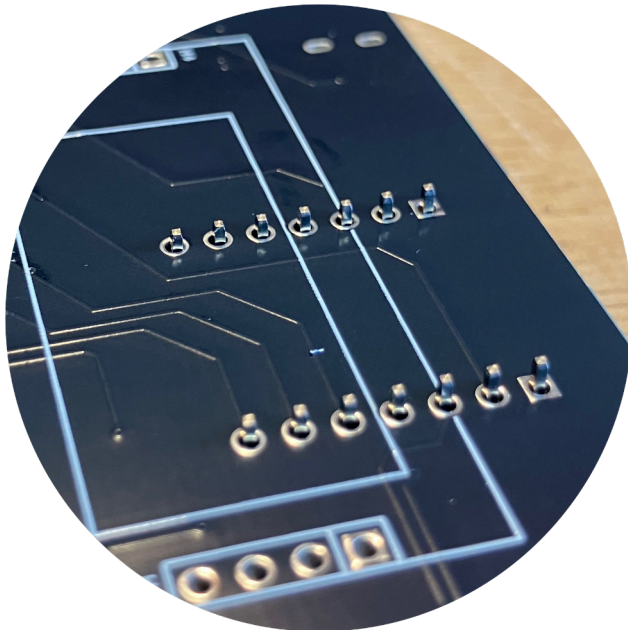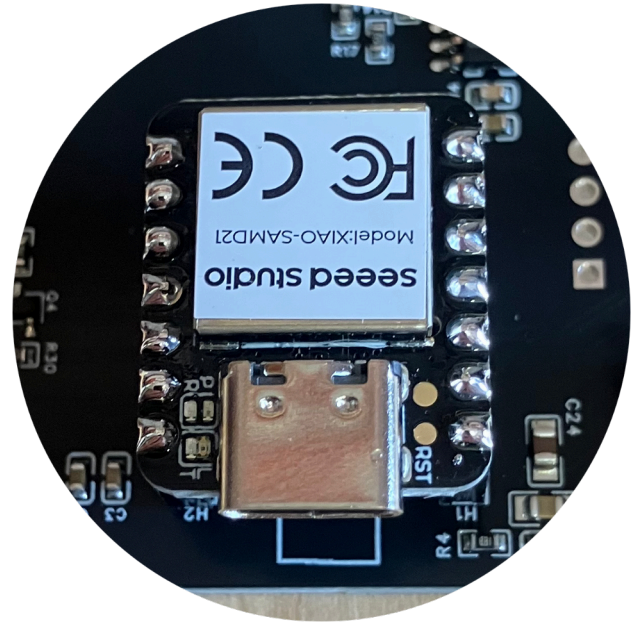

Flip over and solder the female headers for the XIAO Samd21 to the pcb.



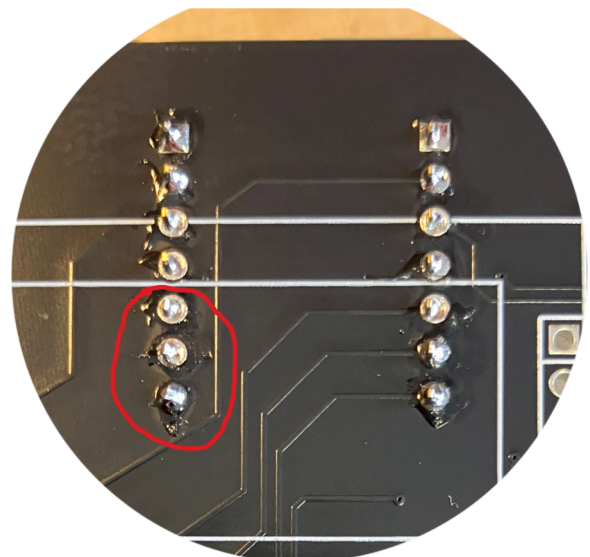


After soldering cut off the 3 bottom left pins of the headers flush to the PCB.

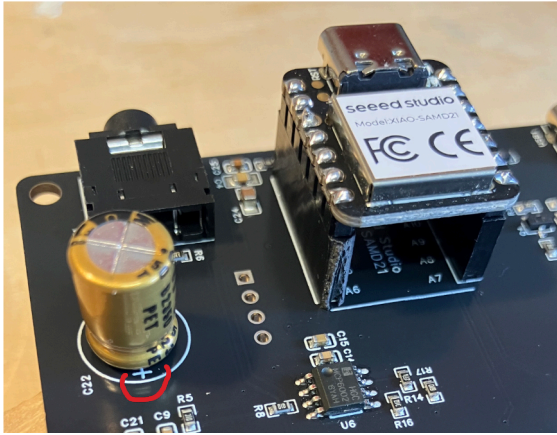


Solder the electrolytic capacitor. Mind the polarity. Long leg is positive, indicated by a + sign on PCB.

Cut off the 3 outer right pins of the display flush to the PCB.

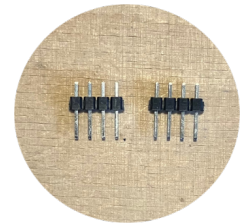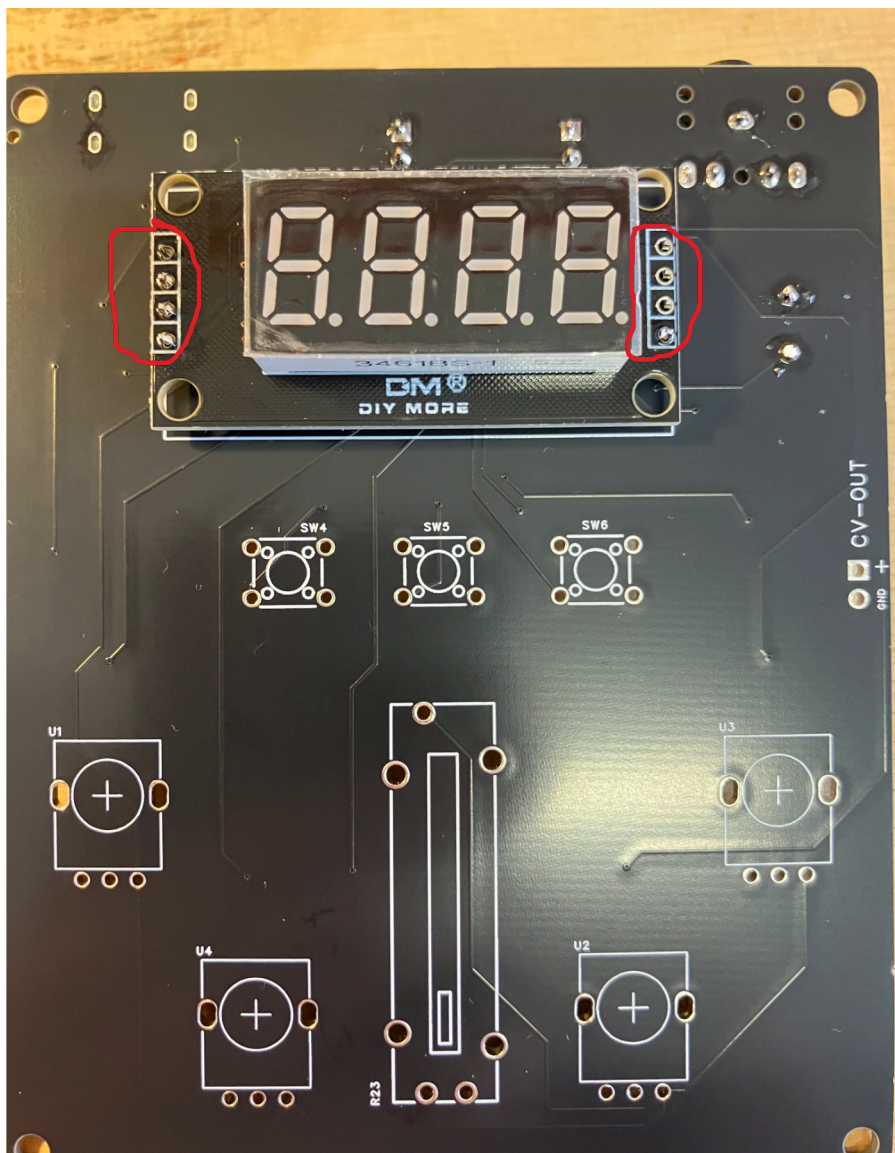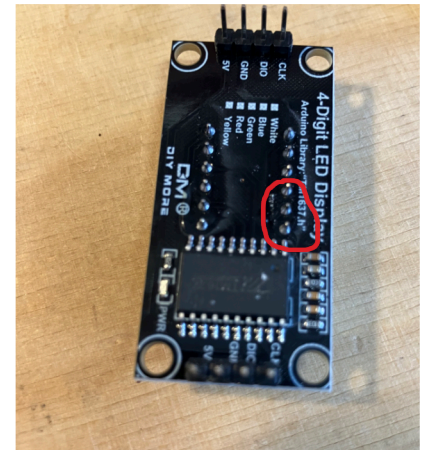


Place the 4 pin male headers on the PCB and place the display on it. Long legs PCB side, short legs display side. Solder the male headers to the display. Then flip and solder the display to the PCB.

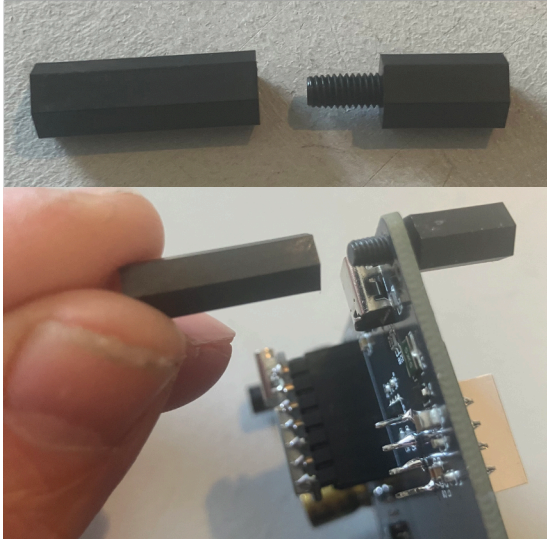

Stick the male spacers through the PCB and screw on the female spacers.



Attach the 4 pots, 1 slider and 3 pushbuttons. Also attach the slider cap. Then attach the frontpanel and loosely secure with screws

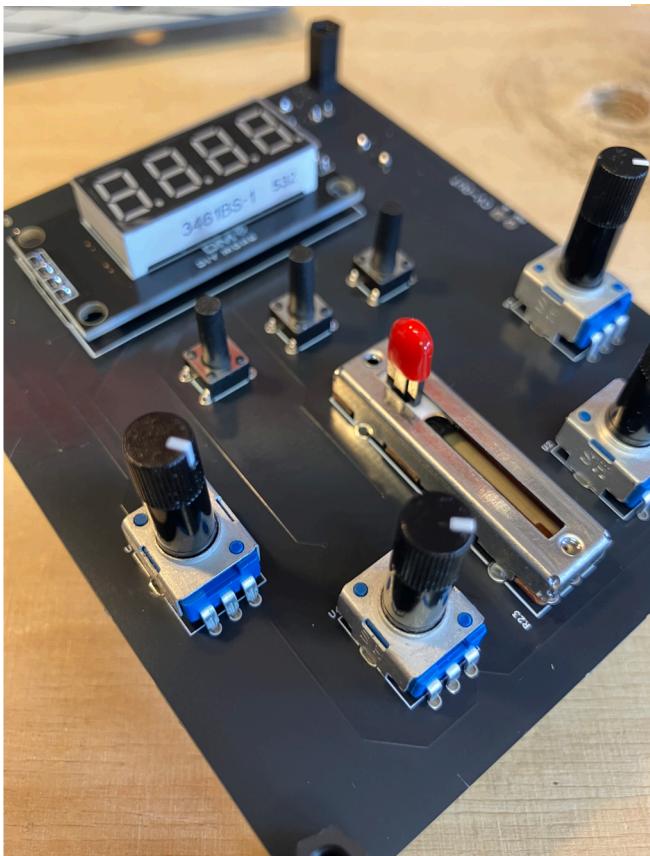


Solder the 4 pots, 1 slider and 3 pushbuttons. Start with the slider. It is easiest to only solder one pin **1**, then flip and make sure the slider sits flush and in the middle of the cut out. Don't bend the wiper if the slider doesn't sit flush and in the middle -> reheat the one solder joint and gently position the slider in the correct position.

Then solder pots and buttons. For pots i start with the middle pin **2**, flip, check and either solder the rest or heat up and readjust.

Then solder the buttons. For buttons i usually also start with one pin **3**, check orientation and alignment and then solder the rest of the pins.

Finish by soldering all remaining solder joints.

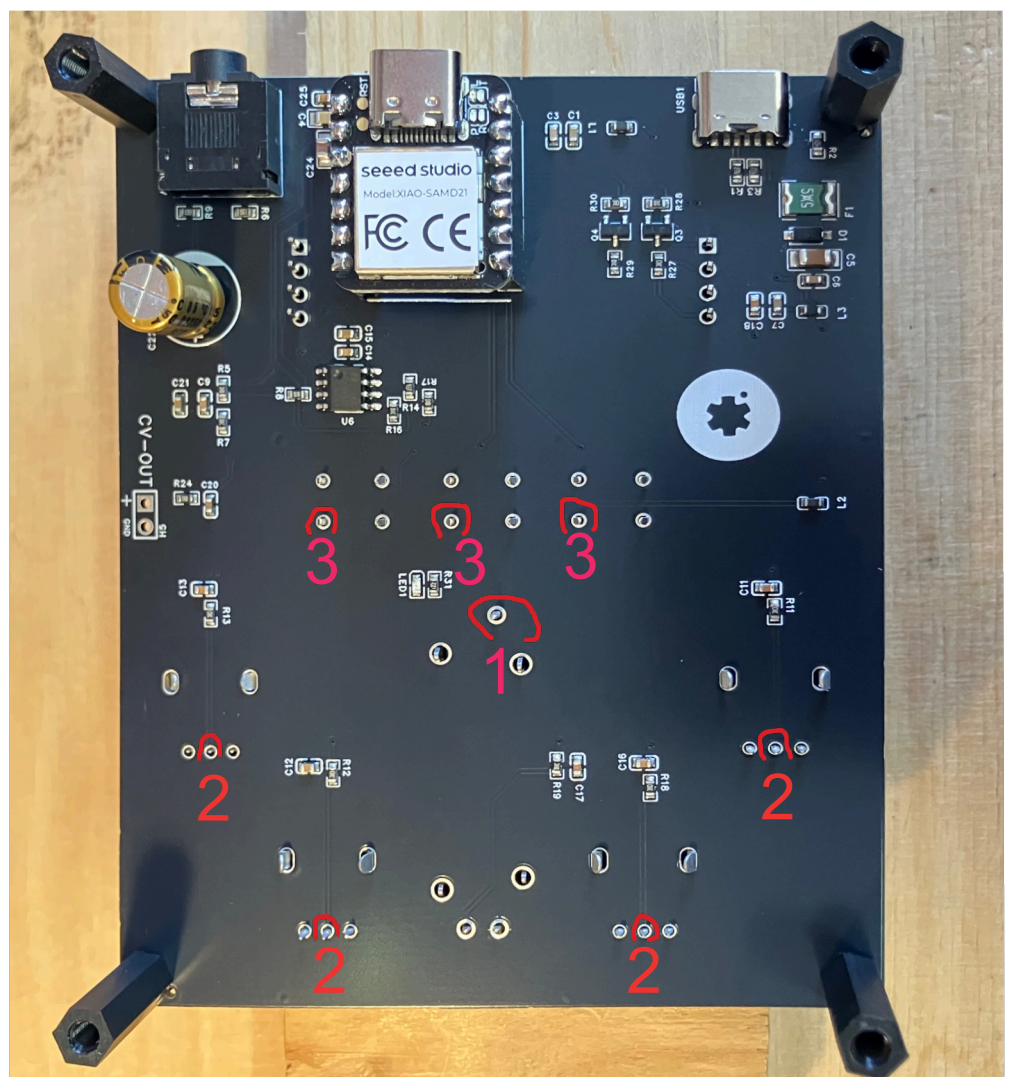

Attach the back panel and secure also with screws.

Congratulations, you finished your NOISFERATU.

May the crackles be with you.



NOISFERATU

Buildguide

