




Iron

Final Result:

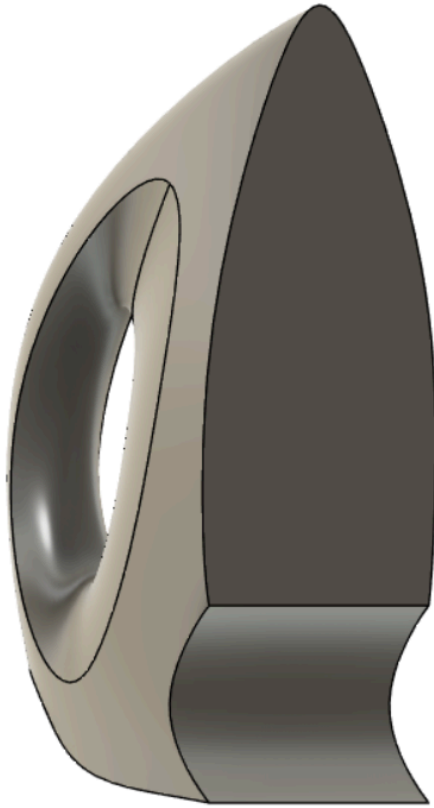

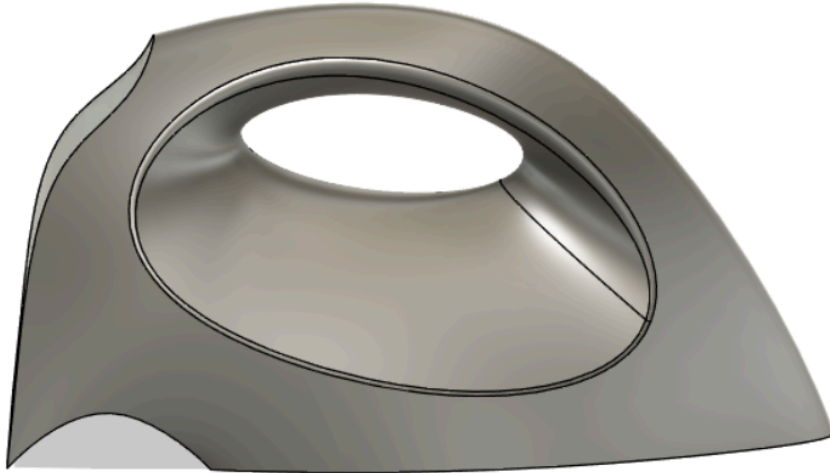

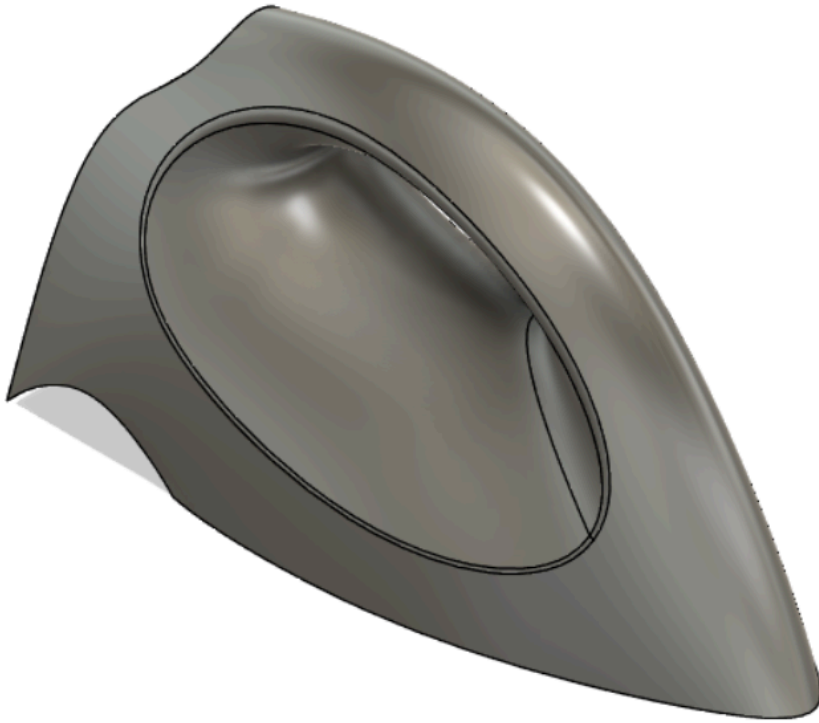


Steps:

1. Load existing file with clothing iron pictures:




2. Add the curvature geometry of the iron from the bottom.

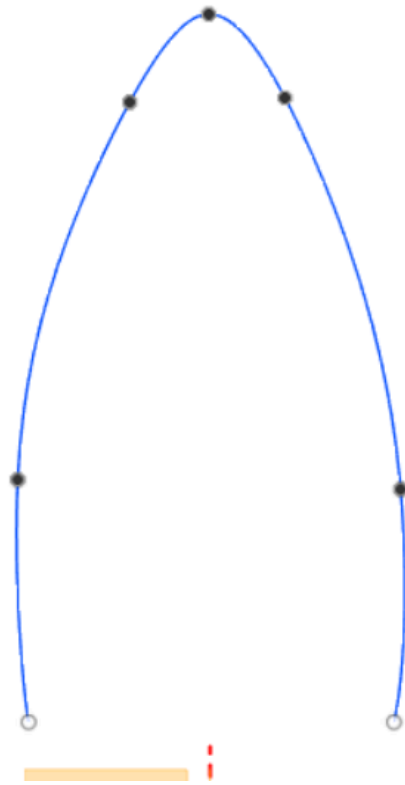






3. Add the curvature geometry from the back perspective of the iron.

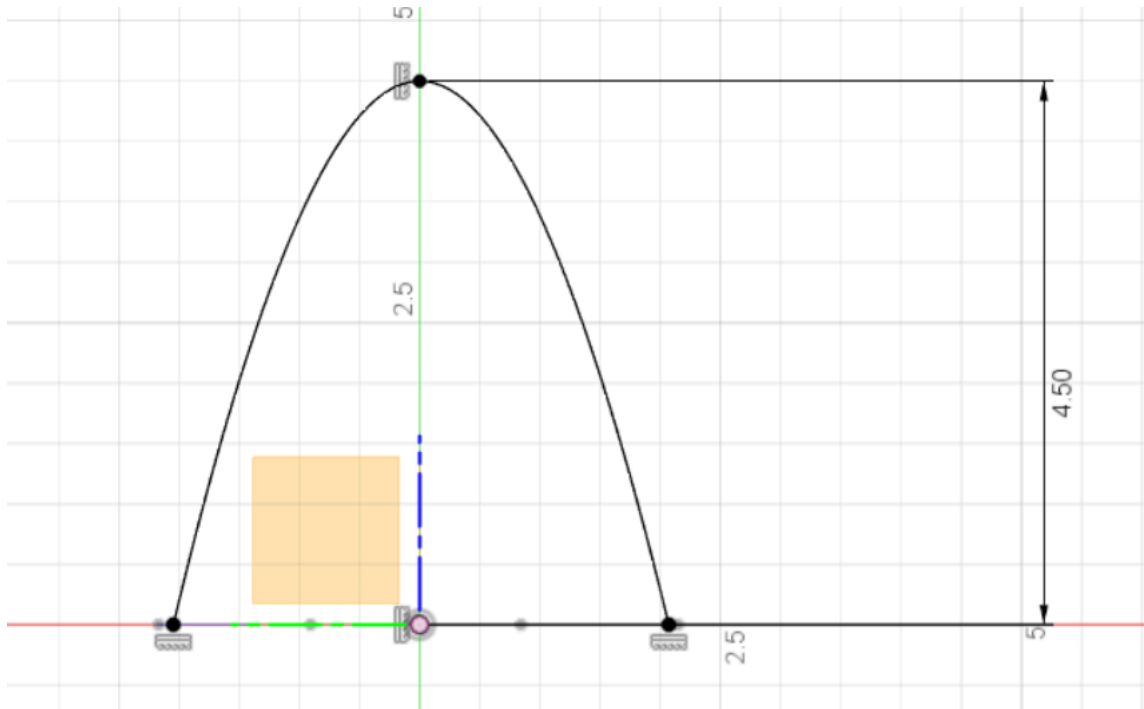


4. Now make a sketch outlining the curvature from the side perspective.

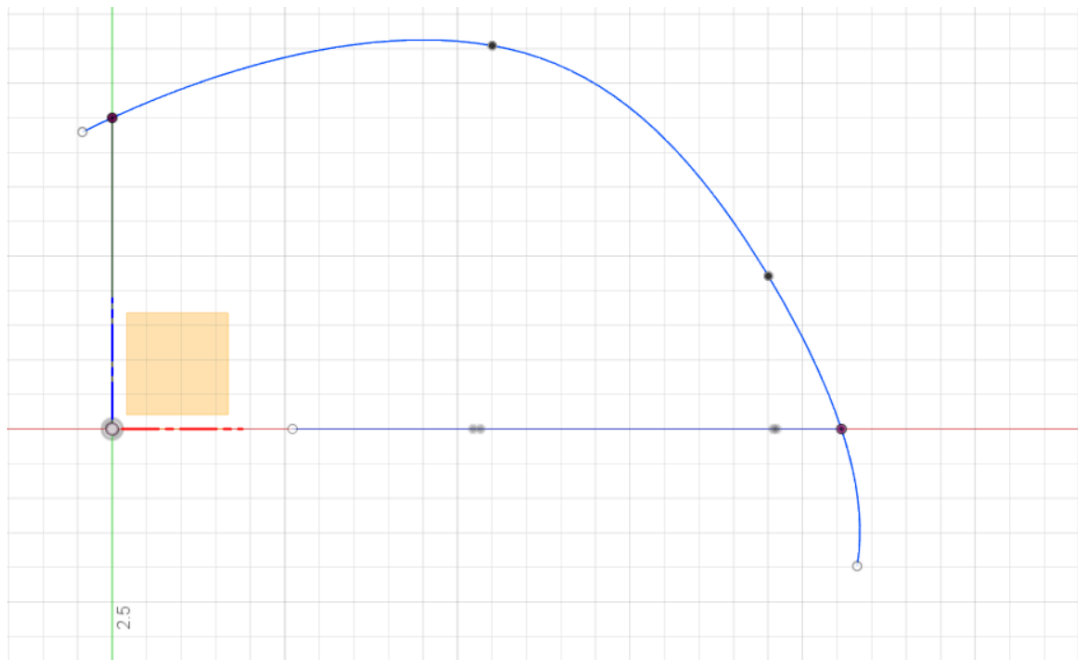


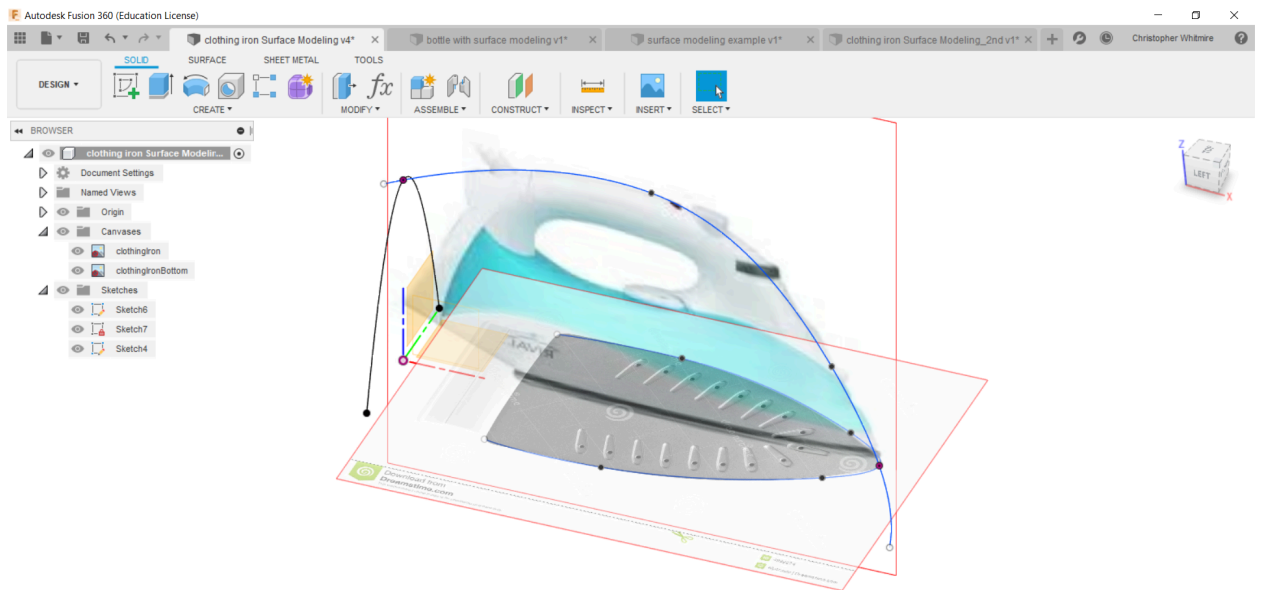
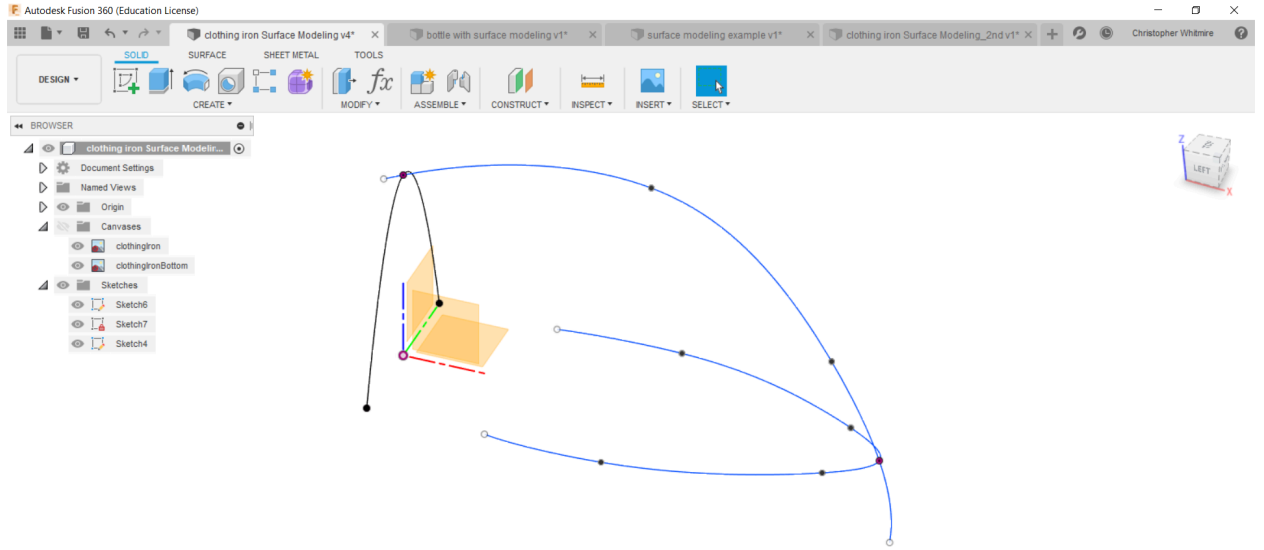


5. Do a surface loft


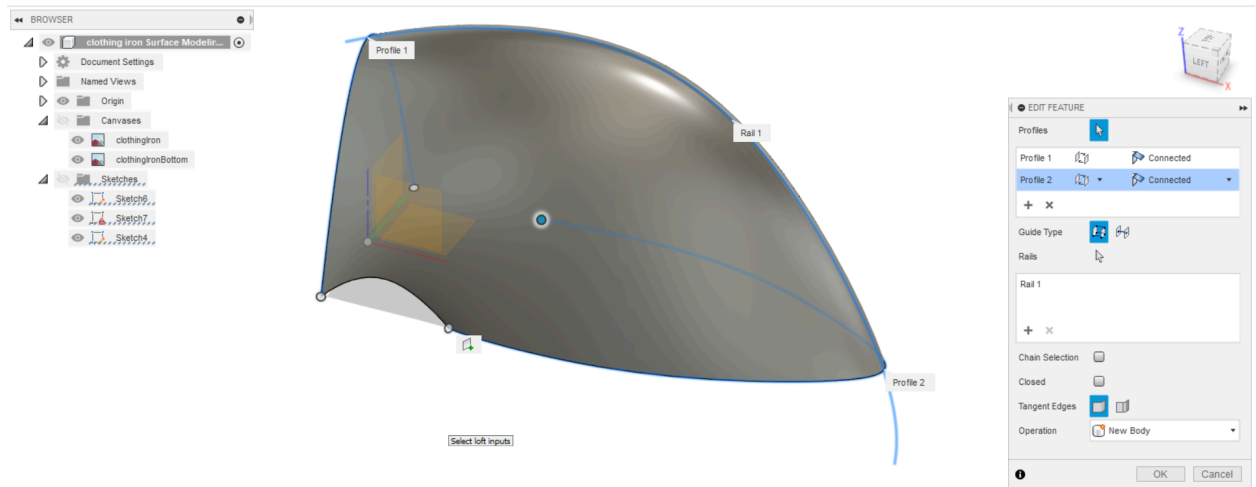


6. Make a sketch to add the handle. This should be done by a plane running through the middle of the part.

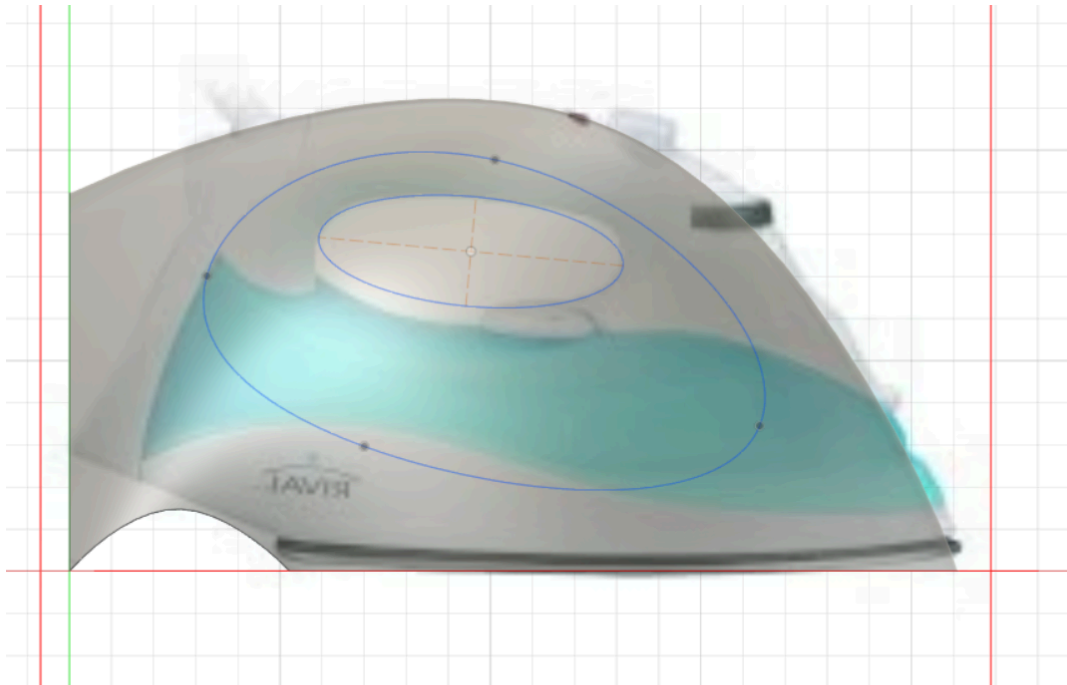


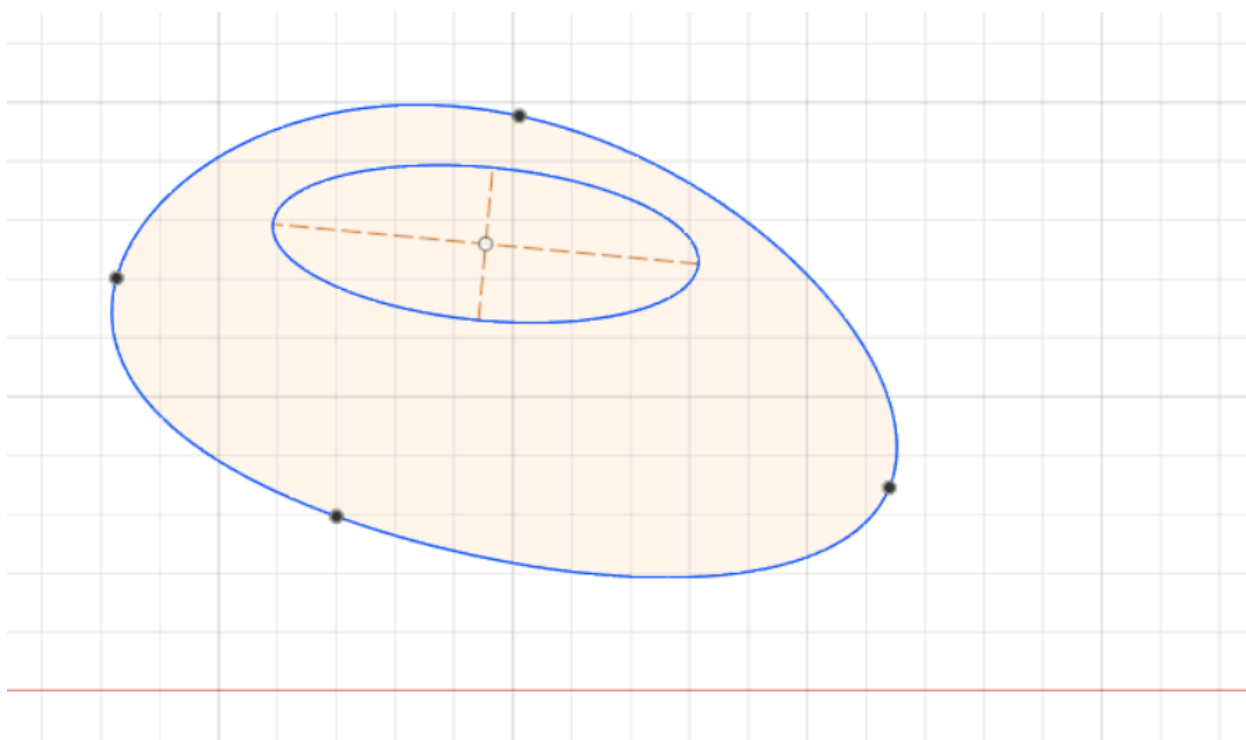
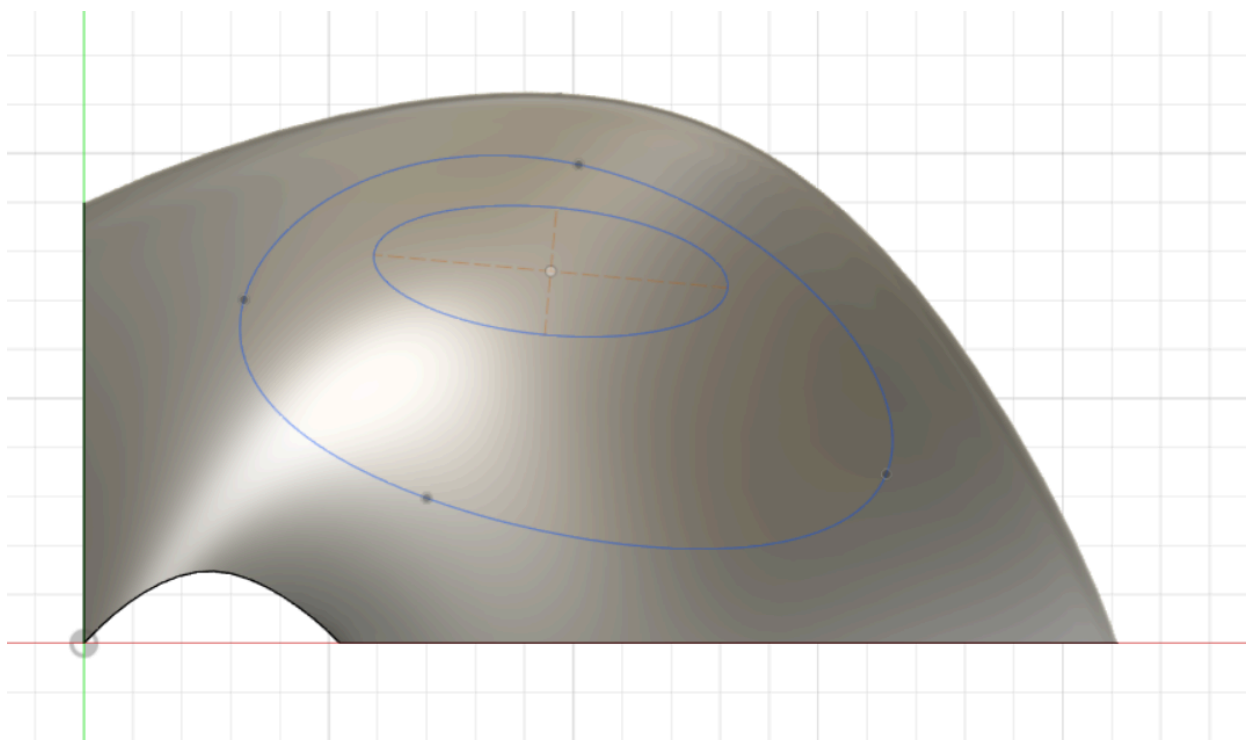


7. Use the trim tool to cut out a large hole.

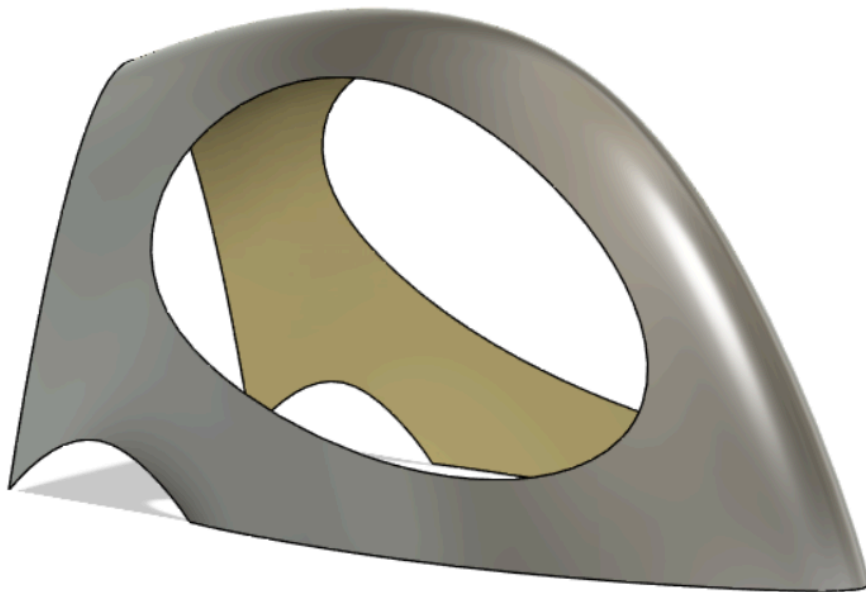
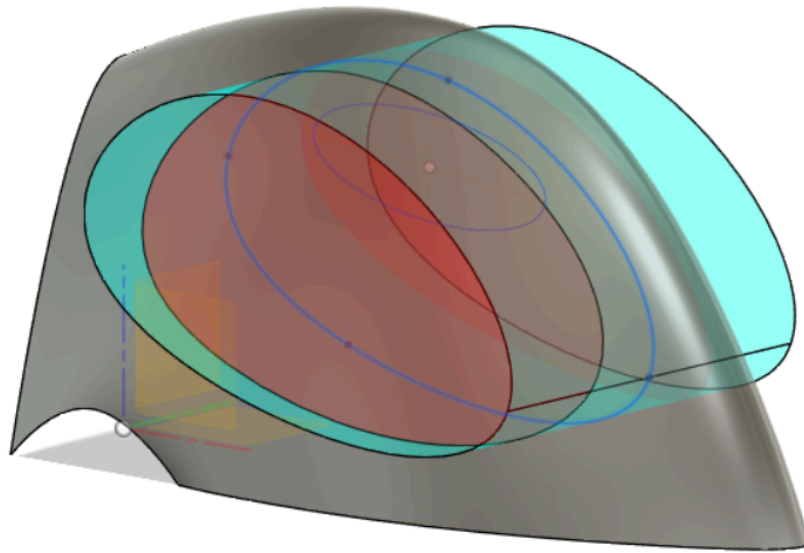


8. Use the loft tool to fill in the hole and make the handle


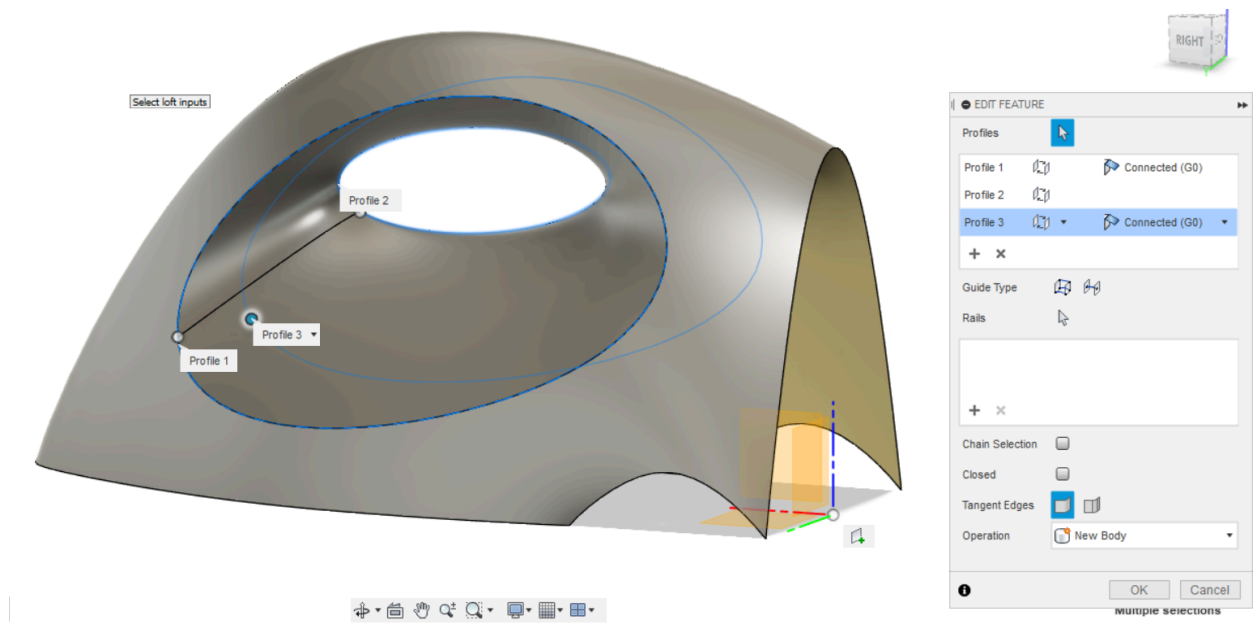


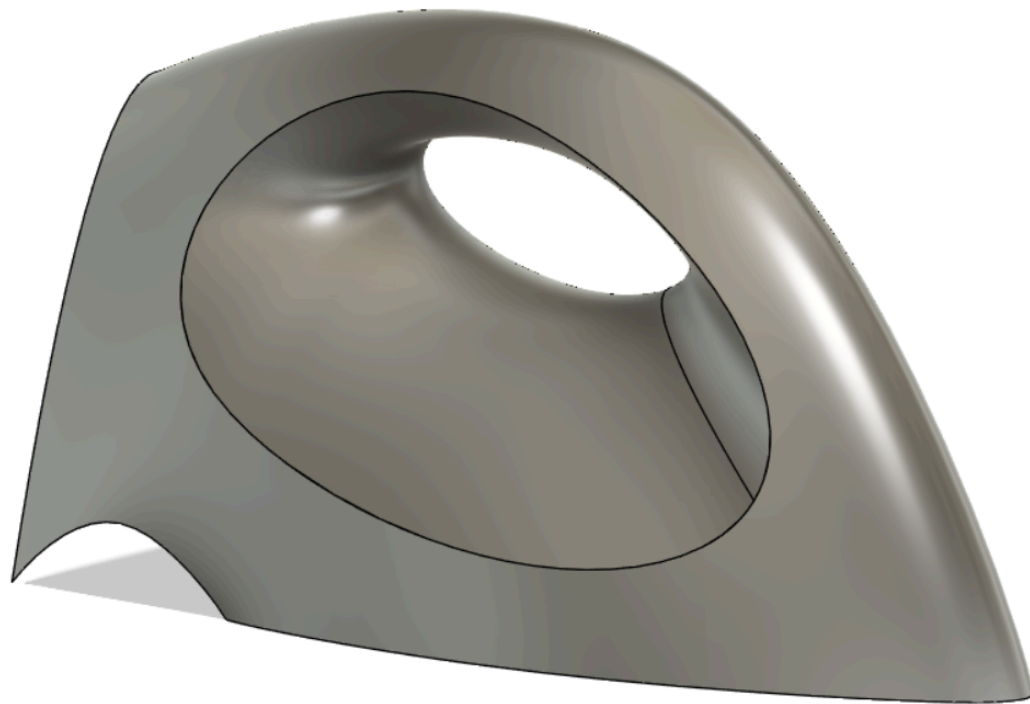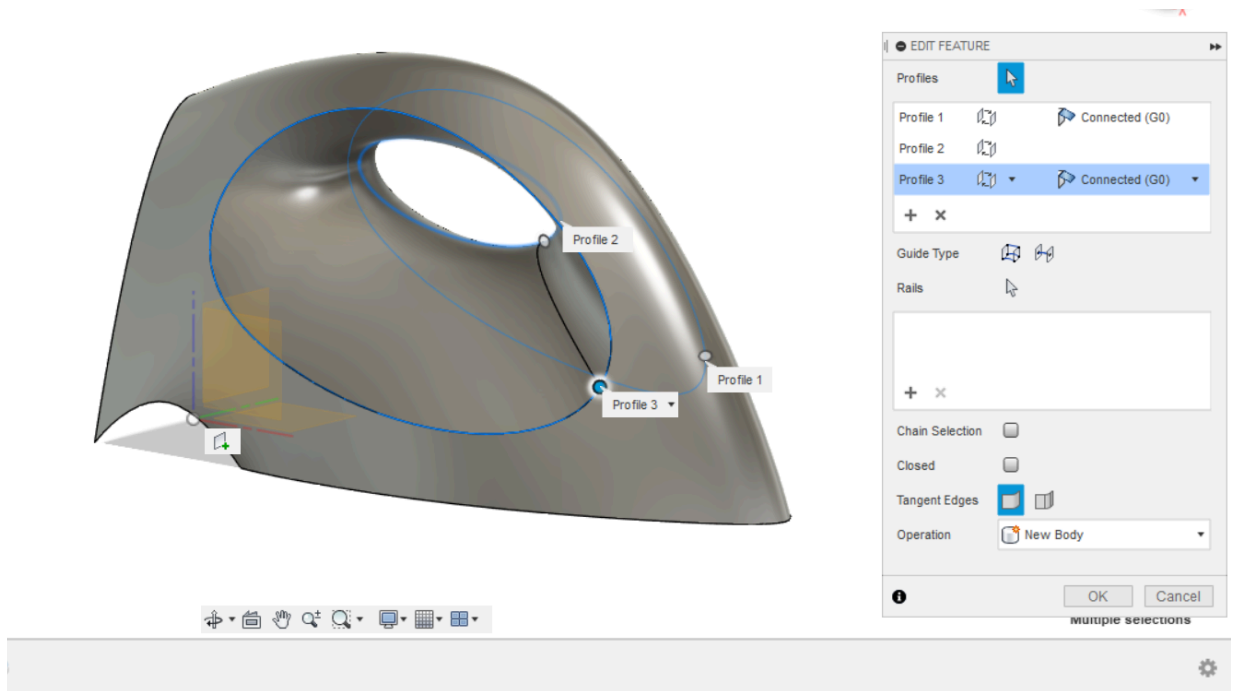


9. Make a sketch going down the middle of you part. This will be used to make the “boundaries” of your iron.

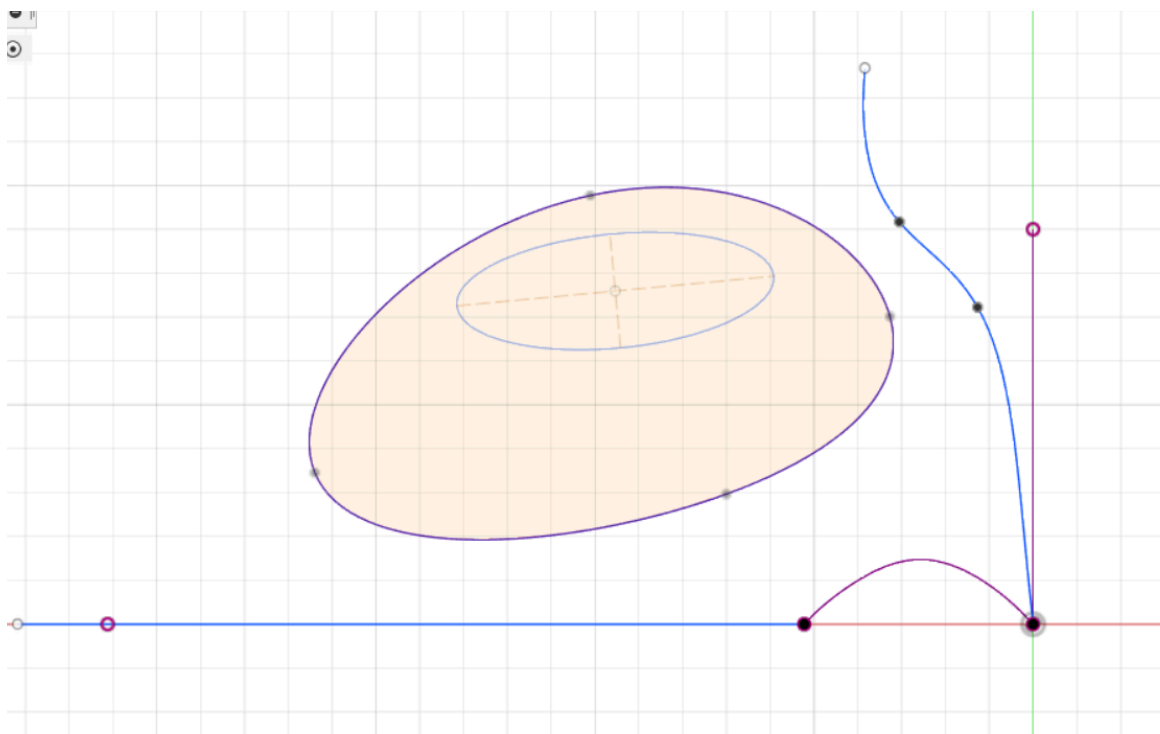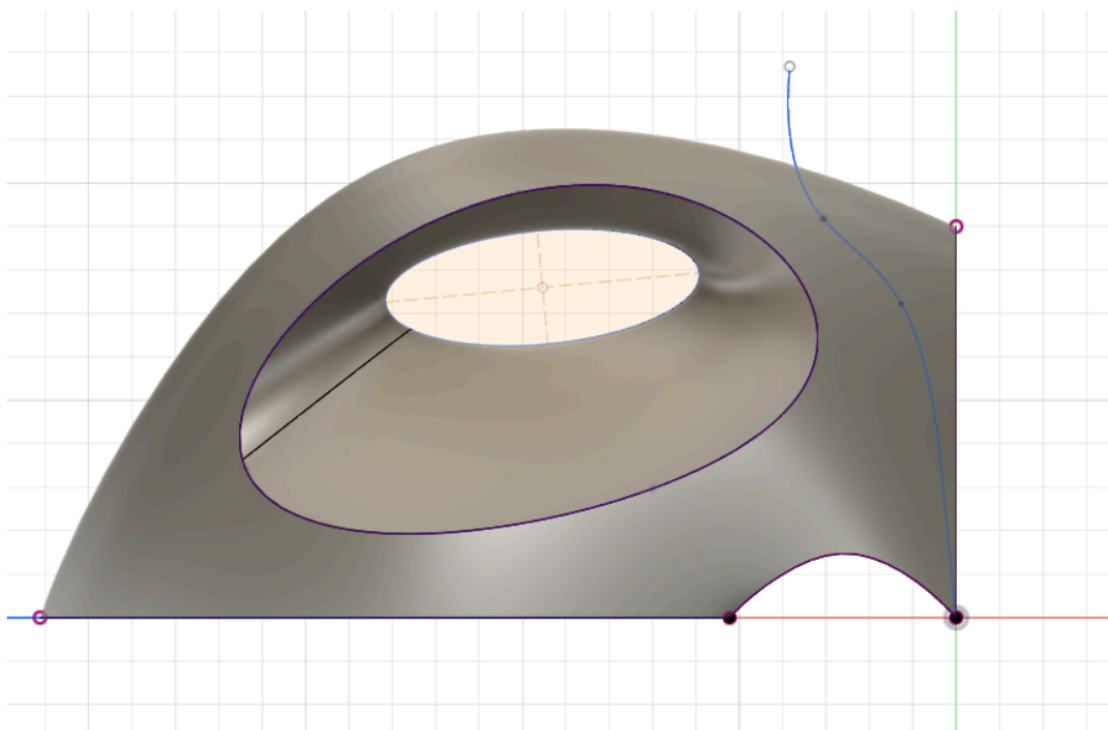

10. Now extrude each of the things you drew in step 9.

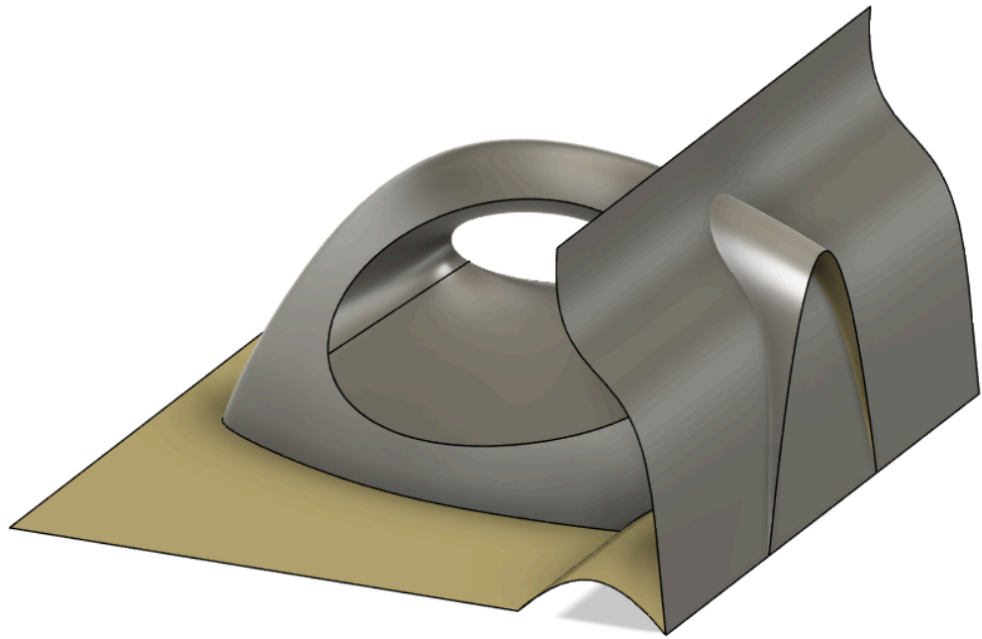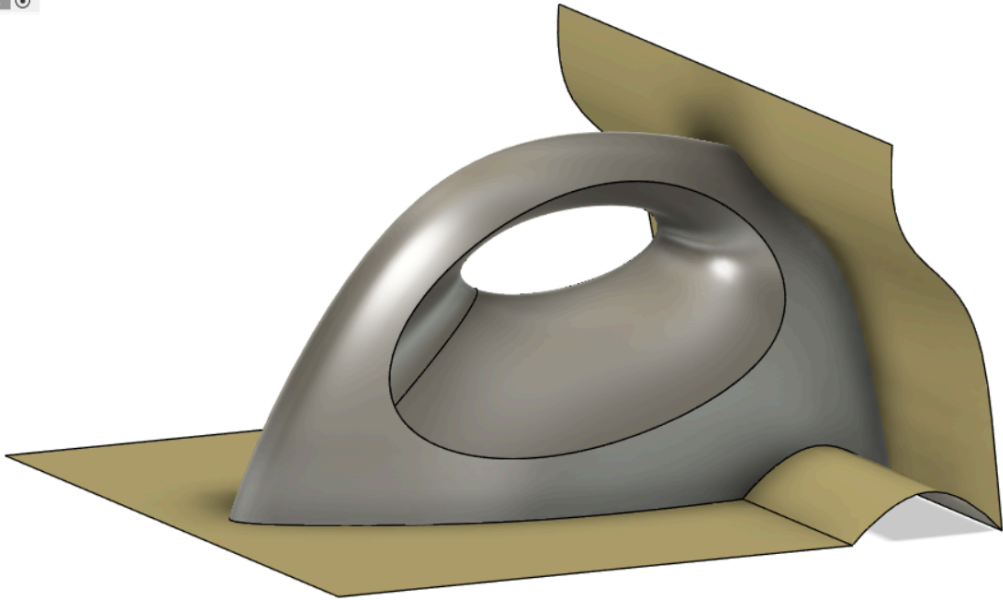

11. Use the trim tool to trim off any extra bits

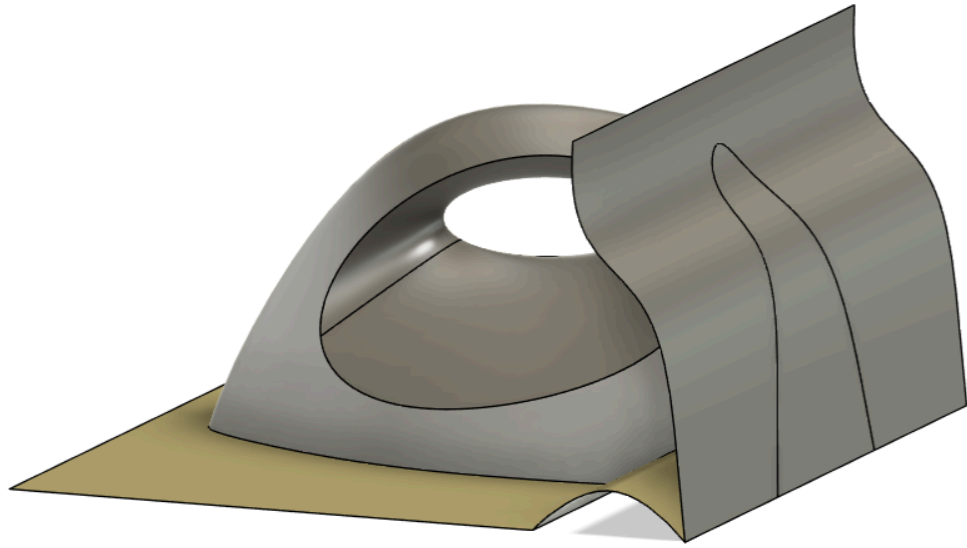

12. Use the “boundary fill” tool to make your iron into a solid.

