





JEANS-BASICS

Durable Jeans pants are indispensable fashion classics as well as essentials for work wear. The characteristic cut, as well as the stitching details clearly point out their origin.

Even the denim jacket has now ascended to be a classic fashion staple. The jeans cut in this edition is fashionably narrow, but not slim. The jacket has a casual fit.

The dungarees have more functional details, while the jacket variation is inspired by the trendy Retro look, in heavy gabardine ideal for a casual worker-look or in raw denim for the biker style.

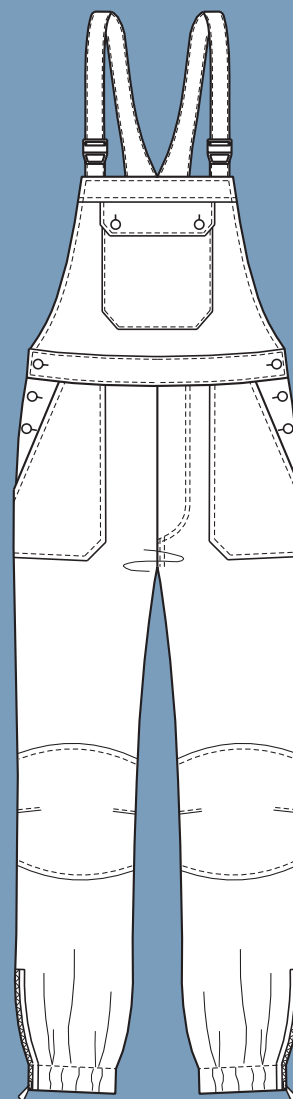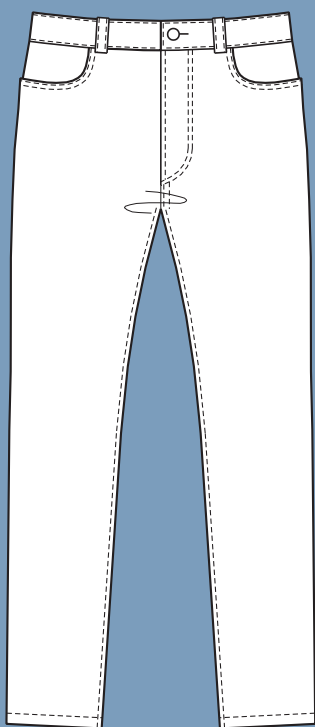

Basic Jeans Block

FRONT PATTERN

1 On a vertical line, measure the following upward and square out to the right from all points.

- Knee length Kl
- Inseam Is
- Outseam Os
- for the hip depth, measure $1/10$ of $1/2$ hip plus 3 cm from the crotch line upward.

On the hipline, measure the front trouser width (Ftw) to the right and square up and down from this point. Then measure the front crotch width (Fcw) to the right. Divide the total front width by two, measure 2 cm to the left and square up and down for the front creaseline. On the hemline, measure $1/2$ hem width minus 0.5 cm to the left and right. On the knee line, measure $1/2$ hem width minus 0.5 cm to the left and right. Draw the inseam and outseam between the hem and the knee line.

Draw guidelines for the inseam and outseam from the knee line upward. The guideline for the outseam ends in between the hip and the crotch depth on the base line. Lower the waistline 1 cm at the centre front. Taper the waist 1.5 cm at the centre front and draw a guideline to the front trouser width at the hip and extend this line to the crotch. On the crotch line, measure the distance between this line and the inseam and transfer half of this amount upward. From this point draw a slanted guideline and draw the crotch curve. Taper the waist at the outseam 1 cm, draw the outseam curve and finish the inseam. Draw the waistline perpendicular to the centre front according to the illustration.

BACK PATTERN

2 The back trouser is constructed by drafting the pattern on the front trouser pattern. Trace a copy of the front pattern and lengthen the horizontal construction lines outward. Draw the back outseam and inseam 1 cm parallel to the front pattern from the hemline to the knee. Extend the hipline 2 cm outward and mark the outseam. From this point measure the back trousers width (Btw) to the right. Then measure the back crotch width (Bcw) to the right. On the outseam, measure 1 cm from the crotch depth upward for the slant of the back pattern. Draw an auxiliary line from this point to the back crotch and square up.

Draw auxiliary lines from the knee line to the 2-cm-point at the outseam and to the back crotch width. Measure the outseam of the front pattern and transfer this measurement to the back outseam. Transfer the length of the front inseam minus 0.7 cm to the back inseam. Measure the distance between the knee point and the outseam point on the back pattern and transfer this measurement plus 3 to 4 cm to the centre back. (Choose the addition so that the waistline and the centre back meet at right angles).

Draw the waistline between the two points. Measure the front waistline and mark this measurement on the extended back waistline. From this point, measure $1/2$ waistband plus 2 cm for two little darts to the left. The remaining amount should be 1-1.5 cm or less for a well shaped hip curve. Draw the yoke line, divide the back waistline in thirds and mark the darts as illustrated. Draw the outseam, the inseam, the crotch seam and the waistline as illustrated. Verify the back trouser width as well as all seam transitions and adjust if necessary.



Measurement Chart Size 50

Body Measurements in cm:

			1/2	1/4
W	Waistband	90.0	45.0	22.5
Hg	Hip girth	102.0	51.0	25.5
Kg	Knee girth	43.0	21.5	10.8
Hw	Hem width	38.0	19.0	9.5
Os	Outseam	102.0		
Is	Inseam	82.0		
Br	Body rise	20.0	= Os minus Is	
Kl	Knee length	47.2	= $1/2$ Is + $1/10$ Is minus 2	

Auxiliary Measurements:

Ftw	Front trouser width	25.5	= $1/4$ Hg
Fcw	Front crotch width	5.1	= $1/10$ of $1/2$ Hg
Bcw	Back crotch width	12.2	= $1/10$ Hg + 1.5 - 2.5 (2.0)
Btw	Back trouser width	28.0	= $1/4$ Hg + 2.0 - 3.0 (2.5)

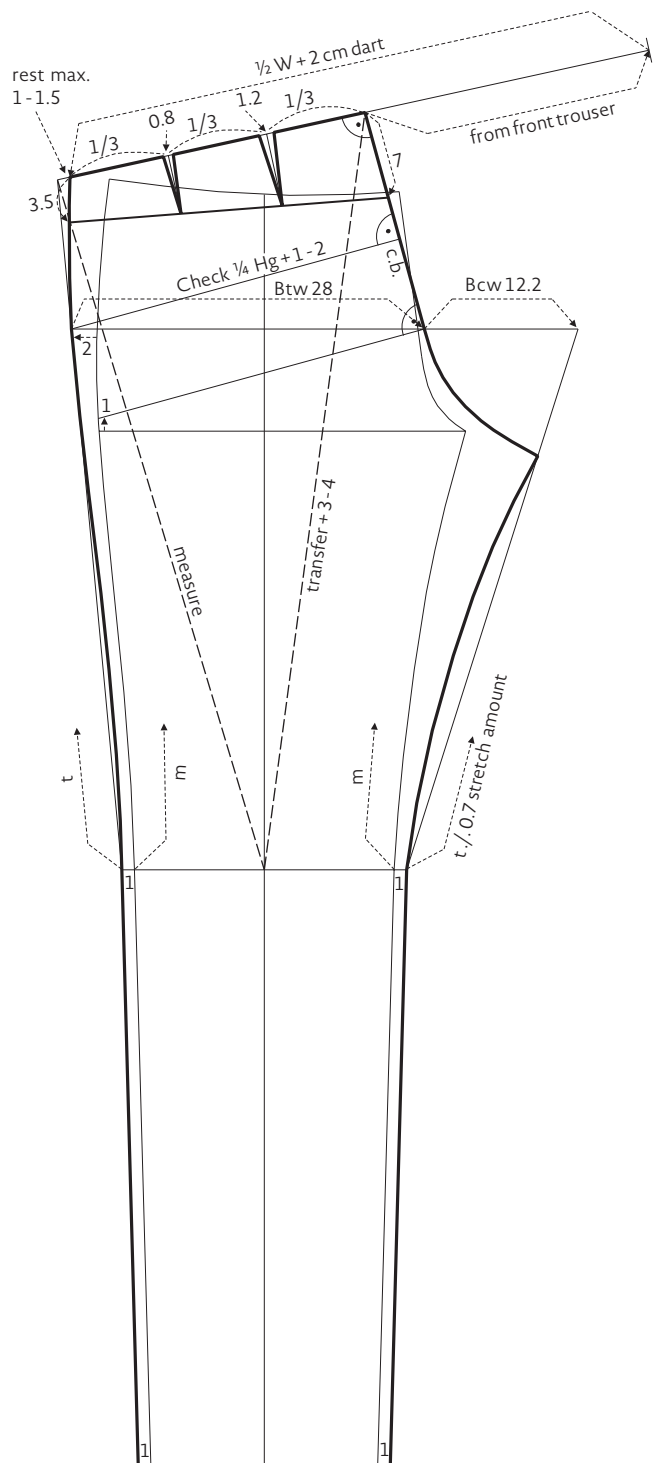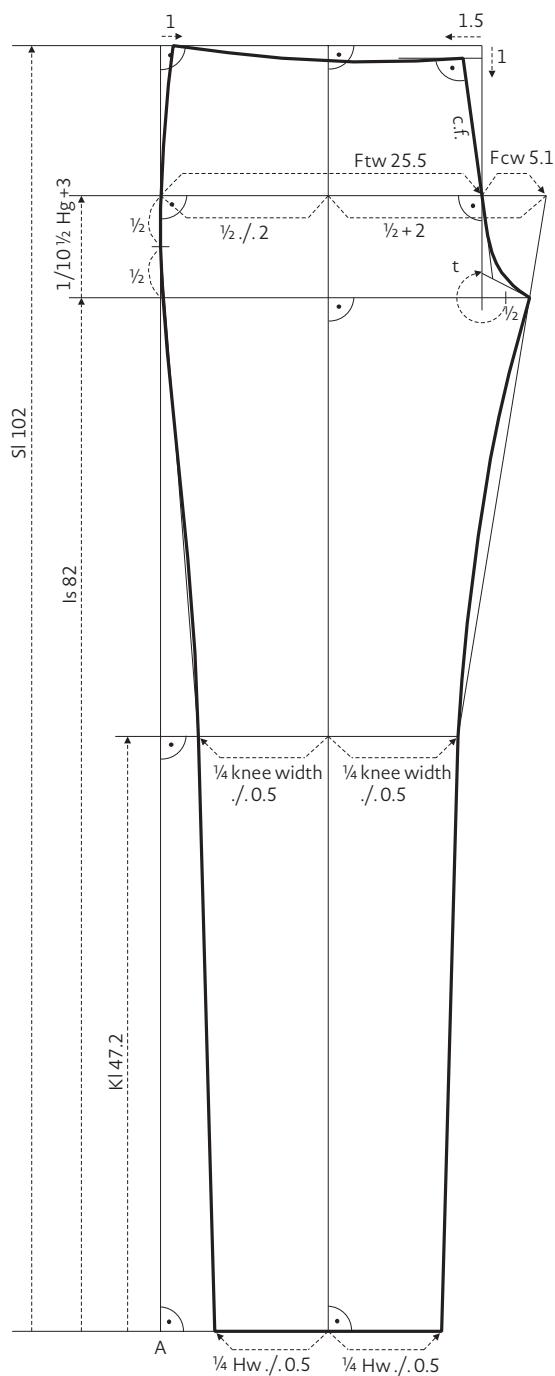


Pattern Order

You can order the pattern with the numbers: 3069, 3070, 4041 and 4042 in following sizes:
 Normal (44–60), Thickset (23–31) and Slim (88–114). Costs: 30 € (plus shipping and packaging costs).
Sextl-Schnitt-Service | Hahndorfer Straße 6 | 81 377 Munich | Phone: +49 89 71 62 40
 Fax: +49 89 710 55 77 2 | alexander.6tl@gmx.de | www.sextl-schnitt-service.de

Jeans

Design 3069

- Regular Fit
- Mid-rise
- Straight leg
- Classic five-pocket look

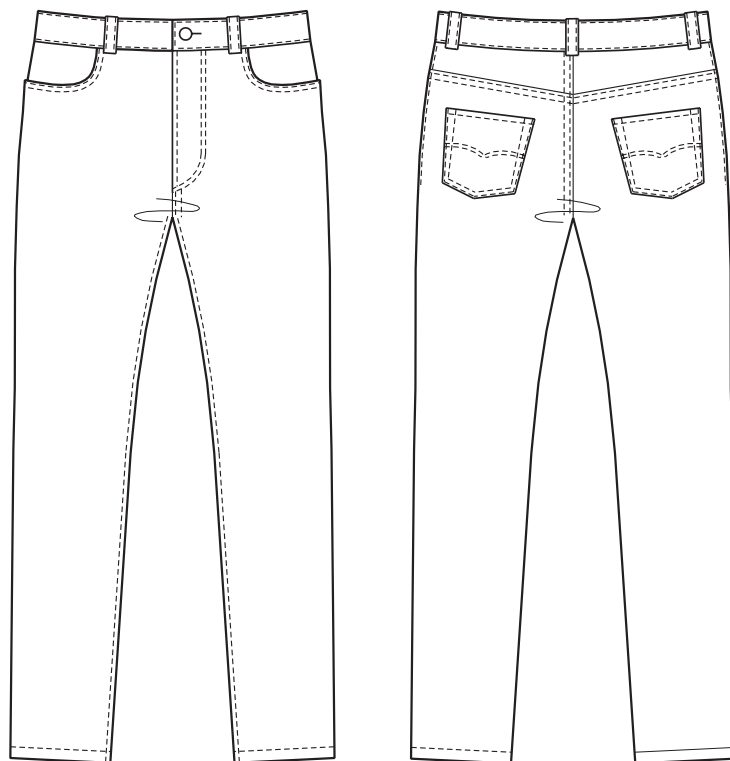

DESIGN PATTERN

1 Verify the hip measurement:
Measure the hip lines of the front and back pattern (A and B) and add both measurements. Subtract $\frac{1}{2}$ hip girth from this amount to verify the included ease. Here:


A + B	=	53.0 cm
minus $\frac{1}{2}$ Hg	=	51.0 cm
= $\frac{1}{2}$ ease	=	2.0 cm

Compare the seam length of the yoke and the back trouser pattern and adjust if necessary. Mark the back pocket as illustrated. Plot the waistband 4 cm wide according to the waist girth and mark notches for the outseam and the pocket. Mark the belt loops 1.2 cm wide. Trace a copy of the back patch pocket and mark the decorative topstitching. Mark the grainlines along the front and back creaseline.

Choose a material with stretch if the included ease is less than 1 cm since the trousers might be too tight otherwise. Draw the front jeans pocket and the pocket bag on the front pattern as shown in the illustration. Add 6 mm more length at the pocket entry so that the pocket has enough room. Blend the outseam. Indicate the zipper length with 15 cm and mark the topstitching for the front fly 3.4 cm wide.

Separate the back yoke and close the darts. Blend the yoke line and the waistline of the yoke evenly.


1

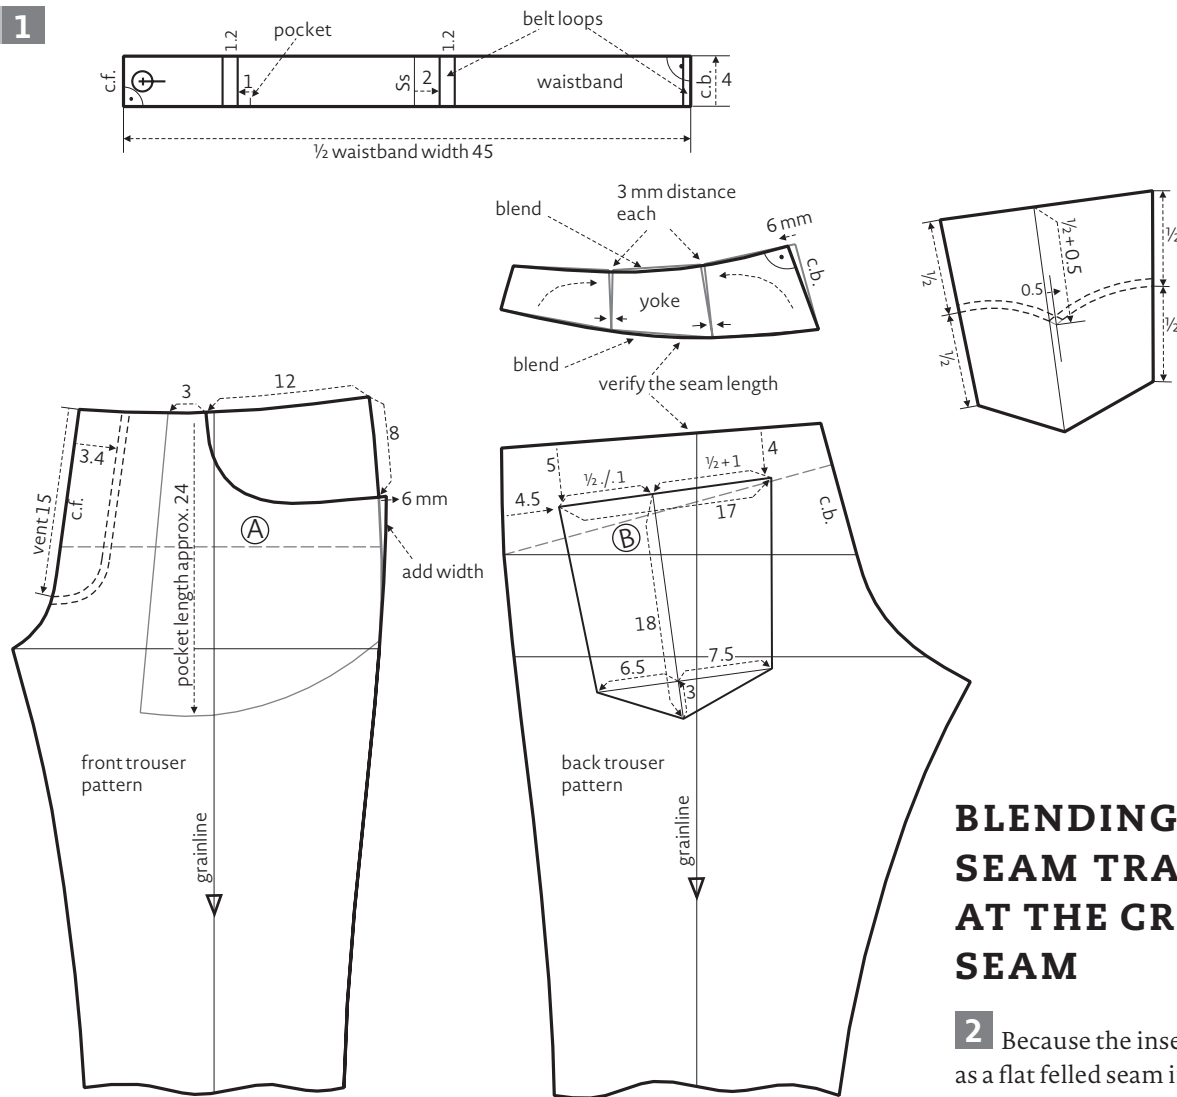


BLENDING THE SEAM TRANSITION AT THE CROTCH SEAM

2 Because the inseam is sewn last as a flat felled seam in the classic way of sewing jeans, the seam transition of centre front and centre back must be checked and blended. Place the left and right front crotch seam together and blend the seam transition. In the example, there is a bit missing for a nice transition. This would be too much though and instead hollow out the front crotch seam (shown in the circle).

2

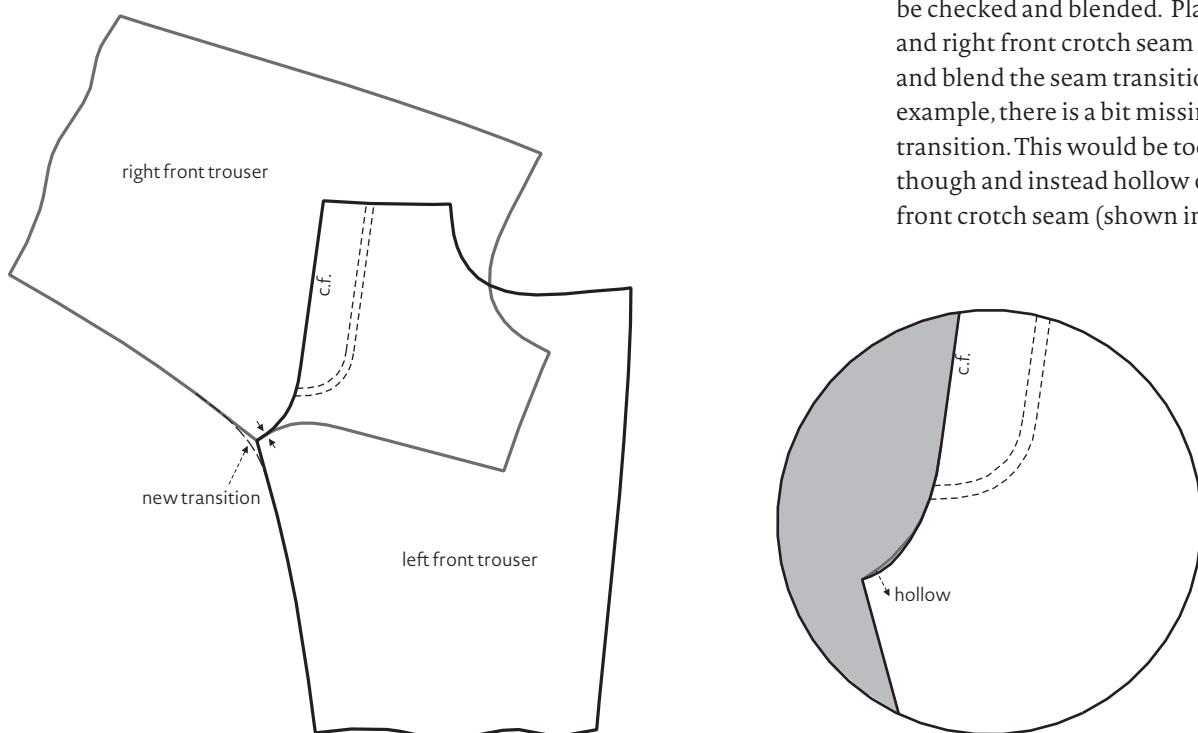


3

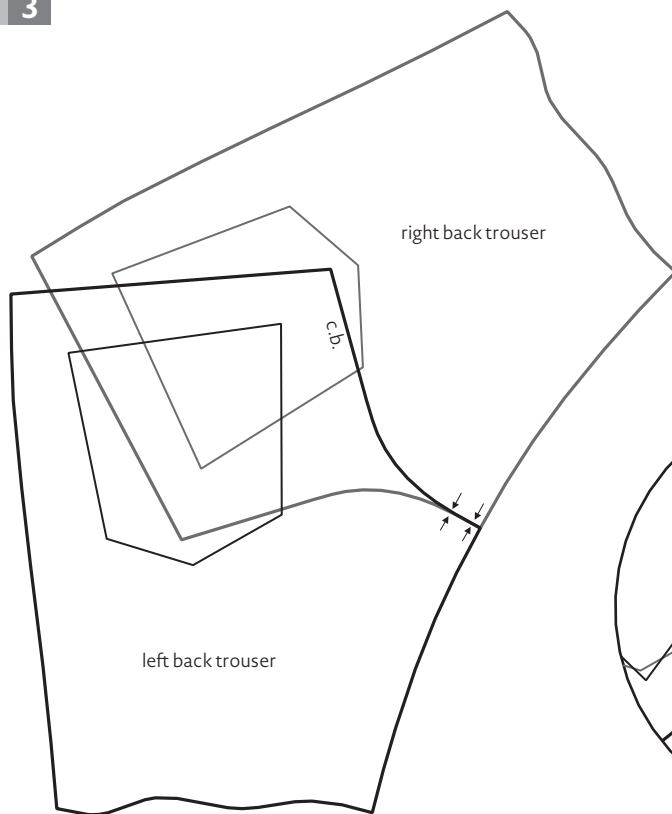

3

Place the back patterns together at the back crotch seam and check the seam transition at the inseam. The transition in this example is good and does not need to be adjusted. If the inseam transition would be too pointed as in the example shown in the circle, there is a risk that the tip would be cut off at the production and the crotch seam would be shortened. The back crotch curve has to be flattened in order to adjust it.

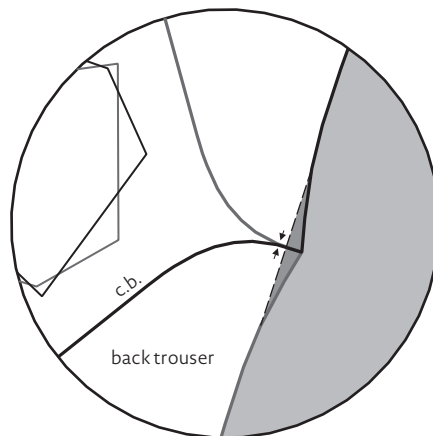

Basic Dungaree Block

FRONT PATTERN

1 On a vertical line, measure the following upward and square out to the right from all points.

- Knee length Kl
- Inseam Is
- Outseam Os
- For the hip depth, measure $\frac{1}{10}$ of $\frac{1}{2}$ hip plus 3 cm from the crotch line upward.

On the hipline, measure the front trouser width (Ftw) to the right and square up and down from this point. Then measure the front crotch width (Fcw) to the right. Divide the total front width by two, measure 2 cm to the left and square up and down for the front creaseline. On the hemline, measure $\frac{1}{2}$ hem width minus 0.5 cm to the left and right. On the knee line, measure $\frac{1}{2}$ hem width minus 0.5 cm to the left and right.

Measurement Chart Size 50



Body Measurements in cm: $\frac{1}{2}$ $\frac{1}{4}$

W	Waistband	90.0	45.0	22.5
Hg	Hip girth	102.0	51.0	25.5
Kw	Knee width	48.0	24.0	12.0
Hw	Hem width	44.0	22.0	11.0
Os	Outseam	106.0		
Is	Inseam	82.0		
Br	Body rise	24.0	= Os minus Is	
Kl	Knee length	47.2	= $\frac{1}{2}$ Is + $\frac{1}{10}$ Is minus 2	

Auxiliary Measurements in cm:

Ftw	Front trouser width	26.5	= $\frac{1}{4}$ Hg + 1	
Fcw	Front crotch width	5.6	= $\frac{1}{10}$ of $\frac{1}{2}$ Hg + 0.5	
Bcw	Back crotch width	12.7	= $\frac{1}{10}$ Hg + 2.0 - 3.0 (2.5)	
Btw	Back trouser width	29.0	= $\frac{1}{4}$ Hg + 3.0 - 4.0 (3.5)	

The Dungarees are cut higher at the waist than regular jeans. The measurement chart has been adapted to the longer outseam and the higher body rise. The waistband girth is wider so that the Dungarees do not necessarily have to be opened to put them on. The additional width at the back waistband is kept short with elastic.

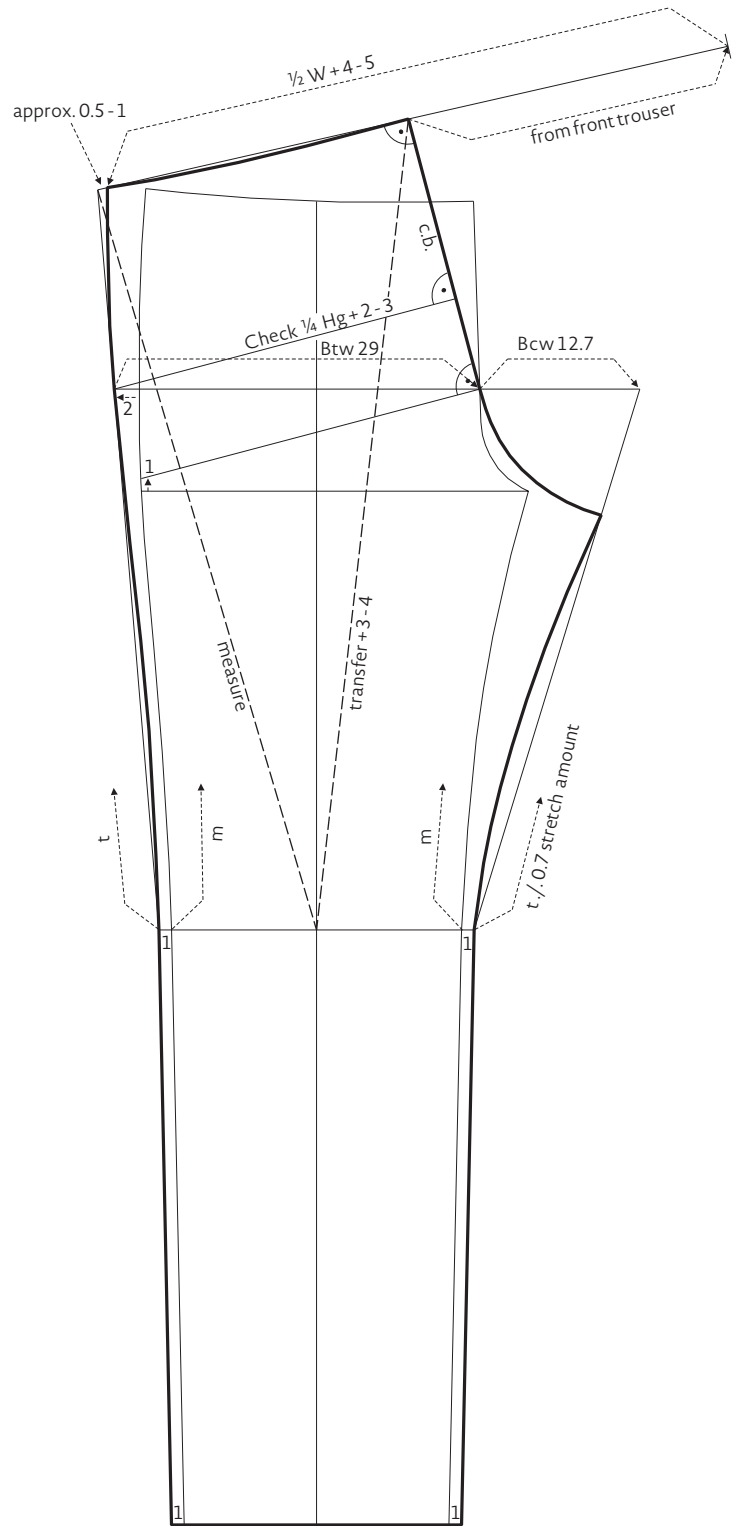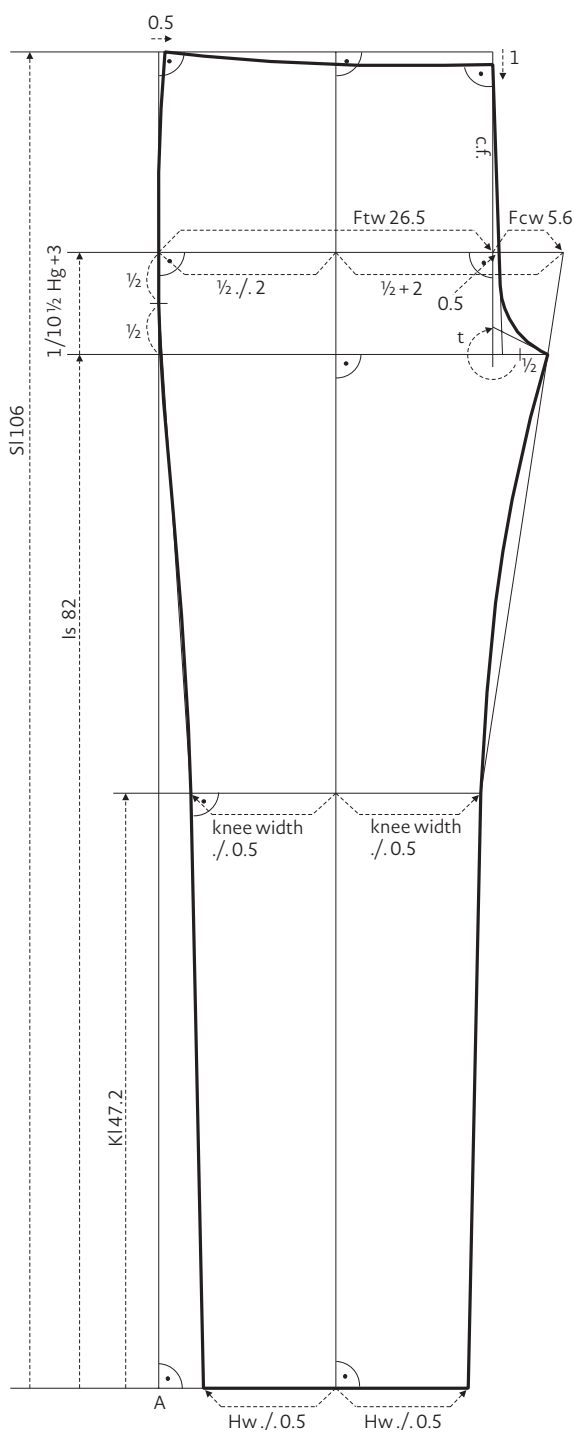

Draw the inseam and outseam between the hem and the knee line. Draw guidelines for the inseam and outseam from the knee line upward. The guideline for the outseam ends in between the hip and the crotch depth on the base line. Lower the waistline 1 cm at the centre front. Add 0.5 cm width at the hip into the front and draw a guideline from the lowered waist to this point. Extend this line to the crotch. On the crotch line, measure the distance between this line and the inseam and

transfer half of this amount upward. From this point draw a slanted guideline and draw the crotch curve. Taper the waist at the outseam 0.5 cm, draw a slight curve for the outseam and finish the inseam. Draw the waistline perpendicular to the centre front according to the illustration.

BACK PATTERN

The back trouser is constructed by drafting the pattern on the front trouser pattern. Trace a copy of the front pattern and lengthen the horizontal construction lines outward. Draw the back outseam and inseam 1 cm parallel to the front pattern from the hemline to the knee. Extend the hipline 2 cm outward and mark the outseam. From this point measure the back trousers width (Btw) to the right. Then measure the back crotch width (Bcw) to the right. On the outseam, measure 1 cm from the crotch depth upward for the slant of the back pattern.


Draw an auxiliary line from this point to the back crotch and square up. Draw auxiliary lines from the knee line to the 2-cm-point at the outseam and to the back crotch width. Measure the

outseam of the front pattern and transfer this measurement to the back outseam. Transfer the length of the front inseam minus 0.7 cm to the back inseam. Measure the distance between the knee point and the outseam point on the back pattern and transfer this measurement plus 3 to 4 cm to the centre back. Draw the waistline between the two points. Taper the back pattern only 0.5 cm to 1 cm at the outseam and draw the hip curve only slightly curved. Draw the slightly curved waistline perpendicular to the centre back as illustrated. Complete the outseam, the inseam, and the shallow crotch seam as shown. Verify the back trouser width as well as all seam transitions and adjust if necessary.

Dungarees



Design 3070

- Casual fit
- High rise
- Buttoned side closure
- Patch pockets
- Wide and shaped leg
- Elastic at back waist and hem
- Overlapping back bib

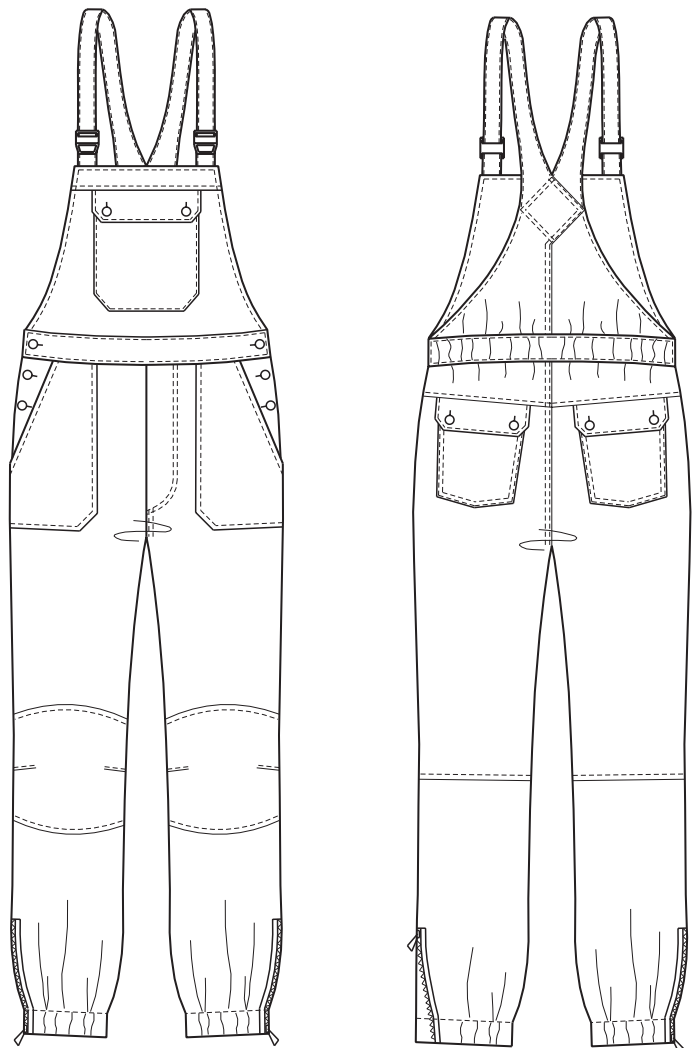

1 Verify the hip measurement:
Measure the hip lines of the front and back pattern (A and B) and add both measurements. Subtract ½ hip girth from this amount to verify the included ease.

Mark the front fly 17.5 cm long and draw the topstitching 3.4 cm wide (double topstitching 6 mm apart). Draw the back yoke and the front and back patch pockets as shown in the illustration. Mark the hem stitching 3.5 cm wide for the 3-cm wide elastic. Mark the fake zipper at the pant sides. Draw the cross seams for the knee shaping on the front pattern and take out 1 cm above and below the back knee line for the shaping.

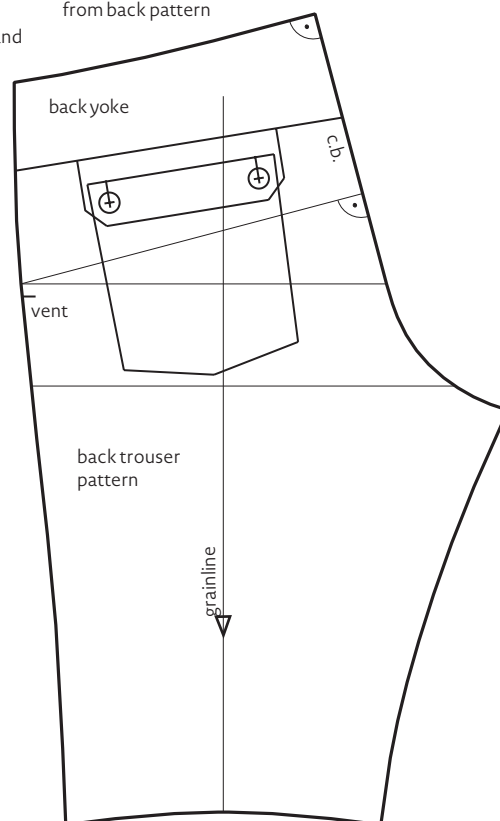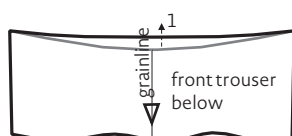

at the back. Mark the button and buttonhole positions on the front pants and the underlap. Draft the front and back bib according to the waistline measurements as shown in the illustration. Draw the cross seam, the patch pocket with flap and the shoulder strap piece onto the front bib pattern. Draw the square for the shoulder straps overlapping to the right side and draw the attached shoulder straps. Mark the grainlines along the front and back creaseline.

Leave about 6 cm space between the back and the front pattern and square down. Measure $\frac{1}{2}$ scye width minus 1.5 cm to the left and square up and down to the hip line = front pitch line. From the chest line measure the front armhole notch (FAN = $\frac{1}{4}$ scye width), $\frac{1}{4}$ scye depth and the armhole depth upwards along the front pitch line. On the chest line, measure the chest width from the front pitch line to the left. On the waistline, measure the abdomen width to the left. Divide both distances by two, connect the $\frac{1}{2}$ - points with a straight line, extend this line upward and square right to the armhole depth on the front pitch line. Along the front pitch line, measure 4.5 cm downward for the front shoulder slope. Connect the neckline corner and the shoulder slope with an auxiliary line, transfer the shoulder width of the back minus 0.5 cm to 1 cm and plot the front shoulder line. Draw the front armhole as shown.

Shift the shoulder seam 1 cm to the front. Measure the neck width downward from the neck point for the front neckline. From this point square out to the left and measure the neck width plus 2 cm. Draw the front neckline as shown in the illustration. Draw the centre front to the chest width point. Square up from the back hemline for the back sideseam. Taper the front sideseam the same amount. Measure the back sideseam from the waist to the hem and transfer this length to the front sideseam. Draw the centre front at right angles to the waistline and measure the same length as the side seam plus 0.5 cm. Draw the front hem line to the front side seam. Measure and verify the amount of ease included at the chest, waist and hip line: The chest measurement must comply with the calculation in the measurement chart. The hip measurement should include 5 cm to 6 cm ease. Cut out all pattern pieces. Compare all seam lengths and examine the transitions at jointed seam lines.

SLEEVE

2 Measure the armhole circumference. Measure the front and back armhole height as shown and add both measurements. Calculate the sleeve measurements. From the starting point (A) measure the sleeve cap height and the sleeve length on a vertical line downward. From the sleeve length measure 1.5 cm up and down for the front and back sleeve length. Determine the position of the elbow line as shown in the illustration. Square out to the right from all points. For the front armhole notch measure $\frac{1}{4}$ scye width minus 1 cm from the biceps line upward. Taper the front sleeve 2 cm at the

Measurement Chart Size 50


Body Measurements in cm: $\frac{1}{2}$ $\frac{1}{4}$ $\frac{1}{8}$

Bh	Body height	179.0	89.5	44.75	22.4
Cg	Chest girth	100.0	50.0	25.0	12.5
Wg	Waist girth	90.0	45.0	22.5	
Hg	Hip girth	102.0	51.0		
Sl	Sleeve length	64.0			

Calculations in cm:

Nw	Neck width	8.5	= $\frac{1}{10}$ of $\frac{1}{2}$ Cg + 3
Sd	Scye depth	25.0	= $\frac{1}{8}$ Cg + 12.5
Bwl	Back waist length	44.8	= $\frac{1}{4}$ Bh
Lg	Length	64.0	= $\frac{1}{2}$ Bh minus $\frac{1}{8}$ Bh minus 2 - 4
Ad	Armhole depth	27.5	= Sd + 2.5
Bw	Back width	21.2	= $\frac{2}{10}$ Cg + 1 - 1.5 (up to 100 Cg) = $\frac{1}{10}$ Cg + 11 - 11.5 (more than 100 Cg)
Sw	Scye width	15.5	= $\frac{1}{8}$ Cg + 2.5 - 3.5
Cw	Chest width	20.8	= $\frac{2}{10}$ Cg + 0.5 - 1
Total chest		57.5	
	minus 50.0		= $\frac{1}{2}$ Cg
	= 7.5		= ease
Aw	Abdomen width	21.2	= $\frac{1}{4}$ Wg minus 1 - 2

Abdomen width is not considered if it is smaller than the chest width, calculate with the chest width instead in this case. (Aw=Cw)

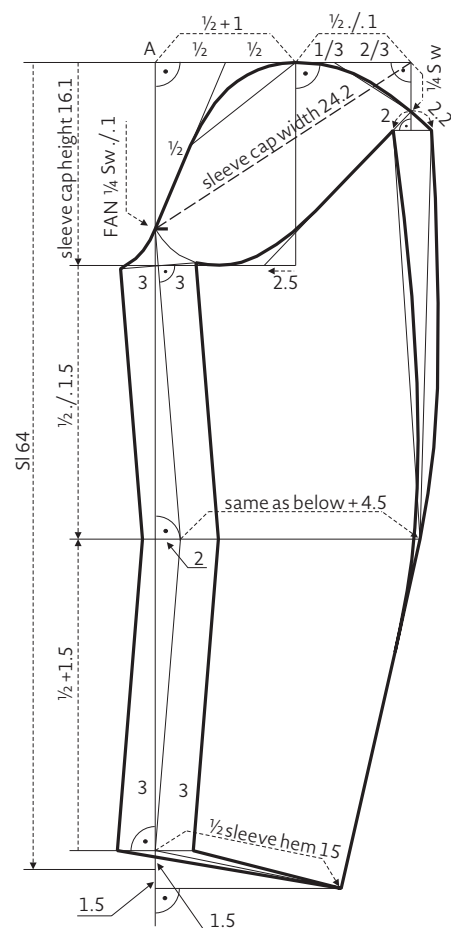

elbow line and draw the front sleeve fold. Measure and mark $\frac{1}{2}$ hem width diagonally from the front to the back sleeve length. Measure the same distance plus 4.5 cm on the elbow line from the sleeve fold to the right. Draw the back sleeve fold from this point to the hem. Measure the sleeve width from the front sleeve notch diagonally to the original line. Measure $\frac{1}{4}$ scye width downward and square out to the left from this point. Divide the original line according to the illustration and draw the guidelines for the sleeve cap. Measure 2 cm downward from the $\frac{1}{4}$ -scye-width point along the guideline for the lower sleeve cap and square out to the right. Measure 2.2 cm from the $\frac{1}{4}$ -scye-depth point to the right for a better seam transition. For the front sleeve seam measure 3 cm from the front sleeve fold to the outside and inside. Draw the seams parallel to the fold line. Shape the sleeve cap line and the lower sleeve line. Copy the lower sleeve line, mirror it and transfer it outward to the front sleeve seam. Square left and

Sleeve Measurement Chart in cm:			
			$\frac{1}{2}$
Ah	Armhole height	44.2	22.3
Ac	Armhole circumference	53.4	26.7
Sh	sleeve hem	31.0	15.5
Sl	sleeve length	64.0	
Sch	sleeve cap height	16.1	$= \frac{1}{2} Ah \text{ minus } (1/10 \text{ of } \frac{1}{2} Ah + 4.0)$
Scw	sleeve cap width	24.2	$= \frac{1}{2} Ac \text{ minus } 2.5$

right at the front sleeve length and blend the hemline. Trace a copy of the under sleeve and check the seam transitions. Measure the sleeve cap ease. The cap ease should amount 4 to 6 per cent. Cut from the sleeve cap to the hemline to control the excess. Increase or decrease the ease by opening or overlapping the sleeve pieces.

Classic Denim Jacket

Design 4041

- Convertible collar
- Topstitched buttonstand
- Pintuck at buttonstand
- Chest pockets with flaps
- Side pockets
- Waistband with adjustable tabs
- Sleeve with cuff and vent






DESIGN PATTERN

1 Shorten the hem 4.5 cm for the waistband. Lower the neckline 0.5 cm at the centre back, 1 cm at the shoulder and 1.5 cm at the centre front. Draw the new neckline perpendicular to the centre back. Measure 13 cm downward along the centre back and square out to the left for the back yoke. Draw the yoke line to the armhole and mark the back panel seam 3.5 cm away from the armhole. Draw the back panel seam to the hem as shown in the illustration. Draw the centre front straight between the neckline and the hem and add 2 cm overlap parallel to the centre front. The front edge is finished on the fold. This is only possible if the corner at the centre front is not too large. In the example, there is a slight overlap at waist and chest height, which can be tolerated.

Mark the stitching line for the buttonstand 4.5 cm parallel to the front edge. Mark the upper buttonhole 2 cm below the neckline. Place the front waistband piece with a centered buttonhole on the front hem and distribute the remaining buttonholes evenly. Move the buttonholes 1 cm to the front due to the buttonstand width. Relocate the button positions accordingly 1 cm towards the inside. Mark the front yoke 4 cm above the second buttonhole.

Mark the pintuck for the buttonstand 1 cm wide below the yoke line. Mark the position for the pocket flap 1 cm away from the pintuck. Mark the pocket entry and square down from the midpoint. Draw the pocket flap and the stitching line for the pocket bag. Draw the front panel seams from the pocket entry to the hem as shown. Draft the side pocket according to the illustration. Draw the waistband 4.5 cm wide according to the length of the hem. Add the overlap and mark the buttonhole. Mark notches for the seam positions. Draw the adjustable tab on the sideseam and mark the two buttons. Mark the grainlines along the fold lines on the front and back pattern.

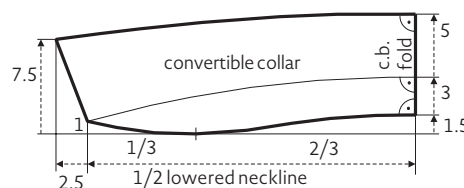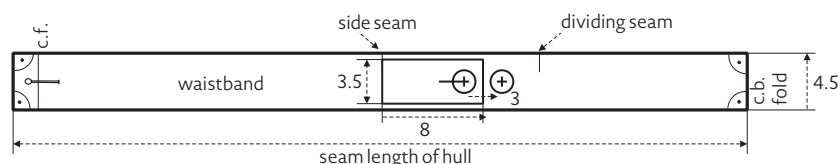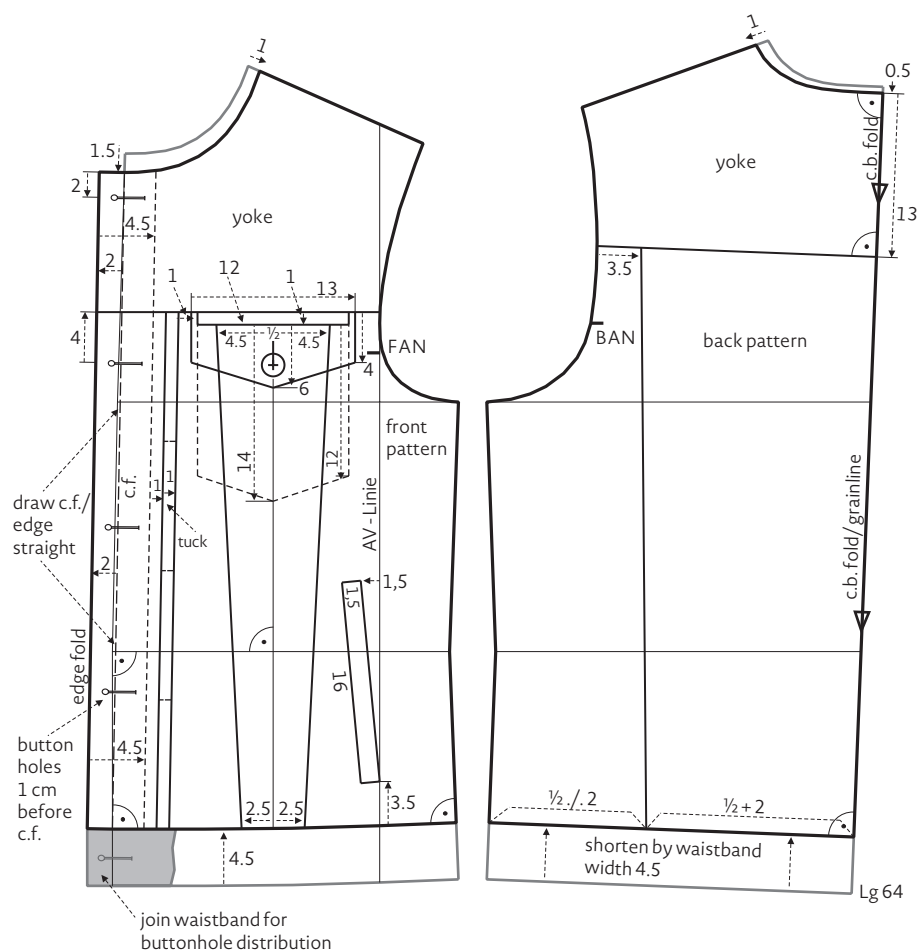



COLLAR

2 Measure the lowered neckline on the front and back pattern and draw a horizontal line with the same length. Measure 1.5 cm upward at the centre back for the roll of the collar stand and 3 cm for the collar stand. Measure 1 cm upward at the centre front and draw the collar stand seam. Measure 5 cm for the

collar width upward at the centre back and 7.5 cm upward at the centre front. Extend the collar point 2.5 cm to the left and plot the collar shape according to the illustration. Verify the collar length and adjust parallel at the centre back if necessary.

SLEEVE



3 Shorten the sleeve pattern around the cuff width of 4.5 cm. Mark the slit 9 cm long. Draw the front sleeve seam nicely shaped as shown. Draw the cuff 4.5 cm wide and match the length to the sleeve hem length. Mark the button and buttonhole position. Verify the sleeve cap ease. The sleeve should fit into the armhole without any ease for the denim construction with topstitched armhole. Cut from the sleeve cap to the hemline to adjust the sleeve cap width. Increase or decrease the ease by opening or overlapping the sleeve pieces. Mark the grainline perpendicular to the elbow line.

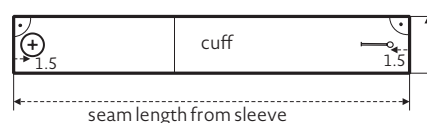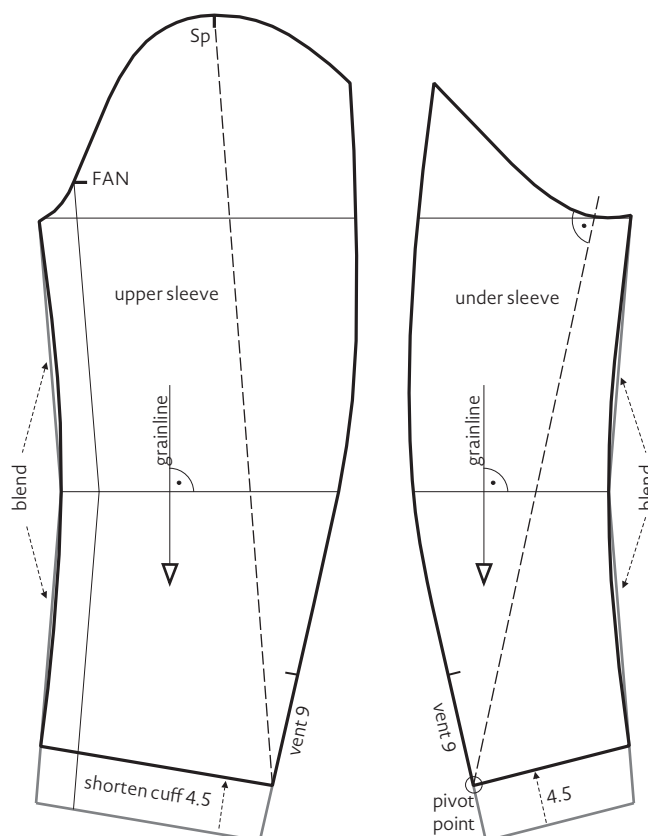

Trucker Jacket

Design 4042

- Convertible collar with collar stand
- Topstitched buttonstand
- Chest pockets with flaps
- Side patch pockets
- Movement pleats at the back
- Back waistband insert
- Sideseam moved backwards
- Reinforced elbow

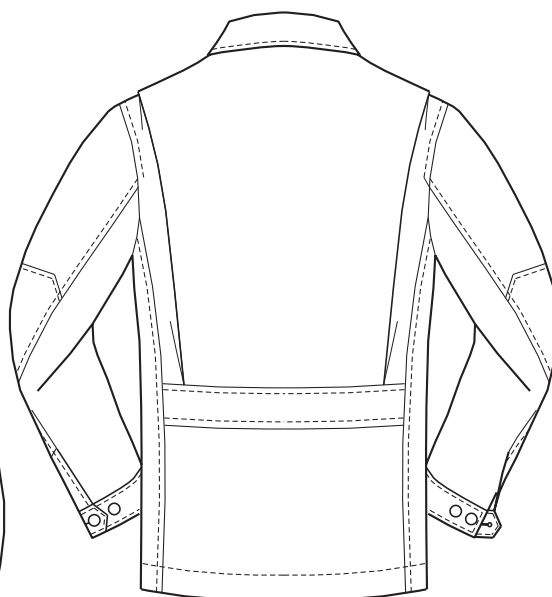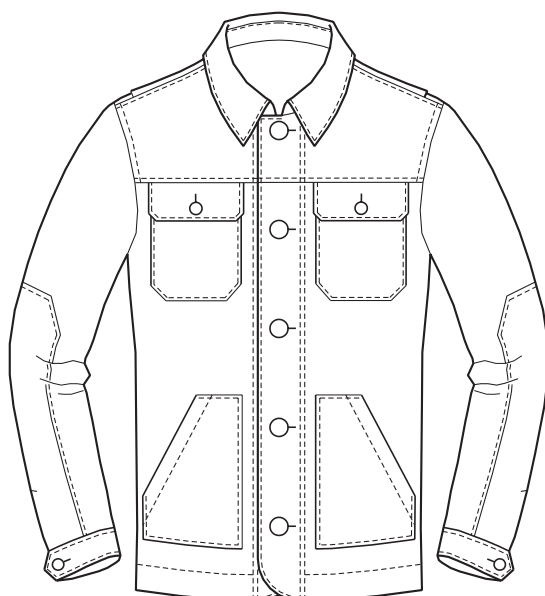




1

at waist and chest height. Mark the stitching line for the buttonstand 5 cm parallel to the front edge and draw the rounded front edge to the hem. Mark the upper buttonhole 2 cm below the neckline and the bottom buttonhole 8.5 cm above the hem. Distribute the remaining buttonholes evenly. Move the buttonholes 0.5 cm to the front due to the buttonstand width. Relocate the button positions accordingly 0.5 cm towards the inside. Mark the hem stitching 2.5 cm wide. Draw the front yoke centered in between the upper and the second buttonhole. Mark the pocket flap 1.5 cm away from the buttonstand stitching and draw the patch chest pocket centered below the pocket flap. Draft the side patch pocket according to the illustration. Mark the grainline perpendicular to the waistline on the front pattern and along the C.B. fold line on the back pattern.

2

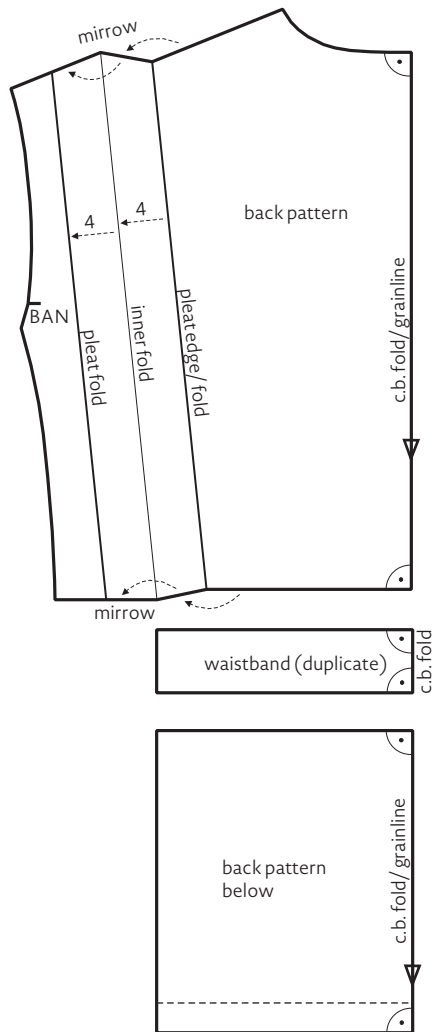


COMPLETION BACK PATTERN

2 Copy the back pieces and separate the pattern pieces. Cut the waistband twice and attach the upper and lower back panel in the waistband so that the jacket has a clean finish from the inside. Slash and spread the upper back pattern 2 x 4 cm for the movement pleat. Mirror the seamlines for the pleat hood.


COLLAR

3 Measure the lowered neckline on the front and back pattern and draw a horizontal line with the same length. Measure 3 cm upward at the centre back and 1 cm upward at the centre front. Divide the horizontal baseline in thirds and draw the collar seam. Measure m1 on the baseline and transfer this measurement to the collar line. Square up 3 cm for the collarstand width and draw a short perpendicular line. Complete the collarstand shape as shown in the illustration. From the baseline, measure 4 cm upward at the centre back for the collarstand seam on

3

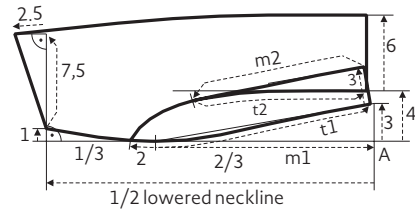


the collar pattern. Draw the seam to the collarstand and mark the beginning of the seam with a notch. Measure the length at the collarstand m2 and transfer this length to the collar. Draw the centre back of the collar 6 cm wide from this point upwards and square out to the left. Measure 7.5 cm upward at the centre front and extend the collar point 2.5 cm to the left. Complete the collar shape according to the illustration.

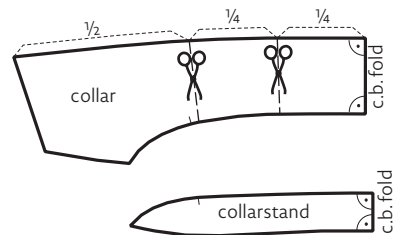

4

4 Trace a copy of the collarstand and mark the cutting lines on the collar pattern as shown.


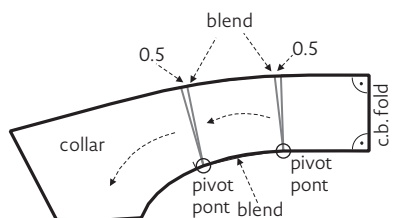


5

5 Slash and spread the collar at the collar edge 0.5 cm each cutting line. Blend the collar edge and the collar seam. Verify the collar length and adjust parallel at the centre back if necessary.

SLEEVE

6 Shorten the sleeve pattern around the cuff width of 5 cm. Relocate the upper sleeve seam 2 cm to the back at the sleeve slit and draw the new seamline as shown. Mark the slit 9 cm long. Blend the front sleeve seam at the elbow. Draw pattern for the elbow reinforcement as shown. Draw the cuff 5 cm wide and match the length to the sleeve hem length. Mark the button and buttonhole position. Mark the grainline perpendicular to the elbow line.

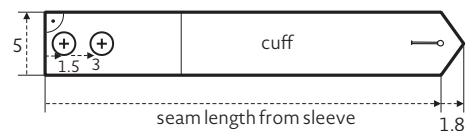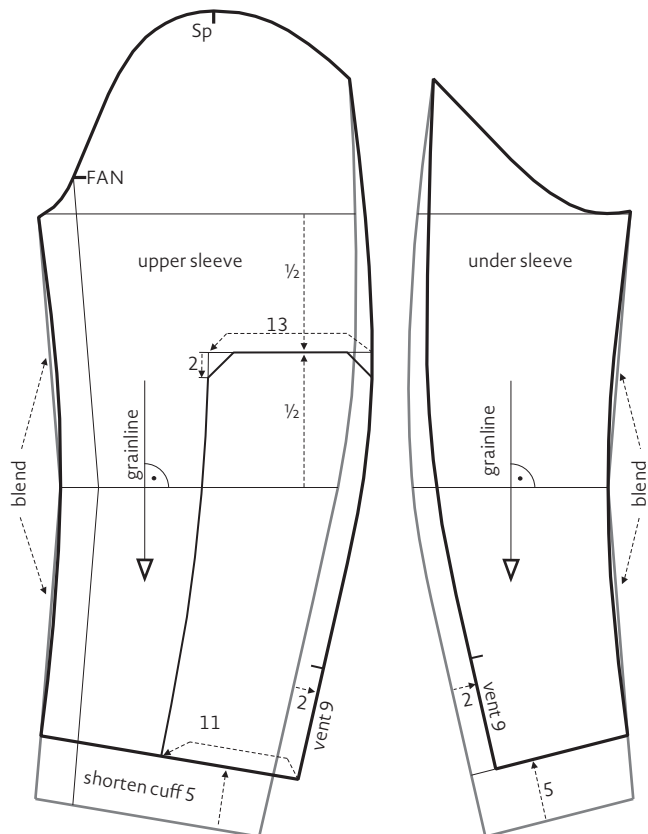

Copyright M. Müller & Sohn, Munich.
Free for private use; however no
duplications, not for instruction
purposes (see imprint).