

# THOR CORE2022 GUIDE

[Document subtitle]

### **ABSTRACT**

Details for the Thor2022 processing core including programming model, memory management and instruction set architecture.

**Robert Finch** 

[Course title]

### Table of Contents

Overview	19
History	19
Design Objectives	19
Motivation	20
Differences from the Original	20
Case Comparison Hi-lites	20
Case Comparison 6502	20
Case Comparison 6809	21
Case Comparison 68000	21
Case Comparison ARM	21
Case Comparison RISCV	22
Case Comparison MMIX	24
Case Comparison PowerPC	24
Case Comparison x86	24
Case Comparison SPARC	24
Nomenclature	25
Endian	25
Development Aspects	26
Device Target	26
Implementation Language	26
Programming Model	27
General Registers	27
Register Tags	28
Stack and Frame Pointers	28
Loop Count	28
Code Address Registers	28
Code Address Register Format	28
Instruction Pointer	29
Link Registers	29
Selector Registers	29
General Purpose Vector (v0 to v63) / Registers	30
Mask Registers (m0 to m7)	30
Vector Length (VL register)	30
Summary of Special Purpose Registers	30

[U/S/H/M]_IE (0x?004)	31
[U/S/H/M]_CAUSE (CSR- 0x?006)	31
[U/S/H/M]_SCRATCH – CSR 0x?041	31
[U/S/H/M]_TIME (0x?FE0)	31
U_FSTAT - CSR 0x0014 Floating Point Status and Control R	egister32
S_PTA - CSR 0x1003	33
S_ASID - CSR 0x101F	33
S_KEYS - CSR 0x1020 to 0x1027	34
CA0,CA1,CA15 (CAREGS) - M_CSR 0x3100 to 0x311F.	35
ZS,DS,ES,FS,GS,HS,SS,CS (SREGS) – M_CSR 0x3120 to 0x	x3127 Error! Bookmark not defined.
M_CR0 (CSR 0x3000) Control Register Zero	35
M_HARTID (CSR 0x3001)	36
M_TICK (CSR 0x3002)	36
M_SEED (CSR 0x3003)	36
M_BADADDR (CSR 0x3007)	36
M_BAD_INSTR (CSR 0x300B)	36
M_DBADx (CSR 0x3018 to 0x301B) Debug Address Registe	r36
M_DBCR (CSR 0x301C) Debug Control Register	36
M_DBSR (CSR 0x301D) - Debug Status Register	37
M_TVEC - CSR 0x3030 to 0x3037	37
M_PLSTACK - CSR 0x303F	38
M_PMSTACK - CSR 0x3040	38
M_SCRATCH - CSR 0x3041	38
D_VSTEP - CSR 0x4046	38
D_VTMP - CSR 0x4047	38
M_GDTB - CSR 0x3050	Error! Bookmark not defined.
M_GDTL - CSR 0x3051	Error! Bookmark not defined.
M_LDT - CSR 0x3052	Error! Bookmark not defined.
M_KYT - CSR 0x3053	38
M_TCB - CSR 0x3054	38
M_TIME - CSR 0x?FE0	38
M_TIMECMP - CSR 0x3FE1	39
Hardware Queues	39
Operating Modes	39
Exceptions	39

External Interrupts	39
Polling for Interrupts	40
Effect on Machine Status	40
Exception Stack	40
Exception Vectoring	40
Reset	41
Precision	41
Exceptions During Vector Operations	41
Exception Cause Codes	41
DBG	43
IADR	43
UNIMP	43
OFL	43
KEY	43
FLT	43
DRF, DWF, EXF	43
CPF, DPF	43
PRIV	43
STK	44
DBE	44
PMA	44
IBE	44
NMI	44
BT	44
Segmentation	Error! Bookmark not defined.
Overview	Error! Bookmark not defined.
Privilege levels	Error! Bookmark not defined.
Usage	Error! Bookmark not defined.
Software Support	Error! Bookmark not defined.
Address Formation:	Error! Bookmark not defined.
Selecting a segment register	Error! Bookmark not defined.
Selectors	Error! Bookmark not defined.
Selector Format:	Error! Bookmark not defined.
Selector Registers	Error! Bookmark not defined.
Descriptor Cache	Error! Bookmark not defined.

Non-Segmented Code Area	Error! Bookmark not defined.
Changing the Code Segment	Error! Bookmark not defined.
The Descriptor Table	Error! Bookmark not defined.
Global Descriptor Table	Error! Bookmark not defined.
System Segment Descriptors	Error! Bookmark not defined.
Segment Load Exception	Error! Bookmark not defined.
Segment Bounds Exception	Error! Bookmark not defined.
Segment Usage Conventions	Error! Bookmark not defined.
Power-up State	Error! Bookmark not defined.
Segment Registers	Error! Bookmark not defined.
TLB – Translation Lookaside Buffer	45
Overview	45
Size / Organization	45
What is Translated	45
Page Size	45
Management	45
Flushing the TLB	46
PAM – Page Allocation Map	46
Overview	46
Memory Usage	46
Organization	46
PMA - Physical Memory Attributes Checker	46
Overview	46
Register Description	47
Attributes	47
Key Cache	48
Overview	48
Card Memory	48
Overview	48
Organization	48
Location	49
Operation	49
Sample Write Barrier	49
System Memory Map	49
ebugging Unit	50

Overview	50
Instruction Tracing	50
Trace Queue Entry Format	50
Trace Readback	50
Address Matching	50
Instruction Set Architecture Description	52
Overview	52
Root Opcode	52
Vector Instruction Indicator	52
Target Register Spec	53
Register Formats	54
R1 (one source register)	54
R2 (two source register)	54
R3 (three source register)	54
Immediate Format	54
RIL (with prefix)	54
Clock Cycles	54
Execution Units	55
Arithmetic / Logical / Shift	56
ABS – Absolute Value	58
ADD - Register-Register	59
ADDI - Add Immediate	60
ADDIL - Add Immediate Low	Error! Bookmark not defined.
AND – Bitwise And	61
ANDC - Bitwise 'And' with Complement	62
ANDI – Bitwise 'And' Immediate	63
ANDIL - Bitwise 'And' Immediate Low	Error! Bookmark not defined.
ANDM – Bitwise 'And' with Mask	64
AND_OR – Bitwise And then Or	65
BCDADD – BCD Add	66
BCDMUL – BCD Multiply	66
BCDSUB – BCD Subtract	67
BFALIGN – Bitfield Align	68
BFCHG – Bitfield Change	69
RFCLR – Ritfield Clear	70

BFEXT – Bitfield Extract	71
BFEXTU – Bitfield Extract Unsigned	72
BFFFO –Find First One	73
BFSET – Bitfield Set	74
BMAP – Byte Map	75
BMM – Bit Matrix Multiply	77
BYTNDX – Byte Index	78
BYTNDXI – Byte Index	79
CHK - Check Register Against Bounds	81
CHKI – Check Register Against Bounds	82
CLMUL – Carry-less Multiply	83
CLMULH - Carry-less Multiply High	84
CMOVNZ – Conditional Move	85
CMP – Compare	86
CMPI – Compare Immediate	88
CMPIL – Compare Immediate Low	Error! Bookmark not defined.
CMPU – Compare Unsigned	Error! Bookmark not defined.
CMPUI – Compare Unsigned Immediate	Error! Bookmark not defined.
CNTLZ - Count Leading Zeros	89
CNTPOP – Count Population	90
COM – Ones Complement	91
CPUID – CPU Identification	92
DIF – Difference	93
DIV – Division	94
DIVI – Divide by Immediate	95
DIVIL – Divide by Immediate Low	Error! Bookmark not defined.
DIVU – Divide Unsigned	96
DIVUI - Divide Unsigned by Immediate	96
DIVSU – Divide Signed by Unsigned	97
ENOR – Bitwise Exclusive Nor	98
EOR – Bitwise Exclusive Or	99
EOR – Bitwise Exclusive Or  EORI – Bitwise Exclusive 'Or' Immediate	
	100
EORI – Bitwise Exclusive 'Or' Immediate	Error! Bookmark not defined.

EXI41 – Extend Immediate by 41 Bits	102
EXI55 – Extend Immediate by 55 Bits	102
EXIM – Extend Immediate Middle	103
LDI – Load Immediate	104
LDIL – Load Immediate Low Err	or! Bookmark not defined.
MAX – Maximum Value	105
MIN – Minimum Value	105
MKBOOL – Make Boolean	106
MOV – Move Register-Register	107
MOVSXB – Move Byte, Sign Extend	108
MOVSXT – Move Tetra, Sign Extend	108
MOVSXW – Move Wyde, Sign Extend	110
MOVZXB – Move Byte, Zero Extend	110
MOVZXT – Move Tetra, Zero Extend	111
MOVZXW – Move Wyde, Zero Extend	111
MUL – Multiply	112
MULH – Multiply High	113
MULI – Multiply Immediate	114
MULIL – Multiply Immediate Low Err	or! Bookmark not defined.
MULF – Fast Unsigned Multiply	
	115
MULF – Fast Unsigned Multiply	115
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate	115 116 116
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned	115 116 116 117
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex	115 116 116 117
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand	115 116 116 117 118
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate	115 116 116 117 118
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor.  NOT – Logical Not	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  OR – Bitwise Or	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  OR – Bitwise Or  ORC – Bitwise 'Or' with Complement	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  OR – Bitwise Or  ORC – Bitwise 'Or' with Complement  ORI – Bitwise 'Or' Immediate	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate.  NOR – Bitwise Nor.  NOT – Logical Not  OR – Bitwise Or.  ORC – Bitwise 'Or' with Complement.  ORI – Bitwise 'Or' Immediate  ORIL – Bitwise 'Or' Immediate Low.  Err	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate.  NOR – Bitwise Nor.  NOT – Logical Not  OR – Bitwise Or.  ORC – Bitwise 'Or' with Complement.  ORI – Bitwise 'Or' Immediate Low.  ORN – Bitwise 'Or' with Complement	

	ROR – Rotate Right	126
	SEQ – Set if Equal	127
	SEQI – Set if Equal Immediate	128
	SEQIL – Set if Equal Immediate Low	128
	SGE / SLE – Set if Greater Than or Equal	129
	SGEU / SLEU – Set if Greater Than or Equal Unsigned	129
	SGTI – Set if Greater Than Immediate	131
	SGTIL – Set if Greater Than Immediate Low	131
	SGTUI – Set if Greater Than Immediate Unsigned	131
	SGTUIL – Set if Greater Than Immediate Unsigned Low	132
	SLEI – Set if Less Than or Equal Immediate	133
	SLL -Shift Left Logical	134
	SLLP –Shift Left Logical Pair	134
	SLT / SGT – Set if Less Than	136
	SLTI – Set if Less Than Immediate	136
	SLTIL – Set if Less Than Immediate Low	137
	SLTU / SGTU – Set if Less Than Unsigned	138
	SNE – Set if Not Equal	139
	SNEI – Set if Not Equal Immediate	140
	SNEIL – Set if Not Equal Immediate Low Error! Bookmark not de	fined
	SRA –Shift Right Arithmetic	141
	SRL –Shift Right Logical	142
	SRLP –Shift Right Logical Pair Error! Bookmark not de	fined
	SUB – Subtract	143
	SUBFI – Subtract from Immediate	144
	UTF21NDX – UTF21 Index	147
	UTF21NDXI – UTF21 Index	148
	WYDENDX – WYDE Index	149
	WYDENDXI – Wyde Index	150
	XNOR – Bitwise Exclusive Nor	150
	XOR – Bitwise Exclusive Or	151
	XORI – Bitwise Exclusive 'Or' Immediate	152
	XORIL – Bitwise Exclusive 'Or' Immediate Low	152
F	loating-Point Instructions	154

FABS – Absolute Value	154
FADD – Add Register-Register	155
FCLASS – Classify Value	156
FCMP – Compare	157
FCMPB – Compare	158
FCX – Clear Floating-Point Exceptions	159
FDIV – Divide Register-Register	160
FDX – Disable Floating Point Exceptions	161
FEX – Enable Floating Point Exceptions	162
FFINITE – Number is Finite	163
FMA – Floating Point Multiply Add	164
FNMA – Floating Point Negate Multiply Add	165
FNMS – Floating Point Negate Multiply Subtract	166
FMAN – Mantissa of Number	167
FMS – Floating Point Multiply Subtract	168
FMUL – Floating point multiplication	169
FNEG – Negate Register	170
FRM – Set Floating Point Rounding Mode	170
FRSQRTE – Float Reciprocal Square Root Estimate	171
FSEQ - Float Set if Equal	172
FSIGMOID – Sigmoid Approximate	172
FSIGN – Sign of Number	173
FSLT - Float Set if Less Than	174
FSNE - Float Set if Not Equal	175
FSQRT – Floating point square root	176
FSTAT – Get Floating Point Status and Control	177
FSUB – Subtract Register-Register	179
FTOI – Float to Integer	179
FTRUNC – Truncate Value	180
FTX – Trigger Floating Point Exceptions	180
ISNAN – Is Not a Number	181
ITOF – Integer to Float	182
Decimal Floating-Point Instructions	183
DFABS – Absolute Value	183
DFADD – Add Register-Register	184

DFCMP – Compare	Error! Bookmark not defined.
DFCMPB – Compare	Error! Bookmark not defined.
DFCX – Clear Floating-Point Exceptions	185
DFDIV – Divide Register-Register	186
DFDX – Disable Floating Point Exceptions	189
DFEX – Enable Floating Point Exceptions	190
DFMA – Floating Point Multiply Add	191
DFNMA – Floating Point Negate Multiply Add	192
DFNMS – Floating Point Negate Multiply Subtract	193
DFMAN – Mantissa of Number	194
DFMS – Floating Point Multiply Subtract	195
DFMUL – Floating point multiplication	196
DFNEG – Negate Register	197
DFRM – Set Floating Point Rounding Mode	197
DFSIGN – Sign of Number	199
DFSTAT – Get Floating Point Status and Control	199
DFSUB – Subtract Register-Register	201
DFTOI – Float to Integer	201
DFTX – Trigger Floating Point Exceptions	202
ITODF – Integer to Float	203
Posit Instructions.	204
PADD – Add Register-Register	204
PMUL – Posit multiplication	204
PSUB – Subtract Register-Register	205
Load / Store Instructions	206
Overview	206
Addressing Modes	206
Load Formats	206
Store Formats	207
CACHE – Cache Command	208
CACHEX – Cache Command	209
CAS – Compare and Swap	210
LDB – Load Byte	211
LDBU – Load Byte, Unsigned	212
I DRIIX - Load Ryte Unsigned Indexed	213

LDBX – Load Byte Indexed	214
LDO – Load Octa	216
LDOS – Load Octa, Short Format	216
LDOX - Load Octa Indexed	219
LDT – Load Tetra	222
LDTU – Load Tetra Unsigned	223
LDTUX – Load Tetra Unsigned Indexed	224
LDTX – Load Tetra Indexed	225
LDW – Load Wyde	226
LDWU – Load Wyde Unsigned	227
LDWX – Load Wyde Indexed	228
LDWUX – Load Wyde Unsigned Indexed	229
LEA – Load Effective Address	230
LEAX - Load Effective Address Indexed	230
LIN2PHL - Convert Linear to Physical Address Low	231
LIN2PHH – Convert Linear to Physical Address High	231
LLAH – Load Linear Address High	232
LLAHX – Load Linear Address High Indexed	233
LLAL – Load Linear Address Low	234
LLALX – Load Linear Address Low Indexed	235
STB – Store Byte	236
STBX – Store Byte Indexed	237
STO – Store Octa	238
STOC – Store Octa, Clear Reservation	241
STOCL – Store Octa, Clear Reservation, Long Addressing	Error! Bookmark not defined.
STOCX – Store Octa, Clear Reservation Indexed	241
STOS – Store Octa, Short Addressing	242
STOL – Store Octa, Long Addressing	Error! Bookmark not defined.
STOX – Store Octa Indexed	245
STT – Store Tetra	246
STTL – Store Tetra, Long Addressing	Error! Bookmark not defined.
STTX – Store Tetra Indexed	247
STW – Store Wyde	248
STWL – Store Wyde, Long Addressing	Error! Bookmark not defined.
STWX - Store Wyde Indexed	249

String Instructions	250
STCMP – String Compare	250
STFND – String Find	251
STMOV – String Move	252
STSET – String Set	254
Branch / Flow Control Instructions	255
Overview	255
Conditional Branch Format	256
Branch Conditions	257
Linkage	258
Branch Target	258
Near or Far Branching	Error! Bookmark not defined.
Branch to Register	258
BBC – Branch if Bit Clear	259
BBS – Branch if Bit Set	260
BEQ – Branch if Equal	261
BEQZ – Branch if Equal to Zero	261
BGE – Branch if Greater Than or Equal	263
BGEU – Branch if Greater Than or Equal Unsigned	264
BGT – Branch if Greater Than	265
BGTU – Branch if Greater Than Unsigned	266
BLE – Branch if Less Than or Equal	267
BLEU – Branch if Less Than or Equal Unsigned	268
BLT – Branch if Less Than	269
BLTU – Branch if Less Than Unsigned	270
BNE – Branch if Not Equal	271
BNEZ – Branch if Not Equal to Zero	271
BRA – Branch Always	272
BSR – Branch to Subroutine	272
DBBC - Decrement and Branch if Bit Clear	Error! Bookmark not defined.
DBBS – Decrement and Branch if Bit Set	Error! Bookmark not defined.
DBEQ - Decrement and Branch if Equal	Error! Bookmark not defined.
DBGE - Decrement and Branch if Greater Than or Equal	Error! Bookmark not defined.
DBGEU – Decrement and Branch if Greater Than or Equal Unsidefined.	gned Error! Bookmark not

	DBGT – Decrement and Branch if Greater Than	Error!	Boo	okmar	k not	defin	æd.
	DBGTU – Decrement and Branch if Greater Than Unsigned	Error!	Boo	okmar	k not	defin	ıed.
	DBLE – Decrement and Branch if Less Than or Equal	Error!	Boo	okmar	k not	defin	ıed.
	DBLEU – Decrement and Branch if Less Than or Equal Unsigned	Error!	Boo	okmar	k not	defin	ıed.
	DBLT – Decrement and Branch if Less Than	Error!	Boo	okmar	k not	defin	ıed.
	DBLTU - Decrement and Branch if Less Than Unsigned	Error!	Boo	okmar	k not	defin	ıed.
	DBNE – Decrement and Branch if Not Equal	Error!	Boo	okmar	k not	defin	ıed.
	DBRA – Decrement and Branch Always				•••••		273
	DJBC – Decrement and Jump if Bit Clear	Error!	Boo	okmar	k not	defin	ıed.
	DJBS – Decrement and Jump if Bit Set	Error!	Bo	okmar	k not	defin	ıed.
	DJEQ – Decrement and Jump if Equal	Error!	Boo	okmar	k not	defin	ıed.
	DJGE – Decrement and Jump if Greater Than or Equal	Error!	Boo	okmar	k not	defin	ıed.
	DJGEU – Decrement and Jump if Greater Than or Equal Unsigned	Error!	Boo	okmar	k not	defin	ıed.
	JBC – Jump if Bit Clear				•••••		274
	JBS – Jump if Bit Set				•••••		275
	JEQ – Jump if Equal						276
	JGATE – Jump Gate	Error!	Boo	okmar	k not	defin	ıed.
	JGE – Jump if Greater Than or Equal						277
	JGEU – Jump if Greater Than or Equal Unsigned				•••••		278
	JGT – Jump if Greater Than				•••••		279
	JGTU – Jump if Greater Than Unsigned						280
	JLE – Jump if Less Than or Equal						281
	JLEU – Jump if Less Than or Equal Unsigned						282
	JLT – Jump if Less Than						283
	JLTU – Jump if Less Than Unsigned						284
	JNE – Jump if Not Equal						285
	JMP – Jump.						286
	JSR – Jump to Subroutine						287
	NOP – No Operation						288
	RTS – Return from Subroutine						289
S	ystem Instructions				•••••		290
	BRK – Break				•••••		290
	CSRx - Control and Special / Status Access				•••••		291
	DI – Disable Interrupts				•••••		292
	INT – Generate Interrunt					,	293

MEMDB – Memory Data Barrier	294
MEMSB – Memory Synchronization Barrier	295
MFSEL – Move from Selector Register	296
MTSEL – Move to Selector Register	298
PEEKQ - Peek at Queue / Stack	300
PFI – Poll for Interrupt	301
POPQ – Pop from Queue / Stack	302
PUSHQ – Push on Queue / Stack	302
RESETQ – Reset Queue / Stack	303
REX – Redirect Exception	304
RTI – Return from Interrupt or Exception	305
SEI – Set Interrupt Level	306
STATQ – Get Status of Queue / Stack	307
SYNC -Synchronize	308
SYS – Call system routine	308
TLBRW – Read / Write TLB	309
WFI – Wait for Interrupt	310
Vector Specific Instructions	311
V2BITS	317
VBITS2V	318
VGIDX – Generate Index	319
VCMPRSS – Compress Vector	320
VEINS / VMOVSV – Vector Element Insert	320
VEX / VMOVS – Vector Element Extract	321
MFLC – Move from Loop Counter	321
MFVM – Move from Vector Mask	322
MFVL – Move from Vector Length	322
MTVM – Move to Vector Mask	322
MTLC – Move to Loop Counter	323
MTVL – Move to Vector Length	324
VMADD – Vector Mask Add	325
VMAND – Vector Mask And	325
VMCNTPOP – Count Population	325
VMFILL – Vector Mask Fill	326
VMFIRST – Find First Set Bit	326

VMLAST – Find Last Set Bit	327
VMOR – Vector Mask Or	328
VMSLL – Vector Mask Shift Left Logical	328
VMSRL – Vector Mask Shift Right Logical	328
VMSUB – Vector Mask Subtract	329
VMXOR – Vector Mask Exclusive Or	329
VSCAN	330
VSLLV – Shift Vector Left Logical	331
VSRLV – Shift Vector Right Logical	332
Cryptographic Accelerator Instructions	333
AES64DS – Final Round Decryption	333
AES64DSM – Middle Round Decryption	333
AES64ES – Final Round Encryption	334
AES64ESM – Middle Round Encryption	334
SHA256SIG0	335
SHA256SIG1	335
SHA256SUM0	336
SHA256SUM1	336
SHA512SIG0	337
SHA512SIG1	337
SHA512SUM0	338
SHA512SUM1	338
SM3P0	338
SM3P1	339
SM4ED	340
SM4KS	340
Neural Network Accelerator Instructions	341
Overview	341
NNA_MFACT – Move from Output Activation	342
NNA_MTBC - Move to Base Count	342
NNA_MTBIAS – Move to Bias	343
NNA_MTFB – Move to Feedback	344
NNA_MTIN – Move to Input	345
NNA_MTMC - Move to Max Count	346
NNA MTWT – Move to Weights	346

NNA_STAT – Get Status	347
NNA_TRIG – Trigger Calc	347
Graphics	348
Overview	348
Co-ordinates	348
Colors	348
Register Set	348
BLEND – Blend Colors	353
CLIP – Clip Point	354
PLOT – Plot Point	355
TRANSFORM – Transform Point	356
RW_COEFF - Read/Write Co-efficient	357
Opcode Maps	358
Root Opcode	358
{R1 – 0x01} Integer Monadic Register Ops – Func <sub>7</sub>	361
{R2 – 0x02} Integer Dyadic Register Ops – Func <sub>7</sub>	362
{R3/R4 – 0x03} Triadic Register Ops	362
{F1 - 0x61} Floating-Point Monadic Ops – Funct <sub>7</sub>	363
{F2-0x62} Floating-Point Dyadic Ops - Funct <sub>7</sub>	363
{F3–0x63} Floating-Point Triadic Ops – Funct <sub>7</sub>	363
{DF2} Decimal Floating-Point Dyadic Ops – Funct <sub>7</sub>	364
{VM – 0x52} Vector Mask Register Ops – Func <sub>5</sub>	365
{OSR2} System Ops	365
MPU Hardware	366
PIT – Programmable Interval Timer	366
Overview	366
System Usage	366
Registers	366
Programming	368
PIC – Programmable Interrupt Controller	369
Overview	369
System Usage	369
Priority Resolution	369
Registers	369
Control Register	370

UART – Universal Asynchronous Receiver / Transmitter	371
Overview	371
Special Features	371
System Usage	371
Registers	371
ToolSet	375
Compiler	375
Assembler	375
Overview	375
Recognized Mnemonics	375
Register Names	375
Linker	377
Glossary	378
AMO	378
Assembler	378
ATC	378
Base Pointer	378
Burst Access	378
BTB	378
Card Memory	378
Decimal Floating Point	379
Diadic	379
Endian	379
FIFO	379
FPGA	379
Floating Point	380
Frame Pointer	380
HDL	380
HLL	380
Instruction Bundle	380
Instruction Pointers	380
Instruction Prefix	381
Instruction Modifier	
ISA	
Keved Memory	381

Linear Address	381
Machine Code	381
Milli-code	381
Monadic	381
Opcode	382
Operand	382
Physical Address	382
Physical Memory Attributes (PMA)	382
Posits	382
Program Counter	382
ROB	382
RSB	383
SIMD	383
Stack Pointer	383
Telescopic Memory	383
TLB	384
Trace Memory	384
Triadic	384
Vector Length (VL register)	384
Vector Mask (VM)	384
Virtual Address	384
Miscellaneous	385
Reference Material	385
Trademarks	385
WISHBONE Compatibility Datasheet	387

### Overview

Thor is a powerful 64-bit superscalar processor that represents a generational refinement of processor architecture. The processor contains 64, 64 bit general purpose integer registers. Thor uses variable length instructions varying between two and eight bytes in length and handles 8, 16, 32, and 64 bit data within a 64 bit address space.

### History

Thor2021 is a work in progress beginning in October 2021. Thor2021 originated from Thor which originated from RiSC-16 by Dr. Bruce Jacob. RiSC-16 evolved from the Little Computer (LC-896) developed by Peter Chen at the University of Michigan. See the comment in Thor2021.v. The author has tried to be innovative with this design borrowing ideas from many other processing cores.

Thor2021's graphics engine originate from the ORSoC GFX accelerator core posted at opencores.org by Per Lenander, and Anton Fosselius.

### **Design Objectives**

This processor is somewhat pedantic in nature and targeted towards high performance operation as a general-purpose processor. Following are some of the criteria that were used on which to base the design.

- Designed for Superscalar operation the ability to execute more than one instruction at a time. To achieve high performance it is generally accepted that a processor must be able to execute more than a single instruction in any given clock cycle.
- □ Support for vector operations.
- □ Simplicity architectural simplicity leads to a design that is easy to implement resulting in reliability and assured correctness along with easy implementation of supporting tools such as compilers. Simplicity also makes it easier to obtain high performance and results in lower overall cost.
- □ Extensibility the design must be extensible so that features not present in the first release can easily be added at a later date.
- Low Cost

This design meets the above objectives in the following ways. The instruction set has been designed to minimize the interactions between instructions, allowing instructions to be executed as independent units for superscalar operation. There are a sufficient number of registers to allow the compiler to schedule parallel processing of code. A reasonably large general purpose register set is available making the design reasonably compatible with many existing compilers and assemblers.

Where needed, additional specialized instructions have been added to the processor to support a sophisticated operating system and interrupt management.

### Motivation

The author wanted an FPGA based processing core for experimental purposes.

### Differences from the Original

The string instructions in the original Thor ISA are no longer present.

Stack operations have been removed.

Mnemonics changed for load and store instructions.

Byte, wyde and UTF21 search instructions have been added.

Support for decimal floating-point has been added.

Support for cryptographic accelerator functions has been added.

### Case Comparison Hi-lites

Some of the more striking points of a handful of architectures are compared to what is available in Thor2021. The author has studied and used several of these processors. Thor2021 has many influences from prior designs.

### Case Comparison 6502

6502 vs Thor2021

#### Overview

This is a bit of an apples to oranges comparison as the two designs are for different environments. The 6502 was designed for a much smaller operating environment and is extremely frugal with transistor usage. The Thor2021 was designed as 64-bit processor used for experimentation in a much larger environment.

#### **Instruction Format**

The 6502 as a byte-oriented design has a compact variable instruction length encoding. Many instructions are encoded using an average of about two bytes.

While variable sized instructions offer great advantage for code density, they add complexity to the processing core. Thor2021 also uses a variable size instruction encoding. As such for a given single instruction it requires roughly twice the memory of a 6502. However, the instructions in the Thor2021 operate on 64-bit values, to perform the same operations in the 6502 would require many more bytes. Several instructions in the Thor2021 are more powerful than what can be found in the 6502.

#### Registers

The Thor2021 has many more registers than the 6502. It is a general-purpose register-oriented design while the 6502 is accumulator oriented. A register file of about 32 registers has been found to be a good match to many computing environments. This is somewhat of a historical

determination. The Thor2021 has available many more transistors than were available to the 6502 design. The Thor2021 has many special purpose registers. The 6502 does not have any.

#### Instructions

The 6502 uses relative branches to allow a code dense instruction encoding. Thor2021 also uses relative branches to help reduce the instruction size. It has a larger branch displacement than the 6502 as that is what could be encoded easily.

The 6502 offers only basic instructions (ADD, SUB, CMP, AND, ORA, EOR, LDA, STA) as examples. There are no complex instructions in the 6502 ISA. All instructions execute within a handful of clock cycles. the Thor2021 has a ton of instructions compared to a 6502. It supports floating point and posit arithmetic.

The 6502 is an accumulator-based architecture that allows one memory-based operand for most instructions. Thor2021 is register based and the only instructions accessing memory are load and store type instructions.

### Case Comparison 6809

#### Overview

The 6809 microprocessor was designed to run more powerful software than earlier microcontrollers. As such it has a couple of more registers than the 6502 for instance, and separate user mode and system mode stack pointers.

#### **Instruction Format**

6809 instructions have one or two opcode bytes followed by operands. Most instructions use only a single byte opcode. The instruction encoding is variable length.

### Case Comparison 68000

#### Overview

The 68000 is a 16/32-bit design.

### **Instruction Format**

The 68000 uses 16-bit instruction parcels. All instructions are a multiple of two bytes in length. The instruction encoding is variable length.

#### Registers

The 68000 has 16 general purpose registers split into eight data and eight address registers. There is a separate stack pointer for user and system mode.

### **Case Comparison ARM**

#### Overview

The ARM architecture has become extremely popular.

#### **Instruction Format**

The ARM machine was originally a 32-bit fixed instruction format machine. It has had added onto it 16-instruction formats.

#### Registers

The program counter is referenced using one the registers codes available for general purpose registers.

The author is not fond of architectures that use a general-purpose register as the program counter. He believes a separate register is a better approach. Having the pc as part of the general register file is archaic.

### **Case Comparison RISCV**

RISCV vs Thor2021

#### **Instruction Format**

While variable sized instructions offer great advantage for code density, they add complexity to the processing core.

In RISCV support for 16-bit compressed instructions consumes two opcode bits, and opcode bits are valuable. The use of these two bits and the reduction of the opcode space for other instructions is an excellent trade-off. Compressed instructions can improve code density by about 25% or more and consequently make better use of the cache. There is only the occasional instruction that can not be encoded using two fewer encoding bits, so only a very small percentage would be gained back in code density by having two more bits available. Thor2021 uses a variable length instruction encoding which allow it to achieve code density similar to RISCV.

The JAL instruction in RISCV allows any register to be used to store the return address. In practice only one or two registers which are fixed by the ABI are used. This means that there are about four bits of opcode space wasted for unnecessary register specification. Making use of these extra four bits is extremely valuable. The Thor2021 design only requires two bits to specify the return address register. The presence of four extra bits to specify the target address makes absolute addressing appealing for this design.

To build constants the LUI instruction is used. In RISCV the LUI instruction allows any register to be used as the target and has a 20-bit constant field because of encoding constraints. In practice it is possible to get by using only one or two registers to build constants with. Thor2021 has more direct support for constants larger than 32 bits. It makes use of ADDIS (add immediate shifted), ORIS, and ANDIS instructions to build 64-bit constants. These instructions support building 64-bit constants directly. RISCV does not really provide much for building constants over 32 bits.

#### Instructions

RISCV does not include indexed addressing modes in the standard implementation. Indexed addressing is accomplished when required using additional instructions and registers to calculate the effective address. Thor2021 directly supports indexed addressing with an optionally scaled index register. When indexed addressing is required Thor2021 is more code dense than RISCV. However indexed addressing is not used that often.

RISCV accesses memory and I/O exclusively using load and store instructions. Thor2021 has several additional instructions which access memory and I/O.

#### Register File

RISCV does almost everything using general-purpose registers. This paradigm increases the pressure on the register file. In the Thor2021 design there are more register files involved. Effectively, there are a few more additional registers which reduce the pressure on the general-purpose register file. There is a trend to place some global variables in the register file for performance reasons. These variables include operating vars for garbage collection, pointers to global and thread data and pointers for exception handling.

One reason to use more register files is that in a superscalar design it may allow more instructions to be committed at the same time. There is usually a limit on the number of write ports to the general register file. This limit affects how many instructions can be committed at once. By providing separate register files for some operations it effectively increases the number of write ports available making it possible to commit more instructions per cycle.

#### Return Address Registers

There is not a requirement for more than a couple of return address registers. The instruction set may be refined to allow only a single bit to specify the return address register.

### Compare Results Registers

RISCV stores comparison results if needed in general-purpose registers. It has just a single instruction (SLT) dedicated to generating compare results. RISCV makes use of branches that compare-and-branch encoded in a single instruction. This is effective at removing the need for most compare operations. The intermediate result of the compare is hidden in the architecture; there is no need for visible compare results registers. There is still a need for the computed result of a compare operation. Sometimes software records the comparison result for later usage. For example, there may be a line of code: x = y > 10. Which will set x true if y is greater than 10.

Compares are tightly coupled to branch operations. Some architectures like RISCV compare and branch in a single instruction. Other architectures use a flags register or several flags registers. Yet other architectures simply use the general-purpose registers.

One reason to use a separate group of compare results registers is that in a superscalar design it may allow more instructions to be committed at the same time. There is usually a limit on the number of write ports to the general register file. This limit affects how many instructions can be committed at once. By providing separate register files for some operations it effectively increases the number of write ports available making it possible to commit more instructions per cycle.

#### Operating modes.

This design uses four operating modes. It has the RISCV operating modes. The author has seen a comment to the effect that debug on a RISCV processor really acts like an additional mode.

#### Memory Management

RISCV offers several memory management options including several different paging arrangements and a couple of optional base and bound registers.

### **Case Comparison MMIX**

#### **Instruction Format**

MMIX comes across as more of a pedantic processor design. MMIX instructions are structure simply for the most part using a 32-bit format divided into four-byte regions. The author assumes this is primarily to enhance the readability of instructions. The constant field is often limited to eight bits. Thor2021 has fewer registers and that allows more constant bits to be encoded in the same size instruction.

### Register File

MMIX has a 256-entry register file. It is not clear that this number of registers has any benefit over a 32-register design, but it makes the instruction format clear and easy to understand which may be a goal for a processor used for academic purposes.

#### Instructions

There are a lot of conditional move instructions in the MMIX ISA. Thor2021 currently supports only a single conditional move instruction.

### **Case Comparison PowerPC**

#### **Instruction Format**

The PowerPC uses a fixed 32-bit instruction format.

#### Instructions

The PowerPC supports indexed addressing like the Thor2021 although index scaling is not present. The author has found indexed addressing makes up about 3% of instructions and scaled indexes a much smaller percentage.

#### Registers

The PowerPC has a dedicated link register and eight condition code registers. Thor 2021 has with a pair of link registers dedicated in the GPR file. The PowerPC also has a loop count register used for counted loops. Thor 2021 also has a loop count register.

### Case Comparison x86

#### Registers

The x86 series has a register file that is accessible in subparts. Parts of a single register may be referred to instructions. For example, EAX is a 32-bit register that is also accessible as AL for byte operations. This has no-doubt complicated the x86 design. This contrasts with Thor2021 and many RISC designs where the registers are always manipulated as whole units.

### **Case Comparison SPARC**

#### Registers

The SPARC machine uses register windowing, where a subset of registers is available from a much larger set that is "windowed". In the SPARC the subset register window scrolls up and down automatically during subroutine calls and returns. The idea was to improve performance by not having to stack and unstack registers to memory during subroutine operations. However, with

a good modern optimizing compiler the performance level of the SPARC is not much different than that of other architectures.

### Nomenclature

The ISA refers to primitive object sizes following the convention suggested by Knuth of using Greek.

Number of Bits		Instructions
8	byte	LDB, STB
16	wyde	LDW, STW
32	tetra	LDT, STT
64	octa	LDO, STO
128	hexi	LDH, STH

The register used to address instructions is referred to as the instruction pointer or IP register. The instruction pointer is a synonym for instruction pointer or PC register.

### Endian

Thor2021 is a little-endian machine. The difference between big endian and little endian is in the ordering of bytes in memory. Bits are also numbered from lowest to highest for little endian and from highest to lowest for big endian.

Shown is an example of a 32-bit word in memory.

#### Little Endian:

Address	3	2	1	0
Byte	3	2	1	0

### Big Endian:

Address	Address 3		1	0	
Byte	0	1	2	3	

For Thor2021 the root opcode is in byte zero of the instruction and bytes are shown from right to left in increasing order. As the following table shows.

Address 3	Address 2		Address 1		Address 0			
Byte 3	Byte 2		Byte 1		Byte 0			
							•	▼
31	21	20	15	14	9	8	7	0
Constant	11	R	$a_6$	Rt	6	V	Opc	ode <sub>8</sub>

## Development Aspects Device Target

The core has been developed with FPGA usage in mind. In particular it is expected that the register file is built out of block memories.

### Implementation Language

The core is implemented in the System Verilog language primarily for its ability to process array objects. Much of the core is plain vanilla Verilog code.

### Programming Model General Registers

There are 64 general purpose registers. General purpose registers are 64 bits wide. The general register file is unified and may hold integer or floating-point values.

If register #0 is used as the Ra register for loads, stores, or the ADD immediate instruction then the value zero is used instead, otherwise r0 is a general-purpose register.

r0		
r1	return value / arg0	
r2	return value / arg1	
r3	temporary register caller save	
r4	temporary register	
r5	temporary register	
r6	temporary register	
r7	temporary register	
r8	temporary register	
r9	temporary register	
r10	temporary register	
r11	register var callee save	
r12	register var	
r13	register var	
r14	register var	
r15	register var	
r16	register var	
r17	register var	
r18	register var	
r19	function argument	
r20	function argument	
r21	function argument	
r22	function argument	
r24	function argument	
r25	function argument	
r26	Loop Counter (LC)	
r27	Global Data Pointer (g2)	
r28	Global Data Pointer (g1)	
r29	Global Data Pointer (g0)	
r30	Frame Pointer	
r31	Stack Pointer	

CA0	available
CA1	return address
CA2	milli-code return address
CA3	available
CA4	available
CA5	available
CA6	available
CA7	Instruction pointer, read only
CA8 to	Exceptioned Instruction Pointer
CA15	

PTA	Page table address
KYT	
TR	Task Register

DBAD0	address #0	
DBAD1	address #1	
DBAD2	address #2	
DBAD3	address #3	
DBCTRL	Debug Control	
DBSTAT	Debug Status	

### Register Tags

For the bypassing network, commonly used registers have a register tag associated with them. The register tag for the general registers varies from 1 to 31 corresponding to registers 1 to 31. Vector registers use tags 32 to 63. Other registers use additional tags as noted in the text.

### Stack and Frame Pointers

Although the stack and frame pointer registers may be used with any instruction the core has special hardware to detect stack bounds violations by either the stack pointer or frame pointer. The stack and frame pointer registers should be kept aligned on octa-byte boundaries. That is, they should be a multiple of eight, which has the least significant three bits as zero. There is currently no hardware in the core to enforce alignment.

The author considered having the stack pointer as an independent register but that would require replicating a number of instructions (add, sub, and, or, etc.) just for the stack pointer. The author feels it is better to keep the stack pointer general-purpose in nature so that it may leverage the usage of the existing instruction set. This design is primarily a load / store architecture.

### Loop Count

The loop count register, register r26 is used with the DBRA branch instruction to form counted loops. It may be automatically decremented and tested when the branch instruction is executing.

### Code Address Registers

Thor2022 has eight code address registers C0 to C7. These are also referred to as branch registers in other architectures. C7 refers to the current instruction pointer.

### **Code Address Register Format**

A code address register is composed of a 112-bit virtual address field, and a 12-bit micro-code IP field. Four bits are reserved for future use. The micro-code IP field is needed to record the micro-code IP for interrupts. The value of this field is normally zero.

127	116	115	112	111		0
Mic	roIP				Offset <sub>112</sub>	

Reg #		Usage
0	available for use	zero by convention
1	Subroutine return address	dedicated for subroutine linkage
2	Milli-code return address	dedicated for subroutine linkage
3	available for use	
4	available for use	
5	available for use	
6	available for use	
7	Instruction Pointer	dedicated to instruction addressing

8 to 15	Exception Instruction Pointer	stack of exception instruction pointers

The presence of multiple code address registers allows multi-level return addresses to be used for performance. Leaf routines may use C1 as the return address. Next to leaf routines may use C2, etc. So that memory operations are avoided when implementing subroutine call and return.

The instruction pointer register is read-only. The instruction pointer cannot be modified by moving a value to this register.

CA registers eight to fifteen are not accessible via jump or branch instructions. They are used as a stack of excepted instruction pointers and used by the RTI instruction.

### **Instruction Pointer**

The instruction pointer, IP, points to the currently executing instruction. The lower 24-bits of the instruction pointer increment as instructions are processed. Branch instructions normally manipulate only the low order 24 bits of the instruction pointer. The entire pointer may be set using a branch-to-register instruction.

To conserve hardware and improve performance of the counter only the low order 24-bits increment. It is extremely rare to have 16MB or more of code without resets of the entire instruction pointer due to subroutine calls.

111	24	23	0
IP High		IP Low	

### **Link Registers**

Related to the instruction pointer are subroutine linkage registers. The architecture has two link registers for storing subroutine return addresses.

While many architectures have only a single link register, it is sometimes useful to have a second link register, for instance to implement milli-code routines. Some architectures allow any general- purpose register to be used for subroutine linkage. Often the ABI specifies that a specific register is used for this purpose. The author feels that supporting any GPR as a link register wastes instruction encoding bits that are better used for other purposes.

	127
Lk1	Return Address
Lk2	Return Address

### **Selector Registers**

Selector registers are a piece of the segmented memory management. They are a short form for segment descriptors which they represent. There are 11 selector registers in the architecture. Several are dedicated to specific uses.

Reg	Tag	Usage

LDT	153	refers to address and size of local descriptor table
KYT	154	refers to address and size of memory key table
TCB	155	refers to address and size of current TCB

### General Purpose Vector (v0 to v31) / Registers

v0 always has the value zero.

Register	Description / Suggested Usage	Saver
v0	always reads as zero (hardware)	
v1-v31		

### Mask Registers (m0 to m7)

Mask registers are used to mask off vector operations so that a vector instruction doesn't perform the operation on all elements of the vector. Vector instructions (loads and stores) that don't explicitly specify a mask register assume the use of mask register zero (m0).

Register	Tag	Usage
m0	88	contains all ones by convention
m1	89	
m2	90	
m3	91	
m4	92	
m5	93	
m6	94	
m7	95	

### Vector Length (VL register)

The vector length register controls how many elements of a vector are processed. The vector length register may not be set to a value greater than the number of elements supported by hardware. After the vector length is set a SYNC instruction should be used to ensure that following instructions will see the updated version of the length register.

Vector length has register tag #87.

15		8	7		0
	0			Elements <sub>70</sub>	

### **Extend Precision Carry Registers**

The carry registers are used while performing extended precision arithmetic. They hold an intermediate carry value to be input to a following instruction. In normal circumstances, these

registers need not be saved or restored as part of the context. The carry registers are 128-bits wide to allow extended precision on shifts and other operations.

Reg	
P0	always zero
P1	general usage
P2	"
P3	"

### Summary of Special Purpose Registers

### $[U/S/H/M]_IE (0x?004)$

This register contains interrupt enable bits. The register is present at all operating levels. Only enable bits at the current operating level or lower are visible and may be set or cleared. Other bits will read as zero and ignore writes. Only the lower four bits of this register are implemented. The bits have individual bit set / clear capability using the CSRRS, CSRRC instructions.

63	4	3	2	1	0
~		mie	hie	sie	uie

#### [U/S/H/M]\_CAUSE (CSR- 0x?006)

This register contains a code indicating the cause of an exception or interrupt. The break handler will examine this code to determine what to do. Only the low order 16 bits are implemented. The high order bits read as zero and are not updateable.

#### $[U/S/H/M]_SCRATCH - CSR 0x?041$

This is a scratchpad register. Useful when processing exceptions. There is a separate scratch register for each operating mode.

#### $[U/S/H/M]_TIME (0x?FE0)$

The TIME register corresponds to the wall clock real time. This register can be used to compute the current time based on a known reference point. The register value will typically be a fixed number of seconds offset from the real wall clock time. The lower 32 bits of the register are driven by the tm\_clk\_i clock time base input which is independent of the cpu clock. The tm\_clk\_i input is a fixed frequency used for timing that cannot be less than 10MHz. The low order 32 bits represent the fraction of one second. The upper 32 bits represent seconds passed. For example, if the tm\_clk\_i frequency is 100MHz the low order 32 bits should count from 0 to 99,999,999 then cycle back to 0 again. When the low order 32 bits cycle back to 0 again, the upper 32 bits of the register is incremented. The upper 32 bits of the register represent the number of seconds passed since an arbitrary point in the past.

Note that this register has a fixed time basis, unlike the TICK register whose frequency may vary with the cpu clock. The cpu clock input may vary in frequency to allow for performance and power adjustments.

### U\_FSTAT - CSR 0x0014 Floating Point Status and Control Register

The floating-point status and control register may be read using the CSR instruction. Unlike other CSR's the control register has its own dedicated instructions for update. See the section on floating point instructions for more information.

	1	1 _	T		
Bit		Symbol	Description		
63:53			reserved		
52		inexact	inexact		
51		dbz	divide by zero		
50		under	underflow		
49		over	overflow		
48		invop	invalid operation		
47		~	reserved		
46:44	RM	rm	rounding mode		
43	E5	inexe	- inexact exception enable		
42	E4	dbzxe	- divide by zero exception enable		
41	E3	underxe	- underflow exception enable		
40	E2	overxe	- overflow exception enable		
39	E1	invopxe	- invalid operation exception enable		
38	NS	ns	- non standard floating point indicator		
Result S	tatus				
32		fractie	- the last instruction (arithmetic or conversion) rounded		
			intermediate result (or caused a disabled overflow		
			exception)		
31	RA	rawayz	rounded away from zero (fraction incremented)		
30	SC	С	denormalized, negative zero, or quiet NaN		
29	SL	neg <	the result is negative (and not zero)		
28	SG	pos >	the result is positive (and not zero)		
27	SE	zero =	the result is zero (negative or positive)		
26	SI	inf ?	the result is infinite or quiet NaN		
Exception	n Occ	currence			
21 to 25			reserved		
20	X6	swt	{reserved} - set this bit using software to trigger an invalid		
			operation		
19	X5	inerx	- inexact result exception occurred (sticky)		
18	X4	dbzx	- divide by zero exception occurred		
17	Х3	underx	- underflow exception occurred		
16	X2	overx	- overflow exception occurred		
15	X1	giopx	- global invalid operation exception – set if any invalid		
			operation exception has occurred		
14	GX	gx	- global exception indicator – set if any enabled exception		
			has happened		
13	SX	sumx	- summary exception - set if any exception could occur if it		
			was enabled		
			- can only be cleared by software		
Exception	n Typ	e Resoluti	on		
8 to 12			reserved		
7	X1T	cvt	- attempt to convert NaN or too large to integer		
6	X1T	sqrtx	- square root of non-zero negative		
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison		
		-	instructions		

4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN

### $S_PTBR - CSR 0x1003$

This register contains the base address of the page table, which must be a multiple of 4096. Also included in this register is table parameters depth and type. Register tag #152.

127	64	63	12	11	10 8	7 5	4	3 1	0	
	~	Pa	age Table Address <sub>6312</sub>	?	Levels	~	S	١	Type	

Type: 0 = inverted page table, 1 = page table

S: 1=software managed TLB miss, 0 = hardware table walking

Levels are ignored for the inverted page table.

### $S_ARTBR - CSR 0x1005$

This register contains the base address of the access rights table. The address must be 4096-byte aligned.

### S\_ASID - CSR 0x101F

This register contains the address space identifier (ASID) or memory map index (MMI). The ASID is used in this design to select (index into) a memory map in the paging tables. Only the low order eight bits of the register are implemented.

### S\_KEYS - CSR 0x1020 to 0x1027

These eight registers contain the collection of keys associated with the process for the memory lot system. Each key is thirty-two bits in size. All eight registers are searched in parallel for keys matching the one associated with the memory page. Keyed memory enhances the security and reliability of the system.

	31	0
1020	key0	
1021	key1	
1027	key7	

#### CA0,CA1,...CA15 (CAREGS) – M CSR 0x3100 to 0x311F

This set of registers allows access to the code address register array. Since code address registers are larger than 64-bits they are split across two register locations for each code address register.

Reg #	Name	Alternate Name	Reg Tag
0x3100	CA0		64
0x3106	CA6		70
0x3107	CA7	IP	71
0x3108	CA8	EIP	72
•••			
0x310F	CA15		79

### M\_CR0 (CSR 0x3000) Control Register Zero

This register contains miscellaneous control bits including a bit to enable protected mode.

Bit		Description
0	Pe	Protected Mode Enable: 1 = enabled, 0 = disabled
8 to 13		
16		
30	DCE	data cache enable: 1=enabled, 0 = disabled
32	BPE	branch predictor enable: 1=enabled, 0=disabled
33	BTBE	branch target buffer enable: 1=enabled, 0=disabled, default=1
34	WBM	write buffer merging enable: $1 = \text{enabled}$ , $0 = \text{disabled}$
35	SPLE	speculative load enable (1 = enable, 0 = disable) (0 default)
36	·	
63	D	debug mode status. this bit is set during an interrupt routine if the
		processor was in debug mode when the interrupt occurred.

This register supports bit set / clear CSR instructions.

#### DCE

Disabling the data cache is useful for some codes with large data sets to prevent cache loading of values that are used infrequently. Disabling the data cache may reduce security risks for some kinds of attacks. The instruction cache may not be disabled. Enabling / disabling the data cache is also available via the CACHE instruction.

#### **BPE**

Disabling branch prediction will significantly affect the cores performance but may be useful for debugging. Disabling branch prediction causes all branches to be predicted as not-taken. No entries will be updated in the branch history table if the branch predictor is disabled.

#### WBM bit

Merging of values stored to memory may be disabled by setting this bit. On reset write buffer merging is disabled because it is likely desirable to setup I/O devices. Many I/O devices require updates to individual bytes by separate store instructions. (Write buffer merging is not currently implemented).

### **SPLE**

Enabling speculative loads give the processor better performance at an increased security risk to meltdown attacks.

#### M\_HARTID (CSR 0x3001)

This register contains a number that is externally supplied on the hartid\_i input bus to represent the hardware thread id or the core number.

#### M\_TICK (CSR 0x3002)

This register contains a tick count of the number of clock cycles that have passed since the last reset. Note that this register should not be used for precise timing as the processor's clock frequency may vary for performance and power reasons. The TIME CSR may be used for wall-clock timing as it has its own timing source.

#### M\_SEED (CSR 0x3003)

This register contains a random seed value based on an external entropy collector. The most significant bit of the state is a busy bit.

63	3 6	0	59	16	15		0
S	tate	4	~44			seed <sub>16</sub>	

State <sub>4</sub>	
Bit	
0	dead
1	test
2	valid, the seed value is valid
3	Busy, the collector is busy collecting a new seed value

#### M\_BADADDR (CSR 0x3007)

This register contains the effective address for a load / store operation that caused a memory management exception or a bus error. Note that the address of the instruction causing the exception is available in the EIP register.

#### M\_BAD\_INSTR (CSR 0x300B)

This register contains a copy of the exceptioned instruction.

#### M\_DBADx (CSR 0x3018 to 0x301B) Debug Address Register

These registers contain selectors for addresses of instruction or data breakpoints. The registers may also be used as trace triggering address registers.

31	24	23	22		0
$PL_8$		T		Index <sub>23</sub>	

#### M\_DBCR (CSR 0x301C) Debug Control Register

This register contains bits controlling the circumstances under which a debug interrupt will occur.

bits		
3 to 0	Enables a specific debug address register to do address matching. If the	
	corresponding bit in this register is set and the address (instruction or	
	data) matches the address in the debug address register then a debug	

	interrupt will be taken.					
17, 16	This pair of bits determine what should match the debug address					
	register zero in order for a debug interrupt to occur.					
	17:16					
	00 match the instruction address					
	01 match a data store address					
	10 reserved					
	11 match a data load or store address					
19, 18	reserved					
23 to 20	Same as 16 to 19 except for debug address register one.					
27 to 24	Same as 16 to 19 except for debug address register two.					
31 to 28	Same as 16 to 19 except for debug address register three.					
32 to 35	Trace enable on address register					
36	Enable branch compression for trace.					
55 to 62	These bits are a history stack for single stepping mode. An exception					
	will automatically disable single stepping mode and record the single					
	step mode state on stack. Returning from an exception pops the single					
	step mode state from the stack.					
63	This bit enables SSM (single stepping mode)					

#### M\_DBSR (CSR 0x301D) - Debug Status Register

This register contains bits indicating which addresses matched. These bits are set when an address match occurs and must be reset by software.

bit	
0	matched address register zero
1	matched address register one
2	matched address register two
3	matched address register three
63 to 4	not used, reserved

#### M TVEC - CSR 0x3030 to 0x3037

These registers contain the address of the exception handling routine for a given operating level. TVEC[3] (0x3036) is used directly by hardware to form an address of the debug routine. The lower eight bits of TVEC[3] are not used. The lower bits of the exception address are determined from the operating level. TVEC[0] to TVEC[2] are used by the REX instruction. The low half of the register contains the offset of the exception processing routine. The high half of the register contains the selector value of the exception processing routine.

A sync instruction should be used after modifying one of these registers to ensure the update is valid before continuing program execution.

Reg #	
0x3030	TVEC[0] low
0x3031	TVEC[0] high
0x3036	TVEC[3] low
0x3037	TVEC[3] high

#### M PLSTACK - CSR 0x303F

This register contains an eight-entry stack of privilege levels. Each stack entry occupies eight bits. When an exception occurs, this register is shifted to the left by eight bits and the low order bits are set to the highest privilege level, 0xFF. When an RTI instruction is executed this register is shifted to the right by eight bits restoring the previous privilege level.

#### M\_PMSTACK - CSR 0x3040

This register contains an eight-entry operating mode and interrupt mask stack. When an exception or interrupt occurs, this register is shifted to the left by eight bits and the low order bits are set according to the exception mode, when an RTI instruction is executed this register is shifted to the right by eight bits. On RTI the last stack entry is set to \$3F masking all interrupts on stack underflow. The low order eight bits represent the current operating mode and interrupt mask.

63	8	7 6	5 4	3 1	0
<seven groups="" more=""></seven>		~2	OM	IPL	IM

OM = operating mode, 0 to 4

IPL = interrupt priority level

IM = interrupt mask

#### M SCRATCH - CSR 0x3041

This is a scratchpad register. Useful when processing exceptions.

#### D VSTEP – CSR 0x4046

This register holds the current vector step number. It may need to be saved and restored during exception processing to ensure vector operations work as expected.

#### D VTMP - CSR 0x4047

This register holds state for an internal temporary register used during vector processing. This register may need to be saved and restored during exception processing.

#### M KYT – CSR 0x3053

The KYT register holds the selector for the memory key table. Register tag #154.

31	24	23	22		0
PL <sub>8</sub>		T		Index <sub>23</sub>	

#### M\_TCB - CSR 0x3054

This register holds the selector for the currently active task control block. Register tag #155.

31	24	23	22		0
$PL_8$		T		Index <sub>23</sub>	

#### M TIME – CSR 0x?FE0

The TIME register corresponds to the wall clock real time. This register can be used to compute the current time based on a known reference point. The register value will typically be a fixed number of seconds offset from the real wall clock time. The lower 32 bits of the register are driven by the tm\_clk\_i clock time base input which is independent of the cpu clock. The tm\_clk\_i input is a fixed frequency used for timing that cannot be less than 10MHz. The low order 32 bits represent the fraction of one second. The upper 32 bits represent seconds passed. For example, if the tm\_clk\_i frequency is 100MHz the low order 32 bits should count from 0 to 99,999,999 then

cycle back to 0 again. When the low order 32 bits cycle back to 0 again, the upper 32 bits of the register is incremented. The upper 32 bits of the register represent the number of seconds passed since an arbitrary point in the past.

This register is available to all operating modes, however it may be written only from machine mode.

Note that this register has a fixed time basis, unlike the TICK register whose frequency may vary with the cpu clock. The cpu clock input may vary in frequency to allow for performance and power adjustments.

#### M TIMECMP - CSR 0x3FE1

If the wall-clock time TIME register is equal to the value in this register, then an interrupt will be generated.

## Hardware Queues

There are sixteen hardware FIFO queues. Queue #15 is used to implement instruction tracing. The queues are accessible with the PUSHQ, POPQ, PEEKQ, and STATQ system instructions.

Queue #	Usage
0	Graphics
15	Instruction Trace

# **Operating Modes**

The core operates in one of four basic modes: application/user mode, supervisor mode, hypervisor mode or machine mode. Machine mode is switched to when an interrupt or exception occurs, or when debugging is triggered. On power-up the core is running in machine mode. An RTI instruction must be executed to leave machine mode after power-up.

A subset of instructions is limited to machine mode.

# **Exceptions**

# **External Interrupts**

There is little difference between an externally generated exception and an internally generated one. An externally caused exception will set the exception cause code for the currently fetched instruction.

There are eight priority interrupt levels for external interrupts. When an external interrupt occurs the mask level is set to the level of the current interrupt. A subsequent interrupt must exceed the mask level to be recognized.

# Polling for Interrupts

To support code that needs to run with interrupts disabled an interrupt polling instruction (PFI) is provided in the instruction set. For instance, the system could be running a high priority task with interrupts disabled. There may be sections of code where it is possible to process an interrupt however. In some code environments, it is not enough to disable and enable interrupts around critical code. The code must be effectively run with interrupt disabled all the time. This makes it necessary to poll for interrupts in software. For instance, stack prologue code may cause false pointer matches for the garbage collector because stack space is allocated before the contents are defined. If the GC scan occurs on this allocated but undefined area of memory, there could be false matches.

### Effect on Machine Status

The operating mode is always switched to machine mode on exception. It is up to the machine mode code to redirect the exception to a lower operating mode when desired. Further exceptions at the same or lower interrupt level are disabled automatically. Machine mode code must enable interrupts at some point.

# **Exception Stack**

The current register set, operating mode and interrupt enable bits are pushed onto an internal stack when an exception occurs. This stack is only eight entries deep as that is the maximum amount of nesting that can occur. Further nesting of exceptions can be achieved by saving the state contained in the exception registers.

# **Exception Vectoring**

Exceptions are handled through a vector table. The vector table has four entries, one for each operating level the core may be running at. The location of the vector table is determined by TVEC[3]. If the core is operating at mode three for instance and an interrupt occurs vector table address number three is used for the interrupt handler. Note that the interrupt automatically switches the core to operating mode three. An exception handler at the machine level may redirect exceptions to a lower-level handler identified in one of the vector registers. More specific exception information is supplied in the cause register.

Operating Level	Address (If TVEC[3] contains \$FFC0000)	
0	\$FFC0000	Handler for operating level zero
1	\$FFC0020	
2	\$FFC0040	
3	\$FFC0060	

### Reset

Reset is treated as an exception. The reset routine should exit using an RTI instruction. The PL ad PM stack registers must be set appropriately for the return.

The core begins executing instructions at address \$F...FD0000. All registers are in an undefined state.

### Precision

Exceptions in Thor2021 are precise. They are processed according to program order of the instructions. If an exception occurs during the execution of an instruction, then an exception field is set in the reorder buffer. The exception is processed when the instruction commits which happens in program order. If the instruction was executed in a speculative fashion, then no exception processing will be invoked unless the instruction makes it to the commit stage.

# **Exceptions During Vector Operations**

If an exception occurs during a vector operation, the vector state is recorded, and the operation aborted. The vector operation may be continued after the exception is processed. The vector state consists of a step number and a temporary register.

# **Exception Cause Codes**

The following table outlines the cause code for a given purpose. These codes are specific to Thor2021. Under the HW column an 'x' indicates that the exception is internally generated by the processor; the cause code is hard-wired to that use. An 'e' indicates an externally generated interrupt, the usage may vary depending on the system.

Cause		HW	Description
Code			
0			no exception
1	IBE	X	instruction bus error
2	EXF	X	Executable fault
4	TLB	X	tlb miss
			FMTK Scheduler
128		e	
129	KRST	e	Keyboard reset interrupt
130	MSI	e	Millisecond Interrupt
131	TICK	e	
156	KBD	e	Keyboard interrupt
157	GCS	e	Garbage collect stop
158	GC	e	Garbage collect
159	TSI	e	FMTK Time Slice Interrupt
3			Control-C pressed
20			Control-T pressed
26			Control-Z pressed

32	SSM	X	single step
33	DBG	X	debug exception
34	TGT	X	call target exception
35	MEM	X	memory fault
36	IADR	X	bad instruction address
37	UNIMP	X	unimplemented instruction
38	FLT	X	floating point exception
39	CHK	X	bounds check exception
40	DBZ	X	divide by zero
41	OFL	X	overflow
11	OLE	A	O TOTALO W
47			
48	ALN	X	data alignment
49	KEY	X	memory key fault
50	DWF	X	Data write fault
51	DRF	X	data read fault
52	SGB	X	segment bounds violation
53	PRIV	X	privilege level violation
54	CMT	X	commit timeout
55	BT	X	branch target
56	STK	X	stack fault
57	CPF	X	code page fault
58	DPF	X	data page fault
60	DBE	X	data bus error
61	PMA	X	physical memory attributes check fail
62	NMI	X	Non-maskable interrupt
63	BRK		BRK instruction encountered
200	PFX	X	Too many instruction prefixes
225	FPX_IOP	X	Floating point invalid operation
226	FPX_DBZ	X	Floating point divide by zero
227	FPX_OVER	X	floating point overflow
228	FPX_UNDER	X	floating point underflow
229	FPX_INEXACT	X	floating point inexact
231	FPX_SWT	X	floating point software triggered
239			Software exception handling
240	SYS		Call operating system (FMTK)
241			FMTK Schedule interrupt
242	TMR	X	system timer interrupt
243	GCI	X	garbage collect interrupt
253	RST	X	reset
254	NMI	X	non-maskable interrupt
255	PFI		reserved for poll-for-interrupt instruction

# **DBG**

A debug exception occurs if there is a match between a data or instruction address and an address in one of the debug address registers.

### **IADR**

This exception is currently not implemented but reserved for the purpose of identifying bad instruction addresses. If the two least significant bits of the instruction address are non-zero then this exception will occur.

### **UNIMP**

This exception occurs if an instruction is encountered that is not supported by the processor. It may also occur if there is an attempt to use an instruction in a mode that does not support it.

### **OFL**

If an arithmetic operation overflows (multiply, add, or shift) and the overflow exception is enabled in the arithmetic exception enable register then an OFL exception will be triggered.

### **KEY**

This fault will occur if an attempt is made to access memory for which the app does not have the key.

### FLT

A floating-point exception is triggered if an exceptional condition occurs in the floating-point unit and the exception is enabled. Please see the section on floating-point for more details.

# DRF, DWF, EXF

Data read fault, data write fault, and execute fault are exceptions that are returned by the memory management unit when an attempt is made to access memory for which the corresponding access type is not allowed. For instance, if the memory page is marked as non-executable an attempt is made to load the instruction cache from the page then an execute fault EXF exception will occur.

# CPF, DPF

The code page fault and data page fault exceptions are activated by the mmu if the page is not present in memory. Access may be allowed but simply unavailable. These faults are not currently implemented.

### **PRIV**

Some instructions and CSR registers are legal to use only at a higher operating level. If an attempt is made to use the privileged instruction by a lower operating level, then a privilege violation exception may occur. For instance, attempting to use RTI instruction from user operating level.

### STK

If the value loaded into one of the stack pointer registers (the stack pointer sp or frame pointer fp) is outside of the bounds defined by the stack bounds registers, then a stack fault exception will be triggered.

### **DBE**

A timeout signal is typically wired to the err\_i input of the core and if the data memory does not respond with an ack\_i signal fast enough an error will be triggered. This will happen most often when the core is attempting to access an unimplemented memory area for which no ack signal is generated. When the err\_i input is activated during a data fetch, an exception is flagged in a result register for the instruction. The core will process the exception when the instruction commits. If the instruction does not commit (it could be a speculated load instruction) then the exception will not be processed.

### **PMA**

The addressed memory did not pass the physical memory attributes testing. For example a write operation attempted to a ROM address space.

### **IBE**

A timeout signal is typically wired to the err\_i input of the core and if the instruction memory does not respond with an ack\_i signal fast enough and error will be triggered. This will happen most often when the core is attempting to access an unimplemented memory area for which no ack signal is generated. When the err\_i input is activated during an instruction fetch, a breakpoint instruction is loaded into the cache at the address of the error.

### **NMI**

Non-maskable interrupt.

### BT

The core will generate the BT (branch target) exception if a branch instruction points back to itself. Branch instructions in this sense include jump (JMP) and call (CALL) instructions.

### TLB – Translation Lookaside Buffer

### Overview

The page map is limited in the translations it can perform because of its size. The solution to allowing more memory to be mapped is to use main memory to store the translations tables, then cache address translations in a translation look-aside buffer or TLB. This is sometimes also called an address translation cache ATC. The TLB offers a means of address virtualization and memory protection. A TLB works by caching address mappings between a real physical address and a virtual address used by software. The TLB deals with memory organized as pages. Typically, software manages a paging table whose entries are loaded into the TLB as translations are required.

# Size / Organization

The TLB has 1024 entries per set. The size was chosen as it is the size of one block ram for 32-bit data in the FPGA. This is quite a large TLB. Many systems use smaller TLBs. There is not really a need for such a large one, however it is available.

The TLB is organized as a four-way set associative cache.

### What is Translated

The TLB processes all user mode addresses including both instruction and data addresses. It is known as a *unified* TLB. Addresses in other modes of operation are not translated. Additionally, virtual addresses with the top forty bits set are not translated to allow access to the BIOS and system rom.

# **Page Size**

Because the TLB caches address translations it can get away with a much smaller page size than the page map can for a larger memory system. 4kB is a common size for many systems. In this case the TLB uses 4kB pages to match the size of pages for keyed memory and segmentation. For a 512MB system (the size of the memory in the test system) there are 131,072 4kB pages.

# **Management**

The TLB unit is a software managed TLB. When a translation miss occurs, an exception is generated to allow software to update the TLB. It is left up to software to decide how to update the TLB. There may be a set of hierarchal page tables in memory, or there could be a hash table used to store translations.

The TLB is updated using the TLBRW instruction which both reads and writes the TLB. More descriptive text is present at the TLBRW instruction description.

# Flushing the TLB

The TLB maintains the address space (ASID) associated with a virtual address. This allows the TLB translations to be used without having to flush old translations from the TLB during a task switch.

#### Global Bit

In addition to the ASID the TLB entries contain a bit that indicates that the translation is a global translation and should be present in every address space.

# PAM – Page Allocation Map

### **Overview**

Memory is organized into 131,072 4kB pages.

The PAM is a software structure made up of 131,072 bit-pairs stored in memory. There is a bit pair for each possible physical memory page. The PAM is used by software to manage the allocation of physical pages of memory.

# **Memory Usage**

Total memory used by the PAM is 32kB.

# **Organization**

The PAM is organized as a string of bit-pairs, one pair for each physical memory page. Bit pairs are used rather than single bits to mark allocated pages as it is convenient to also mark runs of pages. Marking runs of pages using bit-pairs makes it possible to free the pages of a previous allocation.

Bit-Pair Value	Meaning
0	Page of memory is free, available for use.
1	reserved
2	Page is allocated, end of run of pages
3	Page is allocated

# PMA - Physical Memory Attributes Checker

### **Overview**

The physical memory attributes checker is a hardware module that ensures that memory is being accessed correctly according to its physical attributes.

Physical memory attributes are stored in an eight-entry table. This table includes the address range the attributes apply to and the attributes themselves. Address ranges are resolved only to bit four of the address. Meaning the granularity of the check is 16 bytes.

Most of the entries in the table are hard-coded and configured when the system is built.

Physical memory attributes checking is applied in all operating modes.

# **Register Description**

Regno	Bits		
00	64	LB0	lower bound - address bits 4 to 67 of the physical address range
08	64	UB0	upper bound - address bits 4 to 67 of the physical address range
10	16	AT0	memory attributes
18	~	~	reserved
			6 more register sets
E0	64	LB7	lower bound - address bits 4 to 67 of the physical address range
E8	64	UB7	upper bound - address bits 4 to 67 of the physical address range
F0	16	AT7	memory attributes
F8	~	~	reserved

# **Attributes**

Bitno							
0	X	may contain executable code					
1	W	may be written to					
2	R	may be read					
3	С	may be cached					
4-6	G	granularity  G 0 byte accessible 1 wyde accessible 2 tetra accessible 3 octa accessible					

		4 to 7 reserved
7	~	reserved
8-15	T	device type (rom, dram, eeprom, I/O, etc)

# **Key Cache**

### **Overview**

Associated with each page of memory is a memory key. To access a page of memory the memory key must match with one of the keys in the applications keyset. The keyset is maintained in the keys CSRs. The key size of 20 bits is a minimum size recommended for security purposes.

The key associated with each memory page is stored in a table in main memory. Each key occupies a tetra-byte of memory to keep caching simple. So that two memory accesses are not required to access a page of memory this table of keys is cached. When a page of memory is accessed the key cache is accessed in parallel.

The key cache is a direct mapped cache organized as 256 lines of 16 keys. Key values are stored in LUT rams. 256 address tags are stored in LUT ram.

# **Card Memory**

### Overview

Also present in the memory system is Card memory. The card memory is a telescopic memory which reflects with increasing detail where in the memory system a pointer write has occurred. This is for the benefit of garbage collection systems. Card memory is updated using a write barrier when a pointer value is stored to memory.

# **Organization**

Memory is divided into 256-byte card memory pages. Each card has a single byte recording whether a pointer store has taken place in the corresponding memory area. To cover a 512MB memory system 2MB card memory is required at the outermost layer. The outer most 2MB card memory layer is itself divided into 4096 256-byte card pages. Note that each byte represents the pointer store status for a 256B region. The 4096B memory is further resolved to single octa indicating if any pointer store has taken place. Thus, for a 512MB memory system a three-level card memory is used.

Layer	Resolving Power	
0	2 MB	256B regions
1	4 kB	128kB regions
2	8 B	64 MB regions

There is only a single card memory in the system, used by all tasks.

### Location

Card memory must be based at physical address zero, extending up to the amount of card memory required. This is so that the address calculation of the memory update may be done with a simple right-shift operation.

# **Operation**

As a program progresses it writes pointer values to memory using the write barrier. Storing a pointer triggers an update to all the layers of card memory corresponding to the main memory location written. A byte is set in each layer of the card memory system corresponding to the memory location of the pointer store.

The garbage collection system can very quickly determine where pointer stores have occurred and skip over memory that has not been modified.

# Sample Write Barrier

```
; Milli-code routine for garbage collect write barrier.
```

; Usable with up to 64-bit memory systems.

; Three level card memory

:

#### GCWriteBarrier:

STO a0,[a1] ; store the value to memory at a1 **SRL** a1,a1,#8 ; compute card address **STB** ; clear bit in card memory x0,[a1]**SRL** a1,a1,#8 ; repeat for each table level **STB** x0,[a1]SRL a1,a1,#8 **STB** x0,[a1];... more stores as needed **JMP** 1k2

# System Memory Map

There are several components to the system which use tables in memory. These tables are statically allocated at the time the system is built. The table sizes depend on the size of main memory. The card memory table must be located at address zero. So, it is probably best to group the tables together at the low end of memory.

Address	Usage	
\$00000000 to \$001FFFFF	Card Memory (2 MB)	
\$00210000 to \$0022FFFF	PAM (128kB 2 copies)	

\$00280000 to \$0029FFFF	Key memory (128 kB)	

# **Debugging Unit**

### Overview

The Thor2021 has several debug features including debug exceptions on address matches and instruction tracing. Instruction trace trigger registers are shared with the debug address registers. Which function is triggered on an address match is controlled in the debug control register.

# **Instruction Tracing**

Instruction tracing is enabled by setting the trace enable bit (bit 32 to 35) for the corresponding debug address match register. Tracing will begin when an address match occurs and continue until the trace buffer is full. The trace queue is 8kB in size allowing thousands of instructions to be traced.

# Trace Queue Entry Format

The trace queue stores both complete instruction pointer addresses and branch taken-not-taken (TNT) history. The low order two bits of the trace entry indicate the type of record stored by the entry. There are currently two record types. Record type zero is an instruction pointer address. Record type one is a history record for branches.

111				2	1	0	
			•		Rec	type <sub>2</sub>	
~14	Selector Value <sub>32</sub>	Instruction Pointer bits 0	to 63		C	00	
111		9	8	2	1	0	
	Branch Taken-Not-Taken History <sub>103</sub> count <sub>7</sub>						

Up to 103 bits of branch TNT history may be stored in a single record. The number of bits stored is recorded in bits 2 to 8 of the record. After four full branch TNT history records, the trace will record the current instruction address in whole.

### Trace Readback

A trace of instructions executed may be read back from the trace queue using the PEEKQ and POPQ instructions. The processor trace queue is accessible as queue number 15. Queue 15 contains the raw history record. Software should get the status using the STATQ instruction to see if data is available, then pop queue 15 to get the data record.

# **Address Matching**

The debug and trace unit use selectors to select an address range to match against.

# **Extended Precision Arithmetic**

Extended precision arithmetic is supported by the CARRY instruction and carry storage registers P0 to P7. The CARRY instruction specifies which of the following instructions input or output a

carry value. The instruction group covered by the CARRY instruction is executed with interrupts disabled. Because the instructions are treated as a group there is no need to store or retrieve intermediate carry values through context switches.

# Instruction Set Architecture Description Overview

Like the original Thor core, the instruction set is variable length. Instructions vary from two to eight bytes in length (2, 4, 6 or 8). Commonly used instructions often have short forms. While adding complexity to the processor, variable length instructions make better use of the cache.

Thor2021 uses 16-bit instruction parcels as a minimum. All instructions are a multiple of two bytes in length. Formats were considered that varied by a single byte in size. An issue with using instructions that vary by only a single byte in size is that there are twice as many instruction length decoders required in hardware. The instruction aligner would be larger and more complex with byte aligned instructions. The 16-bit parcel is an engineering compromise between minimizing instruction size and minimizing processor complexity. Seriously considered was packing three 41-bit instructions into 128-bit bundles. One issue with this approach is software complexity of the assembler and linker. Byte aligned instructions are handled well by existing software, bit aligned instructions are not as popular.

Thor2021 has the capacity to represent any instruction as a vector instruction. A single bit in the instruction indicates if it is a vector instruction. This avoids the issue many instruction set architectures have of having large numbers of instructions duplicated for operation with vectors. There are literally hundreds of instructions that make sense to have vector versions. Having two sets of opcodes would add too much complexity to the processor. Because of the large number of vector instructions it ends up consuming an opcode bit anyways.

# Root Opcode

The root opcode determines the class of instructions executed. Some commonly executed instructions are also encoded at the root level to make more bits available for the instruction. The root opcode is always present in all instructions as the lowest eight bits of the instruction. The instruction length is determined entirely by the value of the root opcode.

Byte 3		Byte 2			Byte 1			Byte 0		
31	21	21 20 15		1.4	14 0 9		7	<b>V</b>		
Consta			$a_6$	R	Rt <sub>6</sub>		Opc	code <sub>8</sub>		

### **Vector Instruction Indicator**

The processing core needs to know if an instruction is a vector instruction before it is fully decoded. Depending on if the instruction is a vector instruction, it may be re-decoded and sent into the pipeline multiple times. The processor needs to know very quickly and simply at the instruction fetch stage if the instruction is a vector operation. So, to help things along Thor2021 encodes this information in bit 8 of all instructions. If bit 8 is a '1' then the instruction is a vector instruction. See the sample instruction below.

▼

31	21	20	15	14	9	8	7	0
Constant <sub>11</sub>		R	$a_6$	Rí	6	v	O	ocode <sub>8</sub>

# Target Register Spec

Most instructions have a target register. The register spec for the target register is usually in the same position, bits 9 to 14 of an instruction. If the instruction is a vector instruction, then the target register will be a vector register, otherwise it is a scalar register.

				•	′			
31	21	20	15	14	9	8	7	0
Constant <sub>2</sub>	1	R	$a_6$	Rt	t <sub>6</sub>	V	Opc	ode <sub>8</sub>

# **Register Formats**

# R1 (one source register)

31	25	24 22	21	2019	18	14	13	9	8	7	0
Fu	nc <sub>7</sub>	$m_3$	Z	~2	R	$a_5$	R	t <sub>5</sub>	v	Opc	ode <sub>8</sub>

# R2 (two source register)

3130	29 27	26	2524	23	19	18	14	13	9	8	7	0
Fn <sub>2</sub>	$m_3$	Z	Tb <sub>2</sub>	Rt	)5	R	a <sub>5</sub>	R	t <sub>5</sub>	v	Opc	code <sub>8</sub>

# **R3** (three source register)

47		40 37															
Fu	ınc <sub>7</sub>	~4	m <sub>3</sub>	Z	$Tc_2$	R	C <sub>5</sub>	$Tb_2$	R	<b>b</b> 5	R	a <sub>5</sub>	R	t <sub>5</sub>	V	Opc	code <sub>8</sub>

### **Immediate Format**

# RIL (with prefix)

The immediate prefix replaces the sign extension from bit 23 to the machine width with bits from the prefix instruction.

Bytes 9 to 11   Byte 8   Byte 7   Byte 6   Bytes 1 to 5   Byte 0
--

#### Scalar Immediate

	Instr	uctio	n						Prefix					
47	19	18	14	13	9	8	7	0	47	9	8	7	0	
Immediate <sub>280</sub>	R	as	Rt	t5	0	Opc	code8	Immed	diate6325	V	1	Fh <sub>6</sub>		

The instruction prefix may be 2, 4, 6 or 8 bytes in size.

#### **Vector Immediate**

		Insti	Prefix						
47 45	44	43 19	18 14	13 9	8	7 0	47 9	8	7 0
m <sub>3</sub>	m <sub>3</sub> z Immediate <sub>240</sub>		Ra <sub>5</sub>	Rt <sub>5</sub>	1	Opcode8	Immediate <sub>6325</sub>	V	1Fh <sub>6</sub>

# **Clock Cycles**

Clock cycles given for instructions are approximate and represent a relative relationship between instructions. An instruction with a given clock cycle count of two will take approximately twice as long to execute as an instruction with a given clock cycle count of one. Generally, a clock cycle count of one means the instruction requires only a single clock to execute. However, the effective execution time of the instruction may be less if multiple execution units can execute the instruction or if execution of the instruction may be overlapped with execution of other instructions.

# **Execution Units**

Most instructions execute on a particular type of execution unit. For instance, the ADD instruction is executed on an ALU while the LDB instruction is executed on a memory unit. The execution unit for the instruction is listed in the instruction's description. The execution of some instructions is supported on only a single execution unit even if multiple execution units of the same type are available. For instance, infrequently used instructions like bitfield manipulations or sub-word shifts and rotates are supported on only a single ALU. Instructions that execute on two different execution units may execute at the same time. This is important for instruction scheduling.

### **Mnemonics**

Operation sizes are specified by adding a size qualifier to the mnemonic as in ADD.T. The T stands for Tetra.

Possible size qualifiers:

**Sub-word Operations** 

.B	byte
.W	wyde
.T	tetra
Ο.	octa
.H	hexi
.BP	byte parallel
.WP	wyde parallel
.TP	tetra parallel
.OP	octa parallel
.HP	hexi parallel

### **Result Format**

For sub-word operations which may be specified for instructions the results are sign extended to the word width of 128-bits.

Example:

SLL.W r1,r2,6

Will shift the first 16 bits of the register to the left by six bits, then sign extend the result from bit 15 to bit 127.

### **Instruction Encoding**

Two Bit Size Code

$Sz_2$	
0	hexis
1	octas
2	tetras
3	wydes

Four Bit Size Code

Sz <sub>4</sub>	
0	hexis
1	octas
2	tetras
3	wydes
4 to 7	reserved
8	hexi
9	octa parallel

10	tetra parallel
11	wyde parallel

# Arithmetic / Logical / Shift

# **ABS – Absolute Value**

### **Description:**

This instruction computes the absolute value of the contents of Ra and places the result in Rt.

### **Integer Instruction Format: R1**

_	31	25	24 22	21	2019	18	14	13	9	8	7	0
	06h	17	$m_3$	Z	$Sz_2$	Ra	a <sub>5</sub>	Rt	t <sub>5</sub>	V	01	$h_8$
	v: 0	ctor o	р									

### **Operation:**

$$If Rb < 0 \\ Rt = -Rb \\ else \\ Rt = Rb$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL$  - 1 
$$if \ (Vm[x]) \ Rt[x] = Ra[x] < 0 \ ? \ -Ra[x] : Ra[x]$$
 
$$else \ if \ (z) \ Rt[x] = 0$$
 
$$else \ Rt[x] = Rt[x]$$

**Execution Units:** Integer ALU #0

**Clock Cycles: 1** 

Exceptions: none

# **ADD - Register-Register**

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. All registers are integer registers.

Unless the **CARRY** instruction is used, the input carry will be zero.

**Instruction Format:** R2

Results are sign extended to 128-bits.

31 30	29 27	26	2524	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	$Tb_2$	R	b <sub>5</sub>	Ra	a <sub>5</sub>	R	t <sub>5</sub>	v		19h <sub>8</sub>	

### **Operation:**

$$Rt = Ra + Rb + carry$$

**Instruction Format:** R3

For this format, if the CARRY instruction is in use Rc should be zero.

47	41	49 38	37	36 33	32 31	30 26	25 24	23 19	18 14	13 9	8	7 0
04	$h_7$	$m_3$	Z	$Sz_4$	$Tc_2$	$Rc_5$	Tb <sub>2</sub>	Rb <sub>5</sub>	Ra <sub>5</sub>	Rt <sub>5</sub>	V	02h <sub>8</sub>

### **Operation:**

$$Rt = Ra + Rb + (Rc|carry)$$

**Operation:** 

$$Rt = Ra + Rb$$

**Clock Cycles:** 1

**Execution Units:** All Integer ALU's

Exceptions: none

# **ADDI - Add Immediate**

### **Description:**

Add a register and immediate value and place the sum in the target register. The immediate is sign extended to the machine width.

Unless the CARRY instruction is used, the input carry will be zero.

#### **Instruction Format:** RI

31	19	18	14	13	9	8	7		0
Immediate <sub>1</sub>	20	R	$a_5$	Rt	5	0		04h <sub>8</sub>	

**Instruction Format: RIL** 

47	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>		Ra	<b>l</b> 5	Rt	5	0	I	04h <sub>8</sub>

**Instruction Format: RILV** 

 47 45	44	43		19	18	14	13	9	8	7	0
$m_3$	Z		Immediate <sub>240</sub>		Ra	<b>1</b> 5	Rt	5	1	,	D4h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + immediate + carry

**Exceptions:** 

# **AND** – Bitwise And

### **Description**:

Perform a bitwise 'and' operation between operands.

**Instruction Format:** R2

30 31	29 27	26	2524	23	19	18	14	13	9	8	7	0
$Sz_2$	$m_3$	Z	$Tb_2$	R	b <sub>5</sub>	R	$a_5$	R	t <sub>5</sub>	V		$1Ah_8$

### **Operation:**

Rt = Ra & Rb

### **Integer Instruction Format:** R3

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
08	h <sub>7</sub>	$m_3$	Z	$Sz_4$	$Tc_2$	Ro	C <sub>5</sub>	$Tb_2$	Rl	b <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	v	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra & Rb & Rc

Clock Cycles: 1

**Execution Units:** All Integer ALU's

# **ANDC – Bitwise 'And' with Complement**

### **Description**:

Perform a bitwise 'and' with complement operation between operands.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
	0Bh <sub>7</sub>	$m_3$	Z	$Sz_4$	$Tc_2$	Ro	25	$Tb_2$	R	$b_5$	R	a <sub>5</sub>	Rt	5	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

 $Rt = Ra \& \sim Rb \& Rc$ 

**Clock Cycles:** 1

**Execution Units:** All Integer ALU's

# ANDI – Bitwise 'And' Immediate

### **Description:**

Bitwise 'and' a register and immediate value and place the result in the target register. The immediate is one extended to the machine width.

**Instruction Format: RI** 

31	19	18	14	13	9	8	7	0
Immediate <sub>12</sub>	02	Ra	<b>1</b> 5	Rt	5	V		$08h_8$

**Instruction Format: RIL** 

47	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>		Ra	15	Rt <sub>5</sub>	i	0		D8h <sub>8</sub>

**Instruction Format:** RILV

_	47 45	44	43	19	18	14	13	9	8	7	0
	$m_3$	Z	Immediate <sub>240</sub>		Ra	15	Rt	5	1		D8h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra & immediate

Clock Cycles: 1

**Execution Units:** All Integer ALU's

**Exceptions:** 

# ANDM – Bitwise 'And' with Mask

### **Description**:

Generates a mask consisting of '1's from the mask begin, Rb<sub>5</sub>, to the mask end Rc<sub>5</sub>, inclusive. Perform a bitwise 'and' operation between register Ra and the mask and store the result in register Rt. The immediate constant is one extended before use.

#### **Instruction Format: RM**

47	41	49 38	37	36 33	32 31	30 2	26 2	25 24	23	19	18	14	13	9	8	7	0
08	h <sub>7</sub>	$m_3$	Z	~4	$Tc_2$	Rc <sub>5</sub>		$Tb_2$	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Rt	5	V	A	$h_8$

### **Operation**

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \ \& \ Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

Clock Cycles: 1

**Execution Units:** First Integer ALU

# AND\_OR – Bitwise And then Or

### **Description**:

Perform a bitwise 'and' operation between the first two operands, Ra, Rb, then bitwise or the result with a third operand, Rc. Place the result in the target register Rt.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
7	78h <sub>7</sub>	$m_3$	Z	Sz <sub>4</sub>	$Tc_2$	Ro	5	$Tb_2$	R	<b>b</b> 5	R	a <sub>5</sub>	Ri	t <sub>5</sub>	V	02	h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = (Ra & Rb) | Rc

Clock Cycles: 1

**Execution Units:** All Integer ALU's

# BCDADD - BCD Add

### **Description:**

Adds two registers using BCD arithmetic and places the result in a target register. Unless the CARRY modifier is used the carry input will be zero.

**Instruction Format:** R3

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
001	h <sub>7</sub>	$m_3$	Z	~4	$0_2$	0	6	$Tb_2$	Rł	<b>o</b> <sub>5</sub>	Ra	a <sub>5</sub>	Rt	5	V	F51	18

**Clock Cycles:** 5

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Ra + Rb + carry

Exceptions: none

# **BCDMUL – BCD Multiply**

#### **Description:**

Multiply two registers using BCD arithmetic shift the result right by Rc digits round and place the result in a target register. This instruction has been designed to implement fixed point arithmetic.

#### **Instruction Format:**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
02h	17	$m_3$	Z	~4	$Tc_2$	Rc	5	$Tb_2$	R	<b>b</b> <sub>5</sub>	R	$a_5$	Rt	5	V	F5	$h_8$

Clock Cycles: 150

**Execution Units:** First Integer ALU

**Operation:** 

Rt = (Ra \* Rb) >> (Rc \* 4)

# **BCDSUB – BCD Subtract**

### **Description:**

Subtract two registers using BCD arithmetic and places the result in a target register. Unless the carry modifier is used the carry input will be zero.

### **Instruction Format:**

					32 31												
01h	17	$m_3$	Z	~4	$0_2$	0	6	$Tb_2$	Rł	<b>)</b> 5	Ra	a <sub>5</sub>	Rt	5	V	F5	$h_8$

**Clock Cycles:** 5

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Ra - Rb - carry

# **BFALIGN – Bitfield Align**

### **Description**:

Align the contents of register Ra with a bitfield specified between mask begin and mask end. This instruction can be used in combination with <u>BFCLR</u> and <u>OR</u> to perform a bitfield insert.

#### **Integer Instruction Format: RM**

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
00	h <sub>7</sub>	m <sub>3</sub>	Z	~2	c	b	$Tc_2$	R	C5	$Tb_2$	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	AAl	18

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

### Operation

Rt = (Ra << Mb) & Immediate Mask

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if\ (Vm0[x])\ Vt[x] = (Va[x] << Mb)\ \&\ Immediate\ Mask$$
 
$$else\ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFCHG – Bitfield Change**

### **Description**:

Flip the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Rb, and mask end, Rc, inclusive. Bitwise exclusive 'or' the mask with the value in register Ra and store the result in register Rt. This instruction is useful for flipping bit fields.

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
0.4	Ah <sub>7</sub>	m <sub>3</sub>	Z	~2	c	b	$Tc_2$	R	C5	$Tb_2$	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	5	V	AA	Nh <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

### **Operation**

Rt = Ra ^ Immediate

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFCLR – Bitfield Clear**

### **Description**:

Clear the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Rb, and mask end, Rc, inclusive. Bitwise and with the complement of the mask with the value in register Ra and store the result in register Rt.

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
0	Bh <sub>7</sub>	$m_3$	Z	~2	c	b	$Tc_2$	R	C5	Tb <sub>2</sub>	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	t <sub>5</sub>	v	AA	h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

### **Operation**

Rt = Ra & ~Immediate

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \ \& \sim Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFEXT – Bitfield Extract**

### **Description**:

Extract the bits of a bitfield specified beginning at mask begin in Rb and extending by mask width in Rc and sign extend and right align the result in the target register. The value in Rc is one less than the field width.

#### **Integer Instruction Format: RM**

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
(	)5h <sub>7</sub>	$m_3$	Z	~2	c	b	$Tc_2$	R	C <sub>5</sub>	Tb <sub>2</sub>	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	5	V	AA	$h_8$

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

#### **Operation**

Rt = sign extend (ror(Ra,Mb) & Mask)

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = sign \ extend \ (ror(Va[x],Mb) \ \& \ mask)$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFEXTU – Bitfield Extract Unsigned**

#### **Description**:

Extract the bits of a bitfield specified beginning at mask begin in Rb and extending by mask width in Rc and zero extend and right align the result in the target register. The value in Rc is one less than the field width.

#### **Integer Instruction Format: RM**

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
0	4h <sub>7</sub>	$m_3$	Z	~2	c	b	$Tc_2$	R	C <sub>5</sub>	$Tb_2$	R	$b_5$	R	a <sub>5</sub>	Rt	5	V	AA	$h_8$

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

#### **Operation**

Rt = zero extend ((ror(Ra,Mb)) & Mask)

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm[x]) \ Vt[x] = zero \ extend \ ((ror(Va[x],Mb)) \ \& \ Mask)$$
 
$$else \ if \ (z) \ Vt[x] \ = 0$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFFFO** –Find First One

#### **Description**:

A bitfield contained in Ra is searched beginning at the most significant bit to the least significant bit for a bit that is set. The index into the bitfield of the bit that is set is stored in Rt. If no bits are set, then Rt is set equal to -1.

#### **Instruction Format**: BF

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
01	h <sub>7</sub>	$m_3$	Z	~2	С	b	$Tc_2$	Rc	5	$Tb_2$	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	5	V	AA	$h_8$

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

**Clock Cycles**:

**Execution Units:** First Integer ALU

**Execution Units:** Integer

## **BFSET – Bitfield Set**

#### **Description**:

Set the bits of a bitfield specified between mask begin and mask end.

#### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Mb<sub>6</sub>, and mask end, Me<sub>6</sub>, inclusive. Bitwise 'or' the mask with the value in register Ra and store the result in register Rt.

	47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
Ī	09	h <sub>7</sub>	$m_3$	Z	~2	c	b	$Tc_2$	Ro	C <sub>5</sub>	$Tb_2$	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	v	AAh	8

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

#### **Operation**

$$Rt = Ra \mid Immediate$$

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; | \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# BMAP – Byte Map

#### **Description:**

Bytes are mapped from the 16-byte source Ra into bytes in the target register. This instruction may be used to permute the bytes in register Ra and store the result in Rt. This instruction may also pack bytes, wydes or tetras. The map is determined by the low order 64-bits of register Rb. Bytes which are not mapped will remain unchanged in the target register.

#### **Integer Instruction Format: R2**

30 31	29 27	26	2524	23	19	18	14	13	9	8	7	0
$0_2$	$m_3$	Z	$Tb_2$	Rl	<b>)</b> 5	R	$a_5$	R	t <sub>5</sub>	V	44	$h_8$

#### **Rb** value:

_	 				1916					
	 B8 <sub>4</sub>	B7 <sub>4</sub>	B6 <sub>4</sub>	B5 <sub>4</sub>	B4 <sub>4</sub>	B3 <sub>4</sub>	B2 <sub>4</sub>	B1 <sub>4</sub>	$B0_4$	<= Target byte = Bn

**Operation:** 

**Vector Operation** 

**Execution Units:** First Integer ALU

**Clock Cycles: 1** 

Exceptions: none

# BMAPZ – Byte Map Zero

#### **Description:**

First the target register is cleared, then bytes are mapped from the 16-byte source Ra into bytes in the target register. This instruction may be used to permute the bytes in register Ra and store the result in Rt. This instruction may also pack bytes, wydes or tetras. The map is determined by the low order 64-bits of register Rb. Bytes which are not mapped will end up as zero in the target register.

### **Integer Instruction Format: R2**

30 31	29 27	26	2524	23	19	18	14	13	9	8	7	0
12	$m_3$	Z	$Tb_2$	Rł	<b>)</b> 5	R	$a_5$	R	t <sub>5</sub>	V	441	h <sub>8</sub>

#### **Rb** value:

63 36	3532	3128	2724	2320	1916	1512	118	7 4	3 0	
	B8 <sub>4</sub>	B7 <sub>4</sub>	B6 <sub>4</sub>	B5 <sub>4</sub>	B4 <sub>4</sub>	B3 <sub>4</sub>	B2 <sub>4</sub>	B1 <sub>4</sub>	$B0_4$	<= Target byte = Bn

#### **Operation:**

**Vector Operation** 

**Execution Units:** First Integer ALU

**Clock Cycles: 1** 

**Exceptions:** none

# **BMM – Bit Matrix Multiply**

BMM Rt, Ra, Rb

#### **Description**:

The BMM instruction treats the bits of register Ra and register Rb as an 8x8 matrix and performs a bit matrix multiply of the two registers and stores the result in the target register. An alternate mnemonic for this instruction is MOR.

#### **Instruction Format**: R2

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
Fur	IC <sub>7</sub>	$m_3$	Z	~4	$0_2$	0	5	$Tb_2$	Rt	<b>)</b> 5	Ra	$a_5$	Rt	5	V	(	)2h <sub>8</sub>

Fn <sub>7</sub>	Function
30h	MOR
31h	MXOR
32h	MORT (MOR transpose)
33h	MXORT (MXOR transpose)

#### **Operation**:

**Clock Cycles:** 1

**Execution Units:** First Integer ALU

Exceptions: none

#### **Notes:**

The bits are numbered with bit 63 of a register representing I,j=0,0 and bit 0 of the register representing I,j=7,7.

# **BYTNDX** – Byte Index

#### **Description:**

This instruction searches Ra, which is treated as an array of sixteen bytes, for a byte value specified by Rb and places the index of the byte into the target register Rt. If the byte is not found -1 is placed in the target register. A common use would be to search for a null byte. The index result may vary from -1 to +15. The index of the first found byte is returned (closest to zero).

If a vector BYTNDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +511 in the scalar register. Thus, BYTNDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

47	41	49 38	37	3635	3433	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
55h	17	$m_3$	Z	~2	$b_2$	$0_2$	$0_{5}$	č	$Tb_2$	Rl	<b>O</b> <sub>5</sub>	Ra	15	Rt	t <sub>5</sub>	v	02h	18

b2: upper 2 bits of eight bit constant specified by Rb

**Clock Cycles:** 1

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

# **BYTNDXI** – Byte Index

#### **Description:**

This instruction searches Ra, which is treated as an array of sixteen bytes, for a byte value specified by an immediate value and places the index of the byte into the target register Rt. If the byte is not found -1 is placed in the target register. A common use would be to search for a null byte. The index result may vary from -1 to +15. The index of the first found byte is returned (closest to zero).

If a vector BYTNDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +511 in the scalar register. Thus, BYTNDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

31 27	26	19	18	14	13	9	8	7	0
~5	Immed	liate <sub>70</sub>	R	a <sub>5</sub>	Rt	5	v	5	5h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** First Integer ALU

**Operation:** 

 $Rt = Index of (Imm_8 in Ra)$ 

# **CARRY** – **Carry**

#### **Description**:

This instruction controls carry propagation between instructions. There is a bit pair indicating carry-in and carry-out for each following instruction. The first following instruction is controlled by the bit-pair 15,16, the second by bit-pair 17,18, and so on for up to eight instructions.

Interrupts are disabled while carry propagation is in effect.

The following instructions may generate or consume carry bits.

ADD, SUB, OR, EOR, SLL, SRL, SRA, MUL, LLA.

**Instruction Format**: R3

			26 25										0
~	$IO_2$	~4	$Pn_2$	0	F3h <sub>8</sub>								

IO <sub>2</sub>	Meaning
0	no input or output carry
1	output carry
2	input carry
3	both input and output carry

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Exceptions: none

**Example:** 

# Get at high-order product bits

CARRY P1, $\{O\}\{I\}$ 

MUL a2,a1,a0

ADD a3,r0,r0

# **CHK – Check Register Against Bounds**

### **Description**:

A register is compared to two values. If the register is outside of the bounds defined by Rb and Rc then an exception will occur.

#### **Instruction Format**: R3

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13 12	119	8	7	0
19h	17	$m_3$	Z	~4	$Tc_2$	Ro	C <sub>5</sub>	$Tb_2$	R	$b_5$	Ra	15	~2	cn <sub>3</sub>	V	02h	3

cn <sub>3</sub>	exception when not
0	Ra >= Rb and $Ra < Rc$
1	Ra >= Rb and $Ra <= Rc$
2	Ra > Rb and Ra < Rc
3	Ra > Rb and Ra <= Rc
4	not $(Ra \ge Rb \text{ and } Ra < Rc)$
5	not $(Ra \ge Rb \text{ and } Ra \le Rc)$
6	not (Ra > Rb and Ra < Rc)
7	not $(Ra > Rb \text{ and } Ra \le Rc)$

Clock Cycles: 1

**Execution Units:** Integer ALU

Exceptions: bounds check

**Notes:** 

The system exception handler will typically transfer processing back to a local exception handler.

# **CHKI – Check Register Against Bounds**

#### **Description**:

A register is compared to two values. If the register is outside of the bounds defined by Rb and an immediate value then an exception will occur. Ra must be greater than or equal to Rb and Ra must be less than the immediate.

#### **Instruction Format: CHKI**

 47		26	25 24	23	19	18	14	13 12	11 9	8	7	0
	Immediate <sub>22</sub>		$Tb_2$	Rl	<b>b</b> 5	R	a <sub>5</sub>	$Imm_2$	cn <sub>3</sub>	V	4	2h <sub>8</sub>

cn <sub>3</sub>	exception when not
0	Ra >= Rb and Ra < Imm
1	Ra >= Rb and $Ra <= Imm$
2	Ra > Rb and Ra < Imm
3	Ra > Rb and Ra <= Imm
4	not $(Ra \ge Rb \text{ and } Ra < Imm)$
5	not $(Ra \ge Rb \text{ and } Ra \le Imm)$
6	not (Ra > Rb and Ra < Imm)
7	not (Ra > Rb and Ra <= Imm)

Clock Cycles: 1

**Execution Units:** Integer ALU

Exceptions: bounds check

#### **Notes:**

The system exception handler will typically transfer processing back to a local exception handler.

A six-bit immediate value may be specified by Tb<sub>2</sub> and Rb.

# **CLMUL – Carry-less Multiply**

## **Description**:

Compute the low order product bits of a carry-less multiply. Both operands must be in registers.

### **Integer Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2El	h <sub>7</sub>	$m_3$	Z	<b>~</b> 4	$0_{2}$	0	5	$Tb_2$	Rł	<b>O</b> <sub>5</sub>	Ra	<b>1</b> 5	Rt	5	V	02	$2h_8$
4 cl	ock o	cycles															

Exceptions: none

**Execution Units:** First Integer ALU

Operations

$$Rt = Ra * Rb$$

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if (Vm[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **CLMULH – Carry-less Multiply High**

### **Description**:

Compute the high order product bits of a carry-less multiply. Both operands must be in registers.

## **Integer Instruction Format: R2**

4	7 41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
	2Fh <sub>7</sub>	$m_3$	Z	~4	$0_{2}$	0	5	$Tb_2$	R	b <sub>5</sub>	R	a <sub>5</sub>	Rt	5	V	0	2h <sub>8</sub>
-	4 clock o	cycles															

Exceptions: none

**Execution Units:** First Integer ALU

Operations

$$Rt = Ra * Rb$$

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = Va[x] * Vb[x]$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

# **CMOVNZ - Conditional Move**

#### **Description**:

CMOVNZ moves a value from Rb or Rc depending on the value in Ra. If Ra is non-zero then Rb is moved to Rt, otherwise Rc is moved to Rt.

For the vector version of the instruction Ra is a scalar. Each bit of Ra is used corresponding to the vector element to determine if the move takes place. This instruction may be used to convert a set of bits in Ra into a Boolean vector.

#### **Instruction Format: R3**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2Dł	17	$m_3$	Z	~4	$Tc_2$	Rc	5	$Tb_2$	Rl	05	R	a <sub>5</sub>	Rt	5	V	02	$h_8$

#### **Vector Operation**

For 
$$x = 0$$
 to VL-1 
$$if (Vm[x]) \ Vt[x] = Ra.bit[x] ? \ Rb : Rc$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

Exceptions: none

**Execution Units: integer** ALU

# **CMP – Compare**

## **Description**

Compare two registers and return the relationship between them. The size field applies to only integer compares.

## **Instruction Format:** R2

31 30	29 27	26	2524	23	19	18	14	13	9	8	7		0	
$Sz_2$	$m_3$	Z	$Tb_2$	R	b <sub>5</sub>	Ra	a <sub>5</sub>	Rt	t <sub>5</sub>	V		0Ch <sub>8</sub>		

1 clock cycle

Rt bit	Meaning
THE OIL	Integer Compare Results
0	= equal
1	< less than
2	<= less than or equal
3	< magnitude less than
4	unordered
5	< unsigned less than
6 8	<= unsigned less than or equal
	<> not equal
9	>= greater than or equal
10	> greater than
11	>= magnitude greater than or equal
12	ordered
13	unsigned greater than or equal
14	unsigned greater than
	Float Compare Results
16	= equal
17	< less than
18	<= less than or equal
19	< magnitude less than
20	unordered
21	<> not equal
22 23	>= greater than or equal
23	> greater than >= magnitude greater than or equal
25	>= magnitude greater than or equal
23	ordered
	Decimal Floating Point Compare Results
32	= equal
33	< less than
34	<= less than or equal
35	< magnitude less than
36	unordered
37	<> not equal
38	>= greater than or equal
39	> greater than

40	>= magnitude greater than or equal
41	ordered
13 to 62	zero (reserved)
63	less than

## **Operation:**

$$Rt = Ra ?Rb$$

## **Vector Operation**

$$\label{eq:for x = 0 to VL - 1} \\ if (Vm[x]) \ Vt[x] = Va[x] \ ? \ Vb[x] \\ else \ if (z) \ Vt[x] = 0 \\ else \ Vt[x] = Vt[x] \\ \end{cases}$$

**Execution Units:** Integer ALU, Floating Point Unit

# **CMPI – Compare Immediate**

### **Description**

Compare a register and an immediate value and return the relationship between them in a bit vector. See <u>CMP</u>. The immediate is sign extended to the machine width.

#### **Instruction Format:** RI

31	19	18	14	13	9	8	7	0
Immediate <sub>12.</sub>	0	Ra	15	Rt	5	V	0	$Bh_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

47 45 44 43	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>		R	.a <sub>5</sub>	Rt	5	0		D0h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RILV**

_	47 45	44	43	19	18	14	13	9	8	7	0
	$m_3$	Z	Immediate <sub>240</sub>		Ra	a <sub>5</sub>	Rt	5	1		D0h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

Rt = Ra? Imm

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = Va[x]$ ? Imm  
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

**Execution Units:** Integer ALU, Floating Point Unit

# **CNTLZ – Count Leading Zeros**

## **Description**:

Count the number of leading zeros (starting at the MSB) in Ra and place the count in the target register.

## **Instruction Format: R1**

31 25	24 22	21	2019	18 1	1	13	9	8	7	0
00h <sub>7</sub>	$m_3$	Z	$Sz_2$	Ra <sub>5</sub>		Rt	5	V	01	$h_8$

R1 Supported Formats: .o

Clock Cycles: 1

**Execution Units:** First Integer ALU

# **CNTPOP – Count Population**

CNTPOP r1,r2 CNTPOP v1,v2 CNTPOP r1,vm2

### **Description:**

Count the number of ones and place the count in the target register.

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = popcnt(Va[x])$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

#### **Instruction Format:** R1

31	25	24 22	21	20 19	18	14	13	9	8	7	0
021	$h_7$	$m_3$	Z	$Sz_2$	R	$a_5$	Rı	5	V	01	$h_8$

**Execution Units:** First Integer ALU

# **COM – Ones Complement**

## **Description:**

Bitwise complement all the bits in the register. 1's become 0's and 0's become 1's. This is an alternate mnemonic for the <u>BFCHG</u> function.

#### **Instruction Format: RM**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0Ah <sub>7</sub>		$m_3$	Z	32	6.	36	22	C	) <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	A	$Ah_8$
1 clock cycle																

#### **Operation**

$$Rt = Ra$$

#### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if (Vm[x]) \ Vt[x] = \sim Va[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **CPUID – CPU Identification**

## **Description:**

This instruction returns general information about the core. Register Ra is used as a table index to determine which row of information to return.

#### **Instruction Format:**

31		19	18	14	13	9	8	7	0
	<b>~</b> 13		R	$a_5$	Ri	t <sub>5</sub>	v	41	lh <sub>8</sub>

Clock Cycles: 1

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Info[Ra]

Index	bits	Information Returned
0	63 to 0	The processor core identification number. This field is determined
		from an external input. It would be hard wired to the number of
		the core in a multi-core system.
2	63 to 0	Manufacturer name first eight chars "Finitron"
3	63 to 0	Manufacturer name last eight characters
4	63 to 0	CPU class "64BitSS"
5	63 to 0	CPU class
6	63 to 0	CPU Name "Thor2021"
7	63 to 0	CPU Name
8	63 to 0	Model Number "M1"
9	63 to 0	Serial Number "1234"
10	63 to 0	Features bitmap
11	31 to 0	Instruction Cache Size (32kB)
11	63 to 32	Data cache size (16kB)

# **DIF** – **Difference**

#### **Description:**

This instruction is an alternate mnemonic for the <u>PTRDIF</u> instruction where Rc is zero. This instruction computes the difference between two signed values in registers Ra and Rb and places the result in a target Rt register. The difference is calculated as the absolute value of Ra minus Rb.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
14h	7	$m_3$	Z	$0_2$	0	6	$Tb_2$	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>

**Supported Formats**: .0

Clock Cycles: 1

**Execution Units:** Integer

**Operation:** 

Rt = Abs(Ra - Rb)

# **DIV** – **Division**

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. Both operands are treated as signed values. This instruction may cause a divide by zero or overflow exception if enabled. The exception is enabled by the 'X' bit of the instruction.

#### **Instruction Format: R2**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
10h	17	$m_3$	Z	$Sz_4$	$0_2$	0	5	$Tb_2$	Rł	<b>)</b> 5	R	a <sub>5</sub>	Rt	5	V	02	$h_8$

**Execution Units**: First Integer ALU

Clock Cycles: 150

**Exceptions**: DBZ

# **DIVI – Divide by Immediate**

#### **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as signed values.

#### **Instruction Format: RI**

31 19	18	14	13	9	8	7	0
Immediate <sub>120</sub>	R	$a_5$	R	t <sub>5</sub>	V		40h <sub>8</sub>

**Instruction Format: RIL** 

47 45 44 43	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>		Ra	a <sub>5</sub>	Rt	5	0	Dl	Dh <sub>8</sub>

#### **Instruction Format: RILV**

47 45	44	43		19	18	14	13	9	8	7	0	
$m_3$	Z		Immediate <sub>240</sub>		R	a <sub>5</sub>	Rt	5	1	]	DDh <sub>8</sub>	

**Execution Units: ALU** 

Clock Cycles: 130

Exceptions: none

**Notes:** 

Divide by zero is not checked for because the divisor is a constant.

# **DIVU – Divide Unsigned**

### **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. Both operands are treated as unsigned values.

#### **Instruction Format: R2**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
111	17	$m_3$	Z	$Sz_4$	$0_2$	0:	5	$Tb_2$	R	b <sub>5</sub>	R	a <sub>5</sub>	Rt	5	V	(	)2h <sub>8</sub>

**Execution Units**: First Integer ALU

Clock Cycles: 130

**Exceptions**: none

# **DIVUI – Divide Unsigned by Immediate**

### **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as unsigned values.

#### **Instruction Format: RI**

31	19	18	14	13	9	8	7	0
Immediate <sub>120</sub>		R	$a_6$	Rt	6	v	2	4Fh <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 130

Exceptions: none

# DIVSU – Divide Signed by Unsigned

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. The register operand Ra is a signed value, Rb is an unsigned value.

## **Instruction Format: R2**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
12	h <sub>7</sub>	$m_3$	Z	Sz <sub>4</sub>	$0_{2}$	05	5	Tb <sub>2</sub>	Rt	<b>)</b> 5	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	021	$h_8$

**Execution Units:** ALU

Clock Cycles: 130

# **ENOR – Bitwise Exclusive Nor**

## **Description**:

Perform a bitwise exclusive 'nor' operation between operands.

### **Integer Instruction Format: R3**

47 41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
02h <sub>7</sub>	m <sub>3</sub>	Z	Sz <sub>4</sub>	$Tc_2$	Ro	C <sub>5</sub>	$Tb_2$	R	$b_5$	R	$a_5$	R	t <sub>5</sub>	V	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = \sim (Ra \wedge Rb \wedge Rc)$$

**Execution Units:** All Integer ALU's

# **EOR – Bitwise Exclusive Or**

### **Description**:

Perform a bitwise 'or' operation between operands. The carry input will be zero unless the <u>CARRY</u> instruction is in use.

**Instruction Format:** R2

	29 27											0
$Sz_2$	$m_3$	Z	$Tb_2$	Rl	b <sub>5</sub>	Ra	$\mathfrak{d}_5$	Rt	5	V	14h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra ^ Rb ^ carry

**Integer Instruction Format:** R3

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
0Ał	17	$m_3$	Z	Sz <sub>4</sub>	$Tc_2$	Rc	5	$Tb_2$	Rl	<b>b</b> 5	R	a <sub>5</sub>	Rı	t <sub>5</sub>	v	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

 $Rt = Ra \wedge Rb \wedge Rc \wedge carry$ 

Clock Cycles: 1

**Execution Units:** All Integer ALU's

# **EORI – Bitwise Exclusive 'Or' Immediate**

### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate is zero extended to the machine width.

### **Instruction Format: RI**

31	19	18	14	13	9	8	7	0
Immediate	120	R	$a_5$	Rı	5	v	C	Ah <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

47 45 44	4 43	19	18	14	13	9	8	7	0
	Immediate <sub>280</sub>		Ra	<b>a</b> 5	Rt	5	0	I	OAh <sub>8</sub>

#### **Instruction Format: RILV**

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immediate <sub>240</sub>		Ra	<b>l</b> 5	Rt	5	1	D	$Ah_8$

## Operation

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\land} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

# EXI8 – Extend Immediate by 8 Bits

### **Description:**

Extend the immediate field of the following instruction by 8 bits beginning at bit 24. The 32-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI8

15	9	8	7		1	0
Imm <sub>3</sub>	3125	V		23h <sub>7</sub>		$I_{24}$

**Clock Cycles:** 1

Execution Units: All ALU's

**Operation:** 

**Exceptions:** 

**Notes:** 

# EXI24 – Extend Immediate by 24 Bits

#### **Description:**

Extend the immediate field of the following instruction by 24 bits beginning at bit 24. The 48-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI23

31	9	8	7	1	0
Imm <sub>4725</sub>		V	24	1h <sub>7</sub>	$I_{24}$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

# EXI40 – Extend Immediate by 40 Bits

### **Description:**

Extend the immediate field of the following instruction by 40 bits beginning at bit 24. The 64-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI40

47	9	8	7	2	0	
Immediate <sub>6325</sub>		V	')'	5h <sub>7</sub>	$I_{24}$	

**Clock Cycles:** 1

Execution Units: All ALU's

**Operation:** 

**Exceptions:** 


**Notes:** 

# EXI56 – Extend Immediate by 56 Bits

#### **Description:**

Extend the immediate field of the following instruction by 56 bits beginning at bit 24. The 80-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI56



Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

# **EXIM – Extend Immediate Middle**

#### **Description:**

Extend the immediate field of the following instruction by 55 bits beginning at bit 80. The EXIM prefix should be used before other immediate extension prefixes to ensure the constant is properly built.

**Instruction Format: EXIM** 

63	8	7	)
Immediate <sub>13480</sub>	v	50h <sub>8</sub>	

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

**Example:** 

EXIM 0x12345678 EXI56 0x90123456 ADDI r1,r2,0x123

## **LDI – Load Immediate**

## **Description:**

This is an alternate mnemonic for the <u>ADDI</u> instruction where register Ra is zero. Add register zero and a sign extended immediate value and place the sum in the target register. If the Ra register field is zero then the value zero is used for Ra.

**Instruction Format: RI** 

31	19	18	14	13	9	8	7		0
Immediate <sub>1</sub>	20	0	6	Rı	t <sub>5</sub>	0		04h <sub>8</sub>	

**Instruction Format: RIL** 

47 45 4	4 43	19	18	14	13	9	8	7	0
	Immediate <sub>280</sub>		$0_{5}$		Rt <sub>5</sub>	5	0	D41	$1_8$

**Instruction Format:** RILV

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immedi	iate <sub>240</sub>	(	$0_{5}$	Rt <sub>5</sub>	•	1		D4h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = immediate

**Exceptions:** 

## MAX - Maximum Value

### **Description:**

Determines the maximum of three values in registers Ra, Rb and Rc and places the result in the target register Rt.

#### **Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
29h	17	$m_3$	Z	$Sz_4$	$Tc_2$	Ro	<b>C</b> 5	$Tb_2$	R	<b>b</b> <sub>5</sub>	Ra	$a_5$	Rt	t <sub>5</sub>	V	021	18

Clock Cycles: 1

**Execution Units:** ALU #0 only

#### **Operation:**

$$IF (Ra > Rb \text{ and } Ra > Rc)$$

$$Rt = Ra$$

$$else \text{ if } (Rb > Rc)$$

$$Rt = Rb$$

$$else$$

$$Rt = Rc$$

# MIN - Minimum Value

## **Description:**

Determines the minimum of three values in registers Ra, Rb and Rc and places the result in the target register Rt.

#### **Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2	8h <sub>7</sub>	$m_3$	Z	$Sz_4$	$Tc_2$	Ro	5	Tb <sub>2</sub>	R	b <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	02	$h_8$

Clock Cycles: 1

**Execution Units:** ALU #0 only

**Operation:** 

#### **Operation:**

$$IF (Ra < Rb \text{ and } Ra < Rc)$$
 
$$Rt = Ra$$
 
$$else \text{ if } (Rb < Rc)$$
 
$$Rt = Rb$$
 
$$else$$
 
$$Rt = Rc$$

#### **Description:**

This instruction is an alternate mnemonic for the <u>CMOVNZ</u> instruction. This instruction places a zero in the target register if the source register is zero, otherwise one is placed in the target register. This instruction reduces the source operand to a Boolean value.

#### **Integer Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26 25	4 23	3 19	18	14	13	9	8	7	0
2Dł	17	$m_3$	Z	$Sz_4$	22	$0_{5}$	2		15	Ra	15	Rt	5	V	021	18

## **Operation:**

Rt = Ra == 0 ? 0 : 1

**Execution Units:** Integer ALU

**Clock Cycles: 1** 

Exceptions: none

# **MOV – Move Register-Register**

## **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves one general purpose register to another.

## **Instruction Format:**

							28 27									0
04h	.7	$m_3$	Z	32	6.	36	22	0	6	R	$a_6$	Rt	6	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

# **MOVSXB – Move Byte, Sign Extend**

### **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a byte from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	7	6	$2_2$	0	6	R	$a_6$	Rt	6	V	AA	$h_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

# **MOVSXO – Move Octa, Sign Extend**

### **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a octa from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	17	$m_3$	Z	$2_{2}$	6.	36	$2_{2}$	0	6	Ra	$\mathfrak{d}_6$	Rt	6	V	A	$h_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

# MOVSXT – Move Tetra, Sign Extend

## **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves a tetra from one general purpose register to another.

# **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	3	16	$2_2$	0	6	R	$a_6$	Rt	6	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

# MOVSXW – Move Wyde, Sign Extend

## **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a wyde from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	17	$m_3$	Z	22	1:	56	22	0	) <sub>6</sub>	R	$a_6$	Rt	6	V	AA	$h_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

# **MOVZXB – Move Byte, Zero Extend**

### **Description:**

This is an alternate mnemonic for the <u>BFEXTU</u> instruction. This instruction moves a byte from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	$2_{2}$	7	6	$2_{2}$	0	6	R	$a_6$	Rt	6	V	A	$\overline{Ah_8}$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

# MOVZXT – Move Tetra, Zero Extend

## **Description:**

This is an alternate mnemonic for the <u>BFEXTU</u> instruction. This instruction moves a tetra-byte from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	22	3	16	22	0	) <sub>6</sub>	R	$a_6$	Rt	6	V	AA	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

# MOVZXW - Move Wyde, Zero Extend

### **Description:**

This is an alternate mnemonic for the <u>BFEXTU</u> instruction. This instruction moves a wyde from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	$2_{2}$	1:	5 <sub>6</sub>	$2_{2}$	0	6	Ra	$a_6$	Rt	6	V	A	$\overline{Ah_8}$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

# **MUL – Multiply**

### **Description**:

Multiply two values add a third value. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. All the operands are treated as signed 128-bit values, the result is a signed result.

The carry will be zero unless made available by the **CARRY** instruction.

### **Integer Instruction Format:** R3

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
06h	17	$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>
 20 c	lock	cycles	5													

Exceptions: none

**Execution Units: ALU** 

**Operation** 

$$Rt = Ra * Rb + Rc + carry$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x] = Va[x] * Vb[x] + Vc[x]$$
 
$$else \ if \ (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

Exceptions: overflow, if enabled

# MULH – Multiply High

## **Description**:

Compute the high order product of two values. Both operands must be in registers. Both the operands are treated as signed values, the result is a signed result.

# **Integer Instruction Format:** R3

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0Fh	<b>1</b> 7	$m_3$	Z	$0_{2}$	0	6	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>
4 clo	ock o	cycles														

Exceptions: none

**Execution Units:** ALU

## **Operation**

$$Rt = Ra * Rb$$

### **Vector Operation**


for 
$$x = 0$$
 to  $VL - 1$  
$$if (Vm[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **MULI – Multiply Immediate**

## **Description**:

Multiply two values. The first operand must be in a register. The second operand is an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result.

### **Integer Instruction Format: RI**



### **Integer Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$a_6$	Rt	6	0		D2h <sub>8</sub>
20 clock cycles								

### **Integer Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		R	$a_6$	Rt	6	1		D2h <sub>8</sub>
20 clo	ock c	ycles								

**Execution Units: ALU** 

### **Operation:**

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if \ (Vm0[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ Vt[x] = Vt[x]$$

# **MULF – Fast Unsigned Multiply**

## **Description**:

Multiply two values located in registers Ra and Rb and add the value of Rc. All operands are treated as unsigned values. The result is an unsigned result. The fast multiply multiplies only the low order 24 bits of the first operand times the low order 16 bits of the second. The result is a 40-bit unsigned product.

### **Integer Instruction Format: R2**

47 4	1 .	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
15h <sub>7</sub>		$m_3$	Z	$Tc_2$	Re	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	h <sub>8</sub>

5 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = Ra * Rb + Rc + carry$$

**Execution Units: ALU** 

Clock Cycles: 1

# **MULFI – Fast Unsigned Multiply Immediate**

### **Description**:

Multiply two values. The first operand is in register Ra. The second operand is an immediate value specified in the instruction. Both the operands are treated as unsigned values. The result is an unsigned result. The fast multiply multiplies only the low order 24 bits of the first operand times the low order 11 bits of the second. The result is a 35-bit unsigned product.

## **Integer Instruction Format: RI**

31	21	20	15	14	9	8	7		0
Immedia	ate <sub>100</sub>	R	$a_6$	Rt	6	0		15h <sub>8</sub>	
5 clock	cycle / ]	N clo	ck cy	cles (1	N = 0	vect	or 1	ength)	

**Execution Units: ALU** 

Clock Cycles: 1

Exceptions: none

# **MULU – Multiply Unsigned**

### **Description**:

Multiply two values. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result.

### **Integer Instruction Format: R3**

	47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	1Eh	<b>1</b> 7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V		)2h <sub>8</sub>
-	20 c	lock	cycles	3													

**Exceptions**: none

**Execution Units: ALU** 

**Operation** 

$$Rt = Ra * Rb + Rc + carry$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x] = Va[x] * Vb[x] + Vc[x]$$
 
$$else \ if \ (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

Exceptions: overflow, if enabled

# **MUX** – **Multiplex**

### **Description:**

If a bit in Ra is set then the bit of the target register is set to the corresponding bit in Rb, otherwise the bit in the target register is set to the corresponding bit in Rc.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
34h <sub>7</sub>		$m_3$	Z	$Tc_2$	R	$c_6$	Tb <sub>2</sub>	Rl	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	021	$h_8$

**Clock Cycles:** 1

**Execution Units:** ALU #0 only

### **Operation:**

$$For \; n = 0 \; to \; 63$$
 
$$If \; Ra_{[n]} \; is \; set \; then$$
 
$$Rt_{[n]} = Rb_{[n]}$$
 
$$else$$
 
$$Rt_{[n]} = Rc_{[n]}$$

Exceptions: none

# NAND - Bitwise Nand

### **Description**:

Perform a bitwise 'nand' operation between operands.

### **Integer Instruction Format: R2**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
00h	17	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	Rl	06	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = \sim (Ra \& Rb \& Rc)$$

# **NEG - Negate**

## **Description:**

This is an alternate mnemonic for the **SUB** instruction where Ra is zero.

This instruction takes the negative of a value contained in a register Rb.

### **Instruction Format**: R3

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	17	$m_3$	Z	$0_2$	0	) <sub>6</sub>	$Tb_2$	R	b <sub>6</sub>	0	6	R	t <sub>6</sub>	V	02	$2h_8$

### **Scalar Operation**

$$Rt = -Rb$$

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = -Vb[x]$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

**Notes** 

**Exceptions:** 

# **NOR – Bitwise Nor**

### **Description**:

Perform a bitwise 'nor' operation between operands.

### **Integer Instruction Format: R2**

47 41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
01h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	26	Tb <sub>2</sub>	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = \sim (Ra \mid Rb \mid Rc)$$

# NOT – Logical Not

### **Description:**

This instruction is an alternate mnemonic for the <u>CMOVNZ</u> instruction. This instruction places a one in the target register if the source register is zero, otherwise zero is placed in the target register. This instruction reduces the source operand to a Boolean value.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
2Dh <sub>7</sub>		$m_3$	Z	$2_{2}$	1	6	22	0	) <sub>6</sub>	R	a <sub>6</sub>	Rı	t <sub>6</sub>	V	02	2h <sub>8</sub>

## **Operation:**

Rt = Ra = 0?1:0

**Execution Units: I** 

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

# OR - Bitwise Or

## **Description**:

Perform a bitwise 'or' operation between operands. The carry input will be zero unless the <u>CARRY</u> instruction is in use.

**Instruction Format:** R2

31 30	29 27	26	2524	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	$Tb_2$	Rl	<b>)</b> 5	Ra	a <sub>5</sub>	Rı	t <sub>5</sub>	V		13h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

 $Rt = Ra \mid Rb \mid carry$ 

### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
091	<b>1</b> 7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	Rl	06	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

 $Rt = Ra \mid Rb \mid Rc \mid carry$ 

**Execution Units:** All Integer ALU's

Exceptions: none

# **ORC – Bitwise 'Or' with Complement**

### **Description**:

Perform a bitwise 'or' with complement operation between operands.

### **Integer Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
03h	.7	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

$$Rt = Ra \mid \sim Rb \mid Rc$$


**Execution Units:** All Integer ALU's

# ORI - Bitwise 'Or' Immediate

## **Description**:

Perform a bitwise or operation between operands. The immediate value is shifted to the left by a multiple of 16 bits before the operation takes place. The immediate is zero extended to the machine width and padded with zeros on the right. This instruction may be used to 'or' a large constant or build a 64-bit constant in a register.

### **Instruction Format: RI**



1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

_	47 45	44	43	21	20	15	14	9	8	7		0
			Immediate <sub>260</sub>		Ra	<b>l</b> 6	Rt	5	0		D9h <sub>8</sub>	

### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	<b>1</b> 6	Rt	6	1		D9h <sub>8</sub>

### **Instruction Format: RIXL**

_	95 93	92	91 85	84 21	20 15	14	9	8	7	0
	$m_3$	Z	~7	Immediate <sub>630</sub>	$Ra_6$	R	t <sub>6</sub>	V	E9h <sub>8</sub>	

### **Operation**

Rt = Ra | Immediate

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; | \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Execution Units:** All Integer ALU's

# **ORN** – Bitwise 'Or' with Complement

## **Description**:

This is an alternate mnemonic for the ORC instruction. Perform a bitwise 'or' with complement operation between operands.

# **Integer Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
03h <sub>7</sub>		$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = Ra \mid \sim Rb \mid Rc$$

# **PTRDIF – Difference Between Pointers**

### **Description**:

Subtract two values then shift the result right. Both operands must be in a register. The right shift is provided to accommodate common object sizes. It may still be necessary to perform a divide operation after the PTRDIF to obtain an index into odd sized or large objects. Sc may vary from zero to fifteen.

### **Instruction Format**: R3

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
14h	7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	RI	$b_6$	R	$a_6$	Rı	t <sub>6</sub>	V	02	$2h_8$

### **Operation**:

$$Rt = Abs(Ra - Rb) >> Rc_{[3:0]}$$

Clock Cycles: 1

**Execution Units: Integer** 

**Exceptions**:

None

# **REVBIT – Reverse Bit Order**

## **Description:**

This instruction reverses the order of bits in Ra and stores the result in Rt. Bits may be reversed in individual bytes, wydes, tetras or octas.

## **Integer Instruction Format: R1**

31 27	26 25	24 22	21	20	15	14	9	8	7	0
$0Ah_5$	$Sz_2$	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	V	01	$1h_8$
v: 0 =	= scala	r, 1 = v	vecto	or op						

$Sz_2$	Ext.	Meaning
0	.BP	reverse order within bytes (byte parallel)
1	.WP	reverse order within wydes (wyde parallel)
2	.TP	reverse order within tetras (tetra parallel)
3	.OP	reverse order within octas (octa parallel)

**Operation:** 

**Vector Operation** 

**Execution Units:** I

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

# **ROL – Rotate Left**

## **Description**:

This is an alternate mnemonic of the <u>SLLP</u> instruction where Rb and Ra are the same register. Left rotate an operand value by an operand value and place the result in the target register. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rc field of the instruction, or an immediate value.

### **Instruction Formats**: R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
40h	17	$m_3$	Z	$Tc_2$	R	$c_6$	$0_2$	R	$a_6$	R	$a_6$	R	$t_6$	V	02	2h <sub>8</sub>

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

**Example**:

# **ROR – Rotate Right**

### **Description**:

Right rotate an operand value by an operand value and place the result in the target register. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rc field of the instruction, or an immediate value.

This is an alternate mnemonic for the **SRLP** instruction.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
411	17	$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	$0_{2}$	R	$a_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

**Operation Size:** .0

**Execution Units**: integer ALU

Exceptions: none

Example:

# **SEQ – Set if Equal**

## **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero.

### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
26h	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	Ra	$a_6$	R	6	V	02	$2h_8$

$$if (Ra == Rb)$$

$$Rt = Rc$$

$$else$$

$$Rt = 0$$

# **SEQI – Set if Equal Immediate**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0	
Immediate <sub>10</sub>	00	Ra	$a_6$	Rt	6	V		16h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

# **SEQIL – Set if Equal Immediate Low**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		R	$a_6$	Rt	6	0	]	D6h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		R	$a_6$	Rt	6	1	Γ	06h <sub>8</sub>

# SGE / SLE – Set if Greater Than or Equal

### **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than or equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero. The operands are treated as signed values.

This instruction may also be used to test less than or equal to by swapping the operands.

### **Instruction Format: R3**

		49 38														
21h	7	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	Ra	$a_6$	Rt	6	V	C	)2h <sub>8</sub>

$$if (Ra >= Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

# SGEU / SLEU – Set if Greater Than or Equal Unsigned

## **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than or equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero. The operands are treated as unsigned values.

This instruction may also be used to test less than or equal to by swapping the operands.

### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
23h	7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02	$2h_8$

$$if (Ra >= Rb)$$

$$Rt = Rc$$

$$else$$

$$Rt = 0$$

# SGTI – Set if Greater Than Immediate

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RI**

31 2	20	15	14	9	8	7	0
Immediate <sub>100</sub>	I	$Ra_6$	R	<b>t</b> 6	v		1Bh <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

# SGTIL – Set if Greater Than Immediate Low

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$a_6$	Rt	6	0	Ι	$OBh_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	<b>a</b> 6	Rt	6	1	D	$\mathbf{Bh}_8$


1 clock cycle / N clock cycles (N = vector length)

# SGTUI – Set if Greater Than Immediate Unsigned

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The operands are treated as unsigned values.

#### **Instruction Format: RI**

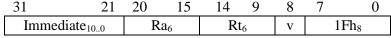

# **SGTUIL – Set if Greater Than Immediate Unsigned Low**

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is zero extended to the machine width. The operands are treated as unsigned values.

### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$\mathfrak{d}_6$	Rt	6	0		DFh <sub>8</sub>
1 clock cycle								

### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	$a_6$	Rt	6	1	DFl	18

# **SLEI – Set if Less Than or Equal Immediate**

## **Description:**

This instruction is an alternate mnemonic for the SLTI instruction where the constant has been adjusted by one. For instance, SLEI \$t0,\$a0,#4 is the same as SLTI \$t0,\$a0,#5. The assembler will adjust the constant and use the SLTI instruction.

### **Instruction Format:** RI

31	21	20	15	14	9	8	7	0
Immediate <sub>1</sub>	100	Ra	$a_6$	Rt	6	v	-	18h <sub>8</sub>

# **SLL –Shift Left Logical**

### **Description**:

Left shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the least significant bits. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only between 0 and 15 bits.

#### **Instruction Format:** R2

30 31	29 27	26	2524	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	$Tb_2$	R	b <sub>5</sub>	R	$a_5$	R	<b>t</b> 5	V		58h <sub>8</sub>	
0=1	28 bits	,1=6	4 bits.	2 = 32	2 bits								

**Operation Size: .o** 

**Execution Units**: integer ALU

Exceptions: none

Example:

# **SLL –Shift Left Logical**

### **Description**:

Left shift an operand value by an operand value add a third operand and place the result in the target register. Zeros are shifted into the least significant bits. The first operand must be in a register specified by Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only between 0 and 15 bits.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34 29	31 29	28 27	26	21	20	15	14	9	8	7	0
40h	17	$m_3$	Z	$0_2$	$0_{3}$	$Sz_3$	$Tb_2$	Rb	6	Ra	$a_6$	Rt	6	V	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

$$Rt = Ra \ll Rb$$

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

Example:

# **SLLH –Shift Left Logical High**

### **Description**:

Left shift an operand value by an operand value add a third operand and place the result in the target register. Zeros are shifted into the least significant bits. The first operand must be in a register specified by Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only by multiple of 16 bits.

## **Integer Instruction Format:** R2

	29 27											0
$Sz_2$	$m_3$	Z	$Tb_2$	Rl	<b>)</b> 5	Ra	<b>1</b> 5	Rt	t <sub>5</sub>	V	5Dh <sub>8</sub>	

						31 29										0
48h	17	$m_3$	Z	$0_{2}$	$0_{3}$	Sz <sub>3</sub>	$Tb_2$	Rb	6	Ra	16	Rt	6	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra << Rb[6:4]\*16

**Operation Size:** .0

**Execution Units**: integer ALU

Exceptions: none

Example:

SLLH r1,r2,r3 SLL r1,r1,r3

# SLT / SGT - Set if Less Than

### **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand in register (Rb) then the target register is set to the value of Rc, otherwise the target register is set to a zero. The operands are treated as signed values.

### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
20h	7	$m_3$	Z	$Tc_2$	R	c <sub>6</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	h <sub>8</sub>

### **Operation**:

$$if (Ra < Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

### **Instruction Format: R2**

31 29	28	27	26	21	20	15	14	9	8	7	0
$m_3$	Z	Tb	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	4]	Eh <sub>8</sub>

$$if (Ra < Rb) \\ Rt = 1 \\ else \\ Rt = 0$$

# **SLTI – Set if Less Than Immediate**

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediate	100	R	$a_6$	Rt	6	V		18h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$a_6$	Rt	6	0	Ι	)3h <sub>8</sub>

1 clock cycle

### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	(	)
m <sub>3</sub>	Z	Immediate <sub>220</sub>		Ra	6	Rt	5	1	J	D3h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

$$if (Ra < Rb) \\ Rt = 1 \\ else \\ Rt = 0$$

# SLTU / SGTU – Set if Less Than Unsigned

### **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand in register (Rb) then the target register is set to the value of Rc, otherwise the target register is set to a zero. The operands are treated as unsigned values.

### **Instruction Format: R3**

4	47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	22h	.7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Rı	t <sub>6</sub>	V	02	$h_8$

$$if (Ra < Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

# **SNE – Set if Not Equal**

## **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero.

### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
27h	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Rı	6	V	021	$h_8$

$$if (Ra \Leftrightarrow Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

# **SNEI – Set if Not Equal Immediate**

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediate	100	Ra	$a_6$	Rt	6	V	1	$7h_8$

1 clock cycle / N clock cycles (N = vector length)

### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$a_6$	Rt	6	0	D7	$h_8$

1 clock cycle

### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0	
m <sub>3</sub>	Z	Immediate <sub>220</sub>		Ra	<b>l</b> 6	Rte	5	1	]	D7h <sub>8</sub>	

# SRA –Shift Right Arithmetic

## **Description**:

Right shift an operand value by an operand value and place the result in the target register. The most significant bit is preserved. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only between 0 and 15 bits.

**Instruction Formats**: R2

47	41	49 38	37	36 35	34 32	31 29	28 27	26	21	20	15	14	9	8	7	0
42h	17	$m_3$	Z	$0_2$	$0_{3}$	$Sz_3$	$Tb_2$	Rb	<b>)</b> 6	Ra	$\mathfrak{d}_6$	Rt	6	v	02	2h <sub>8</sub>

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

Example:

# SRAH –Shift Right Arithmetic High

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. The most significant bit is preserved. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only by multiples of 16 bits.

**Instruction Formats**: R2

47	41	49 38	37	36 35	34 29	31 29	28 27	26	21	20	15	14	9	8	7	0
4Al	17	$m_3$	Z	$0_2$	$0_{3}$	$Sz_3$	$Tb_2$	$Rb_6$	Ö	Ra	$\mathfrak{l}_6$	Rt <sub>6</sub>		V	0	$2h_8$

**Operation Size: .o** 

**Execution Units**: integer ALU

Exceptions: none

Example:

# SRL –Shift Right Logical

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the most significant bits. The first operand must be in a register specified by Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only between 0 and 15 bits.

### **Integer Instruction Format:** R3

47	41	49 38	37	36 35	34 32	31 29	28 27	26	21	20	15	14	9	8	7	0
41h	17	$m_3$	Z	$0_{2}$	$0_{3}$	$Sz_3$	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	Rt	6	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

**Operation Size: .o** 

**Execution Units**: integer ALU

Exceptions: none

Example:

# SRLH -Shift Right Logical High

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the most significant bits. The first operand must be in a register specified by Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

This instruction may shift only by multiples of 16 bits.

### **Integer Instruction Format: R3**

47 4	49 38	37	36 35	34 32	31 29	28 27	26	21	20	15	14	9	8	7	0
49h <sub>7</sub>	m <sub>3</sub>	Z	$0_2$	$0_{3}$	$Sz_3$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

Operation Size: .h

Execution Units: integer ALU

Exceptions: none

Example:

# **SUB – Subtract**

## **Description:**

Subtract Rb from Ra and place the difference in the target register Rt. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions.

### **Instruction Format:** R2

	29 27				19		14	10	9	8	7		0
$Sz_2$	$m_3$	Z	$Tb_2$	Rb <sub>5</sub>		Ra <sub>5</sub>		Rt <sub>5</sub>		v		$0Dh_8$	

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra - Rb

Exceptions: none

**Notes:** 

## **SUBFI – Subtract from Immediate**

## **Description:**

Subtract a register from a sign extended immediate value and place the difference in the target register. For the vector instruction both Ra and Rt are vector registers.

**Instruction Format: RI** 

31	21	20	15	14	9	8	7	0
Immediate <sub>10</sub>	0	Ra	$a_6$	Rt	6	v	(	)5h <sub>8</sub>

**Clock Cycles:** 1

Execution Units: All ALU's

**Operation:** 

Rt = Immediate - Ra

Exceptions: none

**Notes:** 

## SXB – Move Byte, Sign Extend

### **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a byte from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
051	<b>1</b> 7	m <sub>3</sub>	Z	$2_{2}$	7	6	22	C	) <sub>6</sub>	R	a <sub>6</sub>	R	t <sub>6</sub>	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

# SXT – Move Tetra, Sign Extend

## **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves a tetra from one general purpose register to another.

## **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	3	16	$2_2$	0	6	Ra	$a_6$	Rt	6	V	AA	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

# SXW – Move Wyde, Sign Extend

## **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves a wyde from one general purpose register to another.

## **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	17	$m_3$	Z	$2_{2}$	1:	56	$2_2$	0	6	R	$a_6$	Rt	6	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

## **UTF21NDX – UTF21 Index**

#### **Description:**

This instruction searches Ra, which is treated as an array of three UTF21 characters, for a value specified by Rb and places the index of the character into the target register Rt. If the character is not found -1 is placed in the target register. A common use would be to search for a null character. The index result may vary from -1 to +2. The index of the first found character is returned (closest to zero).

If a vector UTF21NDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +191 in the scalar register. Thus, UTF21NDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format:** R2

							28 27									0
1Ch	17	$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	Rł	<b>)</b> 6	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

# **UTF21NDXI – UTF21 Index**

#### **Description:**

This instruction searches Ra, which is treated as an array of three UTF21 character, for a value specified by an immediate value and places the index of the value into the target register Rt. If the character is not found -1 is placed in the target register. A common use would be to search for a null character. The index result may vary from -1 to +2. The index of the first found character is returned (closest to zero).

If a vector UTF21NDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +191 in the scalar register. Thus, UTF21NDX may be used to determine the length of a null termination string in the vector register.

Only the first 2<sup>20</sup> UTF21 characters may be searched for by the immediate form of the instruction.

#### **Instruction Format: RI**

47 45	44	43	21	20	15	14	9	8	7	0	
$m_3$	Z	Immediate <sub>220</sub>		Ra	6	Rt <sub>6</sub>		V	57	7h <sub>8</sub>	1

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_{21} in Ra)$ 

## WYDENDX – WYDE Index

### **Description:**

This instruction searches Ra, which is treated as an array of four wydes, for a wyde value specified by Rb and places the index of the wyde into the target register Rt. If the wyde is not found -1 is placed in the target register. A common use would be to search for a null wyde. The index result may vary from -1 to +3. The index of the first found wyde is returned (closest to zero).

If a vector WYDENDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +255 in the scalar register. Thus, WYDENDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format:** R2

				36 35												
1Bh	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	Rl	<b>b</b> <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

## WYDENDXI – Wyde Index

#### **Description:**

This instruction searches Ra, which is treated as an array of four wydes, for a value specified by an immediate value and places the index of the value into the target register Rt. If the wyde is not found -1 is placed in the target register. A common use would be to search for a null wyde. The index result may vary from -1 to +3. The index of the first found wyde is returned (closest to zero).

If a vector WYDENDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +255 in the scalar register. Thus, WYDENDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

47 45	44	43	21	20	15	14	9	8	7	(	0
m <sub>3</sub>	Z	Immediate <sub>220</sub>		Ra	$a_6$	Rt	5	V		56h <sub>8</sub>	

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_8 in Ra)$ 


Exceptions: none

## **XNOR – Bitwise Exclusive Nor**

#### **Description:**

Perform a bitwise 'nor' operation between operands. This is an alternate mnemonic for the ENOR instruction.

### **Integer Instruction Format: R2**

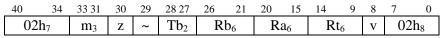

1 clock cycle / N clock cycles (N = vector length)

## **XOR – Bitwise Exclusive Or**

## **Description**:

Perform a bitwise 'or' operation between operands.

**Instruction Format:** R2

31 29	28	27	26	21	20	15	14	9	8	7		0
$m_3$	Z	Tb	R	$b_6$	R	$a_6$	Rt	t <sub>6</sub>	V		1Eh <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

 $Rt = Ra \wedge Rb$ 

### **Integer Instruction Format: R3**

47				36 35										8	7	0
0A1	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	RI	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

 $Rt = Ra \wedge Rb \wedge Rc$ 


**Execution Units:** All Integer ALU's

## **XORI – Bitwise Exclusive 'Or' Immediate**

### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate is zero extended to the machine width.

**Instruction Format: RI** 



1 clock cycle / N clock cycles (N = vector length)

#### **Operation**

Rt = Ra ^ Immediate

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

Execution Units: All Integer ALU's

Exceptions: none

## **XORIL** – Bitwise Exclusive 'Or' Immediate Low

### **Description:**

Bitwise exclusive 'or' a register and immediate value and place the sum in the target register. The immediate is zero extended to the machine width.

**Instruction Format: RIL** 

47 45	44	43	21	20	15	14	9	8	7	0
		Immediate <sub>260</sub>		Ra	6	Rt	5	0		DAh <sub>8</sub>

**Clock Cycles:** 1

**Instruction Format: RILV** 

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	6	Rt <sub>6</sub>		1	D	$Ah_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

 $Rt = Ra ^ immediate$ 

**Exceptions:** 

# Floating-Point Instructions

## **Overview**

All floating-point operations take place in double precision unless otherwise noted.

## FABS – Absolute Value

### **Description:**

This instruction takes the absolute value of a register and places the result in a target register. The values are treated as double precision floating-point values. The sign bit of the number is cleared, no rounding of the number takes place.

#### **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
20h <sub>7</sub>		n	m <sub>3</sub> z		R	Ra <sub>6</sub>		Rt <sub>6</sub>		61	$h_8$
v: 0 = scalar, 1 = vector op											

### **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

#### **Vector Operation**

```
for x=0 to VL - 1 if (Vm[x]) Rt[x] = Ra[x] < 0 ? -Ra[x] : Ra[x] else if (z) Rt[x] = 0 else Rt[x] = Rt[x]
```

**Execution Units:** F

**Clock Cycles: 1** 

**Exceptions:** none

# FADD – Add Register-Register

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
04h	.7	$m_3$	Z	~	<b>'</b> 5	$Rm_3$	$Tb_2$	Rł	$b_6$	R	$a_6$	R	$t_6$	V	6	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

# FCLASS – Classify Value

## **Description**:

FCLASS classifies the value in register Ra and returns the information as a bit vector in the integer register Rt.

## **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
1Eh <sub>7</sub>		n	13	Z	R	$a_6$	Rt	t <sub>6</sub>	v	6	1h <sub>8</sub>

v: 0 = scalar, 1 = vector op

Bit in Rt	Meaning							
0	1 = negative infinity							
1	1 = negative number							
2	1 = negative subnormal number							
3	1 = negative zero							
4	1 = positive zero							
5	1 = positive subnormal number							
6	1 = positive number							
7	1 = positive infinity							
8	1 = signalling nan							
9	1 = quiet nan							
10 to 62	not used							
63	1 = negative, $0 = $ positive number							


# FCMP - Compare

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as a float value of -1.0, 0.0 or +1.0. If the comparison is unordered 2.0 is returned.



1 clock cycle

## **Operation:**

$$Rt = Ra < Rb ? -1 : Ra = Rb ? 0 : 1$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if (Vm[x]) \ Vt[x] = Va[x] < Vb[x] \ ?-1 : Va[x] = Vb[x] \ ? \ 0 : 1$$
 
$$else \ if \ (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# FCMPB - Compare

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The value returned is a bit vector as outlined in the table below. Note that the less than status is returned in both bits 1 and 63 so that a BLT may be used.

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
151	17	$m_3$	Z	`	5	~3	$Tb_2$	Rl	$b_6$	R	$a_6$	Rı	t <sub>6</sub>	V	62	$2h_8$

1 clock cycle

The float comparison returns a bit vector containing the status of all possible relationships. This may then be tested with the BBS instruction.

Rt bit	Meaning
0	= equal
1	< less than
2	<= less than or equal
3	< magnitude less than
4	unordered
5 to 7	zero (reserved)
8	<> not equal
9	>= greater than or equal
10	> greater than
11	>= magnitude greater than or equal
12	ordered
13 to 62	zero (reserved)
63	less than

### **Operation:**

**Vector Operation** 

# FCX – Clear Floating-Point Exceptions

## **Description:**

This instruction clears floating point exceptions. The Exceptions to clear are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
11h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

## **Operation:**

### **Exceptions:**

Bit	Exception Enabled					
0	global invalid operation clears the following:					
	- division of infinities					
	- zero divided by zero					
	- subtraction of infinities					
	- infinity times zero					
	- NaN comparison					
	- division by zero					
1	overflow					
2	underflow					
3	divide by zero					
4	inexact operation					
5	summary exception					

# FDIV – Divide Register-Register

### **Description:**

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand may be a register specified by the Rb field of the instruction. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
09h	.7	$m_3$	Z	`	<b>′</b> 5	$Rm_3$	$Tb_2$	Rl	$b_6$	R	$a_6$	R	$t_6$	V	6	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra / Rb

**Exceptions:** 

# **FDX** – Disable Floating Point Exceptions

## **Description:**

This instruction disables floating point exceptions. The Exceptions disabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
13h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

### **Exceptions:**

Bit	Exception Disabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **FEX – Enable Floating Point Exceptions**

## **Description:**

This instruction enables floating point exceptions. The Exceptions enabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
12h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

## **Exceptions:**

Bit	Exception Enabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **FFINITE – Number is Finite**

## **Description:**

Test the value in Ra to see if it's a finite number and return Z=1 or Z=0 in register Rt.

## **Integer Instruction Format: F1**

	31	25	24	22	21	20	15	14	9	8	7	0
	0F	ĥ <sub>7</sub>	n	13	Z	R	$\overline{a_6}$	Rt	t <sub>6</sub>	v	61	$h_8$
Ī	ν. O	- 000	lor	1 — 1	voote	or on						

v: 0 = scalar, 1 = vector op

Clock Cycles: 1

**Execution Units:** Floating Point

**Example:** 

finite \$cr1,\$f7

# FMA – Floating Point Multiply Add

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

**Instruction Format: R3** 

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$0h_4$	$Rm_3$	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	63	$8h_8$

## **Operation:**

Rt = Ra \* Rb + Rc

**Clock Cycles: 30** 

# FNMA – Floating Point Negate Multiply Add

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
2h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	63	$3h_8$

## **Operation:**

$$Rt = -Ra * Rb + Rc$$

**Clock Cycles: 30** 

# **FNMS – Floating Point Negate Multiply Subtract**

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
3h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	Ro	<sup>2</sup> 6	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	63	$3h_8$

### **Operation:**

$$Rt = -Ra * Rb - Rc$$

**Clock Cycles: 30** 

## FMAN - Mantissa of Number

## **Description:**

This instruction provides the mantissa of a double precision floating point number contained in a general-purpose register as a 52-bit zero extended result. The hidden bit of the floating-point number remains hidden.

### **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
07	h <sub>7</sub>	m	13	Z	R	$a_6$	Rt	t <sub>6</sub>	v	61	h <sub>8</sub>
v· 0											

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

# FMS – Floating Point Multiply Subtract

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$1h_4$	$Rm_3$	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	63	$3h_8$

## **Operation:**

Rt = Ra \* Rb - Rc

**Clock Cycles: 30** 

# FMUL – Floating point multiplication

## **Description:**

Multiply two double precision floating point numbers in registers Ra and Rb and place the result into target register Rt.

### **Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
08h	7	$m_3$	Z	,	<b>-</b> 5	Rm <sub>3</sub>	$Tb_2$	Rl	$o_6$	R	$a_6$	R	$t_6$	V	6	2h <sub>8</sub>


**Clock Cycles: 25** 

## **FNEG – Negate Register**

#### **Description:**

This instruction negates a double precision floating point number contained in a general-purpose register. The sign bit of the number is inverted. No rounding takes place.

#### **Integer Instruction Format: R1**



Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = -Ra

## FRM – Set Floating Point Rounding Mode

### **Description:**

This instruction sets the rounding mode bits in the floating-point control register (FPSCR). The rounding mode bits are set to the bitwise 'or' of an immediate field in the instruction and the contents of register Ra. Either Ra or the immediate field should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
14	h <sub>7</sub>	`	<b>'</b> 3	?	R	$a_6$	uim	$m_6$	0	61	lh <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

 $FPSCR.RM = Ra \mid Immediate$ 

## FRSQRTE – Float Reciprocal Square Root Estimate

### **Description:**

Estimate the reciprocal of the square root of the number in register Ra and place the result into target register Rt.

#### **Instruction Format: R1**

31 25	24 22	21	20 15	14 9	8	7 0
01h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>

**Clock Cycles: 5** 

**Execution Units:** Floating Point

#### **Notes:**

The estimate is only accurate to about 3%. The estimate is performed in single precision (32-bit) floating point, then converted to a 64-bit format. That means that input values must in the range of a 32-bit floating point number. Values outside of this range will return infinity or zero as a result.

Taking the reciprocal square root of a negative number results in a Nan output.

## **FSEQ - Float Set if Equal**

### **Description:**

The register compare instruction compares two registers as floating-point values for equality and sets the compare results register as a result. Note that negative and positive zero are considered equal.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

						31 29										0
111	17	$m_3$	Z	~	<b>'</b> 5	~3	$Tb_2$	R	$b_6$	R	$a_6$	Rı	6	V	62	$h_8$
	-	•														

1 clock cycle

Clock Cycles: 1

**Execution Units:** Floating Point

#### **Operation:**

## **FSIGMOID – Sigmoid Approximate**

#### **Description:**

This function uses a 1024 entry 32-bit precision lookup table with linear interpolation to approximate the logistic sigmoid function in the range -8.0 to +8.0. Outside of this range 0.0 or +1.0 is returned. The sigmoid output is between 0.0 and +1.0. The value of the sigmoid for register Ra is returned in register Rt as a 64-bit double precision floating-point value.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
28	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	6	v	6	l h <sub>8</sub>

**Clock Cycles: 5** 

# FSIGN – Sign of Number

### **Description:**

This instruction provides the sign of a double precision floating point number contained in a general-purpose register as a floating-point double result. The result is +1.0 if the number is positive, 0.0 if the number is zero, and -1.0 if the number is negative.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
06	h <sub>7</sub>	n	13	Z	R	$a_6$	R	6	v	61	$1 h_8$

Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = sign of (Ra)

## **FSLT - Float Set if Less Than**

## **Description:**

The register compare instruction compares two registers as floating-point values for less than and sets the target register as a result.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
12	h <sub>7</sub>	$m_3$	Z	,	<b>7</b> 5	~3	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	6	52h <sub>8</sub>
1 c	lock o	cycle														

## Clock Cycles: 1

**Execution Units:** Floating Point

### **Operation:**

$$if \ Ra < Rb$$
 
$$Rt = 1$$
 
$$else$$

Rt = 0

## **FSNE - Float Set if Not Equal**

## **Description:**

The register compare instruction compares two registers as floating-point values for inequality and sets the compare results register as a result. Note that negative and positive zero are considered equal.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
14h <sub>7</sub>		$m_3$	Z	^	<b>'</b> 5	~3	$Tb_2$	Rl	<b>b</b> <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	62	h <sub>8</sub>

1 clock cycle

**Clock Cycles:** 1

**Execution Units:** Floating Point

### **Operation:**

$$\label{eq:Ra} \begin{array}{l} \text{if } Ra == Rb \\ Rt = 1 \\ \text{else} \\ Rt = 0 \end{array}$$

# FSQRT – Floating point square root

## **Description:**

Take the square root of the floating-point number in register Ra and place the result into target register Rt. The sign bit (bit 63) of the register is set to zero. This instruction can generate NaNs.

## **Instruction Format: R1, R1L**

31 25	24 22	21	20 15	14 9	8	7 0
08h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>

## **Operation:**

Rt = sqrt (Ra)

Clock Cycles: 64 (est).

# **FSTAT – Get Floating Point Status and Control**

## **Description:**

The floating-point status and control register may be read using the FSTAT instruction. The format of the FPSCR register is outlined on the next page.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
0Cł	17	~	<b>'</b> 3	~	~	<b>'</b> 6	R	t <sub>6</sub>	0	6	1h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

Rt = FPSCR

## **Floating Point Status And Control Register Format:**

Bit		Symbol	Description
31:29	RM	rm	rounding mode (unimplemented)
28	E5	inexe	- inexact exception enable
27	E4	dbzxe	- divide by zero exception enable
26	E3	underxe	- underflow exception enable
25	E2	overxe	- overflow exception enable
24	E1	invopxe	- invalid operation exception enable
23	NS	ns	- non standard floating point indicator
Result St	tatus		
22		fractie	- the last instruction (arithmetic or conversion) rounded
			intermediate result (or caused a disabled overflow exception)
21	RA	rawayz	rounded away from zero (fraction incremented)
20	SC	С	denormalized, negative zero, or quiet NaN
19	SL	neg <	the result is negative (and not zero)
18	SG	pos >	the result is positive (and not zero)
17	SE	zero =	the result is zero (negative or positive)
16	SI	inf ?	the result is infinite or quiet NaN
Exceptio	n Occ	urrence	
15	X6	swt	{reserved} - set this bit using software to trigger an invalid
			operation
14	X5	inerx	- inexact result exception occurred (sticky)
13	X4	dbzx	- divide by zero exception occurred
12	Х3	underx	- underflow exception occurred
11	X2	overx	- overflow exception occurred
10	X1	giopx	- global invalid operation exception – set if any invalid
			operation exception has occurred
9	GX	gx	- global exception indicator – set if any enabled exception
			has happened
8	SX	sumx	- summary exception - set if any exception could occur if it
			was enabled
			- can only be cleared by software
Exceptio		e Resoluti	
7	X1T	cvt	- attempt to convert NaN or too large to integer
6	X1T	sqrtx	- square root of non-zero negative
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison
			instructions
4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN

Greyed out items are not implemented.

## FSUB – Subtract Register-Register

#### **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

**Instruction Format: R2** 

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
05h	17	$m_3$	Z	~	<b>'</b> 5	$Rm_3$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	62	$2h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

## FTOI – Float to Integer

### **Description:**

This instruction converts a floating-point double value to an integer value.

**Instruction Format: R1** 

31	25	24	22	21	20	15	14	9	8	7	0
02h <sub>7</sub>		02h <sub>7</sub> m <sub>3</sub> z		R	$a_6$	Rt	6	v	6	$1h_8$	

**Clock Cycles: 2** 

## FTRUNC - Truncate Value

#### **Description**:

The FTRUNC instruction truncates off the fractional portion of the number leaving only a whole value. For instance, ftrunc(1.5) equals 1.0. Ftrunc does not change the representation of the number. To convert a value to an integer in a fixed-point representation see the FTOI instruction.

#### **Instruction Format**: R1

_	31	25	24	22	21	20	15	14	9	8	7	0
Ī	15	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	6	v	6	1h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Floating Point

# FTX – Trigger Floating Point Exceptions

#### **Description:**

This instruction triggers floating point exceptions. The Exceptions to trigger are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
10h <sub>7</sub>		`	<b>'</b> 3	~	R	$a_6$	uim	$m_6$	0	61	lh <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# ISNAN – Is Not a Number

### **Description:**

Test the value in Ra to see if it's a nan (not a number) and return true Z=1 or false Z=0 in register Rt.

### **Instruction Format: R1**

	31	25	24	22	21	20	15	14	9	8	7	0
Ī	0E	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	6	V	61	lh <sub>8</sub>

**Clock Cycles: 1** 

**Execution Units:** Floating Point

Example:

isnan \$cr1,\$f7

# ITOF – Integer to Float

### **Description:**

This instruction converts an integer value to a double precision floating point representation.

### **Instruction Format: F1, F1L**

31	25	24	22	21	20	15	14	9	8	7	0
03h <sub>7</sub>		n	13	Z	R	$a_6$	Ri	t <sub>6</sub>	v	61	lh <sub>8</sub>

**Clock Cycles: 2** 


# **Decimal Floating-Point Instructions**

## **DFABS – Absolute Value**

#### **Description:**

This instruction takes the absolute value of a register and places the result in a target register. The values are treated as quad precision decimal floating-point values. The sign bit of the number is cleared, no rounding of the number takes place.

#### **Integer Instruction Format: R1**



#### **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

#### **Vector Operation**

```
for x=0 to VL - 1 if \ (Vm[x]) \ Rt[x] = Ra[x] < 0 \ ? \ -Ra[x] : Ra[x] else \ if \ (z) \ Rt[x] = 0 else \ Rt[x] = Rt[x]
```

**Execution Units:** F

**Clock Cycles: 1** 

Exceptions: none

# **DFADD** – **Add Register-Register**

#### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as quad precision decimal floating-point values.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34 32	31 29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	~2	~3	$Rm_3$	$Tb_2$	Rł	<b>)</b> 6	Ra	$\mathfrak{d}_6$	Rt	6	V	66	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

# **DFCX – Clear Floating-Point Exceptions**

### **Description:**

This instruction clears floating point exceptions. The Exceptions to clear are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	5 24 22	21	20 15	14 9	8	7 0
11h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation clears the following:
	- division of infinities
	- zero divided by zero
	<ul> <li>subtraction of infinities</li> </ul>
	- infinity times zero
	- NaN comparison
	- division by zero
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	summary exception

# **DFDIV – Divide Register-Register**

#### **Description:**

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand must be a register specified by the Rb field of the instruction. The values are treated as quad precision decimal floating-point values. This instruction takes many clock cycles to complete but is interruptible.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
091	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rl	$b_6$	R	$a_6$	Rı	6	V	60	$5h_8$

#### **Instruction Format: R2L**

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
091	<b>1</b> 7	<b>~</b> <sub>5</sub>	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	$Ra_6$	Rt <sub>6</sub>	v	76h <sub>8</sub>	

Clock Cycles: 3,000 est.

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra / Rb

**Exceptions:** 

## DFDIVIDEND\_ADJ - Dividend Adjustment for Division

#### **Description:**

Takes the dividend and divisor and returns the dividend with the exponent adjusted for a divisor between 0.5 and 1.0. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format: R3**

47	41	40 38	37	36	29	28 27	26	21	20	15	14	9	8	7	0
20	h <sub>7</sub>	$m_3$	Z	~	8	$Tb_2$	RI	<b>o</b> <sub>6</sub>	R	$a_6$	Ri	$t_6$	v	66	5h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

**Notes:** 

## DFDIVISOR\_ADJ - Divisor Adjustment for Division

### **Description:**

Takes the divisor sets the exponent to the bias value, then scales the significand to between 0.5 and 1.0 adjusting the exponent as needed. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format: R3**

47	41	40 38	37	36	29	28 27	26	21	20	15	14	9	8	7	0
211	$h_7$	$m_3$	Z	~	8	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	Rt	6	V	66	$5h_8$

**Clock Cycles: 1** 

Execution Units: All ALU's

**Operation:** 

**Exceptions:** 

# DFDIVISOR\_BITADJ – Divisor Adjustment for Division

### **Description:**

Returns the number of bits the divisor needed to be shifted to the left during scaling. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format:** R3

47	41	40 38	37	36	29	28 27	26	21	20	15	14	9	8	7	0
21	h <sub>7</sub>	$m_3$	Z	~	8	$Tb_2$	RI	$b_6$	R	$a_6$	Ri	$t_6$	V	66	5h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

# **DFDX – Disable Floating Point Exceptions**

### **Description:**

This instruction disables floating point exceptions. The Exceptions disabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
13h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Disabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **DFEX – Enable Floating Point Exceptions**

### **Description:**

This instruction enables floating point exceptions. The Exceptions enabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
12h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Enabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **DFMA – Floating Point Multiply Add**

#### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
00	)h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	67	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
00	)h <sub>7</sub>	~5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	$77h_8$

### **Operation:**

Rt = Ra \* Rb + Rc

**Clock Cycles: 30** 

# **DFNMA – Floating Point Negate Multiply Add**

#### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	6	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
02	$h_7$	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	77h <sub>8</sub>

### **Operation:**

Rt = -Ra \* Rb + Rc

**Clock Cycles: 30** 

# **DFNMS** – Floating Point Negate Multiply Subtract

#### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	6	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
02	$h_7$	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	77h <sub>8</sub>

### **Operation:**

Rt = -Ra \* Rb - Rc

**Clock Cycles: 30** 

# **DFMAN – Mantissa of Number**

### **Description:**

This instruction provides the mantissa of a double precision floating point number contained in a general-purpose register as a 52-bit zero extended result. The hidden bit of the floating-point number remains hidden.

#### **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0	
07h <sub>7</sub>		$m_3$		Z	R	$a_6$	Rt	t <sub>6</sub>	v	65	h <sub>8</sub>	]
v: 0												_

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = Ra

# **DFMS – Floating Point Multiply Subtract**

#### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
01	h <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	6	$7h_8$

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
01	h <sub>7</sub>	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	$77h_8$

### **Operation:**

Rt = Ra \* Rb - Rc

**Clock Cycles: 30** 

# **DFMUL – Floating point multiplication**

### **Description:**

Multiply two quad precision decimal floating point numbers in registers Ra and Rb and place the result into target register Rt.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34 32	31 29	28 27	26	21	20	15	14	9	8	7	0
08h	.7	$m_3$	Z	~2	~3	Rm <sub>3</sub>	$Tb_2$	Rb	6	Ra	$\mathfrak{d}_6$	Rt	5	V		66h <sub>8</sub>


**Clock Cycles: 25** 

# **DFNEG – Negate Register**

#### **Description:**

This instruction negates a double precision floating point number contained in a general-purpose register. The sign bit of the number is inverted. No rounding takes place.

#### **Integer Instruction Format: R1**



Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = -Ra

## **DFRES** – Reciprocal Approximate

#### **Description:**

Returns an approximation of the reciprocal of a number which must be between 0.1 and 1.0. The reciprocal has approximately three decimal digits of accuracy. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
17	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	t <sub>6</sub>	v	65	5h <sub>8</sub>

**Clock Cycles: 4** 

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

# **DFRM – Set Floating Point Rounding Mode**

### **Description:**

This instruction sets the rounding mode bits in the floating-point control register (FPSCR). The rounding mode bits are set to the bitwise 'or' of an immediate field in the instruction and the contents of register Ra. Either Ra or the immediate field should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0	
14h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>	

**Execution Units:** All Floating Point

#### **Operation:**

 $FPSCR.RM = Ra \mid Immediate$ 

# **DFSIGN – Sign of Number**

#### **Description:**

This instruction provides the sign of a double precision floating point number contained in a general-purpose register as a floating-point double result. The result is +1.0 if the number is positive, 0.0 if the number is zero, and -1.0 if the number is negative.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
06h <sub>7</sub>		n	13	Z	R	$a_6$	Rt	t <sub>6</sub>	v	65	$5h_8$

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = sign of (Ra)

# **DFSTAT – Get Floating Point Status and Control**

#### **Description:**

The floating-point status and control register may be read using the FSTAT instruction. The format of the FPSCR register is outlined on the next page.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
0Ch <sub>7</sub>	~3	~	~6	Rt <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

Rt = FPSCR

## **Floating Point Status And Control Register Format:**

Bit		Symbol	Description							
31:29	RM	rm	rounding mode (unimplemented)							
28	E5	inexe	- inexact exception enable							
27	E4	dbzxe	- divide by zero exception enable							
26	E3	underxe	- underflow exception enable							
25	E2	overxe	- overflow exception enable							
24	E1	invopxe	- invalid operation exception enable							
23	NS	ns	- non standard floating point indicator							
Result St	tatus									
22		fractie	- the last instruction (arithmetic or conversion) rounded							
			intermediate result (or caused a disabled overflow exception)							
21	RA	rawayz	rounded away from zero (fraction incremented)							
20	SC	С	denormalized, negative zero, or quiet NaN							
19	SL	neg <	the result is negative (and not zero)							
18	SG	pos >	the result is positive (and not zero)							
17	SE	zero =	the result is zero (negative or positive)							
16	SI	inf ?	the result is infinite or quiet NaN							
Exceptio	n Occ	urrence								
15	X6	swt	{reserved} - set this bit using software to trigger an invalid							
			operation							
14	X5	inerx	- inexact result exception occurred (sticky)							
13	X4	dbzx	- divide by zero exception occurred							
12	Х3	underx	- underflow exception occurred							
11	X2	overx	- overflow exception occurred							
10	X1	giopx	- global invalid operation exception – set if any invalid							
			operation exception has occurred							
9	GX	gx	- global exception indicator – set if any enabled exception							
			has happened							
8	SX	sumx	- summary exception - set if any exception could occur if it							
			was enabled							
			- can only be cleared by software							
Exceptio		e Resolution	on							
7	X1T	cvt	- attempt to convert NaN or too large to integer							
6	X1T	sqrtx	- square root of non-zero negative							
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison							
			instructions							
4	X1T	infzero	- multiply infinity by zero							
3	X1T	zerozero	- division of zero by zero							
2	X1T	infdiv	- division of infinities							
1	X1T	subinfx	- subtraction of infinities							
0	X1T	snanx	- signaling NaN							

Greyed out items are not implemented.

# **DFSUB – Subtract Register-Register**

#### **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 2	1	20	15	14	9	8	7	0
05	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$		R	$a_6$	R	$t_6$	V	60	$5h_8$

#### **Instruction Format: R2L**

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
051	$h_7$	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	76h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# **DFTOI – Float to Integer**

#### **Description:**

This instruction converts a quad precision decimal floating-point value to an integer value.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	n	13	Z	R	$a_6$	Ri	t <sub>6</sub>	v	65	$5h_8$

**Clock Cycles: 2** 

# **DFTX – Trigger Floating Point Exceptions**

### **Description:**

This instruction triggers floating point exceptions. The Exceptions to trigger are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
10h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# ITODF – Integer to Float

### **Description:**

This instruction converts an integer value to a quad precision decimal floating point representation.

**Instruction Format: F1, F1L** 

31	25	24	22	21	20	15	14	9	8	7	0
03h	17	n	13	Z	R	$a_6$	R	t <sub>6</sub>	V	65	5h <sub>8</sub>

**Clock Cycles: 2** 

## **Posit Instructions**

# PADD – Add Register-Register

#### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as posit values.

**Instruction Format: R2** 

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
04h	7	$m_3$	Z	~	<b>-</b> 5	$Rm_3$	$Tb_2$	Rł	$b_6$	Ra	$a_6$	R	t <sub>6</sub>	V	6	$h_8$

**Clock Cycles: 25** 

**Execution Units:** Posit Arithmetic

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# PMUL – Posit multiplication

#### **Description:**

Multiply two posit numbers in registers Ra and Rb and place the result into target register Rt.

**Instruction Format:** R2

47	41	49 38	37	36 3	2 31 29	28 27	26	21	20	15	14	9	8	7	0
08h	.7	$m_3$	Z	<b>~</b> 5	Rm <sub>3</sub>	Tb <sub>2</sub>	Rl	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	v	6A	$h_8$

**Clock Cycles: 25** 

**Execution Units:** Posit Arithmetic

# **PSUB – Subtract Register-Register**

## **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as posit values.

**Instruction Format:** R2

_	47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
	05h	.7	$m_3$	Z	~	<b>'</b> 5	$Rm_3$	$Tb_2$	Rl	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	6A	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

## Load / Store Instructions

## **Overview**

## **Addressing Modes**

Load and store instructions have two addressing modes, register indirect with displacement and scaled indexed addressing. Note that register indirect with displacement addressing is limited to scalar instructions.

For vector scaled indexed addressing Ra acts as a base address register. If Rb is a scalar value then it is used to increment the load / store address according to the vector element. Otherwise, if Rb is a vector value it is used directly as an index.

The 'C' bit of the scaled indexed addressing indicates the vector is compressed in memory. When compressed, for stores if a mask bit is clear then no value is stored to memory and the memory address does not increment. Loads are similar.

Load and store instructions specify a selector register to use with the instruction. The assembler will provide a default value for this field that is suitable in most cases. The default can be overridden using a selector prefix indicator.

## **Load Formats**

#### Register Indirect with Displacement Format

For register indirect with displacement addressing the load or store address is the sum of a register Ra and a displacement constant found in the instruction.

47 45	44	21	20	15	14	9	8	7	0
Sel <sub>3</sub>	Displacemen	nt <sub>230</sub>	R	$a_6$	Rt	6	0	Opco	ode <sub>8</sub>

#### Scaled Indexed Format

_	47 45	44	43	42	35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
	$m_3$	Z	C	Disp	08	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	R	$b_6$	Ra	$\mathfrak{d}_6$	Rt	6	V	Opcoo	le <sub>8</sub>

# **Store Formats**

### Register Indirect with Displacement Format

For register indirect with displacement addressing the load or store address is the sum of a register Ra and a displacement constant found in the instruction.

47 45	44		21	20	15	14	9	8	7	0
Sel <sub>3</sub>	D	Displacement <sub>230</sub>		R	$a_6$	Rs	6	0	Opc	code <sub>8</sub>

#### **Scaled Indexed Format**

47 45	44	43	42	35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
$m_3$	Z	С	Disp <sub>8</sub>		Sel <sub>3</sub>	$Sc_3$	Tb <sub>2</sub>	R	$b_6$	Ra	$a_6$	Rs	6	V	Opc	ode <sub>8</sub>

# **CACHE – Cache Command**

#### **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time. The address of the cache line to be invalidated is passed in Ra if needed.

#### **Instruction Format:**

40 37	3634	33 2	21	20	15	14 12	119	8	7	0
Disp <sub>4</sub>	Sg <sub>3</sub>	Displacement <sub>120</sub>		Ra	l6	$DC_3$	$IC_3$	0	ç	9Fh <sub>8</sub>

### **Commands:**

$IC_3$	Mne.	Operation
0	NOP	no operation
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

**Clock Cycles:** 3

Execution Units: All ALU's / Memory

**Operation:** 

**Exceptions:** DBG

# **CACHEX - Cache Command**

### **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	R	$b_6$	Ra	$a_6$	Rs	6	V	CFh	18

#### **Commands:**

IC <sub>3</sub>	Mne.	Operation
0	NOP	no operation
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

**Clock Cycles:** 

Execution Units: All ALU's / Memory

**Operation:** 

**Exceptions:** DBG

# CAS - Compare and Swap

#### **Description:**

If the contents of the addressed memory cell is equal to the contents of Rb then a sixty-four bit value is stored to memory from the source register Rc. The original contents of the memory cell are loaded into register Rt. The memory address is contained in register Ra. The memory address must be word aligned. If the operation was successful then Rt and Rb will be the same value. The compare and swap operation is an atomic operation; the bus is locked during the load and potential store operation. This operation assumes that the addressed memory location is part of the volatile region of memory and bypasses the data cache.

The stack pointer cannot be used as the target register.

#### **Instruction Format:**

						36 35												
;	Sel <sub>3</sub>	}	~3	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	Rl	<b>)</b> <sub>6</sub>	R	$a_6$	Rı	6	v	97	$7h_8$

#### **Operation:**

 $\begin{aligned} Rt &= memory \ [Ra] \\ if \ memory [Ra] &= Rb \\ memory [Ra] &= Rc \end{aligned}$ 

#### **Assembler:**

CAS Rt,Rb,Rc,[Ra]

# LDB - Load Byte

#### **Description:**

An eight-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format: RIL**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	$a_5$	Rt	5	0		80h <sub>8</sub>

#### **Instruction Format: RILV**

C	44	43	43	19	18	14	13	9	8	7	0
$m_3$	Z	C	Displac	cement <sub>230</sub>	R	a <sub>5</sub>	R	<b>t</b> 5	1		80h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_8[Ra+displacement])$ 

## LDBU – Load Byte, Unsigned

### **Description:**

An eight-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format: RIL**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	Rt	5	0		81h <sub>8</sub>

#### **Instruction Format: RILV**

C	44	43	43		19	18	14	13	9	8	7	0
m <sub>3</sub>	Z	C		Displacement <sub>230</sub>		R	a <sub>5</sub>	R	<b>t</b> 5	1		81h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_8[Ra+displacement])$ 

# **LDBUX – Load Byte Unsigned Indexed**

#### **Description:**

An eight-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and register Rb.

#### **Instruction Format:**

 31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	?	Tb <sub>2</sub>	Rl	<b>)</b> 5	Ra	$a_5$	Rt	5	v	В	1h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_8[Ra+Rb])$ 

# LDBX – Load Byte Indexed

#### **Description:**

An eight-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb. For vector instructions Ra is a scalar register.

#### **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> <sub>5</sub>	R	$a_5$	Rı	t <sub>5</sub>	V	E	$30h_8$

C: 1=compressed vector load

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_8[Ra+Rb*Sc])$ 

# **LDCTX – Load Context**

### **Description:**

All sixty-four general purpose registers are loaded from the context area. The context area is specified by a descriptor selected by the contents of the specified selector register.

#### **Instruction Format:**

15	13	12 9	8	7	0
Sel	3	$0_{4}$	0	8	3Dh <sub>8</sub>

Clock Cycles: 320 (32 memory access) (64 for 8 cache access)

Execution Units: All ALU's / Memory

**Operation:** 

Exceptions: DBE, DBG, TLB, LMT

## LDH - Load Hexi

#### **Description:**

A 128-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format: RIL**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	Rt	5	0		88h <sub>8</sub>

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	<b>1</b> 5	Ri	t <sub>5</sub>	1		$88h_8$

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{128}[Ra+displacement])$ 

Exceptions: DBE, DBG, LMT, TLB


## LDHS - Load Hexi, Short Format

#### **Description:**

A 128-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**



**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{128}[Ra+displacement])$ 

# **LDHX – Load Hexi-byte Indexed**

### **Description:**

A 128-bit value is loaded from memory and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	Ra	<b>a</b> 5	Rt	5	V	В	$8h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+Rb*Sc])$ 

### LDO - Load Octa

#### **Description:**

A sixty-four-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	$a_5$	Rt	5	0	80	5h <sub>8</sub>

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	<b>1</b> 5	Ri	t <sub>5</sub>	1		86h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

#### **Operation:**

 $Rt = sign extend (memory_{64}[Ra+displacement])$ 

Exceptions: DBE, DBG, LMT, TLB


# LDOU - Load Octa Unsigned

#### **Description:**

A sixty-four-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**



Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = sign extend (memory<sub>64</sub>[Ra+displacement])

Exceptions: DBE, DBG, LMT, TLB

# LDOX - Load Octa Indexed

### **Description:**

A sixty-four-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20 15	14 9	8	7 0	
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rb <sub>6</sub>		Ra <sub>6</sub>	Rt <sub>6</sub>	V	B6h <sub>8</sub>	

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{64}[Ra+Rb*Sc])$ 

# **LDOUX – Load Octa Unsigned Indexed**

### **Description:**

A sixty-four-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26 21	20	15	14	9 8	7	0
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	$Rb_6$	R	Ra <sub>6</sub>	Rt <sub>6</sub>	v		CEh <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+Rb*Sc])$ 

# LDT - Load Tetra

#### **Description:**

A thirty-two-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

40 37	3634	33	21	20	15	14	9	8	7	0
Disp <sub>4</sub>	Sg <sub>3</sub>	Displacement <sub>12</sub>	20	Ra	$a_6$	Rt	6	0	84	$4h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{32}[Ra+displacement])$ 

# **LDTU – Load Tetra Unsigned**

### **Description:**

A thirty-two-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

40 37	3634	33	21	20	15	14	9	8	7	0
Disp <sub>4</sub>	$Sg_3$	Displacement <sub>1</sub>	20	R	$a_6$	Rt	6	0	85	$5h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero \ extend \ (memory_{32}[Ra+displacement])$ 

# **LDTUX – Load Tetra Unsigned Indexed**

### **Description:**

A thirty-two-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20 1	5	14 9	8	7 0
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	Tb <sub>2</sub>	Rb <sub>6</sub>		Ra <sub>6</sub>		Rt <sub>6</sub>	v	B5h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = zero \ extend \ (memory_{32}[Ra+Rb*Sc])$ 

# LDTX - Load Tetra Indexed

### **Description:**

A thirty-two-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

_	47 45	44	43	42 35	34 32	31 29	2827	26 21	20 15	14 9	8	7 0
	$m_3$	Z	C	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	B4h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{32}[Ra+Rb*Sc])$ 

# LDW - Load Wyde

### **Description:**

A sixteen-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

40 37	3634	33	21	20	15	14	9	8	7	0
Disp <sub>4</sub>	$Sg_3$	Displacement <sub>1</sub> :	20	R	$a_6$	Rt	6	0	8	32h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{16}[Ra+displacement])$ 

# LDWU - Load Wyde Unsigned

### **Description:**

A sixteen-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

40 37	3634	33	21	20	15	14	9	8	7	0
Disp <sub>4</sub>	$Sg_3$	Displacement <sub>1</sub> :	20	R	$a_6$	Rt	6	0	8.	$3h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_{16}[Ra+offset])$ 

# LDWX – Load Wyde Indexed

### **Description:**

A sixteen-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20 1	5	14	9	8	7	0
$m_3$	Z	C	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rb <sub>6</sub>	;	Ra <sub>6</sub>		Rt <sub>6</sub>		V	B2h8	3

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{16}[Ra+Rb])$ 

# LDWUX – Load Wyde Unsigned Indexed

### **Description:**

A sixteen-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

_	47 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
	$m_3$	Z	С	Disp <sub>8</sub>	$Sel_3$	$Sc_3$	$Tb_2$	Rt	<b>)</b> 6	Ra	<b>1</b> 6	Rt	6	V	В3	$h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero \ extend \ (memory_{16}[Ra+Rb])$ 

### **LEA – Load Effective Address**

### **Description:**

The virtual address is calculated and placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	21	20	15	14	9	8	7	0
Sel <sub>3</sub>	Displacement <sub>230</sub>	)	R	$a_6$	Rt	6	0	8A	$h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{64}[Ra+displacement])$ 

Exceptions: DBG, LMT, TLB

### LEAX – Load Effective Address Indexed

### **Description:**

The virtual address is calculated and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42	35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
$m_3$	Z	С	Disp	8	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rl	$b_6$	Ra	$a_6$	Rt	6	V	В	Ah <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{64}[Ra+Rb*Sc])$ 

## LIN2PHL - Convert Linear to Physical Address Low

### **Description:**

The linear address in register pair Rb, Ra is converted to the low order 64-bits of the physical address.

#### **Instruction Format:**

40	34	33 31	30	29	28 27	26	21	20	15	14	9	8	7		0
36h	7	$m_3$	Z	~	$Tb_2$	Rl	<b>)</b> <sub>6</sub>	R	$a_6$	Rt	6	V		02h <sub>8</sub>	

**Clock Cycles:** 3

**Execution Units:** Memory

**Operation:** 

 $Rt = Lin2PhysL(\{Rb,Ra\})$ 

**Exceptions:** none

## LIN2PHH - Convert Linear to Physical Address High

### **Description:**

The linear address in register pair Rb, Ra is converted to the high order 64-bits of the physical address.

#### **Instruction Format:**

40	34	33 31	30	29	28 27	26	21	20	15	14	9	8	7	(	0
37h	17	$m_3$	Z	?	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	Rt	6	V		02h <sub>8</sub>	

**Clock Cycles: 3** 

**Execution Units:** Memory

**Operation:** 

 $Rt = Lin2PhysH(\{Rb,Ra\})$ 

Exceptions: none

# LLAH – Load Linear Address High

### **Description:**

The high order 64-bits of the linear memory address is calculated and stored in the target register.

### **Instruction Format:**

40 37	3634	33	21	20	15	14	9	8	7	0
Disp <sub>4</sub>	$Sg_3$	Displacement <sub>12</sub>	20	Ra	$\mathfrak{a}_6$	Rt	ó	0	8	39h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

# LLAHX – Load Linear Address High Indexed

### **Description:**

The high order 64-bits of the linear memory address is calculated and stored in the target register.

### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20 15	14	9 8	7	0
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rb <sub>6</sub>		Ra <sub>6</sub>	Rt <sub>6</sub>	v	B91	$h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + Rb \* Sc

# **LLAL – Load Linear Address Low**

### **Description:**

The low order 64-bits of the linear memory address is calculated and stored in the target register.

### **Instruction Format:**

40 37	3634	33	21	20	15	14	9	8	7	0
Disp <sub>4</sub>	$Sg_3$	Displacement	120	Ra	$\mathfrak{d}_6$	Rt	6	0	:	$88h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

# LLALX - Load Linear Address Low Indexed

### **Description:**

The low order 64-bits of the linear memory address is calculated and stored in the target register.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20 15	[	14 9	8	7	0
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rb <sub>6</sub>		$Ra_6$		$Rt_6$	V	$B8h_8$	

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + Rb \* Sc

# STB – Store Byte

### **Description:**

An eight-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	21	20	15	14	9	8	7	0
Sel <sub>3</sub>	Displacement <sub>230</sub>		Ra	$a_6$	Rs	6	0	90	)h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_8[Ra+displacement] = Rb_{[7..0]}$ 

Exceptions: DBE, DBG, TLB, LMT

# STBX – Store Byte Indexed

### **Description:**

An eight-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

4	17 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
	$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	Tb <sub>2</sub>	Rl	b <sub>6</sub>	Ra	16	Rs	6	v	C0	$h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All AGU's / Memory

### **Operation:**

$$memory_8[Ra+Rb*Sc] = Rs_{[7:0]}$$

#### **Vector Operation:**

$$\begin{array}{c} y = 0 \\ \text{for } x = 0 \text{ to } VL - 1 \\ \text{ if } (Rb \text{ is scalar}) \\ n = Rb * y \\ \text{ else} \\ n = Rb[n] \\ \text{IF } (Vm[n]) \\ \text{ memory}_8[Ra+n] = Rs[n]_{[7:0]} \\ \text{IF } (C) \\ y = y + Vm[n] \\ \text{ELSE} \\ y = y + 1 \end{array}$$

# **STCTX – Store Context**

### **Description:**

All sixty-four general purpose registers are stored to the context area. The context area is specified by a descriptor selected by the contents of the specified selector register.

#### **Instruction Format:**

15 13	12 9	8	7	0
$Sel_3$	$0_{4}$	0	9	$Dh_8$

**Clock Cycles:** 320 (32 memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

Exceptions: DBE, DBG, TLB, LMT

### Example;

# setup the FS to point to the TCB area MFSEL t0,11 # TCB selector

MTSEL FS,t0

. . .

# store context STCTX FS

# STH – Store Hexi-byte

### **Description:**

A register is stored to memory. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44 21	20	15	14	9	8	7	0
Sel <sub>3</sub>	Displacement <sub>230</sub>	R	$a_6$	Rs	<b>S</b> 6	0	90	6h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{128}[Ra+displacement+00] = Rs$ 

Exceptions: DBE, DBG, TLB, LMT

# STHX – Store Hexi-byte Indexed

### **Description:**

A 128-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42	35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
$m_3$	Z	С	Disp	8	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rl	<b>)</b> <sub>6</sub>	Ra	$a_6$	Rs	6	V	(	$C5h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+Rb*Sc] = Rs$ 

# STO – Store Octa

### **Description:**

A sixty-four-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44		21	20	15	14	9	8	7	0
Sel <sub>3</sub>		Displacement <sub>230</sub>		R	$a_6$	Rs	86	0	9	3h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

Exceptions: DBE, DBG, TLB, LMT

# STOC – Store Octa, Clear Reservation

#### **Description:**

A sixty-four-bit value from the source register Rb is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

3129	2827	26 21	20 15	14 9	8	7 0
$Sg_3$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Disp <sub>6</sub>	V	94h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

Exceptions: DBE, DBG, TLB, LMT

# STOCX - Store Octa, Clear Reservation Indexed

#### **Description:**

A sixty-four-bit value from the source register Rs is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26 21	20	15	14	9 8	7	0
$m_3$	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	$Rb_6$	I	Ra <sub>6</sub>	Rs <sub>6</sub>	V	(	$C4h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+Rc*Sc] = Rb$ 

## STOO – Store Octa Octet

### **Description:**

An octet of registers is stored to memory. The memory address must be 64-byte aligned. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44		27	26	21	20	15	14 12	119	8	7	0
$Sel_3$		Displacement <sub>236</sub>		0	6	R	$a_6$	$Rs_3$	13	0	96h	8

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

### **Operation:**

$$\begin{split} & memory_{64}[Ra+displacement+00] = Rs+0 \\ & memory_{64}[Ra+displacement+08] = Rs+1 \\ & memory_{64}[Ra+displacement+16] = Rs+2 \\ & memory_{64}[Ra+displacement+24] = Rs+3 \\ & memory_{64}[Ra+displacement+32] = Rs+4 \\ & memory_{64}[Ra+displacement+40] = Rs+5 \\ & memory_{64}[Ra+displacement+48] = Rs+6 \\ & memory_{64}[Ra+displacement+56] = Rs+7 \\ \end{split}$$

Exceptions: DBE, DBG, TLB, LMT

# STOOX - Store Octa Octet Indexed

#### **Description:**

An octet of registers is stored to memory. The memory address must be 64-byte aligned. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42	35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
m <sub>3</sub>	Z	С	Disp <sub>8</sub>	3	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	Rl	<b>)</b> 6	Ra	16	Rs	6	V	(	C6h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

### **Operation:**

 $memory_{64}[Ra+Rb*Sc+00] = Rs+0$ 

 $memory_{64}[Ra+Rb*Sc+08] = Rs+1$ 

 $memory_{64}[Ra+Rb*Sc+16] = Rs+2$ 

 $memory_{64}[Ra+Rb*Sc+24] = Rs+3$ 

 $memory_{64}[Ra+Rb*Sc+32] = Rs+4$ 

 $memory_{64}[Ra+Rb*Sc+40] = Rs+5$ 

 $memory_{64}[Ra+Rb*Sc+48] = Rs+6$ 

 $memory_{64}[Ra+Rb*Sc+56] = Rs+7$ 

# STOS – Store Octa, Short Addressing

### **Description:**

A sixty-four-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

31 29	28	21	20	15	14	9	8	7	0
Sel <sub>3</sub>	Dis	p <sub>70</sub>	R	$a_6$	R	S <sub>6</sub>	0	٥	95h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

Exceptions: DBE, DBG, TLB, LMT

# STOX - Store Octa Indexed

### **Description:**

A sixty-four-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
m <sub>3</sub>	Z	C	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	R	$b_6$	R	$a_6$	Rs	S <sub>6</sub>	v	C	3h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+Rb*Sc] = Rs$ 

# STT – Store Tetra

### Description:

A thirty-two-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44		21	20	15	14	9	8	7	0
Sel <sub>3</sub>		Displacement <sub>230</sub>		Ra	$a_6$	Rs	6	0	9	2h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_{32}[Ra+displacement] = Rb_{[31..0]}$ 

Exceptions: DBE, DBG, TLB, LMT

# STTX – Store Tetra Indexed

### **Description:**

A thirty-two-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
m <sub>3</sub>	Z	C	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	R	$b_6$	R	$a_6$	Rs	S <sub>6</sub>	V	C	2h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{32}[Ra+Rb*Sc] = Rs_{[31:0]}$ 

# STW – Store Wyde

### Description:

A sixteen-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44		21	20	15	14	9	8	7	0
Sel <sub>3</sub>		Displacement <sub>230</sub>		R	$a_6$	Rs	S <sub>6</sub>	0	9	1h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_{16}[Ra+displacement] = Rb_{[15..0]}$ 

Exceptions: DBE, DBG, TLB, LMT

# STWX – Store Wyde Indexed

### **Description:**

A sixteen-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 3	5 34 32	31 29	2827	26	21	20	15	14	9	8	7	0
$m_3$	z	C	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	R	$b_6$	R	$a_6$	Rs	S <sub>6</sub>	V	C	1h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{16}[Ra+Rb*Sc] = Rs_{[15:0]}$ 

## **Block Instructions**

# **BCMPx – Block Compare**

### **Description:**

This instruction compares data from the memory location addressed by Ra to the memory location addressed by Rb until the loop counter LC reaches zero or until a mismatch occurs. Ra and Rb increment by independently specified amounts. This instruction is interruptible. The data must be in the same segment and appropriately aligned.

#### **Instruction Format:**

47 45	44	43 41	49 38	37	36 33	32	29	28 27	26	21	20	15	1413	129	8	7	0
Sel <sub>3</sub>	Ce	$Sz_3$	$m_3$	Z	~4	Bi	<b>i</b> 4	$Tb_2$	Rł	<b>)</b> 6	Ra	$\mathfrak{a}_6$	~2	Ai <sub>4</sub>	V	9Al	18

Ai <sub>4</sub> /Bi <sub>4</sub>	Adjustment Amount
0	0
1	1
2	2
3	4
4	8
5	16
15	-1
14	-2
13	-4
12	-8
11	-16
others	reserved

#### **Assembler Example**

LDI LC,200
BCMPO [Ra]+,[Rb]+
SUBF LC,LC,200 ; get index of difference

#### **Execution Units:** Memory

### **Operation:**

```
temp = 0 while LC \Leftrightarrow 0 and mem[Rb] = mem[Ra] Ra = Ra + amt Rb = Rb + amt LC = LC - 1
```

# BFNDx – Block Find

### **Description:**

This instruction compares data from the memory location addressed by Ra to the data in register Rb until the loop counter LC reaches zero or until a match occurs. This instruction is interruptible. The data must be appropriately aligned.

#### **Instruction Format:**

47 45	44	43 41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
Sel <sub>3</sub>	~	$O_3$	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	R	$b_6$	Ra	$a_6$	Ro	26	V	9B1	18

O <sub>3</sub>	Assembler Mnemonic	
0	STFND.BI	byte incrementing
1	STFND.WI	wyde incrementing
2	STFND.TI	tetra incrementing
3	STFND.OI	octa incrementing
4	STFND.BD	byte decrementing
5	STFND.WD	wyde decrementing
6	STFND.TD	tetra decrementing
7	STFND.OD	octa decrementing

**Execution Units:** Memory

### **Operation:**

```
temp = 0
while LC <> 0
if (mem[Ra] = Rb)
stop
Ra = Ra + amt
LC = LC - 1
```

## **BMOVx** -Block Move

#### **Description:**

This instruction moves a data from the memory location addressed by Ra to the memory location addressed by Rb until the loop counter LC reaches zero. Ra and Rb are adjusted by a specified amount after the move. This instruction is interruptible. The data moved must be in the same segment and appropriately aligned. During the move, if the Ce bit is set data will be moved into the cache this may improve performance of the move due to fewer external memory cycles.

This instruction may be used to stream data to or from an I/O port by keeping one of the addresses fixed.

#### **Instruction Format:**

47 45	44	43 41	49 38	37	36 33	32	29	28 27	26	21	20	15	1413	129	8	7	0
Sel <sub>3</sub>	Ce	$Sz_3$	$m_3$	Z	~4	В	<b>i</b> 4	$Tb_2$	Rł	<b>)</b> 6	R	$a_6$	~2	Ai <sub>4</sub>	V	99h	8

Ai <sub>4</sub> /Bi <sub>4</sub>	Adjustment Amount							
0	0							
1	1							
2	2							
3	4							
4	8 16							
5								
15	-1							
14	-2							
13	-4							
12	-8							
11	-16							
others	reserved							

#### **Assembler Example**

LDI LC,200 BMOVB [Ra]+,[Rb]+

**Execution Units:** Memory

### **Operation:**

```
temp = 0 while LC \Leftrightarrow 0 t0 = mem[Ra] mem[Rb] = t0 Ra = Ra + amt Rb = Rb + amt LC = LC - 1
```

## BSETx - Block Set

### **Description:**

This instruction stores data contained in register Rb to consecutive memory locations beginning at the address in Ra until the loop counter reaches zero. Ra is updated by the number of bytes written. The data address must be appropriately aligned.

#### **Instruction Format:**

47 45	44	43	42	35	34 32	31 29	2827	26 2	1	20	15	1413	12 9	8	7	0
$m_3$	Z	С		~8	Sel <sub>3</sub>	$Sz_3$	$0_{2}$	$Rb_6$		Ra	6	~2	Ai <sub>4</sub>	0		$98h_8$

Ai <sub>4</sub>	Adjustment Amount
0	0
1	1
2	2
3	4
4	8
5	16
15	-1
14	-2
13	-4
12	-8
11	-16
others	reserved

$Sz_3$	
0	byte
1	wyde
2	tetra
3	octa
4 to 7	reserved

**Execution Units:** Memory

#### **Operation:**

$$if \ LC <> 0$$
 
$$mem[Ra] = Rb$$
 
$$Ra = Ra + amt$$
 
$$LC = LC - 1$$

#### **Assembler Example**

LDI LC,200 BSETB Rb,[Ra]+

## Branch / Flow Control Instructions

## Overview

#### **Mnemonics**

There are two sets of mnemonics for branch instructions. Branch instructions that are IP relative, specify Ca = 7 in the branch instruction and are referred to with a 'B' as in BEQ. Using mnemonics that begin with 'B' imply the code address register is the instruction pointer, C7. Branch instructions that are relative to other code address registers are referred to as jump instructions and begin with a 'J' in the mnemonic.

There are further mnemonics for specifying the comparison method. Floating-point comparisons prefix the branch mnemonic with 'F' as in FBEQ. Decimal-floating point comparisons prefix the branch mnemonic with 'DF' as in DFBEQ. And finally posit comparisons prefix the branch mnemonic with a 'P' as in 'PBEQ'.

#### **Conditions**

Conditional branches branch to the target address only if the condition is true. The condition is determined by the comparison of two general-purpose registers.

The original Thor machine used instruction predicates to implement conditional branching. Another instruction was required to set the predicate before branching. Combining compare and branch in a single instruction may reduce the dynamic instruction count. An issue with comparing and branching in a single instruction is that it may lead to a wider instruction format.

The comparison used is determined by a three-bit field in the instruction. There are four comparison types that may be performed as outlined in the table below.

Cm <sub>3</sub>	Comparison Type
0	signed integer comparisons
1	quad float comparison
2	quad decimal float comparison
3	posit comparison
4	unsigned integer comparisons
5 to 7	reserved

## **Conditional Branch Format**

Branches use 48-bit opcodes.

A 32-bit opcode would not leave a large enough target field and would end up using two or more instructions to implement most branches. With the prospect of using two instructions to perform compare then branches as many architectures do, it is more space efficient to simply use a wider instruction format.

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	$Lk_2$	0	2x	$h_8$

# **Branch Conditions**


The branch opcode determines the condition under which the branch will execute.

									•	7			,	▼
47		29	28 26	2524	23	19	18	14	13	11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	R	$b_5$	R	a <sub>5</sub>	Cr	$n_3$	Lk <sub>2</sub>	0	23	κh <sub>8</sub>

2x	Integer Comparison Test	Float / Decimal Float	Posit
28h	signed less than	less than	less than
29h	signed greater or equal	greater than or equal	greater than or equal
2Ah	signed less than or equal	less than or equal	less than or equal
2Bh	signed greater than	greater than	greater than
2Ch		magnitude less than	
2Dh			
2Eh			
2Fh			
26h	equal	equal	equal
27h	not equal	not equal	not equal
24h	bit clear	ordered	
25h	bit set	unordered	

## Linkage

Branches may specify a linkage register which is updated with the address of the next instruction. This allows subroutines to be called. There are two link registers in the architecture.

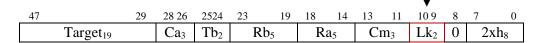

Lk <sub>2</sub>	Meaning
0	do not store return address
1	use Lk1
2	use Lk2
3	reserved

# **Branch Target**

For conditional branches, the target address is formed as the sum of a code address register and a 19-bit constant specified in the instruction. Branches may be IP relative with a range of  $\pm 512$ kB.

	▼		▼										
47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	2xl	18

## **Branch to Register**

The branch to register instruction allows a conditional return from subroutine to be used or a branch to a value in a register. Branching to a value in a register allows all bits of the instruction pointer to be set. Since addresses are formed as the sum of a code address register and a constant in the instruction, branching to a register is inherent in the instruction. The target constant may be set to zero. Specifying Ca = 0 will use the value zero rather than the contents of Ca zero. This allows absolute address branches to be formed.

	▼		▼											
47		29	28 26	2524	23	19	18	14	13	11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	Rb <sub>5</sub>		R	$a_5$	Cı	m <sub>3</sub>	Lk <sub>2</sub>	0	2x	$h_8$

## **BBC - Branch if Bit Clear**

#### **Description**:

This instruction branches to the target address if bit Rb of Ra is clear, otherwise program execution continues with the next instruction. Rb may specify either a register or a six-bit unsigned immediate. For a further description see Branch Instructions. Only the first 64-bits of a register may be tested.

#### Formats Supported: B

47	2	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		7 <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		Ra	<b>1</b> 5	Cm <sub>3</sub>	$Lk_2$	0	241	$h_8$

#### **Operation:**

$$\begin{split} Lk &= next \ IP \\ If \ (Ra.bit[Rb_6] == 0) \\ IP &= IP + Constant \end{split}$$

**Execution Units**: Branch

Exceptions: none

## **BBS** – Branch if Bit Set

## **Description**:

This instruction branches to the target address if a bit of Ra is set, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. Only the first 64-bits of a register may be tested.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		Ra	<b>1</b> 5	$Cm_3$	$Lk_2$	0	25h	.8

## **Operation:**

**Execution Units**: Branch

Exceptions: none

## **BEQ** – Branch if Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra equals the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. Note that for float comparisons positive and negative zero are considered equal.

#### Formats Supported: B

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		7 <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	Ra	<b>1</b> 5	$Cm_3$	$Lk_2$	0	26	$h_8$

#### **Operation:**

**Execution Units**: Branch

Exceptions: none

**Notes:** 

For a floating-point comparison positive and negative zero are considered equal.

## **BEQZ** – Branch if Equal to Zero

#### **Description**:

This instruction branches to the target address if the contents of the Ra equals zero, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. In many cases it is sufficient to test and branch if a register is zero. Since this is a common case there is a short-hand instruction format available.

#### **Formats Supported**: B

31 29	28	19	18	14	13	9	8	7	0
7 <sub>3</sub>	Tgt <sub>1</sub>	10	R	$a_5$	Tg	t <sub>5</sub>	0	10	$0h_8$

### **Operation:**

If 
$$(Ra==0)$$
  
 $IP = IP + Constant$ 

**Execution Units:** Branch

Exceptions: none

# **BGE – Branch if Greater Than or Equal**

#### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>	73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	29	$h_8$

#### **Operation:**

$$Lk = next IP$$
If  $(Ra >= Rb)$ 

$$IP = IP + Constant$$

**Execution Units**: Branch

# **BGEU** – Branch if Greater Than or Equal Unsigned

#### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	$Lk_2$	0	29h <sub>8</sub>	:

#### **Operation:**

$$Lk = next IP$$

$$If (Ra>=Rb)$$

$$IP = IP + Constant$$

**Execution Units**: Branch

# **BGT – Branch if Greater Than**

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: B

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Cm <sub>3</sub>	$Lk_2$	0	2B	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units:** Branch

# **BGTU – Branch if Greater Than Unsigned**

#### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Bł	18

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

# **BLE – Branch if Less Than or Equal**

#### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		Ra	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	2A	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

# **BLEU – Branch if Less Than or Equal Unsigned**

#### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Al	18

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

## **BLT – Branch if Less Than**

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target	19	73	Tb <sub>2</sub>	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	28	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

# **BLTU** – Branch if Less Than Unsigned

#### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	28h	18

#### **Operation:**

$$\begin{split} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= IP + Constant \end{split}$$

**Execution Units**: Branch

## **BNE – Branch if Not Equal**

### **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. Float comparisons treat positive and negative zero as equal.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Ta	rget <sub>19</sub>	73	$Tb_2$	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	27	$h_8$

### **Operation:**

$$Lk = next IP$$
If  $(Ra != Rb)$ 

$$IP = IP + Constant$$

**Execution Units**: Branch

Exceptions: none


**Notes:** 

## **BNEZ** – Branch if Not Equal to Zero

#### **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to zero, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

#### Formats Supported: B



#### **Operation:**

**Execution Units:** Branch

Exceptions: none

## **BRA** – Branch Always

### **Description**:

This instruction always branches to the target address. The target address range is  $\pm 8GB$ .

#### Formats Supported: B

47		32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
	Target <sub>16</sub>		7 <sub>3</sub>			Tar	get <sub>18</sub>				0	0	20	$0h_8$

#### **Operation:**

IP = IP + Constant

**Execution Units:** Branch

Exceptions: none

**Notes:** 

## **BSR** – Branch to Subroutine

#### **Description**:

This instruction always jumps to the target address. The address of the next instruction is stored in a link register.

#### Formats Supported: B

47 32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Target <sub>16</sub>	73			Tar	get <sub>18</sub>				Lk <sub>2</sub>	0	20	$h_8$

#### **Operation:**

Lk = next IP

IP = IP + Constant

**Execution Units:** Branch

Exceptions: none

## **DBRA – Decrement and Branch**

## **Description**:

This instruction always branches to the target address if the loop count is non-zero. The target address range is  $\pm 8GB$ . The register used as the loop counter is r58.

#### Formats Supported: B

	47	32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Г	Target <sub>16</sub>		73			Tar	get <sub>18</sub>				0	0	21	$h_8$

#### **Operation:**

If (LC 
$$!= 0$$
)
$$IP = IP + Constant$$

$$LC = LC - 1$$

**Execution Units:** Branch

**Exceptions**: none

**Notes:** 

## **DJMP – Decrement and Jump**

#### **Description**:

This instruction always jumps to the target address. The target address range is  $\pm 8GB$ .

#### **Instruction Format**: JMP

47		32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0	
	Target <sub>16</sub>		Ca <sub>3</sub>			Tar	get <sub>18</sub>				0	0	21	$h_8$	

#### **Operation:**

If (LC != 0)  

$$Lk = next IP$$
  
 $IP = Ca + sign extend (Constant_{27})$   
 $LC = LC - 1$ 

**Execution Units**: Branch

Exceptions: none

# JBC – Jump if Bit Clear

## **Description**:

This instruction branches to the target address if a bit of Ra is clear, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

## Formats Supported: J

47	29	28 26	2524	23 1	9	18 14	13 11	109	8	7 0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		Ra <sub>5</sub>	03	Lk <sub>2</sub>	0	24h <sub>8</sub>

## **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra.bit[Rb] &== 0) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

Exceptions: none

# JBS – Jump if Bit Set

## **Description**:

This instruction branches to the target address if a bit of Ra is set, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

## Formats Supported: J

47	29	28 26	2524	23 1	9	18 1	4	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		Ra <sub>5</sub>		$0_{3}$	$Lk_2$	0	25h <sub>8</sub>	3

## **Operation:**

**Execution Units**: Branch

Exceptions: none

# JEQ – Jump if Equal

## **Description**:

This instruction branches to the target address if the contents of the Ra equals the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	26h	8

## **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &== Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

Exceptions: none

# **JGE – Jump if Greater Than or Equal**

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	291	$h_8$

#### **Operation:**

$$Lk = next IP$$

$$If (Ra>=Rb)$$

$$IP = Ca + Constant$$

**Execution Units:** Branch

# JGEU – Jump if Greater Than or Equal Unsigned

#### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>	9	Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	$Lk_2$	0	29h	18

#### **Operation:**

$$Lk = next IP$$

$$If (Ra >= Rb)$$

$$IP = Ca + Constant$$

**Execution Units:** Branch

# JGT – Jump if Greater Than

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	:	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	;	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	2B1	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# JGTU – Jump if Greater Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	2	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	;	R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Bh	18

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# JLE – Jump if Less Than or Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	, , , , , , , , , , , , , , , , , , ,	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	;	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	2A	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

## JLEU – Jump if Less Than or Equal Unsigned

#### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	29	28 26	2524	23 1	9	18	14	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	$Rb_5$		Ra	a <sub>5</sub>	43	$Lk_2$	0	2Ah <sub>8</sub>	

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# JLT – Jump if Less Than

## **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	28	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# JLTU – Jump if Less Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	2	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	43	$Lk_2$	0	281	18

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# JNE – Jump if Not Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. For floats, positive and negative zero are considered equal.

#### **Formats Supported:** J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	271	$h_8$

## **Operation:**

$$Lk = next IP$$
If (Ra != Rb)
$$IP = Ca + Constant$$

**Execution Units:** Branch

Exceptions: none

# JMP – Jump

## **Description**:

This instruction always jumps to the target address. The target address range is  $\pm 8GB$ .

## **Instruction Format**: JMP

47	32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Target <sub>16</sub>		Ca <sub>3</sub>			Tar	get <sub>18</sub>				0	0	201	$h_8$

## **Operation:**

$$Lk = next IP$$

 $IP = Ca + sign extend (Constant_{27})$ 

**Execution Units**: Branch

Exceptions: none

# JSR – Jump to Subroutine

## **Description**:

This instruction always jumps to the target address. The address of the next instruction is stored in a link register. The target address range is  $\pm 8GB$ .

## Formats Supported: JMP

47	32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Target <sub>16</sub>		Ca <sub>3</sub>			Tar	get <sub>18</sub>				Lk <sub>2</sub>	0	20	$h_8$

## **Operation:**

Lk = next IPIP = Ca + Constant

**Execution Units**: Branch

Exceptions: none

# **NOP – No Operation**

## **Description:**

This instruction does not do anything.

## **Integer Instruction Format:**

15	9	8	7	0
~7		V	F	1h <sub>8</sub>

Operation: none

**Vector Operation** 

**Execution Units:** I

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

## **RTS – Return from Subroutine**

## **Description**:

This instruction returns from a subroutine by transferring program execution to the address calculated as the sum of a link register and a constant. The const field is shifted left once before use.

### **Formats Supported:** RTS

15	11	10 9	8	7	0
Cor	ıst <sub>5</sub>	$Lk_2$	0	F	2h <sub>8</sub>

Flags Affected: none

**Operation:** 

**Execution Units**: Branch

Exceptions: none

**Notes**:

A branch instruction may also be used to return from a subroutine

Return address prediction hardware may make use of the RTS instruction.

# **System Instructions**

## **BRK** – Break

### **Description**:

This instruction initiates the processor debug routine. The processor enters debug mode. The cause code register is set to indicate execution of a BRK instruction. Interrupts are disabled. The instruction pointer is reset to the contents of tvec[3] and instructions begin executing. There should be a jump instruction placed at the break vector location. The address of the BRK instruction is stored in the EIP register, C6.

#### **Instruction Format: BRK**

15	9	8	7	0
~7	,	0	00	)h <sub>8</sub>

### **Operation:**

PMSTACK = (PMSTACK << 8) | 3Eh PLSTACK = (PLSTACK << 8) | FFh CAUSE = FLT\_BRK C[8+stk\_depth] = IP IP = tvec[3]

**Execution Units:** Branch

**Clock Cycles:** 

Exceptions: none

**Notes:** 

## **CSRx – Control and Special / Status Access**

### **Description**:

The CSR instruction group provides access to control and special or status registers in the core. For the read operation the current value of the CSR is placed in the target register Rt.

#### **Instruction Format: CSR**

47 45	44	43 41	40 37	36	2	21	20	15	14	9	8	7	0
$m_3$	Z	$O_3$	~4		Immediate <sub>150</sub>		Ra	16	Rt	6	v	(	)Fh <sub>8</sub>

O <sub>3</sub>		Operation
0	CSRRD	Only read the CSR, no update takes place, Ra should be x0.
1	CSRRW	Read/Write to CSR
2	CSRRS	Read/Set CSR bits
3	CSRRC	Read/Clear CSR bits
4 to 7		Reserved

CSRRS and CSRRC operations are only valid on registers that support the capability.

The Regno<sub>[15..12]</sub> field is reserved to specify the operating mode. Note that registers cannot be accessed by a lower operating mode.

Execution Units: Integer, the instruction may be available on only a single execution unit (not supported on all available integer units).

### Clock Cycles: 1

**Exceptions**: privilege violation attempting to access registers outside of those allowed for the operating mode.

# **DI – Disable Interrupts**

## **Description:**

This instruction disables interrupts for a short period of time. The Rb field specifies the number of following instructions for which interrupts are disabled. Interrupts may be disabled for the execution of a maximum of seven instructions.

### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
16h	7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	6	~	6	V	07	$7h_8$

**Operation:** 

**Execution Units**: ALU

**Clock Cycles:** 

Exceptions: none

**Notes**:

## **INT** – Generate Interrupt

### **Description:**

Generate interrupt. This instruction invokes the system exception handler. The return address is stored in the EIP register (code address register #8 to 15).

The return address stored is the address of the interrupt instruction, not the address of the next instruction. To call system routines use the  $\underline{SYS}$  instruction.

The level of the interrupt is checked and if the interrupt level in the instruction is less than or equal to the current interrupt level then the instruction will be ignored.

#### **Instruction Format:**

31		20	19	17	16	9	8	7	0
	~12		Lv	/13	Cau	se <sub>8</sub>	0		A6h <sub>8</sub>

## **Operation:**

```
\begin{split} PMSTACK &= (PMSTACK << 8) \mid 30h + (Lvl_3 * 2) \\ PLSTACK &= (PLSTACK << 8) \mid FFh \\ CAUSE &= Cause_8 \\ C[8+stk\_depth] &= IP \\ IP &= tvec[3] \end{split}
```

# **MEMDB – Memory Data Barrier**

## **Description:**

All memory accesses before the MEMDB command are completed before any memory accesses after the data barrier are started.

### **Instruction Format:**

15	9	8	7	0
~7		0		F9h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Memory

# **MEMSB – Memory Synchronization Barrier**

## **Description:**

All instructions before the MEMSB command are completed before any memory access is started.

### **Instruction Format:**

15	9	8	7	0
~7		0		F8h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Memory

## MFLK – Move from Link Register

### **Description**:

This instruction moves a link register to a general-purpose register. Only the offset portion of the link register is moved. Link registers including the selector portion are available with the CSR instructions.

**Instruction Format: MFLK** 

# MTLK – Move to Link Register

## **Description**:

This instruction moves a general-purpose register to a link register. Only the offset portion of the link register is moved. Link registers including the selector portion are available with the CSR instructions.

**Instruction Format: MFLK** 

# MFSEL – Move from Selector Register

## **Description:**

This instruction moves a selector register indirectly specified by Rb or directly if Rb is a constant, to register Rt.

### **Instruction Format:** OSR2

4	7	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	28h <sub>7</sub>		$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	6	Rı	t <sub>6</sub>	V	07	$7h_8$

## **Operation:**

$$Rt = Sel[Rb]$$

## **Examples:**

LDI \$t1,#7 MFSEL \$t0,[\$t1]

; get CS

STO \$t0,CSSave

**Execution Units:** ALU

**Clock Cycles:** 

# **MTSEL** – **Move to Selector Register**

### **Description:**

This instruction moves register Ra to the selector register identified indirectly by the contents of Rb or directly if Rb is a constant. This instruction will load the associated descriptor cache from either the GDT or LDT tables.

It is not possible to move a value directly to the CS register as that would cause an unexpected change of program flow. Instead, the CS register must be loaded via a branch instruction.

### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
29	h <sub>7</sub>	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	07	$7h_8$

## **Operation:**

$$B[Rb] = Ra$$

### **Selector Registers:**

#	Reg	Usage
0	ZS	
1	DS	data selector
2	ES	
3	FS	
4	GS	
5	HS	
6	SS	stack selector
7	CS	code selector
8	PMA0	physical memory attributes
9	PMA1	
10	PMA2	
11	PMA3	
12	PMA4	
13	PMA5	
14	PMA6	
15	PMA7	
16	PTA	page table address
17	LDT	local descriptor table selector
18	KYT	memory key table selector

### **Examples:**

MTSEL DS,a0

LDI a1,3

MTSEL a1,a0 # move indirect a0 to b[a1]

**Execution Units:** ALU

Clock Cycle	K Cycles:
-------------	-----------

Exceptions: none

**Notes:** 

# PEEKQ – Peek at Queue / Stack

## **Description**:

This instruction returns the top value into Rt from the hardware queue specified in Rb. The hardware queue position is <u>not</u> advanced. Unused value bits should read as zero. Used the STATQ instruction to get the queue status.

### **Instruction Format**: OSR2

_	47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	0Ah	17	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	~	6	R	t <sub>6</sub>	V	07	7h <sub>8</sub>

## PFI – Poll for Interrupt

## **Description**:

The poll for interrupt instruction polls the interrupt status lines and performs an interrupt service if an interrupt is present. Otherwise, the PFI instruction is treated as a NOP operation. Polling for interrupts is performed by managed code. PFI provides a means to process interrupts at specific points in running software. Rt is loaded with the cause code in the low order eight bits, and the interrupt level in bits eight to eleven of the register.

### **Instruction Format: OSR2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
111	$h_7$	$m_3$	Z	~2	~	<b>'</b> 6	~2	^	<b>~</b> 6	~	<b>'</b> 6	Rt	t <sub>6</sub>	V	07	h <sub>8</sub>

Clock Cycles: 1 (if no exception present)

### **Operation:**


```
\begin{split} & \text{if (irq <> 0)} \\ & \text{Rt[7:0] = cause code} \\ & \text{Rt[11:8] = irq level} \\ & \text{PMSTACK = (PMSTACK << 4) | 6} \\ & \text{CAUSE = Const}_8 \\ & \text{C6 = IP} \\ & \text{IP = tvec[3]} \end{split}
```

**Execution Units: Branch** 

## **POPQ – Pop from Queue / Stack**

## **Description**:

This instruction pops a value into Rt from the hardware queue specified in Rb. The hardware queue position <u>is</u> advanced. Unused value bits should read as zero. To check the queue status, use the STATQ instruction.

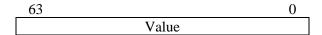

Value: the value that was pushed to the queue

**Instruction Format: OSR2** 

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
09h	.7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	6	R	t <sub>6</sub>	V	07	7h <sub>8</sub>

Exceptions: none

**Notes:** 

Queue #15 is the instruction trace que

## **PUSHQ – Push on Queue / Stack**

## **Description**:

This instruction pushes an N-bit value in Ra onto the hardware queue specified in Rb. Where N is implementation defined between 1 and 64 bits. To check the queue status, use the STATQ instruction.

**Instruction Format: OSR2** 

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
08h	.7	$m_3$	Z	~2	~	6	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	~	6	V	07	7h <sub>8</sub>

# **RESETQ – Reset Queue / Stack**

## **Description**:

This instruction resets the hardware queue specified by Rb.

**Instruction Format**: OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0Ch	7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	6	~	6	V	07h	-8

## **REX – Redirect Exception**

### **Description**:

This instruction redirects an exception from an operating mode to a lower operating mode. This instruction if successful jumps to the target exception handler and does not return. If this instruction fails execution will continue with the next instruction.

This instruction may fail if exceptions are not enabled at the target level.

The location of the target exception handler is found in the trap vector register for that operating mode (tvec[xx]).

The cause (cause) and bad address (badaddr) registers of the originating mode are copied to the corresponding registers in the target mode.

#### **Instruction Format: REX**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14 11	109	8	7	0
10h	17	$m_3$	Z	~2	~	6	~2	~	6	R	$a_6$	~4	$Tm_2$	V	07	h <sub>8</sub>

$Tm_2$	
0	redirect to user mode
1	redirect to supervisor mode
2	redirect to hypervisor mode
3	reserved

### **Clock Cycles:** 4

**Execution Units: Branch** 

#### Example:

REX 1 ; redirect to supervisor handler

; If the redirection failed, exceptions were likely disabled at the target level.

; Continue processing so the target level may complete its operation.

RTE ; redirection failed (exceptions disabled ?)

#### Notes:

Since all exceptions are initially handled in machine mode the machine handler must check for disabled lower mode exceptions.

## **RTI – Return from Interrupt or Exception**

### **Description**:

Restore the previous interrupt enable setting, operating mode, and privilege level and transfer program execution back to the address in the exception address register (one of C8 to C15). One of sixty-four semaphore registers specified by the Rb field of the instruction may also be cleared. Semaphore register zero is always cleared by this instruction.

This instruction may be encoded to return a short distance past the exception address point. This may be useful to return to the next instruction or return to a point past inline parameters. The constant<sub>6</sub> field specifies a return offset in terms of bytes.

There is only a single instruction to return from any mode for an exception. Although there are several additional mnemonics.

#### **Instruction Format: OSR2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
13	h <sub>7</sub>	$m_3$	Z	~2	,	<b>'</b> 6	Tb <sub>2</sub>	R	$b_6$	~	6	Cor	ıst <sub>6</sub>	V	071	$h_8$

Flags Affected: none

### **Operation:**

PMSTACK = PMSTACK >> 8 PLSTACK = PLSTACK >> 8 Semaphore[0] = 0 Semaphore[Rb] = 0 IP = C[7+stk\_depth] + Constant

**Execution Units**: Branch

**Clock Cycles:** 

Exceptions: none

**Notes:** 

# **SEI – Set Interrupt Level**

## **Description:**

The interrupt mask is set, disabling lower level maskable interrupts. The current interrupt mask level is stored in the target register Rt. The new interrupt mask level is set to the contents of Rb. This instruction is available only in machine mode.

#### **Instruction Format:**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
17	$h_7$	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	6	R	$t_6$	V	07	h <sub>8</sub>

Clock Cycles: 1

**Operation:** 

 $im = Rb_{[2:0]}$ 

## STATQ – Get Status of Queue / Stack

## **Description**:

This instruction returns a queue status value into Rt from the hardware queue specified in Rb. The hardware queue position is not advanced. Unused value bits should read as zero.

63	62	61	48	47		0
Qe	Dv	Data (	Count		Extended Data (XD)	

### Fields

Qe: empty. If set, this bit indicates that the queue/stack is empty.

Dv: data valid. If this bit is set it indicates that valid data is present at the queue.

Dc: data count: The number of items left in the queue

XD: The high order 48 bits of the data stored by the queue if the queue is wider than 64 bits.

### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0B1	$h_7$	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	<b>'</b> 6	R	$t_6$	V	0′	7h <sub>8</sub>

## **SYNC -Synchronize**

## **Description:**

All instructions for a particular unit before the SYNC are completed and committed to the architectural state before instructions of the unit type after the SYNC are issued. This instruction is used to ensure that the machine state is valid before subsequent instructions are executed.

#### **Instruction Format:**

15	9	8	7	0
~	7	0	I	F7h <sub>8</sub>

# **SYS – Call system routine**

### **Description:**

This instruction invokes the system exception handler. The return address is stored in the EIP register (code address register #8 to 15). This instruction causes the core to switch to machine mode.

### **Instruction Format:**

_	31		17	16	9	8	7	0
		~15		Cau	se <sub>8</sub>	0		A5h <sub>8</sub>

### **Operation**:

## TLBRW - Read / Write TLB

### **Description**:

This instruction both reads and writes the TLB. Which translation entry to update and the value to use comes from the value in register pair Ra, Rb which contains the virtual page number, ASID, and physical page number. The current value of the entry selected by Ra is copied to register Rt. The TLB will be written only if bit 31 of Ra is set. A random way may be selected for write by setting the 'r' bit in the Ra value.

The entry number for Ra comes from virtual address bits 12 to 21.

Page numbers are in terms of a 4kB page size.

#### **Instruction Format: OSR3**

47	41	49 38	37	36 34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
1E	Eh <sub>7</sub>	$m_3$	Z	~3	~	~2	~	5	~2	R	<b>b</b> <sub>5</sub>	R	$a_5$	R	t <sub>5</sub>	v	07	$h_8$

**Clock Cycles: 5** 

### **Execution Units**: Memory

#### Ra Value Format

31		20	19	18	17	16	15	14	13 12	1110	8	7	6	5	4	3	2	1	0
W ~14 S AL2 ~2 way Entry							try N	lo <sub>10</sub>											
	ASID <sub>12</sub>		SC	SR	SW	SX	V	G	~2	ВС	4	D	U	S	Α	С	R	W	X
	Key32																		
	Access Count <sub>32</sub>																		

 $AL_2$ : update algorithm 0 =fixed, 1 =LRU, 2 =random

S: 0 = return page numbers, 1=return access rights

#### Rb Value Format

Physical Page Number <sub>310</sub>							
Av PL8 Physical Page Number5132							
Virtual Page Number <sub>310</sub>							
Virtual Page Number <sub>5132</sub>							

	Meaning								
PPN	Physical page number (address bits 12 to 63)								
VPN	Virtual page number high address order bits 12 to 63								
X	1 = page is executable These three combined indicate page								
W	1 = page is writeable present (P) $0 = not present$								
R	1 = page is readable								
С	1 = page is cachable								
A	Accessed, set if translation was used								
S	1 = 4MB page								
U	reserved for system usage								
D	Dirty, set if a write occurred to the page								
BC	bounce count								
~	reserved	·							
V	1 = translation valid (page is present)								
G	Global, global translation indicator								
SX	1 = page is executable by system								

SW	1 = page is writeable by system
SR	1 = page is readable by system
SC	1 = page is cacheable by system
ASID	ASID address space identifier

Exceptions: none

## **WAIT – Wait for Signal**

### **Description**:

The WAIT instruction waits for a signal to occur before proceeding.

**Instruction Format: WAIT** 

15	1	1	10	9	8	7	0
	<b>~</b> 5		D	0	0	F	Ah <sub>8</sub>

**Clock Cycles**: 1 (if no exception present)

**Execution Units: Branch** 

# WFI – Wait for Interrupt

### **Description**:

The WFI instruction waits for an external interrupt to occur before proceeding. While waiting for the interrupt, the processor clock is stopped placing the processor in a lower power mode.

**Instruction Format: WAIT** 

15	10	9	8	7	0
0,	5	1	0	F	$Ah_8$

**Clock Cycles**: 1 (if no exception present)

**Execution Units:** Branch

## **Macro Instructions**

## **DEFCAT – Default Catch Handler**

### **Description**:

DEFCAT reaches into the stack frame of the calling function to get the last registered catch handler address. It then moves this value to the return address fields of the return block so that the current function will return to the catch handler in the caller. The values in registers t0 and t1 are overwritten.

### **Instruction Format**: DEFCAT

15	9	8	7	0
~7		0	F	$0h_8$

## **Operation:**

T0 = Memory[FP]

T1 = Memory32[T0]

Memory16[FP] = T1

T1 = Memory40[T0]

Memory32[FP] = T1

## **ENTER – Enter Routine**

#### **Description**:

This instruction is used for subroutine linkage at entrance into a subroutine. First it pushes the frame pointer and return address onto the stack, next the stack pointer is loaded into the frame pointer, and finally the stack space is allocated. This instruction is code dense, replacing eight other instructions with a single instruction.

A maximum of 8MB may be allocated on the stack. An immediate prefix may not be used with this instruction. The stack and frame pointers are assumed to be r63 and r62 respectively.

Note that the constant must be a negative number and a multiple of sixteen.

Note that the instruction reserves room for two words in addition to the return address and frame pointer. One use for the extra words may to store exception handling information.

Note this instruction uses T0 as a temporary register.

#### **Integer Instruction Format: RI**

_	31	9	8	7	0
	Constant <sub>23</sub>		0	Al	Fh <sub>8</sub>

### **Operation:**

SP = SP - 64 Memory[SP] = FP T0 = CA1 Memory16[SP] = T0 Memory32[SP] = 0 ; zero out catch handler address Memory48[SP] = 0

FP = SP

SP = SP + constant

## **LEAVE – Leave Routine**

### **Description**:

This instruction is used for subroutine linkage at exit from a subroutine. First it moves the frame pointer to the stack pointer deallocating any stack memory allocations. Next the frame pointer and return address are popped off the stack. The stack pointer is adjusted by the amount specified in the instruction. Then a jump is made to the return address. This instruction is code dense, replacing six other instructions with a single instruction. The stack pointer adjustment is multiplied by sixteen keeping the stack pointer word aligned. A three-bit constant multiplied by two is added to the link register to form the return address. This allows returning up to 16 bytes past the normal return address.

**Instruction Format: LEAVE** 

31	13	129	8	7	0
Cor	nstant <sub>19</sub>	Cnst <sub>4</sub>	0	Bl	Fh <sub>8</sub>

### **Operation:**

SP = FP FP = Memory[SP] T0 = Memory16[SP] CA1 = T0  $SP = SP + 64 + Constant_{20} * 16$   $IP = CA1 + Cnst_3 * 2$ 

## **POP – Pop Register from Stack**

## **Description**:

This instruction pops a register from the stack.

#### **Instruction Format: POP**

15	14	9	8	7	0
0	Ra	$\mathfrak{d}_6$	0	В	$Ch_8$

#### **Operation:**

Ra = Memory[SP]SP = SP + 8

# **POP – Pop Register Pair from Stack**

## **Description**:

This instruction pops a pair of registers from the stack.

**Instruction Format**: POP2R

31 29	2827	26	21	20	15	14	9	8	7	0
$0_{3}$	$0_{2}$	0	) <sub>6</sub>	R	$b_6$	Ra	16	0	BI	$Dh_8$

## **Operation:**

Ra = Memory[SP]

Rb = Memory8[SP]

SP = SP + 16

# **POP – Pop Register Triple from Stack**

## **Description**:

This instruction pops a triple of registers from the stack.

**Instruction Format**: POP3R

31 29	2827	26	21	20	15	14	9	8	7	0
$0_{3}$	$0_2$	R	$c_6$	R	$b_6$	Ra	16	0	BI	$\Xi h_8$

### **Operation:**

Ra = Memory[SP]

Rb = Memory8[SP]

Rc = Memory16[SP]

SP = SP + 24

# **PUSH – Push Register on Stack**

## **Description**:

This instruction pushes a register onto a stack.

**Instruction Format**: PUSH

15	14 9	8	7	0
0	Ra <sub>6</sub>	0	A	Ch <sub>8</sub>

## **Operation:**

$$SP = SP - 8$$
  
Memory[SP] = Ra

## **PUSH – Push Register Pair on Stack**

## **Description**:

This instruction pushes a pair of registers onto a stack.

**Instruction Format**: PUSH

31 29	2827	26	21	20	15	14	9	8	7	0
$0_{3}$	$0_{2}$	C	) <sub>6</sub>	R	$b_6$	Ra	16	0	AI	Oh <sub>8</sub>

### **Operation:**

$$SP = SP - 16$$
  
 $Memory[SP] = Rb$   
 $Memory8[SP] = Ra$ 

# **PUSH – Push Register Triple on Stack**

## **Description**:

This instruction pushes three registers onto a stack.

**Instruction Format**: PUSH

	31 29	2827	26	21	20	15	14	9	8	7	0
ĺ	$0_{3}$	$0_2$	R	$c_6$	R	$b_6$	Ra	$\mathfrak{d}_6$	0	Α	$Eh_8$

### **Operation:**

$$SP = SP - 24$$
  
 $Memory[SP] = Rc$   
 $Memory8[SP] = Rb$   
 $Memory16[SP] = Ra$ 

# **Vector Specific Instructions**

## **V2BITS**

## **Description**

Convert Boolean vector to bits. A bit specified by Rb of each vector element is copied to the bit corresponding to the vector element in the target register. The target register is a scalar register. Usually, Rb would be zero so that the least significant bit of the vector is copied.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3	Dh <sub>7</sub>	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02	$2h_8$

## Operation

```
For x = 0 to VL-1

if (Vm[x])

Rt.bit[x] = Ra[x].bit[Rb]

else if (z)

Rt.bit[x] = 0

else

Rt.bit[x] = Rt.bit[x]
```

# **VBITS2V**

## **Description**

This is an alternate mnemonic for the  $\underline{CMOVNZ}$  instruction where Rb=1 and Rc=0. The effect is to generate a Boolean vector from the contents of register Ra.

### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
2Dh	17	$m_3$	Z	22	0	6	$2_{2}$	1	l <sub>6</sub>	R	$a_6$	Rt	6	V	02	$2h_8$

## Operation

For 
$$x = 0$$
 to VL-1 
$$if (Vm[x]) \ Vt[x] = Ra.bit[x] \ ? \ 1 : 0$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **VGIDX** – Generate Index

### **Description**

A value in a register Ra is multiplied by the element number and added to a value in Rb and copied to elements of vector register Vt guided by a vector mask register. Ra is a scalar register. This operation may be used to compute memory addresses for a subsequent vector load or store operation. Only the low order 24-bits of Ra are involved in the multiply. The result of the multiply is a product less than 41 bits in size. The multiply is a fast 24x16 bit multiply.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3Ch	17	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	$t_6$	v	02	2h <sub>8</sub>

### **Operation**

$$y = 0$$
  
for  $x = 0$  to  $VL - 1$   
if  $(Vm[x])$   
$$Vt[y] = Ra * y + Rb$$
$$y = y + 1$$

## **VCMPRSS** – Compress Vector

## **Description**

Selected elements from vector register Va are copied to elements of vector register Vt guided by a vector mask register.

### **Instruction Format: R1**

31 25	24 22	21	20	5 14	1 9	8	7 0
2Ch <sub>7</sub>	m <sub>3</sub>	Z	Ra <sub>6</sub>		Rt <sub>6</sub>	1	01h <sub>8</sub>

### **Operation**

$$y = 0$$
 for  $x = 0$  to  $VL - 1$  
$$if (Vm[x])$$
 
$$Vt[y] = Va[x]$$
 
$$y = y + 1$$

# **VEINS / VMOVSV – Vector Element Insert**

### **Synopsis**

Vector element insert.

### **Description**

A general-purpose register Rb is transferred into one element of a vector register Vt. The element to insert is identified by Ra.

#### **Instruction Format:** R2

_	47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	3Bh	17	$m_3$	Z	~2	~	6	$Tb_2$	Rl	06	R	$a_6$	Rı	6	V	02	2h <sub>8</sub>

## Operation

$$Vt[Ra] = Rb$$

## **VEX / VMOVS – Vector Element Extract**

## **Synopsis**

Vector element extract.

### **Description**

A vector register element from Vb is transferred into a general-purpose register Rt. The element to extract is identified by Ra. Ra and Rt are scalar registers.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3Ah	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	R	6	V	0	2h <sub>8</sub>

### **Operation**

Rt = Vb[Ra]

Exceptions: none

# **MFLC – Move from Loop Counter**

### **Description**

Move loop counter register to a general-purpose register.

### **Instruction Format: R1**

31	27	26	18	17 15	14	Ģ	9	8	7	0
15h <sub>5</sub>			<b>~</b> 9	~3	Rt <sub>6</sub>		0		52h <sub>8</sub>	

### Operation

Rt = VL

**Execution Units:** ALUs

## MFVM – Move from Vector Mask

## **Description**

Move a mask register to a general-purpose register.

**Instruction Format: VMR2** 

31	27	26	18	17 15	14	9	8	7	0
11	h <sub>5</sub>		~9	Vmb <sub>3</sub>	F	$Rt_6$	0	5	$2h_8$

## Operation

Rt = Vmb

**Execution Units:** ALUs

# MFVL – Move from Vector Length

### **Description**

Move vector length register to a general-purpose register.

**Instruction Format: R1** 

31 2	7 26	18	17 15	14	9	8	7	0
13h <sub>5</sub>		<b>~</b> 9	~3		Rt <sub>6</sub>	0	52	$2h_8$

### **Operation**

Rt = VL

**Execution Units: ALUs** 

## MTVM – Move to Vector Mask

### **Description**

Move a general-purpose register to a mask register.

**Instruction Format: VMR2** 

31	27	26	21	20	15	14 12	11	9	8	7	0
10h <sub>5</sub>		<b>~</b> <sub>6</sub>		Ra <sub>6</sub>		~3	Vmt <sub>3</sub>		0	52	2h <sub>8</sub>

## Operation

Vmt = Ra

**Execution Units: ALUs** 

# MTLC – Move to Loop Counter

## Description

Move a general-purpose register to the vector length register.

## **Instruction Format: VMR2**

31	27	26	21	20	15	14 12	11	9	8	7	0
14	h <sub>5</sub>	~	<b>'</b> 6	Ra	$\mathfrak{l}_6$	~3	~	3	0	52	$2h_8$

## Operation

$$VL = Ra$$

**Execution Units:** ALUs

# MTVL – Move to Vector Length

# Description

Move a general-purpose register to the vector length register.

# **Instruction Format: VMR2**

31 27	26 21	20 15	14 12	11 9	8	7 0
12h <sub>5</sub>	~6	Ra <sub>6</sub>	~3	~3	0	52h <sub>8</sub>

# Operation

$$VL = Ra$$

**Execution Units:** ALUs

# VMADD - Vector Mask Add

## **Description:**

Add the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14 12	11 9	8	7 0
04	$h_5$		<b>~</b> 9		$Vmb_3$	Vma <sub>3</sub>	$Vmt_3$	0	52h <sub>8</sub>
1 c	lock	cycle							

**Exceptions:** none

# VMAND - Vector Mask And

### **Description:**

Bitwise 'and' the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

31	27	26	18	17 15	14 12	11 9	8	7	0
081	h <sub>5</sub>		~9	$Vmb_3$	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>	
1 c	lock	cycl	e			•		•	

Exceptions: none

# **VMCNTPOP – Count Population**

CNTPOP r1,vm2

**Description:** 

Count the number of ones and place the count in the target register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14	9	8	7	0
0D	h <sub>5</sub>		~9		Vmb <sub>3</sub>	Rt <sub>6</sub>		0	52	$2h_8$


**Execution Units: integer** ALU

# VMFILL - Vector Mask Fill

## **Description:**

Fill the contents of a vector mask register with a mask of ones beginning at Mb<sub>6</sub> and ending at Me<sub>6</sub> inclusive. Fill the remainder of the register with zeros.

#### **Instruction Format:**



1 clock cycle

Exceptions: none

# VMFIRST – Find First Set Bit

## Description

The position of the first bit set in the mask register is copied to the target register. If no bits are set the value is 65536. The search begins at the least significant bit and proceeds to the most significant bit.

#### **Instruction Format: R1**

31	27	26	18	17 15	14	9	8	7	0
0E	h <sub>5</sub>		~9	$Vmb_3$	$Rt_6$		0	521	$h_8$

## Operation

Rt = first set bit number of (Vm)

Exceptions: none

**Execution Units: ALUs** 

# VMLAST – Find Last Set Bit

## **Description**

The position of the last bit set in the mask register is copied to the target register. If no bits are set the value is 65536. The search begins at the most significant bit of the mask register and proceeds to the least significant bit.

## **Instruction Format: VMR2**

31	27	26	18	17 15	14	9	8	7	0
0F	h <sub>5</sub>		~9	Vmb <sub>3</sub>		$Rt_6$	0	52	$h_8$

# Operation

Rt = last set bit number of (Vm)

Exceptions: none

**Execution Units:** ALUs

# VMOR - Vector Mask Or

# **Description:**

Bitwise 'or' the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14 12	11 9	8	7	0
09	h <sub>5</sub>		<b>~</b> 9		Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52	2h <sub>8</sub>

1 clock cycle

**Exceptions:** none

# VMSLL – Vector Mask Shift Left Logical

## **Description:**

Shift a vector mask register to the left up to 63 bits.

**Instruction Format: VMR2** 

31	27	26	21	20 13	14 12	11 /	8	7 0
1C	h <sub>5</sub>		<b>~</b> 6	Amount <sub>6</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>
- 1	1 1		1					

1 clock cycle

Exceptions: none

# VMSRL – Vector Mask Shift Right Logical

## **Description:**

Shift a vector mask register to the right up to 63 bits.

**Instruction Format: VMR2** 

31	27	26	21	20	15	14 12	11 9	8	7	0
1F	Eh <sub>5</sub>	?	<b>'</b> 6	Amo	ount <sub>6</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	5	2h <sub>8</sub>

1 clock cycle

# VMSUB – Vector Mask Subtract

## **Description:**

Subtract the contents of two vector mask registers and place the result in a vector mask register.

#### **Instruction Format: VMR2**

31	27	26	18	17 15	14 12	11 9	8	7	0
05	h <sub>5</sub>	~	9	$Vmb_3$	Vma <sub>3</sub>	$Vmt_3$	0	52h <sub>8</sub>	
1 (	clock	cycle	e						

Exceptions: none

# VMXOR - Vector Mask Exclusive Or

## **Description:**

Bitwise 'or' the contents of two vector mask registers and place the result in a vector mask register.

### **Instruction Format: VMR2**

31	27	26	18	17 15	14 12	11 9	8	7	0
0.2	$h_5$		<b>~</b> 9	$Vmb_3$	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	521	18
1 (	1 clock cycle		e						

# **VSCAN**

# Description

Elements of Vt are set to the cumulative sum of a value in register Ra. The summation is guided by a vector mask register.

## **Instruction Format:** R1

31 25	24 22	21	20 15	14 9	8	7 0
1Eh <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Vt <sub>6</sub>	1	01h <sub>8</sub>

# Operation

$$sum = 0$$
 for  $x = 0$  to  $VL - 1$  
$$Vt[x] = sum$$
 
$$if (Vm[x])$$
 
$$sum = sum + Ra$$

# **VSLLV – Shift Vector Left Logical**

# **Description**

Elements of the vector are transferred upwards to the next element position. The first is loaded with the value zero. This is also called a slide operation.

### **Instruction Format:** R3

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
38h	17	m <sub>3</sub>	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	RI	b <sub>6</sub>	R	$a_6$	Rt	t <sub>6</sub>	V	02	$2h_8$

# Operation

$$Amt = Rb$$

For 
$$x = VL-1$$
 to Amt

$$Vt[x] = Va[x-amt]$$

For 
$$x = Amt-1$$
 to 0

$$Vt[x] = 0$$

# **VSRLV – Shift Vector Right Logical**

## **Description**

Elements of the vector are transferred downwards to the next element position. The last is loaded with the value zero. This is also called a slide operation.

### **Instruction Format:** R3

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
39h	.7	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	RI	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

# Operation

$$Amt = Rb$$

For 
$$x = 0$$
 to VL-Amt

$$Vt[x] = Va[x+amt]$$

For 
$$x = VL-Amt + 1$$
 to  $VL-1$ 

$$Vt[x] = 0$$

# Cryptographic Accelerator Instructions

# **AES64DS – Final Round Decryption**

### **Description**:

Perform the final round of decryption for the AES standard. Registers Rb, Ra represent the entire AES state.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
50h	7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

**Exceptions:** none

# **AES64DSM – Middle Round Decryption**

### **Description**:

Perform a middle round of decryption for the AES standard. Registers Rb, Ra represent the entire AES state.

#### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
51h	17	$m_3$	Z	~2	`	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

# **AES64ES – Final Round Encryption**

### **Description**:

Perform the final round of encryption for the AES standard. Registers Rb, Ra represent the entire AES state.

## **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
52h	17	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

Exceptions: none

# **AES64ESM – Middle Round Encryption**

### **Description**:

Perform a middle round of encryption for the AES standard. Registers Rb, Ra represent the entire AES state.

## **Integer Instruction Format: R3**

47	7 4	1	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	53h <sub>7</sub>		$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

# **Operation:**

Rt = Ra & Rb

# SHA256SIG0

### **Description:**

Implements the Sigma0 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format: R1**

31	27	24 22	21	20	15	14	9	8	7	0
30	)h <sub>7</sub>	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	v	0	1h <sub>8</sub>

**Clock Cycles: 1** 

### **Operation:**

 $Rt = sign \ extend(ror32(Ra,7) \land ror32(Ra,18) \land (Ra_{32} >> 3))$ 

**Execution Units:** ALU #0

Exceptions: none

# **SHA256SIG1**

### **Description:**

Implements the Sigma1 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

### **Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
31h	17	$m_3$	Z	R	$a_6$	Rt	t <sub>6</sub>	V	0	1h <sub>8</sub>

Clock Cycles: 1

### **Operation:**

 $Rt = sign \ extend(ror32(Ra,17) \land ror32(Ra,19) \land (Ra_{32} >> 10))$ 

**Execution Units:** ALU #0

# SHA256SUM0

## **Description:**

Implements the Sum0 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

### **Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
32	h <sub>7</sub>	$m_3$	Z	R	$a_6$	Rı	t <sub>6</sub>	v	0	1h <sub>8</sub>

### **Operation:**

 $Rt = sign extend(ror32(Ra,2) \land ror32(Ra,13) \land ror32(Ra,22))$ 

**Execution Units:** ALU #0

Exceptions: none

# SHA256SUM1

### **Description:**

Implements the Sum1 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

### **Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
33h	17	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	v	0	1h <sub>8</sub>

### **Operation:**

 $Rt = sign extend(ror32(Ra,6) \land ror32(Ra,11) \land ror32(Ra,25))$ 

**Execution Units:** ALU #0

# SHA512SIG0

## **Description:**

Implements the Sigma0 transformation function used in the SHA2-512 hash function.

**Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
341	17	$m_3$	Z	R	$a_6$	Rı	t <sub>6</sub>	V	0	1h <sub>8</sub>

**Clock Cycles:** 1

## **Operation:**

$$Rt = ror64(Ra, 1) \land ror64(Ra, 8) \land (Ra >> 7)$$

**Execution Units:** ALU #0

Exceptions: none

# SHA512SIG1

### **Description:**

Implements the Sigma1 transformation function used in the SHA2-512 hash function.

**Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
351	h <sub>7</sub>	$m_3$	Z	R	$a_6$	Ri	6	v	0.1	lh <sub>8</sub>

Clock Cycles: 1

### **Operation:**

$$Rt = ror64(Ra, 19) \land ror64(Ra, 61) \land (Ra >> 6)$$

**Execution Units:** ALU #0

# SHA512SUM0

Description:

Instruction Format: R1

31	25	24 22	21	20	15	14	9	8	7	0
3	86h <sub>7</sub>	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	V	0	1h <sub>8</sub>

# SHA512SUM1

Description:

Instruction Format: R1

31	25	24 22	21	20	15	14	9	8	7	0
37	h <sub>7</sub>	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	V	0	1h <sub>8</sub>

# **SM3P0**

Description:

31	25	24 22	21	20	15	14	9	8	7	0
38	3h <sub>7</sub>	m <sub>3</sub>	Z	R	$a_6$	Ri	6	V	0	1h <sub>8</sub>

# SM3P1

Description:

31	25	24 22	21	20	15	14	9	8	7	0
391	n <sub>7</sub>	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	v	0	1h <sub>8</sub>

# **SM4ED**

# **Description:**

**Instruction Format:** R3

							28 27									
56h	.7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	Rl	$o_6$	R	$a_6$	Rı	6	V	0	2h <sub>8</sub>

# SM4KS

# **Description:**

							28 27									
57h	.7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	Rl	$o_6$	R	$a_6$	Rt	6	V	02	$2h_8$


# Neural Network Accelerator Instructions

# **Overview**

Included in the ISA are instructions for neural network acceleration. Each neuron is composed of an accumulator that sums the product of weights and inputs and an output activation function. Neurons may be biased with a bias value and may also have feedback from output to input via a feedback constant. The neurons are implemented using 16.16 fixed-point arithmetic. There are 8 neurons in a single layer which may calculate simultaneously. Following is a sketch of the NNA organization. The weights and input arrays have a depth of 1024 entries. Not all entries need be used. The number of entries in use is configurable programmatically with the base count and maximum count register using the NNA MTBC and NNA MTMC instruction.

Several of the NNA instructions allow multiple neurons to be updated at the same time by representing the neuron update list as a bitmask.

# Neural Network Accelerator – One Neuron

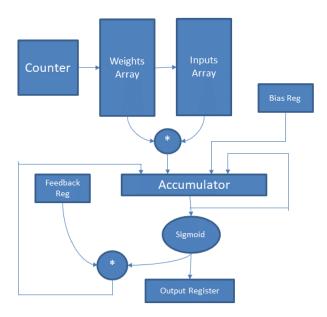

# **NNA\_MFACT – Move from Output Activation**

## **Description:**

Move from activation output register. Move a value from the neuron's activation register output to the target register Rt. Bits 0 to 3 of Ra specify the neuron.

**Instruction Format: R1** 

31 25	24 22	21	20	15	14	9	8	7	0
62h <sub>7</sub>	$m_3$	Z	R	$a_6$	Ri	t <sub>6</sub>	v	0.3	1 h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

# **NNA\_MTBC – Move to Base Count**

### **Description:**

Move to base count register. Move the value in Ra to the base count register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the base count value.

The neuron calculates the activation output using weight and input array entries between the base count and maximum count inclusive.

Manipulating the base count and maximum count registers ease the implementation of multi-layer networks that do not require the use of all array entries.

**Instruction Format: R2** 

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
65h	.7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTBIAS - Move to Bias

# **Description:**

Move to bias value. Move the value in Ra to the bias register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the bias value.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
62h	.7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	~	6	V	0	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTFB - Move to Feedback

## **Description:**

Move to feedback constant. Move the value in Ra to the feedback constant for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the feedback constant.

The feedback constant acts to create feedback in the neuron by multiplying the output activation level by the feedback constant and using the result as an input. If no feedback is desired then this constant should be set to zero.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
63h	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	~	6	V	02	$2h_8$

**Clock Cycles:** 1

**Execution Units: NNA** 

# NNA\_MTIN - Move to Input

## **Description:**

Move to input array. Move the value in Ra to the input memory cell identified with Rb. Bits 0 to 15 of Rb specify the memory cell address, bits 32 to 63 of Rb are a bit mask specifying the neurons to update. Bits 0 to 15 of Rb are incremented and stored in Rt.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
61h	.7	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units: NNA** 

#### **Notes:**

Multiple neurons may have their inputs updated at the same time with the same value. All the neurons may have the same inputs but the weights for the individual neurons would be different so that a pattern may be recognized.

# NNA\_MTMC - Move to Max Count

## **Description:**

Move to maximum count register. Move the value in Ra to the maximum count register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the maximum count value.

The maximum count is the upper limit of inputs and weights to use in the calculation of the activation function. The maximum count should not exceed the hardware table size. The table size is 1024 entries.

The neuron calculates the activation output using weight and input array entries between the base count and maximum count inclusive.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
64h	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	02	$2h_8$

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

# **NNA\_MTWT – Move to Weights**

### **Description:**

Move to weights array. Move the value in Ra to the weight memory cell identified with Rb. Bits 0 to 15 or Rb specify the memory cell address, bits 32 to 63 of Rb are a bit mask specifying the neurons to update. Bits 0 to 15 of Rb are incremented and stored in Rt.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
60ł	<b>1</b> 7	$m_3$	Z	~2	?	6	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_STAT - Get Status

## **Description:**

This instruction gets the status of the neurons. There is a bit in Rt for each neuron. A bit will be set if the neuron is finished performing the calculation of the activation function, otherwise the bit will be clear.

**Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
611	h <sub>7</sub>	$m_3$	Z	~	6	Rt	6	V	0	1h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units: NNA** 

**Notes:** 

# NNA\_TRIG - Trigger Calc

## **Description:**

This instruction triggers a NNA cycle for the neurons identified in the bit mask. The bit mask is contained in register Ra.

**Instruction Format: R1** 

31	25	24 22	21	20	15	14	9	8	7	0
601	<b>1</b> 7	$m_3$	Z	R	$a_6$	~	6	V	0	1h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# Graphics

# **Overview**

Thor has an integrated graphics engine which performs graphics operations such as line or triangle drawing. The graphics engine runs asynchronously to other operations. The interface to the graphics engine is through hardware queue #0. The queue may be updated with the <u>PUSHQ</u> instruction. The queue acts as a worklist for the graphics engine. Software pushes graphics commands onto the queue and the graphics engine pops the commands during its processing.

Value for Ra

63 56	55		40	39 0
Graphics		~		Update Value
Register				
Number				

# **Co-ordinates**

Co-ordinates are specified as 16.16 fixed point numbers.

31	16	15	0
coord.	whole	С	oord.fract

# **Colors**

Colors are represented using ZRGB8888 format. Colors are placed in the low order 32-bits of a register.

31	24	23	16	15	8	7	0
Z-01	rder	B1	ue	Gre	en	F	Red

# **Register Set**

Graphics registers are 40 bits wide. Some registers are infrequently updated such as the target base address or font table address registers.

Reg no		Comment
0	Control Register	
1		
2	Alpha	
3	Transparent Color	
4	Target Base address (selector)	
5	Target Size X	See Target Coordinate registers
6	Target Size Y	

7	Texture Base Address (selector)	
8	Texture Size X	
9	Texture Size Y	
_		
10	Source Pixel #0 X	
11	Source Pixel #0 Y	
12	Source Pixel #1 X	
13	Source Pixel #1 Y	
14	Destination Pixel X	
15	Destination Pixel Y	
16	Destination Pixel Z	
17	Transform Coefficient AA	
18	Transform Coefficient AB	
19	Transform Coefficient AC	
20	Transform Coefficient AT	
21	Transform Coefficient BA	
22	Transform Coefficient BB	
23	Transform Coefficient BC	
24	Transform Coefficient BT	
25	Transform Coefficient CA	
26	Transform Coefficient CB	
27	Transform Coefficient CC	
28	Transform Coefficient CT	
29	Clip Pixel #0 X	Defines a clipping region
30	Clip Pixel #0 Y	
31	Clip Pixel #1 X	
32	Clip Pixel #1 Y	
33	Color #0	Only color #0 is used unless
34	Color #1	interpolating colors
35	Color #2	
36	U0	
37	V0	
38	U1	
39	V1	
40	U2	
41	V2	
42	Z-Buffer Base Address (selector)	
43	(22222)	
44	Target X0	Defines the drawing area
45	Target Y0	
46	Target X1	
47	Target Y1	
48	Font Table Base Address (selector)	
49	Font ID	
50	Character Code	
51 to 63	reserved	
51 10 05	10001104	

# CTRL – Reg #0

Bits moved and added for color depth.

Bit #	Access	Description
[39:32]	~	reserved
[31:30]	W	Bitset operation
[29:24]	~	Reserved
[23:20]	RW	Color Depth
[19]	W	Transform point
[18]	W	Forward point
[17:16]	RW	Active point
[15:14]	~	Reserved
[13]	W	Bézier inside shape
[12]	W	Interpolation
[11]	W	Curve write
[10]	W	Triangle write
[9]	W	Line write
[8]	W	Rect write
[7]	W	Point write
[6]	RW	Z-buffer enable
[5]	RW	Clipping enable
[4]	RW	Transparent Color enable
[3]	RW	Blending enable
[2]	RW	Texture0 enable
[1]	~	Reserved
[0]	W	Char write

Bits 0, 8, 9, 10, 18, and 19 automatically reset to zero.

Opcode	Operation
00	copy bits 0 to 29 to register
01	no operation, register unaffected
10	clear specified bits of register
11	set specified bits of register

Color depth is the number of bits per color component -1.

Mode	<b>Color Depth</b>	Z,R,G,B	Pixels Per Strip
0000	4 bit	1,1,1,1	32
0001	8 bit	2,2,2,2	16
0010	12 bit	3,3,3,3	10
0011	16 bit	4,4,4,4	8
0100	20 bit	5,5,5,5	6
0101	24 bit	6,6,6,6	5
0110	28 bit	7,7,7,7	4
0111	32 bit	8,8,8,8	4
1000	36 bit	9,9,9,9	3
1001	40 bit	10,10,10,10	3

### Alpha – reg #2

This register contains alpha values for global and point 0,1,2 alphas. 0xFF is full opacity, 0x00 is full transparency. The point alpha values are used to compute an interpolated alpha value from each point of a triangle. The interpolated alpha value is then multiplied by the global alpha value.

Bits	
0 to 7	Global Alpha
8 to 15	Point #2 alpha
16 to 23	Point #1 alpha
24 to 31	Point #0 alpha

### Transparent Color – reg #3

Pixels colored matching the transparent color will not be drawn if the transparent color is enabled by bot4 of the control register.

#### Target Base Address – reg #4

This register contains the 32-bit selector identifying where in memory the graphics drawing target is located.

### Texture Base Address – reg #7

This register contains the 32-bit selector identifying where in memory a texture is located.

#### Texture Size X, Y - reg #8, 9

This pair of registers defines the size of the texture area.

#### Source Pixel 0, 1 reg #10 to 13

These four registers define an area of the texture to draw from.

### Destination Pixel X, Y, Z reg #14 to 16

This trio of registers contain the coordinates of the destination point. These registers are used in conjunction with the active point field of the control register. Three destination points are required to draw a triangle. Points are pushed into the graphics pipeline by setting the forward or transform bits of the control register.

#### Transform Coefficient reg #17 to 28

These registers are used to set the coefficients for a transformation matrix used to translate or rotate points.

#### Clip Region reg #29 to 32

These registers define a clipping region outside of which points will be discarded.

### Color 0,1,2 reg #33 to 35

The number of bits used in the register depends on the color depth.

#### U0 to 2, V0 to 2 reg #36 to 41

These are texture coordinates.

#### Z-Buffer Base reg #42

This register contains a selector for the base address of the z-buffer.

# Target Area reg #44 to 47

This set of registers defines the target area.

# Font Table Base Address reg #48

This register contains the selector for the base address of the font table.

# Font ID reg #49

Contains an identifier for the currently selected font.

# Character Code reg #50

Contains the character code to draw.

# **BLEND – Blend Colors**

## **Description**:

This instruction blends two colors whose values are in Ra and Rb according to an alpha value in Rc. The resulting color is placed in register Rt. The alpha value is an eight-bit value assumed to be a binary fraction less than one. The color values in Ra and Rb are assumed to be RGB888 format colors. The result is a RGB888 format color. The high order eight bits of the result register are set to the high order eight bits of Ra. Note that a close approximation to 1.0 - alpha is used. Each component of the color is blended independently.

#### **Instruction Format**: R3

40 38	37	3635	34	29	28 27	26	21	20	15	14	11	8	7	0
$m_3$	Z	$Tc_2$	Ro	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	44	4h <sub>8</sub>

## **Operation**:

$$Rt.R = (Ra.R * alpha) + (Rb.R * \sim alpha)$$

$$Rt.G = (Ra.G * alpha) + (Rb.G * \sim alpha)$$

$$Rt.B = (Ra.B * alpha) + (Rb.B * \sim alpha)$$

## **Clock Cycles**: 2

# **CLIP – Clip Point**

## **Description:**

The clip instruction checks that the point in Ra is within the graphics target area always and clip region if enabled. The target and clip areas must have been previously set. If the point should be clipped a one is set in Rt, otherwise Rt is set to zero.

Points are represented in 16.16 fixed-point format for each coordinate.

#### **Instruction Format:** R1

40 3	4	33 31	30	29		21	20	15	14	9	8	7	0
20h <sub>7</sub>		$m_3$	Z		<b>~</b> 9		Ra	$a_6$	Rt	6	V	0	1h <sub>8</sub>

Clock Cycles: 2

GFX\_PUSH

# **PLOT – Plot Point**

# **Description:**

This instruction plots a point in the graphics target area. The point's co-ordinates are in Ra, the color to use is in Rb.

					28 27									0
70h	7	$m_3$	Z	~	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02h <sub>8</sub>	

# **TRANSFORM – Transform Point**

# **Description:**

The point transform instruction transforms a point from one location to another using a transform function. The transform function has 12 co-efficients in the form of a matrix to used in the calculation.

Points are represented in 16.16 fixed-point format.

### **Instruction Format:** R1

40	34	33 31	30	29	28 27	26	21	20	15	14	9	8	7	(	)
11h	17	$m_3$	Z	~	~2	~	6	R	$a_6$	R	$t_6$	V		01h <sub>8</sub>	

Clock Cycles: 2

# **RW\_COEFF – Read/Write Co-efficient**

# **Description:**

RW\_COEFF reads and writes a coefficient value to be used for the transform matrix. Ra contains the number of the coefficient to read or write. Rb contains the new value for the coefficient. Coefficients are in 16.16 fixed point format.

### **Instruction Format: R2**

35	29	2827	2625	24 20	19	18 14	13	12 8	7	6 0
77ł	<b>1</b> 7	~2	$Tb_2$	$Rb_5$	Ta	Ra <sub>5</sub>	Tt	Rt <sub>5</sub>	V	02h <sub>7</sub>

### **Co-efficient Matrix:**

AA	AB	AC	AT
BA	BB	BC	BT
CA	СВ	CC	CT

Regno in Ra	Coefficient Accessed
0	AA
1	AB
2	AC
3	AT
4	BA
5	BB
6	BC
7	BT
8	CA
9	СВ
10	CC
11	CT
12	CMD – bit 0, 1=transform, 0 = pass through

# Opcode Maps Root Opcode

	x0	x1	x2	х3	x4	x5	х6	x7	x8	x9	xA	хB	хC	хD	хE	xF
0x	BRK	{R1}	{R2}	{R3}	ADDI	SUBFI	MULI	{SYS}	ANDI	ORI	EORI				MULUI	{CSR}
1x	BEQZ	REP	BNEZ		JGATE	MULFI	SEQI	SNEI	SLTI	ADD	AND	SGTI	SLTUI	OR	EOR	SGTUI
2x	BRA	DBRA			BBC	BBS	BEQ	BNE	BLT	BGE	BLE	BGT	BLTU	BGEU	BLEU	BGTU
3x																
4x	DIVI	CPUID	BRA	BRA	BLEND	CHKI	EXI7	EXI23		EXI55	EXIM	CMPI	BMAP	CHK	SLT	DIVUI
5x	CMPI	MLO	{VM}	VMFIL L	CMOV NZ	BYTN DX	WYDE NDX	UTF21 NDX	SLL						MFLK	MTLK
6x	{SIMD }	{FLT1}	{FLT2}	{FLT3}	MUX	{DFLT 1}	{DFLT 2}	{DFLT 3}		{PST1}	{PST2}	{PST3}	EXI41			
7x																
8x	LDB	LDBU	LDW	LDWU	LDT	LDTU	LDO	LDOS	LLAL	LLAH	LEA	LDVO AR	LDOO	LDCTX	LDOU	LDH
9x	STB	STW	STT	STO	STOC	STOS	STOO / STH	CAS	STSET	STMO V	STCMP	STFND		STCTX		CACHE
Ax						SYS	INT	MOV			{BTFL D}	MOVS	PUSH	PUSH 2R	PUSH 3R	ENTER
Bx	LDBX	LDBU X	LDWX	LDWU X	LDTX	LDTUX	LDOX	LDOO X	LLALX	LLAHX	LEAX	LDOR X	POP	POP 2R	POP 3R	LEAVE
Cx	STBX	STWX	STTX	STOX	STOCX	STHX	STOOX					LINK	UN LINK	LDHX	LDOU X	CACHE X
Dx	CMPIL		MULIL	SLTIL	ADDIL	SUBFI L	SEQIL	SNEIL	ANDIL	ORIL	EORIL	SGTIL	SLTUI L	DIVIL	MULUI L	SGTUI L
Ex																
Fx	DEFCA T	NOP	RTS	CARR Y		{BCD}	STP	SYNC	MEMS B	MEMD B	WFI	SEI	MBNE Z			

	0	1	2	3	4	5	6	7
0x	0 BRK	1 {R1}	2 {R2}	3 {R3}	4 ADDI	5 SUBFI	6 MULI	7 {SYS}
	8	9	10	11	12	13	14	15
4	ANDI	ORI	EORI	CMPI	CMP	SUB	MULUI	CSR
1x	16 BEQZ	17	18 BNEZ	19 OR	20 EOR	21 MULFI	22 SEQI	23 SNEI
	24	25	26	27	28	29	30	31
	SLTI	ADD	AND	SGTI	SLTUI	SGE	SLTU	SGTUI
2x	32 BRA, JMP	33 DBRA,	34	35	36 BBC,	37 BBS,	38 BEQ, JEQ	39 BNE, JNE
	DICE, SIVII	DJMP			JBC,	JBS,	BEQ, JEQ	DIVE, SIVE
	40	41	42	43	44	45 GNTS	46	47 3.CEV
3x	BLT, JLT 48	BGE, JGE 49	BLE, JLE 50	BGT, JGT 51	SEQ 52	SNE 53	54	SGEU 55
ЭX	40	77	30	J1	JE	33	24	20
	56	57	58	59	60	61	62	63
1	64	65	66	67	68	69	70	71
4x	DIVI	CPUID	CHKI	07	BMAP	BLEND	EXI8	EXI8
	72	73	74	75	76	77	78	79
	EXI24	EXI24	EXI40	EXI40	EXI56	EXI56	SLT	DIVUI
5x	80 EXIM	81	82 {VM}	83 VMFILL	84 CMOVNZ	85 BYTNDX	86 WYDENDX	87 TETRANDX
	88	89	90	91	92	93	94	95
	SLL	SRL	SRA	ROL	ROR	SLLH	MFLK	MTLK
6x	96	97 {FLT1}	98 {FLT2}	99 {FLT3}	100 MUX	101 {DFLT1}	102 {DFLT2}	103 {DFLT3}
	104	105	106	107	108	109	110	111
		{PST1}	{PST2}	{PST3}				
7x	112	113	114	1115	116	117	118	119
	120	121	122	123	124	125	126	127
8x	128 LDB	129 LDBU	130 LDW	131 LDWU	132 LDT	133 LDTU	134 LDO	135 LDOU
	136	137	138	139	140	141	142	143
	LDH	LDHS	LEA	LDHR				
9x	144 STB	145 STW	146 STT	147 STO	148 STH	149 STHS	150	151
	152	152	154	155	156	157	158	159
	BSET	BMOV	BCMP	BFND				CACHE
Ax	160	161	162	163	164	165	166	167
	168	169	170	171	172	173	174	175
					PUSH1	PUSH2	PUSH3	ENTER
Bx	176	177	178 LDWX	179	180	181	182	183
	LDBX 184	LDBUX 185	186	LDWUX 187	LDTX 188	LDTUX 189	LDOX 190	LDOUX 191
	LDHX		LEAX		POP1	POP2	POP3	LEAVE
Cx	192	193	194	195	196	197	198	199
	STBX 200	STWX 201	STTX 202	STOX 203	STHX 204	205	206	207
	200	201	202	203	207	203	200	CACHEX
Dx	208	209	210	211	212	213	214	215
	CMPIL		MULIL	SLTIL	ADDIL	SUBFIL	SEQIL	SNEIL

	216 ANDIL	217 ORIL	218 EORIL	219 SGTIL	220 SLTUIL	221 DIVIL	222 MULUIL	223 SGTUIL
Ex	224	225	226	227	228	229	230	231
	232	233	234	235	236	237	238	239
Fx	240	241 NOP	242 RTS	243 CARRY	244	245 {BCD}	246 STP	247 SYNC
	248 MEMSB	249 MEMDB	250 WFI	251 SEI	252 MBNEZ	253	254	255

# $\{R1 - 0x01\}$ Integer Monadic Register Ops – Func<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	CNTLZ	CNTLO	CNTPOP				ABS	NABS
x001	SQRT			TST				
x010	PTRINC	TRANSFORM						
x011					VCMPRSS		VSCAN	
x100	CLIP							
x101	REVBIT.BP	REVBIT.WP	REVBIT.TP	REVBIT.OP				
x110	SHA256	SHA256	SHA256	SHA256	SHA512	SHA512	SHA512	SHA512
x111	SIG0 SM3P0	SIG1 SM3P1	SUM0	SUM1	SIG0	SIG1	SUM0	SUM1
	51,151 0	5111211						
1000								
1001								
1010	AES64IM							
1011								
1100	NNA_TRIG	NNA_STAT	NNA_MFACT					
1101								

# $\{R2 - 0x02\}$ Integer Dyadic Register Ops – Func<sub>7</sub>

-			_			1		
	000	001	010	011	100	101	110	111
0000	NAND	NOR	XNOR	ORC	ADD	SUB	MUL	
0001	AND	OR	XOR	ANDC			MULU	MULH
0010	DIV	DIVU	DIVSU		PTRDIF	MULF	MULSU	PERM
0011	DIF	CHK	BYTNDX	WYDNDX	U21NDX	MULSUH	MULUH	MYST
0100	SLT / SGT	SGE / SLE	SLTU / SGTU	SGEU / SLEU			SEQ	SNE
0101	MIN	MAX	CMP		BIT	CMOVNZ	CLMUL	CLMULH
0110	BMM.or	BMM.xor	BMM	BMM	MUX		LIN2PL	LIN2PH
0111	VSLLV	VSLRV	VEX	VEINS	VGIDX	V2BITS	VBITS2V	
1000	SLL	SRL	SRA	ROL	ROR		CRYA	CRYS
1001	SLLH	SRLH	SRAH	ROLH	RORH			
1010	AES64DS	AES64DSM	AES64ES	AES64ESM	AES64KS1I	AES64KS2	SM4ED	SM4KS
1011								
1100	NNA_MTWT	NNA_MTIN	NNA_MTBIAS	NNA_MTFB	NNA_MTMC	NNA_MTBC		
1101								
1110	PLOT	LINE						RW_COEFF
1111	AND_OR	OR_AND	ANDC_OR					

# ${R3/R4 - 0x03}$ Triadic Register Ops

	000	001	010	011	100	101	110	111
0								
1	SLLP	SLLPI			BLEND	FDP		

## {F1 - 0x61} Floating-Point Monadic Ops - Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	FMOV	FRSQRTE	FTOI	ITOF			FSIGN	FMAN
x001	FSQRT	FS2D	FS2Q	FD2Q	FSTAT		ISNAN	FINITE
x010	FTX	FCX	FEX	FDX	FRM	TRUNC	FSYNC	FRES
x011	FSIGMOID	FD2S	FQ2S	FQ2D			FCLASS	UNORD
x100	FABS	FNABS	FNEG					
x101								
x110								
x111								

## {F2-0x62} Floating-Point Dyadic Ops - Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	SCALEB		FMIN	FMAX	FADD	FSUB		
x001	FMUL	FDIV	FREM	FNXT				
x010	FCMP	FSEQ	FSLT	FSLE	FSNE	FCMPB	FSETM	
x011	CPYSGN	SGNINV	SGNAND	SGNOR	SGNXOR	SGNXNOR	FCLASS	
x100								
x101								
x110								
x111								

## {F3–0x63} Floating-Point Triadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
0	FMA	FMS	FNMA	FNMS				
1								

## {DF1 - 0x65} Decimal Floating-Point Monadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	MOV	RSQRTE	FTOI	ITOF			FSIGN	FMAN
x001	SQRT	FS2D	FS2Q	FD2Q	FSTAT		ISNAN	FINITE
x010	FTX	FCX	FEX	FDX	FRM	TRUNC	FSYNC	RES
x011	SIGMOID	FD2S	FQ2S	FQ2D			FCLASS	UNORD
x100	ABS	NABS	NEG					
x101								
x110								
x111								

# {DF2} Decimal Floating-Point Dyadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	SCALEB		DFMIN	DFMAX	DFADD	DFSUB		
x001	DFMUL	DFDIV	DFREM	DFNXT				
x010	DFCMP	DFSEQ	DFSLT	DFSLE	DFSNE	DFCMPB	DFSETM	
x011	CPYSGN	SGNINV	SGNAND	SGNOR	SGNXOR	SGNXNOR	FCLASS	
x100	DIVIDEND_ADJ	DIVISOR_ADJ	DIV_BITADJ					
x101								
x110								
x111								

# $\{VM - 0x52\}$ Vector Mask Register Ops – Func<sub>5</sub>

	000	001	010	011	100	101	110	111
00					VMADD	VMSUB		
01	VMAND	VMOR	VMXOR			VMCNTPOP	VMFIRST	VMLAST
10	MTVM	MFVM	MTVL	MFVL	MTLC	MFLC		
11					VMSLL		VMSRL	

# {OSR2} System Ops

	000	001	010	011	100	101	110	111
x000								EXEC
x001	PUSHQ	POPQ	PEEKQ	STATQ	RESETQ	POPQI	PEEKQI	STATQI
x010	REX	PFI	WAI	RTE	SETKEY		DI	SEI
x011	SETTO	GETTO	GETZL			MVSEG	TLBRW	SYNC
x100	CSAVE	CRESTORE					BASE	
x101	MFSEL	MTSEL						
x110	MVCI							
x111								

### **MPU** Hardware

## PIT – Programmable Interval Timer

### **Overview**

Many systems have at least one timer. The timing device may be built into the cpu, but it is frequently a separate component on its own. The programmable interval timer has many potential uses in the system. It can perform several different timing operations including pulse and waveform generation, along with measurements. While it is possible to manage timing events strictly through software it is quite challenging to perform in that manner. A hardware timer comes into play for the difficult to manage timing events. A hardware timer can supply precise timing. In the test system there are two groups of four timers. Timers are often grouped together in a single component. The PIT is a 32-bit peripheral as that is all that is needed. The PIT while powerful turns out to be one of the simpler peripherals in the system.

## **System Usage**

One programmable timer component, which includes four timers, is used to generate the system time slice interrupt and timing controls for system garbage collection. The second timer component is used to aid the paged memory management unit. There is a free timing channel on the second timer component.

Each PIT is given a 4kB-byte memory range to respond to for I/O access. As is typical for I/O devices part of the address range is not decoded to conserve hardware.

PIT#1 is located at \$FFFFFF960xxx

PIT#2 is located at \$FFFFFF961xxx

### **Registers**

The PIT has 16 registers addressed as 32-bit I/O cells. It occupies 64 consecutive I/O locations. All registers are read-write except for the current counts which are read-only. The control registers all refer to a single control register which is accessible at three different addresses. Current count, max count and on time are all 32-bit accessible; all 32 bits must be read or written. The control register is byte accessible. It is possible to update only part of the control register. There is a separate byte for control information for each counter in the control register.

Regno	Access	Moniker	Purpose
00	R	CC0	Current Count
04	RW	MC0	Max count
08	RW	OT0	On Time
0C	RW	CTRL	Control
10	R	CC1	Current Count
14	RW	MC1	Max count
18	RW	OT1	On Time
1C	RW		Control – this is the same register as 0C
20	R	CC2	Current Count

24	RW	MC2	Max count
28	RW	OT2	On Time
2C	RW		Control – this is the same register as 0C
30	R	CC3	Current Count
34	RW	MC3	Max count
38	RW	OT3	On Time
3C	RW		Control – this is the same register as 0C

#### Control Register

The control register is split into four independent bytes. Each byte controls an individual timer. All four timer control bytes work in the same fashion so only one is described below. The very same control register is accessible at three different I/O locations. By locating all four timer controls in a single register it is possible to precisely synchronize timing operations.

31	24	23	16	15	8	7	0
Timer#3	Control	Timer#	2 Control	Time	er#1 Control	Time	r#0 Control

#### Timer Control Byte

Bit		Purpose
0	LD	setting this bit will load max count into current count, this bit automatically
		resets to zero.
1	CE	count enable, if 1 counting will be enabled, if 0 counting is disabled and the
		current count register holds its value. On counter underflow this bit will be
		reset to zero causing the count to halt unless auto-reload is set.
2	AR	auto-reload, if 1 the max count will automatically be reloaded into the current
		count register when it underflows.
3	XC	external clock, if 1 the counter is clocked by an external clock source. The
		external clock source must be of lower frequency than the clock supplied to
		the PIT. The PIT contains edge detectors on the external clock source and
		counting occurs on the detection of a positive edge on the clock source.
4	GE	gating enable, if 1 an external gate signal will also be required to be active
		high for the counter to count, otherwise if 0 the external gate is ignored.
		Gating the counter using the external gate may allow pulse-width
		measurement.
5 to 7	~	not used, reserved

#### **Current Count**

This register reflects the current count value for the timer. The value in this register will change by counting downwards whenever a count signal is active. The current count may be automatically reloaded at underflow if the auto reload bit (bit #2) of the control byte is set. The current count may also be force loaded to the max count by setting the load bit (bit #0) of the counter control byte.

#### Max Count

This register holds onto the maximum count for the timer. It is loaded by software and otherwise does not change. When the counter underflows the current count may be automatically reloaded from the max count register.

#### On Time

The on-time register determines the output pulse width of the timer. The timer output is low until the on-time value is reached, at which point the timer output switches high. The timer output remains high until the counter reaches zero at which point the timer output is reset back to zero. So, the on time reflects the length of time the timer output is high. The timer output is low for max count minus the on-time clock cycles.

### **Programming**

The PIT is a memory mapped i/o device. The PIT is programmed using 32-bit load and store instructions (LDT and STT). Byte loads and stores (LDB, STB) may be used for control register access. It must reside in the non-cached address space of the system.

### PIC – Programmable Interrupt Controller

### **Overview**

The programmable interrupt controller manages interrupt sources in the system and presents an interrupt signal to the cpu. If two interrupts occur at the same time the controller resolves which interrupt the cpu sees. While the CPU's interrupt input is only level sensitive the PIC may process interrupts that are either level or edge sensitive. the PIC is a 32-bit I/O device.

### **System Usage**

There is just a single interrupt controller in the system. It supports 31 different interrupt sources plus a non-maskable interrupt source.

PIC#1 is located at \$FF950xxx.

### **Priority Resolution**

Interrupts have a fixed priority relationship with interrupt #1 having the highest priority and interrupt #31 the lowest. Note that interrupt priorities are only effective when two interrupts occur at the same time.

### **Registers**

The PIC contains 40 registers spread out through a 256 byte I/O region. All registers are 32-bit and only 32-bit accessible. There are two different means to control interrupt sources. One is a set of registers that works with bit masks enabling control of multiple interrupt sources at the same time using single I/O accesses. The other is a set of control registers, one for each interrupt source, allowing control of interrupts on a source-by-source basis.

Regno	Access	Moniker	Purpose	
00	R	CAUSE	interrupt cause code for currently interrupting source	
04	RW	RE	request enable, a 1 bit indicates interrupt requesting is	
			enabled for that interrupt, a 0 bit indicates the interrupt	
			request is disabled.	
08	W	ID	Disables interrupt identified by low order five data bits.	
0C	W	ΙE	enables interrupt identified by low order five data bits	
10			reserved	
14	W	RSTE	resets the edge-sense circuit for edge sensitive interrupts, 1	
			bit for each interrupt source. This register has no effect on	
			level sensitive sources. This register automatically resets to	
			zero.	
18	W	TRIG	software trigger of the interrupt specified by the low order	
			five data bits.	
20	W	ESL	The low bit for edge sensitivity selection. ESL and ESH	
			combine to form a two bit select of the edge sensitivity.	
			ESH,EHL Sensitivity	
			00 level sensitive interrupt	
			01 positive edge sensitive	

			10 negative edge sensitive
			11 either edge sensitive
24	W	ESH	The high bit for edge sensitivity selection
80	RW	CTRL0	control register for interrupt #0
84	RW	CTRL1	control register for interrupt #1
•••		•••	
FC	RW	CTRL31	control register for interrupt #31

# **Control Register**

All the control registers are identical for all interrupt sources, so only the first control register is described here.

Bits		
0 to 7	CAUSE	The cause code associated with the interrupt; this register is copied to the
		cause register when the interrupt is selected.
8 to 11	IRQ	This register determines which signal lines of the cpu are activated for
		the interrupt.
12	IE	This is the interrupt enable bit, 1 enables the interrupt, 0 disables it. This
		is the same bit reflected in the IE register.
13,14	ES	This bit controls edge sensitivity for the interrupt $00 = \text{level}$ , $01 = \text{pos}$ .
		edge sensitive, $10 = \text{neg.}$ edge sensitive. $11 = \text{either edge sensitive.}$
		These same bits are present in the ESL, ESH registers.
15 to 31		reserved

## UART – Universal Asynchronous Receiver / Transmitter

### Overview

A UART component (Universal Asynchronous Transmitter / Receiver) is used for the asynchronous transmission and reception of data. Asynchronous referring to the lack of a clock signal during transmission or reception.

uart6551 is a WDC6551 register compatible uart. The uart is a 32-bit peripheral device. It may be used as an eight-bit peripheral by connecting the high order 24-bit data input lines to ground, and grounding select lines one to three.

Baud rate is controlled by clock divider which assumes a 200MHz baud reference clock input. If a different clock frequency is used, then the divider table will need to be updated. The baud rate may also be controlled via a clock divider register. This register is 24 bits so gives a minimum frequency of 11.92 Hz assuming a 200MHz clock. (200MHz / 2^24).

## **Special Features**

WDC6551 register compatibility

### **System Usage**

The uart is located at \$FF930xxx

### **Registers**

There are only four registers in the design. The function of the low order eight bits of the registers matches the 6551 function. The controller honors byte lane selects so only the portion of the register selected is written.

Reg	Moniker	Description	
00	UART_TRB	Transmit and receive buffer. Data written is transmitted, on a read	
		data available is read. Also reads / writes the clock multiplier if	
		access to clock multiplier is enabled.	
04	UART_STAT	Status Register. Returns status bits on a read, a write of any value	
		will cause a reset of some of the command register bits	
08	UART_CMD	Command register	
0C	UART_CTRL	Control register	

#### UART\_TRB

This register is 32-bits wide of which only the lower eight bits are used to transmit or receive data by the uart. Data written to the register is transmitted. A register read returns data received by the uart. When the fifo's are enabled writing to this register writes to the transmit fifo. Reading this register reads the receive fifo. If clock divider access is enabled (via control register bit 31) then this register allows modifying or reading the clock divider value. Writing a clock divider value to this register automatically switches the function back to transmit / receive.

#### UART\_STAT

Uart status register. Writing any value to the status register resets some of the uart's command bits.

Bit	Status		
0	Parity Error	1 = parity error occurred, 0 = no error	
1	Framing Error	1 = framing error	
2	Overrun	1 = overrun	
3	Rx Full	1 = receiver data available	
4	Tx Empty	1 = open slot in transmit fifo	
5	DCD	0 = data carrier present	
6	DSR	0 = data set ready	
7	IRQ	1 = irq occurred	
	Additional Line Statu	s Byte	
8	reserved		
9	reserved		
10	reserved		
11	reserved		
12	Break received	1 if a break signal is received	
13	Tx Full	1 = transmit fifo full	
14	reserved		
15	G Rcv Err	1 = global receiver error (set if any error status is set)	
	Additional Modem Status Byte		
16	CTS	1 = CTS line changed state	
17	DSR	1 = DSR line changed state	
18	RI	1 = RI line changed state	
19	DCD	1 = DCD line changed state	
20	CTS	CTS state	
21	reserved		
22	RI	RI state	
23	reserved		
	IRQ Status		
24,25	zero	these two bits are zero	
26 to 28	IRQENC	encoded irq value (0 to 7)	
29 to 30	reserved		
31	irq	IRQ is set	

### UART\_CMD

Bit		
0	DTR	output $1 = low$ , $0 = high$
1	RxIe	receiver interrupt enable $0 = \text{enabled}$ , $1 = \text{disabled}$
2,3	RTS Control	
	00	output RTS high
	01	output RTS low, enable transmit interrupt
	10	output RTS low,
	11	output RTS low, send a break signal
4	LLB	1 = local loopback (receiver echo)
5 to 7	Parity Control	

	000	no parity	
	odd parity		
	011 even parity		
	101	transmit mark parity (parity error disabled)	
	111	transmit space parity (parity error disabled)	
8	LSIe	line status change interrupt enable 1 = enabled	
9	MSIe	modem status change interrupt enable 1 = enabled	
10	RxToIe	receiver timeout interrupt enable 1 = enabled	
11 to 31	reserved		

#### UART\_CTRL

<u>CTRL</u>		
Bit		
0 to 3	Baud Rate	
	0000 Use 16x external clock	This table is expanded using an extra control
	0001 50	bit #27.
	0010 75	
	0011 109.92	
	0100   134.58	
	0101 150	
	0110 300	
	0111 600	
	1000   1200	
	1001   1800	
	1010   2400	
	1011   3600	
	1100   4800	
	1101 7200	
	1110 9600	
	1111 19200	
4	Rx clock source	1 = external, $0 = $ baud rate generator
5,6	Word length	code for word length in bits
	00 8	
	01 7	
	10 6	
	11 5	
7	Stop Bit	
	0 1	
	1 1 if 8 bits and parity	
	1 1.5 if 5 bits and no parity	
	1 2 otherwise	
8 to 15	reserved	do not use
16	Fifo enable	1 = fifo's enabled
17	Rx Fifo Clear	1 = clear receiver fifo
18	Tx Fifo Clear	1 = clear transmit fifo
19	reserved	
20,21	Transmit Threshold	Threshold for DMA signal activation
	0 1 byte	If the transit fifo count is less than the
		threshold then a DMA transfer is triggered.

22, 23	1	Threshold for DMA signal activation. If the receive fifo count is greater than the threshold then a DMA transfer is triggered.
24	hwfc	1 = automatic hardware flow control
25	reserved	
26	dmaEnable	1 = dma enabled
27	Baud Rate bit 4  10000   38400  10001   57600  10010   115200  10011   230600  10100   460800  10101   921600  10110   reserved  10111   reserved  11xxx   reserved	Extended baud rate selection bit, used in combination with bits 0 to 3.
28,29	reserved	
30	selDV	1 = use clock divider register, 0 = use baud table
31	accessDV	1 = access clock divider via TRB register, 0 = normal TRB operation

Selecting the clock divider register as the baud source allows any programmable baud rate.

## ToolSet

## Compiler

The compiler currently available for Thor is the cc64 compiler. cc64 is a derivative of 'C' with a number of language extensions. Please see the cc64 language document for more information.

#### Assembler

### **Overview**

The author has developed a backend for the excellent assembler, vasm which was developed by Volker Barthelmann. Please see the documentation for the assembler for more information. Contained in this document are features relevant to Thor.

Vasm is a flexible and powerful macro assembler. The backend is flexible in its recognition of mnemonics. There are many alternate mnemonics to the standard set that are recognized allowing the programmer some freedom in specifying operations.

## **Recognized Mnemonics**

### **Register Names**

The assembler will recognize the general-purpose registers either by their ABI usage names or by the name 'rn' as in 'r0', 'r1', 'r2' and so on. General-purpose registers given specific usages in the ABI may also be referenced by that set of names. For instance, the first argument register may be referenced as 'a0' which is also 'r1'. The names of the registers recognized by the assembler are shown in the table below.

Alternate	N	ame
-----------	---	-----

r0	
r1	a0
r2	a1
r3 to r12	t0 to t9
r13 to r22	s0 to s9
r23 to r30	a2 to a9
r31 to r58	
r59	gp2 (rodata)
r60	gp1 (bss)
r61	gp / gp0 (data)
r62	fp
r63	sp

LC	

CA0	
CA1	LK1
CA2	LK2
CA3	
CA4	
CA5	
CA6	
CA7	IP
CA8 to CA15	

7	ZS	
]	DS	
]	ES	
]	FS	

GS	
HS	
SS	
CS	
PTA	
LDT	
KYT	
TCB	

DBAD0	address #0	
DBAD1	address #1	
DBAD2	address #2	
DBAD3	address #3	
DBCTRL	Debug Control	
DBSTAT	Debug Status	

## Linker

The linker in use is vlink 'out of the box'.

## Glossary

### **AMO**

AMO stands for atomic memory operation. An atomic memory operation typically reads then writes to memory in a fashion that may not be interrupted by another processor. Some examples of AMO operations are swap, add, and, and or.

#### Assembler

A program that translates mnemonics and operands into machine code OR a low-level language used by programmers to conveniently translate programs into machine code. Compilers are often capable of generating assembler code as an output.

#### **ATC**

ATC stands for address translation cache. This buffer is used to cache address translations for fast memory access in a system with an mmu capable of performing address translations. The address translation cache is more commonly known as the TLB.

#### **Base Pointer**

An alternate term for frame pointer.

#### **Burst Access**

A burst access is several bus accesses that occur rapidly in a row in a known sequence. If hardware supports burst access the cycle time for access to the device is drastically reduced. For instance, dynamic RAM memory access is fast for sequential burst access, and somewhat slower for random access.

#### **BTB**

An acronym for Branch Target Buffer. The branch target buffer is used to improve the performance of a processing core. The BTB is a table that stores the branch target from previously executed branch instructions. A typical table may contain 1024 entries. The table is typically indexed by part of the branch address. Since the target address of a branch type instruction may not be known at fetch time, the address is speculated to be the address in the branch target buffer. This allows the machine to fetch instructions in a continuous fashion without pipeline bubbles. In many cases the calculated branch address from a previously executed instruction remains the same the next time the same instruction is executed. If the address from the BTB turns out to be incorrect, then the machine will have to flush the instruction queue or pipeline and begin fetching instructions from the correct address.

### **Card Memory**

A card memory is a memory reserved to record the location of pointer stores in a garbage collection system. The card memory is much smaller than main memory; there may be card memory entry for a block of main memory addresses. Card memory covers memory

in 128 to 512-byte sized blocks. Usually, a byte is dedicated to record the pointer store status even though a bit would be adequate, for performance reasons. The location of card memory to update is found by shifting the pointer value to the right some number of bits (7 to 9 bits) and then adding the base address of the table. The update to the card memory needs to be done with interrupts disabled.

#### **Commit**

As in commit stage of processor. This is the stage where the processor is dedicated or committed to performing the operation. There are no prior outstanding exceptions or flow control changes to prevent the instruction from executing. The instruction may execute in the commit stage, but registers and memory are not updated until the retire stage of the processor.

### **Decimal Floating Point**

Floating point numbers encoded specially to allow processing as decimal numbers. Decimal floating point allows processing every-day decimal numbers rounding in the same manner as would be done by hand.

#### Decode

The stage in a processor where instructions are decoded or broken up into simpler control signals. For instance, there is often a register file write signal that must be decoded from instructions that update the register file.

### Diadic

As in diadic instruction. An instruction with two operands.

### Endian

Computing machines are often referred to as big endian or little endian. The endian of the machine has to do with the order bits and bytes are labeled. Little endian machines label bits from right to left with the lowest bit at the right. Big endian machines label bits from left to right with the lowest numbered bit at the left.

#### **FIFO**

An acronym standing for 'first-in first-out'. Fifo memories are used to aid data transfer when the rate of data exchange may have momentary differences. Usually when fifos transfer data the average data rate for input and output is the same. Data is stored in a buffer in order then retrieved from the buffer in order. Uarts often contain fifos.

### **FPGA**

An acronym for Field Programmable Gate Array. FPGA's consist of a large number of small RAM tables, flip-flops, and other logic. These are all connected with a programmable connection network. FPGA's are 'in the field' programmable, and usually re-programmable. An FPGA's re-programmability is typically RAM based. They are

often used with configuration PROM's so they may be loaded to perform specific functions.

### Floating Point

A means of encoding numbers into binary code to allow processing. Floating point numbers have a range within which numbers may be processed, outside of this range the number will be marked as infinity or zero. The range is usually large enough that it is not a concern for most programs.

### Frame Pointer

A pointer to the current working area on the stack for a function. Local variables and parameters may be accessed relative to the frame pointer. As a program progresses a series of "frames" may build up on the stack. In many cases the frame pointer may be omitted, and the stack pointer used for references instead. Often a register from the general register file is used as a frame pointer.

#### **HDL**

An acronym that stands for 'Hardware Description Language'. A hardware description language is used to describe hardware constructs at a high level.

#### HLL

An acronym that stands for "High Level Language"

### Instruction Bundle

A group of instructions. It is sometimes required to group instructions together into bundle. For instance, all instructions in a bundle may be executed simultaneously on a processor as a unit. Instructions may also need to be grouped if they are oddball in size for example 41 bits, so that they can be fit evenly into memory. Typically, a bundle has some bits that are global to the bundle, such as template bits, in addition to the encoded instructions.

### **Instruction Pointers**

A processor register dedicated to addressing instructions in memory. It is also often called a program counter. The program counter got its name because it usually increments (or counts) automatically after an instruction is fetched. In early machines in some rare cases the program counter did not count in a sequential binary fashion, but instead used other forms of a counter such as a grey counter or linear feedback shift register. In some machines the program counter addresses bundles of instructions rather than individual instructions. This is common with some stack machines where multiple instructions are packed into a memory word.

#### **Instruction Prefix**

An instruction prefix applies to the following instruction to modify its operation. An instruction prefix may be used to add more bits to a following immediate constant, or to add additional register fields for the instruction. The prefix essentially extends the number of bits available to encode instructions. An instruction prefix usually locks out interrupts between the prefix and following instruction.

#### **Instruction Modifier**

An instruction modifier is similar to an instruction prefix except that the modifier may apply to multiple following instructions.

#### ISA

An acronym for Instruction Set Architecture. The group of instructions that an architecture supports. ISA's are sometimes categorized at extreme edges as RISC or CISC. RTF64 falls somewhere in between with features of both RISC and CISC architectures.

### **Keyed Memory**

A memory system that has a key associated with each page to protect access to the page. A process must have a matching key in its key list in order to access the memory page. The key is often 20 bits or larger. Keys for pages are usually cached in the processor for performance reasons. The key may be part of the paging tables.

### **Linear Address**

A linear address is the resulting address from a virtual address after segmentation has been applied.

### Machine Code

A code that the processing machine is able execute. Machine code is lowest form of code used for processing and is not usually delt with by programmers except in debugging cases. While it is possible to assemble machine code by hand usually a tool called an assembler is used for this purpose.

#### Milli-code

A short sequence of code that may be used to emulate a higher-level instruction. For instance, a garbage collection write barrier might be written as milli-code. Milli-code may use an alternate link register to return to obtain better performance.

### Monadic

An instruction with just a single operand.

### Opcode

A short form for operation code, a code that determines what operation the processor is going to perform. Instructions are typically made up of opcodes and operands.

### **Operand**

The data that an opcode operates on, or the result produced by the operation. Operands are often located in registers. Inputs to an operation are referred to as source operands, the result of an operation is a destination operand.

### Physical Address

A physical address is the final address seen by the memory system after both segmentation and paging have been applied to a virtual address. One can think of a physical address as one that is "physically" wired to the memory.

## Physical Memory Attributes (PMA)

Memory usually has several characteristics associated with it. In the memory system there may be several different types of memory, rom, static ram, dynamic ram, eeprom, memory mapped I/O devices, and others. Each type of memory device is likely to have different characteristics. These characteristics are called the physical memory attributes. Physical memory attributes are associated with address ranges that the memory is located in. There may be a hardware unit dedicated to verifying software is adhering to the attributes associated with the memory range. The hardware unit is called a physical memory attributes checker (PMA checker).

### **Posits**

An alternate representation of numbers.

### **Program Counter**

A processor register dedicated to addressing instructions in memory. It is also often and perhaps more aptly called an instruction pointer. The program counter got its name because it usually increments (or counts) automatically after an instruction is fetched. In early machines in some rare cases the program counter did not count in a sequential binary fashion, but instead used other forms of a counter such as a grey counter or linear feedback shift register. In some machines the program counter addresses bundles of instructions rather than individual instructions. This is common with some stack machines where multiple instructions are packed into a memory word.

#### Retire

As in retire an instruction. This is the stage in processor in which the machine state is updated. Updates include the register file and memory. Buffers used for instruction storage are freed.

#### **ROB**

An acronym for ReOrder Buffer. The re-order buffer allows instructions to execute out of order yet update the machine's state in order by tracking instruction state and variables. In FT64 the re-order buffer is a circular queue with a head and tail pointers. Instructions at the head are committed if done to the machine's state then the head advanced. New instructions are queued at the buffer's tail as long as there is room in the queue. Instructions in the queue may be processed out of the order that they entered the queue in depending on the availability of resources (register values and functional units).

#### **RSB**

An acronym that stands for return stack buffer. A buffer of addresses used to predict the return address which increases processor performance. The RSB is usually small, typically 16 entries. When a return instruction is detected at time of fetch the RSB is accessed to determine the address of the next instruction to fetch. Predicting the return address allows the processing core to continuously fetch instructions in a speculative fashion without bubbles in the pipeline. The return address in the RSB may turn out to be detected as incorrect during execution of the return instruction, in which case the pipeline or instruction queue will need to be flushed and instructions fetched from the proper address.

#### **SIMD**

An acronym that stands for 'Single Instruction Multiple Data'. SIMD instructions are usually implemented with extra wide registers. The registers contain multiple data items, such as a 128-bit register containing four 32-bit numbers. The same instruction is applied to all the data items in the register at the same time. For some applications SIMD instructions can enhance performance considerably.

#### **Stack Pointer**

A processor register dedicated to addressing stack memory. Sometimes this register is assigned by convention from the general register pool. This register may also sometimes index into a small dedicated stack memory that is not part of the main memory system. Sometimes machines have multiple stack pointers for different purposes, but they all work on the idea of a stack. For instance, in Forth machines there are typically two stacks, one for data and one for return addresses.

### **Telescopic Memory**

A memory system composed of layers where each layer contains simplified data from the topmost layer downwards. At the topmost layer data is represented verbatim. At the bottom layer there may be only a single bit to represent the presence of data. Each layer of the telescopic memory uses far less memory than the layer above. A telescopic memory could be used in garbage collection systems. Normally however the extra overhead of updating multiple layers of memory is not warranted.

#### TLB

TLB stands for translation look-aside buffer. This buffer is used to store address translations for fast memory access in a system with an mmu capable of performing address translations.

### Trace Memory

A memory that traces instructions or data. As instructions are executed the address of the executing instruction is stored in a trace memory. The trace memory may then be dumped to allow debugging of software. The trace memory may compress the storage of addresses by storing branch status (taken or not taken) for consecutive branches rather than storing all addresses. It typically requires only a single bit to store the branch status. However, even when branches are traced, periodically the entire address of the program executing is stored. Often trace buffers support tracing thousands of instructions.

#### Triadic

An instruction with three operands.

### Vector Length (VL register)

The vector length register controls the maximum number of elements of a vector that are processed. The vector length register may not be set to a value greater than the number of elements supported by hardware. Vector registers often contain more elements than are required by program code. It would be wasteful to process all elements when only a few are needed. To improve the processing performance only the elements up to the vector length are examined.

### Vector Mask (VM)

A vector mask is used to restrict which elements of a vector are processed during a vector operation. A one bit in a mask register enables the processing for that element, a zero bit disables it. The mask register is commonly set using a vector set operation.

#### Virtual Address

The address before segmentation and paging has been applied. This is the primary type of address a program will work with. Different programs may use the same virtual address range without being concerned about data being overwritten by another program. Although the virtual address may be the same the final physical addresses used will be different.

#### Writeback

A stage in a pipelined processing core where the machine state is updated. Values are 'written back' to the register file.

### Miscellaneous

### Reference Material

Below is a short list of some of the reading material the author has studied. The author has downloaded a fair number of documents on computer architecture from the web. Too many to list.

<u>Modern Processor Design Fundamentals of Superscalar Processors by John Paul Shen, Mikko H.</u> <u>Lipasti. Waveland Press, Inc.</u>

<u>Computer Architecture A Quantitative Approach, Second Edition, by John L Hennessy & David Patterson, published by Morgan Kaufman Publishers, Inc. San Franciso, California</u> is a good book on computer architecture. There is a newer edition of the book available.

Memory Systems Cache, DRAM, Disk by Bruce Jacob, Spencer W. Ng., David T. Wang, Samuel Rodriguez, Morgan Kaufman Publishers

PowerPC Microprocessor Developer's Guide, SAMS publishing. 201 West 103<sup>rd</sup> Street, Indianapolis, Indiana, 46290

80386/80486 Programming Guide by Ross P. Nelson, Microsoft Press

Programming the 286, C. Vieillefond, SYBEX, 2021 Challenger Drive #100, Alameda, CA 94501

Tech. Report UMD-SCA-2000-02 ENEE 446: Digital Computer Design — An Out-of-Order RiSC-16

Programming the 65C816, David Eyes and Ron Lichty, Western Design Centre Inc.

Microprocessor Manuals from Motorola, and Intel,

<u>The SPARC Architecture Manual Version 8, SPARC International Inc, 535 Middlefield Road. Suite210 Menlo Park California, CA 94025</u>

The SPARC Architecture Manual Version 9, SPARC International Inc, Sab Jose California, PTR Prentice Hall, Englewood Cliffs, New Jersey, 07632

The MMIX processor: http://mmix.cs.hm.edu/doc/instructions-en.html

RISCV 2.0 Spec, Andrew Waterman, Yunsup Lee, David Patterson, Krste Asanovi´c CS Division, EECS Department, University of California, Berkeley {waterman|yunsup|pattrsn|krste}@eecs.berkeley.edu

The Garbage Collection Handbook, Richard Jones, Antony Hosking, Eliot Moss published by CRC Press 2012

RISC-V Cryptography Extensions Volume I Scalar & Entropy Source Instructions See github.com/riscv/riscv-crypto for more information.

### **Trademarks**

IBM® is a registered trademark of International Business Machines Corporation. Intel® is a registered trademark of Intel Corporation. HP® is a registered trademark of Hewlett-Packard Development Company.\_"SPARC® is a registered trademark of SPARC International, Inc.

### WISHBONE Compatibility Datasheet

The Thor2021 core may be directly interfaced to a WISHBONE compatible bus.

WISHBONE Datasheet			
WISHBONE SoC Architecture Specification, Revision B.3			
	<u> </u>		
Description:	Specifications:		
General Description:	Central processing unit (CPU core)		
	MASTER, READ / WRITE		
Supported Cycles:	MASTER, READ-MODIFY-WRITE		
- opposite cycles	MASTER, BLOCK READ / WRITE, BURST READ (FIXED ADDRESS)		
Data port, size:	128 bit		
Data port, granularity:	8 bit		
Data port, maximum operand size:	128 bit		
Data transfer ordering:	Little Endian		
Data transfer sequencing	any (undefined)		
Clock frequency constraints:	tm_clk_i must be >= 10MHz		
Supported signal list and cross reference to equivalent WISHBONE signals	Signal Name:  ack_i  adr_o(31:0)  clk_i  dat_i(127:0)  dat_o(127:0)  cyc_o  stb_o  wr_o  sel_o(7:0)  cti_o(2:0)  bte_o(1:0)	WISHBONE Equiv. ACK_I ADR_O() CLK_I DAT_I() DAT_O() CYC_O STB_O WE_O SEL_O CTI_O BTE_O	
Special Requirements:		1	