

# THOR CORE2022 GUIDE

[Document subtitle]

### **ABSTRACT**

Details for the Thor2022 processing core including programming model, memory management and instruction set architecture.

**Robert Finch** 

[Course title]

### Table of Contents

Overview	19
History	19
Design Objectives	19
Motivation	20
Differences from the Original	20
Case Comparison Hi-lites	20
Case Comparison 6502	20
Case Comparison 6809	21
Case Comparison 68000	21
Case Comparison ARM	21
Case Comparison RISCV	22
Case Comparison MMIX	24
Case Comparison PowerPC	24
Case Comparison x86	24
Case Comparison SPARC	24
Nomenclature	25
Endian	25
Development Aspects	26
Device Target	26
Implementation Language	26
Programming Model	27
General Registers	27
Register Tags	28
Stack and Frame Pointers	28
Loop Count	28
Code Address Registers	28
Code Address Register Format	28
Instruction Pointer	29
Link Registers	29
Selector Registers	29
General Purpose Vector (v0 to v63) / Registers	30
Mask Registers (m0 to m7)	30
Vector Length (VL register)	30
Summary of Special Purpose Registers	30

[U/S/H/M]_IE (0x?004)	31
[U/S/H/M]_CAUSE (CSR- 0x?006)	31
[U/S/H/M]_SCRATCH - CSR 0x?041	31
[U/S/H/M]_TIME (0x?FE0)	31
U_FSTAT - CSR 0x0014 Floating Point Status and Control	Register32
S_PTA - CSR 0x1003	33
S_ASID - CSR 0x101F	33
S_KEYS - CSR 0x1020 to 0x1027	34
CA0,CA1,CA15 (CAREGS) - M_CSR 0x3100 to 0x311F	<sup>3</sup> 35
ZS,DS,ES,FS,GS,HS,SS,CS (SREGS) - M_CSR 0x3120 to	0x3127 Error! Bookmark not defined.
M_CR0 (CSR 0x3000) Control Register Zero	35
M_HARTID (CSR 0x3001)	36
M_TICK (CSR 0x3002)	36
M_SEED (CSR 0x3003)	36
M_BADADDR (CSR 0x3007)	36
M_BAD_INSTR (CSR 0x300B)	36
M_DBADx (CSR 0x3018 to 0x301B) Debug Address Regis	ter36
M_DBCR (CSR 0x301C) Debug Control Register	36
M_DBSR (CSR 0x301D) - Debug Status Register	37
M_TVEC - CSR 0x3030 to 0x3037	37
M_PLSTACK – CSR 0x303F	38
M_PMSTACK - CSR 0x3040	38
M_SCRATCH - CSR 0x3041	38
D_VSTEP - CSR 0x4046	38
D_VTMP - CSR 0x4047	38
M_GDTB - CSR 0x3050	Error! Bookmark not defined.
M_GDTL - CSR 0x3051	Error! Bookmark not defined.
M_LDT - CSR 0x3052	Error! Bookmark not defined.
M_KYT - CSR 0x3053	38
M_TCB - CSR 0x3054	38
M_TIME - CSR 0x?FE0	38
M_TIMECMP - CSR 0x3FE1	39
Hardware Queues	39
Operating Modes	39
Exceptions	39

External Interrupts	39
Polling for Interrupts	40
Effect on Machine Status	40
Exception Stack	40
Exception Vectoring	40
Reset	41
Precision	41
Exceptions During Vector Operations	41
Exception Cause Codes	41
DBG	43
IADR	43
UNIMP	43
OFL	43
KEY	43
FLT	43
DRF, DWF, EXF	43
CPF, DPF	43
PRIV	43
STK	44
DBE	44
PMA	44
IBE	44
NMI	44
BT	44
Segmentation	Error! Bookmark not defined.
Overview	Error! Bookmark not defined.
Privilege levels	Error! Bookmark not defined.
Usage	Error! Bookmark not defined.
Software Support	Error! Bookmark not defined.
Address Formation:	Error! Bookmark not defined.
Selecting a segment register	Error! Bookmark not defined.
Selectors	Error! Bookmark not defined.
Selector Format:	Error! Bookmark not defined.
Selector Registers	Error! Bookmark not defined.
Descriptor Cache	Error! Bookmark not defined.

Non-Segmented Code Area	Error! Bookmark not defined.
Changing the Code Segment	Error! Bookmark not defined.
The Descriptor Table	Error! Bookmark not defined.
Global Descriptor Table	Error! Bookmark not defined.
System Segment Descriptors	Error! Bookmark not defined.
Segment Load Exception	Error! Bookmark not defined.
Segment Bounds Exception	Error! Bookmark not defined.
Segment Usage Conventions	Error! Bookmark not defined.
Power-up State	Error! Bookmark not defined.
Segment Registers	Error! Bookmark not defined.
TLB – Translation Lookaside Buffer	57
Overview	57
Size / Organization	57
What is Translated	57
Page Size	58
Management	58
Flushing the TLB	59
PAM – Page Allocation Map	59
Overview	Error! Bookmark not defined.
Memory Usage	Error! Bookmark not defined.
Organization	Error! Bookmark not defined.
PMA - Physical Memory Attributes Checker	45
Overview	45
Register Description	45
Attributes	46
Key Cache	59
Overview	59
Card Memory	59
Overview	59
Organization	59
Location	60
Operation	60
Sample Write Barrier	60
System Memory Map	61
ebugging Unit	61

Overview	61
Instruction Tracing	61
Trace Queue Entry Format	61
Trace Readback	62
Address Matching	62
Instruction Set Architecture Description	63
Overview	63
Root Opcode	63
Vector Instruction Indicator	63
Target Register Spec	64
Register Formats	65
R1 (one source register)	65
R2 (two source register)	65
R3 (three source register)	65
Immediate Format	65
RIL (with prefix)	65
Clock Cycles	65
Execution Units	66
Arithmetic / Logical / Shift	67
ABS – Absolute Value	69
ADD - Register-Register	70
ADDI - Add Immediate	71
ADDIL - Add Immediate Low	Error! Bookmark not defined.
AND – Bitwise And	72
ANDC - Bitwise 'And' with Complement	73
ANDI – Bitwise 'And' Immediate	74
ANDIL – Bitwise 'And' Immediate Low	Error! Bookmark not defined.
ANDM - Bitwise 'And' with Mask	75
AND_OR - Bitwise And then Or	76
BCDADD – BCD Add	77
BCDMUL – BCD Multiply	78
BCDSUB – BCD Subtract	79
BFALIGN – Bitfield Align	80
BFCHG – Bitfield Change	81
BFCLR – Bitfield Clear	82

BFEXT – Bitfield Extract	83
BFEXTU – Bitfield Extract Unsigned	84
BFFFO –Find First One	85
BFSET – Bitfield Set	86
BMAP – Byte Map	87
BMM – Bit Matrix Multiply	89
BYTNDX – Byte Index	90
BYTNDXI – Byte Index	91
CHK - Check Register Against Bounds	93
CHKI – Check Register Against Bounds	94
CLMUL – Carry-less Multiply	95
CLMULH - Carry-less Multiply High	96
CMOVNZ – Conditional Move	97
CMP – Compare	98
CMPI – Compare Immediate	100
CMPIL – Compare Immediate Low	Error! Bookmark not defined.
CMPU – Compare Unsigned	Error! Bookmark not defined.
CMPUI – Compare Unsigned Immediate	Error! Bookmark not defined.
CNTLZ - Count Leading Zeros	101
CNTPOP – Count Population	102
COM – Ones Complement	103
CPUID - CPU Identification	104
DIF – Difference	105
DIV – Division	106
DIVI – Divide by Immediate	107
DIVIL – Divide by Immediate Low	Error! Bookmark not defined.
DIVU – Divide Unsigned	108
DIVUI – Divide Unsigned by Immediate	108
DIVSU – Divide Signed by Unsigned	109
ENOR – Bitwise Exclusive Nor	110
EOR – Bitwise Exclusive Or	111
EORI – Bitwise Exclusive 'Or' Immediate	
	112
EORIL – Bitwise Exclusive 'Or' Immediate Low	
EORIL – Bitwise Exclusive 'Or' Immediate Low	Error! Bookmark not defined.

EXI41 – Extend Immediate by 41 Bits	114
EXI55 – Extend Immediate by 55 Bits	114
EXIM – Extend Immediate Middle	115
LDI – Load Immediate	116
LDIL – Load Immediate Low	Error! Bookmark not defined.
MAX – Maximum Value	117
MIN – Minimum Value	117
MKBOOL – Make Boolean	118
MOV – Move Register-Register	119
MOVSXB – Move Byte, Sign Extend	120
MOVSXT – Move Tetra, Sign Extend	120
MOVSXW – Move Wyde, Sign Extend	122
MOVZXB – Move Byte, Zero Extend	122
MOVZXT – Move Tetra, Zero Extend	123
MOVZXW – Move Wyde, Zero Extend	123
MUL – Multiply	124
MULH – Multiply High	125
MULI – Multiply Immediate	126
MULIL – Multiply Immediate Low	Ennant Daalsmank not defined
- r J	Error: Dookmark not deimed.
MULF – Fast Unsigned Multiply	
	127
MULF – Fast Unsigned Multiply	
MULF – Fast Unsigned Multiply	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex	
MULF – Fast Unsigned Multiply.  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand	
MULF – Fast Unsigned Multiply.  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor	
MULF – Fast Unsigned Multiply.  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor.  NOT – Logical Not	
MULF – Fast Unsigned Multiply.  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  OR – Bitwise Or	
MULF – Fast Unsigned Multiply.  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  NOT – Logical Not  OR – Bitwise Or  ORC – Bitwise 'Or' with Complement.	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  NOT – Logical Not  OR – Bitwise Or  ORC – Bitwise 'Or' with Complement	
MULF – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned.  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate.  NOR – Bitwise Nor.  NOT – Logical Not  OR – Bitwise Or.  ORC – Bitwise 'Or' with Complement.  ORI – Bitwise 'Or' Immediate  ORIL – Bitwise 'Or' Immediate Low.	
MULF – Fast Unsigned Multiply  MULFI – Fast Unsigned Multiply Immediate  MULU – Multiply Unsigned  MUX – Multiplex  NAND – Bitwise Nand  NEG - Negate  NOR – Bitwise Nor  NOT – Logical Not  OR – Bitwise Or  ORC – Bitwise 'Or' with Complement  ORI – Bitwise 'Or' Immediate Low  ORN – Bitwise 'Or' with Complement	

	ROR – Rotate Right	138
	SEQ – Set if Equal	139
	SEQI – Set if Equal Immediate	140
	SEQIL – Set if Equal Immediate Low	140
	SGE / SLE – Set if Greater Than or Equal	141
	SGEU / SLEU – Set if Greater Than or Equal Unsigned	141
	SGTI – Set if Greater Than Immediate	143
	SGTIL – Set if Greater Than Immediate Low	143
	SGTUI – Set if Greater Than Immediate Unsigned	143
	SGTUIL – Set if Greater Than Immediate Unsigned Low	144
	SLEI – Set if Less Than or Equal Immediate	145
	SLL –Shift Left Logical	146
	SLLP –Shift Left Logical Pair	146
	SLT / SGT – Set if Less Than	147
	SLTI – Set if Less Than Immediate	147
	SLTIL – Set if Less Than Immediate Low	148
	SLTU / SGTU – Set if Less Than Unsigned	149
	SNE – Set if Not Equal	150
	SNEI – Set if Not Equal Immediate	151
	SNEIL – Set if Not Equal Immediate Low Error! Bookmark not d	efined
	SRA –Shift Right Arithmetic	152
	SRL –Shift Right Logical	153
	SRLP –Shift Right Logical Pair Error! Bookmark not d	efined
	SUB – Subtract	153
	SUBFI – Subtract from Immediate	155
	UTF21NDX – UTF21 Index	158
	UTF21NDXI – UTF21 Index	159
	WYDENDX – WYDE Index	160
	WYDENDXI – Wyde Index	161
	XNOR – Bitwise Exclusive Nor	161
	XOR – Bitwise Exclusive Or	162
	XORI – Bitwise Exclusive 'Or' Immediate	163
	XORIL – Bitwise Exclusive 'Or' Immediate Low	163
F	Floating-Point Instructions	165
	Overview	1.65

FABS – Absolute Value	165
FADD – Add Register-Register	166
FCLASS – Classify Value	167
FCMP – Compare	168
FCMPB – Compare	169
FCX – Clear Floating-Point Exceptions	170
FDIV – Divide Register-Register	171
FDX – Disable Floating Point Exceptions	172
FEX – Enable Floating Point Exceptions	173
FFINITE – Number is Finite	174
FMA – Floating Point Multiply Add	175
FNMA – Floating Point Negate Multiply Add	176
FNMS – Floating Point Negate Multiply Subtract	177
FMAN – Mantissa of Number	178
FMS – Floating Point Multiply Subtract	179
FMUL – Floating point multiplication	180
FNEG – Negate Register	181
FRM – Set Floating Point Rounding Mode	181
FRSQRTE – Float Reciprocal Square Root Estimate	182
FSEQ - Float Set if Equal	183
FSIGMOID – Sigmoid Approximate	183
FSIGN – Sign of Number	184
FSLT - Float Set if Less Than	185
FSNE - Float Set if Not Equal	186
FSQRT – Floating point square root	187
FSTAT – Get Floating Point Status and Control	188
FSUB – Subtract Register-Register	190
FTOI – Float to Integer	190
FTRUNC – Truncate Value	191
FTX – Trigger Floating Point Exceptions	191
ISNAN – Is Not a Number	192
ITOF – Integer to Float	193
Decimal Floating-Point Instructions	194
DFABS – Absolute Value	194
DFADD – Add Register-Register	195

DFCMP – Compare Erro	Error! Bookmark not defined.
DFCMPB – Compare	Error! Bookmark not defined.
DFCX – Clear Floating-Point Exceptions	196
DFDIV – Divide Register-Register	197
DFDX – Disable Floating Point Exceptions	200
DFEX – Enable Floating Point Exceptions	201
DFMA – Floating Point Multiply Add	202
DFNMA – Floating Point Negate Multiply Add	203
DFNMS – Floating Point Negate Multiply Subtract	204
DFMAN – Mantissa of Number	205
DFMS – Floating Point Multiply Subtract	206
DFMUL – Floating point multiplication	207
DFNEG – Negate Register	208
DFRM – Set Floating Point Rounding Mode	208
DFSIGN – Sign of Number	210
DFSTAT – Get Floating Point Status and Control	210
DFSUB – Subtract Register-Register	212
DFTOI – Float to Integer	212
DFTX – Trigger Floating Point Exceptions	213
ITODF – Integer to Float	214
Posit Instructions	215
PADD – Add Register-Register	215
PMUL – Posit multiplication	215
PSUB – Subtract Register-Register	216
Load / Store Instructions	217
Overview	217
Addressing Modes	217
Load Formats	217
Store Formats	217
CACHE – Cache Command	219
CACHEX – Cache Command	220
CAS – Compare and Swap	221
LDB – Load Byte	222
LDBU – Load Byte, Unsigned	223
LDBUX – Load Byte Unsigned Indexed	224

LDBX – Load Byte Indexed	225
LDO – Load Octa	227
LDOS – Load Octa, Short Format	227
LDOX – Load Octa Indexed	231
LDT – Load Tetra	234
LDTU – Load Tetra Unsigned	235
LDTUX – Load Tetra Unsigned Indexed	236
LDTX – Load Tetra Indexed	237
LDW – Load Wyde	238
LDWU – Load Wyde Unsigned	239
LDWX – Load Wyde Indexed	240
LDWUX – Load Wyde Unsigned Indexed	241
LEA – Load Effective Address	242
LEAX - Load Effective Address Indexed	242
LIN2PHL - Convert Linear to Physical Address Low	243
LIN2PHH – Convert Linear to Physical Address High	. Error! Bookmark not defined.
LLAH – Load Linear Address High	. Error! Bookmark not defined.
LLAHX – Load Linear Address High Indexed	. Error! Bookmark not defined.
LLAL – Load Linear Address Low	. Error! Bookmark not defined.
LLALX - Load Linear Address Low Indexed	. Error! Bookmark not defined.
STB – Store Byte	244
STBX – Store Byte Indexed	245
STO – Store Octa	246
STOC – Store Octa, Clear Reservation	248
STOCL – Store Octa, Clear Reservation, Long Addressing	. Error! Bookmark not defined.
STOCX – Store Octa, Clear Reservation Indexed	253
STOS – Store Octa, Short Addressing	254
STOL – Store Octa, Long Addressing	. Error! Bookmark not defined.
STOX – Store Octa Indexed	256
STT – Store Tetra	257
STTL – Store Tetra, Long Addressing	. Error! Bookmark not defined.
STTX – Store Tetra Indexed	260
STW – Store Wyde	261
STWL – Store Wyde, Long Addressing	. Error! Bookmark not defined.

String Instructions	263
STCMP – String Compare	263
STFND – String Find	264
STMOV – String Move	265
STSET – String Set	267
Branch / Flow Control Instructions	268
Overview	268
Conditional Branch Format	269
Branch Conditions	270
Linkage	271
Branch Target	271
Near or Far Branching	Error! Bookmark not defined.
Branch to Register	271
BBC – Branch if Bit Clear	272
BBS – Branch if Bit Set	273
BEQ – Branch if Equal	274
BEQZ – Branch if Equal to Zero	274
BGE – Branch if Greater Than or Equal	276
BGEU – Branch if Greater Than or Equal Unsigned	277
BGT – Branch if Greater Than	278
BGTU – Branch if Greater Than Unsigned	279
BLE – Branch if Less Than or Equal	280
BLEU – Branch if Less Than or Equal Unsigned	281
BLT – Branch if Less Than	282
BLTU – Branch if Less Than Unsigned	283
BNE – Branch if Not Equal	284
BNEZ – Branch if Not Equal to Zero	284
BRA – Branch Always	285
BSR – Branch to Subroutine	285
DBBC - Decrement and Branch if Bit Clear	Error! Bookmark not defined.
DBBS – Decrement and Branch if Bit Set	Error! Bookmark not defined.
DBEQ – Decrement and Branch if Equal	Error! Bookmark not defined.
DBGE - Decrement and Branch if Greater Than or Equal	Error! Bookmark not defined.
DBGEU – Decrement and Branch if Greater Than or Equal Uns defined.	ignedError! Bookmark not

	DBGT – Decrement and Branch if Greater Than	Error	! B	ook	mar	k not	def	fined.
	DBGTU – Decrement and Branch if Greater Than Unsigned	Error	! B	ook	mar	k not	def	fined.
	DBLE - Decrement and Branch if Less Than or Equal	Error	! B	ook	mar	k not	def	fined.
	DBLEU – Decrement and Branch if Less Than or Equal Unsigned	Error	! B	ook	mar	k not	def	fined.
	DBLT – Decrement and Branch if Less Than	Error	! B	ook	mar	k not	ı def	fined.
	DBLTU – Decrement and Branch if Less Than Unsigned	Error	! B	ook	mar	k not	def	fined.
	DBNE – Decrement and Branch if Not Equal	Error	! B	ook	mar	k not	def	fined.
	DBRA – Decrement and Branch Always							286
	DJBC – Decrement and Jump if Bit Clear	Error	! B	ook	mar	k not	def	fined.
	DJBS – Decrement and Jump if Bit Set	Error	! B	ook	mar	k not	def	fined.
	DJEQ – Decrement and Jump if Equal	Error	! B	ook	mar	k not	def	fined.
	DJGE – Decrement and Jump if Greater Than or Equal	Error	! B	ook	mar	k not	def	fined.
	DJGEU – Decrement and Jump if Greater Than or Equal Unsigned	Error	! B	ook	mar	k not	i def	fined.
	JBC – Jump if Bit Clear							287
	JBS – Jump if Bit Set							288
	JEQ – Jump if Equal							289
	JGATE – Jump Gate	Error	! B	ook	mar	k not	i def	fined.
	JGE – Jump if Greater Than or Equal							290
	JGEU – Jump if Greater Than or Equal Unsigned							291
	JGT – Jump if Greater Than							292
	JGTU – Jump if Greater Than Unsigned							293
	JLE – Jump if Less Than or Equal							294
	JLEU – Jump if Less Than or Equal Unsigned							295
	JLT – Jump if Less Than							296
	JLTU – Jump if Less Than Unsigned							297
	JNE – Jump if Not Equal							298
	JMP – Jump							299
	JSR – Jump to Subroutine					•••••		300
	NOP – No Operation							301
	RTS – Return from Subroutine							302
S	ystem Instructions		••••					303
	BRK – Break		••••					303
	CSRx – Control and Special / Status Access		••••					304
	DI – Disable Interrupts		••••					305
	INT – Generate Interrunt							306

	MEMDB – Memory Data Barrier	. 308
	MEMSB – Memory Synchronization Barrier	. 309
	MFSEL – Move from Selector Register	.310
	MTSEL – Move to Selector Register	.312
	PEEKQ – Peek at Queue / Stack	.314
	PFI – Poll for Interrupt	.315
	POPQ – Pop from Queue / Stack	.316
	PUSHQ – Push on Queue / Stack	.317
	RESETQ – Reset Queue / Stack	.318
	REX – Redirect Exception	.319
	RTI – Return from Interrupt or Exception	. 320
	SEI – Set Interrupt Level	. 322
	STATQ – Get Status of Queue / Stack	. 323
	SYNC -Synchronize	. 324
	SYS – Call system routine	. 326
	TLBRW – Read / Write TLB	. 327
	WFI – Wait for Interrupt	. 328
V	ector Specific Instructions	. 329
	V2BITS	.335
	VBITS2V	.336
	VGIDX – Generate Index	.337
	VCMPRSS – Compress Vector	.338
	VEINS / VMOVSV – Vector Element Insert	.338
	VEX / VMOVS – Vector Element Extract	. 339
	MFLC – Move from Loop Counter	. 339
	MFVM – Move from Vector Mask	. 340
	MFVL – Move from Vector Length	. 340
	MTVM – Move to Vector Mask	. 340
	MTLC – Move to Loop Counter	. 341
	MTVL – Move to Vector Length	. 342
	VMADD – Vector Mask Add	. 343
	VMAND – Vector Mask And	. 343
	VMCNTPOP – Count Population	. 343
	VMFILL – Vector Mask Fill	. 344
	VMFIRST – Find First Set Bit	. 344

VMLAST – Find Last Set Bit	345
VMOR – Vector Mask Or	346
VMSLL – Vector Mask Shift Left Logical	346
VMSRL – Vector Mask Shift Right Logical	346
VMSUB – Vector Mask Subtract	347
VMXOR – Vector Mask Exclusive Or	347
VSCAN	348
VSLLV – Shift Vector Left Logical	349
VSRLV – Shift Vector Right Logical	350
Cryptographic Accelerator Instructions	351
AES64DS – Final Round Decryption	351
AES64DSM – Middle Round Decryption	351
AES64ES – Final Round Encryption	352
AES64ESM – Middle Round Encryption	352
SHA256SIG0	353
SHA256SIG1	353
SHA256SUM0	354
SHA256SUM1	354
SHA512SIG0	355
SHA512SIG1	355
SHA512SUM0	356
SHA512SUM1	356
SM3P0	356
SM3P1	357
SM4ED	358
SM4KS	358
Neural Network Accelerator Instructions	359
Overview	359
NNA_MFACT – Move from Output Activation	360
NNA_MTBC - Move to Base Count	360
NNA_MTBIAS – Move to Bias	361
NNA_MTFB – Move to Feedback	362
NNA_MTIN – Move to Input	363
NNA_MTMC – Move to Max Count	364
NNA MTWT Move to Weights	361

NNA_STAT – Get Status	365
NNA_TRIG - Trigger Calc	365
Graphics	366
Overview	366
Co-ordinates	366
Colors	366
Register Set	366
BLEND – Blend Colors	371
CLIP – Clip Point	372
PLOT – Plot Point	373
TRANSFORM – Transform Point	374
RW_COEFF - Read/Write Co-efficient	375
Opcode Maps	376
Root Opcode	376
{R1 – 0x01} Integer Monadic Register Ops – Func <sub>7</sub>	379
{R2 – 0x02} Integer Dyadic Register Ops – Func <sub>7</sub>	380
{R3/R4 – 0x03} Triadic Register Ops	380
{F1 - 0x61} Floating-Point Monadic Ops – Funct <sub>7</sub>	381
{F2–0x62} Floating-Point Dyadic Ops – Funct <sub>7</sub>	381
{F3–0x63} Floating-Point Triadic Ops – Funct <sub>7</sub>	381
{DF2} Decimal Floating-Point Dyadic Ops – Funct <sub>7</sub>	382
{VM – 0x52} Vector Mask Register Ops – Func <sub>5</sub>	383
{OSR2} System Ops	383
MPU Hardware	384
PIT – Programmable Interval Timer	384
Overview	384
System Usage	384
Registers	384
Programming	386
PIC – Programmable Interrupt Controller	387
Overview	387
System Usage	387
Priority Resolution	387
Registers	387
Control Register	388

UART – Universal Asynchronous Receiver / Transmitter	389
Overview	389
Special Features	389
System Usage	389
Registers	389
ToolSet	393
Compiler	393
Assembler	393
Overview	393
Recognized Mnemonics	393
Register Names	393
Linker	395
Glossary	396
AMO	396
Assembler	396
ATC	396
Base Pointer	396
Burst Access	396
BTB	396
Card Memory	396
Decimal Floating Point	397
Diadic	397
Endian	397
FIFO	397
FPGA	397
Floating Point	398
Frame Pointer	398
HDL	398
HLL	398
Instruction Bundle	398
Instruction Pointers	398
Instruction Prefix	399
Instruction Modifier	399
ISA	399
Keved Memory	399

Linear Address	399
Machine Code	399
Milli-code	399
Monadic	399
Opcode	400
Operand	400
Physical Address	400
Physical Memory Attributes (PMA)	400
Posits	400
Program Counter	400
ROB	400
RSB	401
SIMD	401
Stack Pointer	401
Telescopic Memory	401
TLB	402
Trace Memory	402
Triadic	402
Vector Length (VL register)	402
Vector Mask (VM)	402
Virtual Address	402
Miscellaneous	403
Reference Material	403
Trademarks	403
WISHBONE Compatibility Datasheet	405

### Overview

Thor is a powerful 64-bit superscalar processor that represents a generational refinement of processor architecture. The processor contains 64, 64 bit general purpose integer registers. Thor uses variable length instructions varying between two and eight bytes in length and handles 8, 16, 32, and 64 bit data within a 64 bit address space.

### History

Thor2021 is a work in progress beginning in October 2021. Thor2021 originated from Thor which originated from RiSC-16 by Dr. Bruce Jacob. RiSC-16 evolved from the Little Computer (LC-896) developed by Peter Chen at the University of Michigan. See the comment in Thor2021.v. The author has tried to be innovative with this design borrowing ideas from many other processing cores.

Thor2021's graphics engine originate from the ORSoC GFX accelerator core posted at opencores.org by Per Lenander, and Anton Fosselius.

### **Design Objectives**

This processor is somewhat pedantic in nature and targeted towards high performance operation as a general-purpose processor. Following are some of the criteria that were used on which to base the design.

- Designed for Superscalar operation the ability to execute more than one instruction at a time. To achieve high performance it is generally accepted that a processor must be able to execute more than a single instruction in any given clock cycle.
- □ Support for vector operations.
- Simplicity architectural simplicity leads to a design that is easy to implement resulting in reliability and assured correctness along with easy implementation of supporting tools such as compilers. Simplicity also makes it easier to obtain high performance and results in lower overall cost.
- □ Extensibility the design must be extensible so that features not present in the first release can easily be added at a later date.
- Low Cost

This design meets the above objectives in the following ways. The instruction set has been designed to minimize the interactions between instructions, allowing instructions to be executed as independent units for superscalar operation. There are a sufficient number of registers to allow the compiler to schedule parallel processing of code. A reasonably large general purpose register set is available making the design reasonably compatible with many existing compilers and assemblers.

Where needed, additional specialized instructions have been added to the processor to support a sophisticated operating system and interrupt management.

### Motivation

The author wanted an FPGA based processing core for experimental purposes.

### Differences from the Original

The string instructions in the original Thor ISA are no longer present.

Stack operations have been removed.

Mnemonics changed for load and store instructions.

Byte, wyde and UTF21 search instructions have been added.

Support for decimal floating-point has been added.

Support for cryptographic accelerator functions has been added.

### Case Comparison Hi-lites

Some of the more striking points of a handful of architectures are compared to what is available in Thor2021. The author has studied and used several of these processors. Thor2021 has many influences from prior designs.

### Case Comparison 6502

6502 vs Thor2021

#### Overview

This is a bit of an apples to oranges comparison as the two designs are for different environments. The 6502 was designed for a much smaller operating environment and is extremely frugal with transistor usage. The Thor2021 was designed as 64-bit processor used for experimentation in a much larger environment.

#### **Instruction Format**

The 6502 as a byte-oriented design has a compact variable instruction length encoding. Many instructions are encoded using an average of about two bytes.

While variable sized instructions offer great advantage for code density, they add complexity to the processing core. Thor2021 also uses a variable size instruction encoding. As such for a given single instruction it requires roughly twice the memory of a 6502. However, the instructions in the Thor2021 operate on 64-bit values, to perform the same operations in the 6502 would require many more bytes. Several instructions in the Thor2021 are more powerful than what can be found in the 6502.

#### Registers

The Thor2021 has many more registers than the 6502. It is a general-purpose register-oriented design while the 6502 is accumulator oriented. A register file of about 32 registers has been found to be a good match to many computing environments. This is somewhat of a historical

determination. The Thor2021 has available many more transistors than were available to the 6502 design. The Thor2021 has many special purpose registers. The 6502 does not have any.

#### Instructions

The 6502 uses relative branches to allow a code dense instruction encoding. Thor2021 also uses relative branches to help reduce the instruction size. It has a larger branch displacement than the 6502 as that is what could be encoded easily.

The 6502 offers only basic instructions (ADD, SUB, CMP, AND, ORA, EOR, LDA, STA) as examples. There are no complex instructions in the 6502 ISA. All instructions execute within a handful of clock cycles. the Thor2021 has a ton of instructions compared to a 6502. It supports floating point and posit arithmetic.

The 6502 is an accumulator-based architecture that allows one memory-based operand for most instructions. Thor2021 is register based and the only instructions accessing memory are load and store type instructions.

### Case Comparison 6809

#### Overview

The 6809 microprocessor was designed to run more powerful software than earlier microcontrollers. As such it has a couple of more registers than the 6502 for instance, and separate user mode and system mode stack pointers.

#### **Instruction Format**

6809 instructions have one or two opcode bytes followed by operands. Most instructions use only a single byte opcode. The instruction encoding is variable length.

### Case Comparison 68000

#### Overview

The 68000 is a 16/32-bit design.

### **Instruction Format**

The 68000 uses 16-bit instruction parcels. All instructions are a multiple of two bytes in length. The instruction encoding is variable length.

#### Registers

The 68000 has 16 general purpose registers split into eight data and eight address registers. There is a separate stack pointer for user and system mode.

### **Case Comparison ARM**

#### Overview

The ARM architecture has become extremely popular.

#### **Instruction Format**

The ARM machine was originally a 32-bit fixed instruction format machine. It has had added onto it 16-instruction formats.

#### Registers

The program counter is referenced using one the registers codes available for general purpose registers.

The author is not fond of architectures that use a general-purpose register as the program counter. He believes a separate register is a better approach. Having the pc as part of the general register file is archaic.

### **Case Comparison RISCV**

RISCV vs Thor2021

#### **Instruction Format**

While variable sized instructions offer great advantage for code density, they add complexity to the processing core.

In RISCV support for 16-bit compressed instructions consumes two opcode bits, and opcode bits are valuable. The use of these two bits and the reduction of the opcode space for other instructions is an excellent trade-off. Compressed instructions can improve code density by about 25% or more and consequently make better use of the cache. There is only the occasional instruction that can not be encoded using two fewer encoding bits, so only a very small percentage would be gained back in code density by having two more bits available. Thor2021 uses a variable length instruction encoding which allow it to achieve code density similar to RISCV.

The JAL instruction in RISCV allows any register to be used to store the return address. In practice only one or two registers which are fixed by the ABI are used. This means that there are about four bits of opcode space wasted for unnecessary register specification. Making use of these extra four bits is extremely valuable. The Thor2021 design only requires two bits to specify the return address register. The presence of four extra bits to specify the target address makes absolute addressing appealing for this design.

To build constants the LUI instruction is used. In RISCV the LUI instruction allows any register to be used as the target and has a 20-bit constant field because of encoding constraints. In practice it is possible to get by using only one or two registers to build constants with. Thor2021 has more direct support for constants larger than 32 bits. It makes use of ADDIS (add immediate shifted), ORIS, and ANDIS instructions to build 64-bit constants. These instructions support building 64-bit constants directly. RISCV does not really provide much for building constants over 32 bits.

#### Instructions

RISCV does not include indexed addressing modes in the standard implementation. Indexed addressing is accomplished when required using additional instructions and registers to calculate the effective address. Thor2021 directly supports indexed addressing with an optionally scaled index register. When indexed addressing is required Thor2021 is more code dense than RISCV. However indexed addressing is not used that often.

RISCV accesses memory and I/O exclusively using load and store instructions. Thor2021 has several additional instructions which access memory and I/O.

#### Register File

RISCV does almost everything using general-purpose registers. This paradigm increases the pressure on the register file. In the Thor2021 design there are more register files involved. Effectively, there are a few more additional registers which reduce the pressure on the general-purpose register file. There is a trend to place some global variables in the register file for performance reasons. These variables include operating vars for garbage collection, pointers to global and thread data and pointers for exception handling.

One reason to use more register files is that in a superscalar design it may allow more instructions to be committed at the same time. There is usually a limit on the number of write ports to the general register file. This limit affects how many instructions can be committed at once. By providing separate register files for some operations it effectively increases the number of write ports available making it possible to commit more instructions per cycle.

#### Return Address Registers

There is not a requirement for more than a couple of return address registers. The instruction set may be refined to allow only a single bit to specify the return address register.

### Compare Results Registers

RISCV stores comparison results if needed in general-purpose registers. It has just a single instruction (SLT) dedicated to generating compare results. RISCV makes use of branches that compare-and-branch encoded in a single instruction. This is effective at removing the need for most compare operations. The intermediate result of the compare is hidden in the architecture; there is no need for visible compare results registers. There is still a need for the computed result of a compare operation. Sometimes software records the comparison result for later usage. For example, there may be a line of code: x = y > 10. Which will set x true if y is greater than 10.

Compares are tightly coupled to branch operations. Some architectures like RISCV compare and branch in a single instruction. Other architectures use a flags register or several flags registers. Yet other architectures simply use the general-purpose registers.

One reason to use a separate group of compare results registers is that in a superscalar design it may allow more instructions to be committed at the same time. There is usually a limit on the number of write ports to the general register file. This limit affects how many instructions can be committed at once. By providing separate register files for some operations it effectively increases the number of write ports available making it possible to commit more instructions per cycle.

### Operating modes.

This design uses four operating modes. It has the RISCV operating modes. The author has seen a comment to the effect that debug on a RISCV processor really acts like an additional mode.

#### Memory Management

RISCV offers several memory management options including several different paging arrangements and a couple of optional base and bound registers.

### **Case Comparison MMIX**

#### **Instruction Format**

MMIX comes across as more of a pedantic processor design. MMIX instructions are structure simply for the most part using a 32-bit format divided into four-byte regions. The author assumes this is primarily to enhance the readability of instructions. The constant field is often limited to eight bits. Thor2021 has fewer registers and that allows more constant bits to be encoded in the same size instruction.

### Register File

MMIX has a 256-entry register file. It is not clear that this number of registers has any benefit over a 32-register design, but it makes the instruction format clear and easy to understand which may be a goal for a processor used for academic purposes.

#### Instructions

There are a lot of conditional move instructions in the MMIX ISA. Thor2021 currently supports only a single conditional move instruction.

### **Case Comparison PowerPC**

#### **Instruction Format**

The PowerPC uses a fixed 32-bit instruction format.

#### Instructions

The PowerPC supports indexed addressing like the Thor2021 although index scaling is not present. The author has found indexed addressing makes up about 3% of instructions and scaled indexes a much smaller percentage.

#### Registers

The PowerPC has a dedicated link register and eight condition code registers. Thor2021 has with a pair of link registers dedicated in the GPR file. The PowerPC also has a loop count register used for counted loops. Thor2021 also has a loop count register.

### Case Comparison x86

#### Registers

The x86 series has a register file that is accessible in subparts. Parts of a single register may be referred to instructions. For example, EAX is a 32-bit register that is also accessible as AL for byte operations. This has no-doubt complicated the x86 design. This contrasts with Thor2021 and many RISC designs where the registers are always manipulated as whole units.

### **Case Comparison SPARC**

#### Registers

The SPARC machine uses register windowing, where a subset of registers is available from a much larger set that is "windowed". In the SPARC the subset register window scrolls up and down automatically during subroutine calls and returns. The idea was to improve performance by not having to stack and unstack registers to memory during subroutine operations. However, with

a good modern optimizing compiler the performance level of the SPARC is not much different than that of other architectures.

### Nomenclature

The ISA refers to primitive object sizes following the convention suggested by Knuth of using Greek.

Number of Bits		Instructions
8	byte	LDB, STB
16	wyde	LDW, STW
32	tetra	LDT, STT
64	octa	LDO, STO
128	hexi	LDH, STH

The register used to address instructions is referred to as the instruction pointer or IP register. The instruction pointer is a synonym for instruction pointer or PC register.

### Endian

Thor2021 is a little-endian machine. The difference between big endian and little endian is in the ordering of bytes in memory. Bits are also numbered from lowest to highest for little endian and from highest to lowest for big endian.

Shown is an example of a 32-bit word in memory.

#### Little Endian:

Address	3	2	1	0
Byte	3	2	1	0

### Big Endian:

Address	3	2	1	0	
Byte	0	1	2	3	

For Thor2021 the root opcode is in byte zero of the instruction and bytes are shown from right to left in increasing order. As the following table shows.

Address 3	Address 2		Add	lress 1		Address 0		
Byte 3	]	Byte 2		Ву	yte 1		Byt	te 0
							,	7
31	21	20	15	14	9	8	7	0
Constant <sub>11</sub>		Ra	1 <sub>6</sub>	Rt	6	V	Opc	ode <sub>8</sub>

## Development Aspects Device Target

The core has been developed with FPGA usage in mind. In particular it is expected that the register file is built out of block memories.

### Implementation Language

The core is implemented in the System Verilog language primarily for its ability to process array objects. Much of the core is plain vanilla Verilog code.

### Programming Model General Registers

There are 64 general purpose registers. General purpose registers are 64 bits wide. The general register file is unified and may hold integer or floating-point values.

If register #0 is used as the Ra register for loads, stores, or the ADD immediate instruction then the value zero is used instead, otherwise r0 is a general-purpose register.

r0	
r1	return value / arg0
r2	return value / arg1
r3	temporary register caller save
r4	temporary register
r5	temporary register
r6	temporary register
r7	temporary register
r8	temporary register
r9	temporary register
r10	temporary register
r11	register var callee save
r12	register var
r13	register var
r14	register var
r15	register var
r16	register var
r17	register var
r18	register var
r19	function argument
r20	function argument
r21	function argument
r22	function argument
r24	function argument
r25	function argument
r26	Loop Counter (LC)
r27	Global Data Pointer (g2)
r28	Global Data Pointer (g1)
r29	Global Data Pointer (g0)
r30	Frame Pointer
r31	Stack Pointer

CA0	available
CA1	return address
CA2	milli-code return address
CA3	available
CA4	available
CA5	available
CA6	available
CA7	Instruction pointer, read only
CA8 to	Exceptioned Instruction Pointer
CA15	

PTA	Page table address
KYT	
TR	Task Register
	<u> </u>
	<del>                                     </del>
	<del>                                     </del>

DBAD0	address #0	
DBAD1	address #1	
DBAD2	address #2	
DBAD3	address #3	
DBCTRL	Debug Control	
DBSTAT	Debug Status	

### Register Tags

For the bypassing network, commonly used registers have a register tag associated with them. The register tag for the general registers varies from 1 to 31 corresponding to registers 1 to 31. Vector registers use tags 32 to 63. Other registers use additional tags as noted in the text.

### Stack and Frame Pointers

Although the stack and frame pointer registers may be used with any instruction the core has special hardware to detect stack bounds violations by either the stack pointer or frame pointer. The stack and frame pointer registers should be kept aligned on octa-byte boundaries. That is, they should be a multiple of eight, which has the least significant three bits as zero. There is currently no hardware in the core to enforce alignment.

The author considered having the stack pointer as an independent register but that would require replicating a number of instructions (add, sub, and, or, etc.) just for the stack pointer. The author feels it is better to keep the stack pointer general-purpose in nature so that it may leverage the usage of the existing instruction set. This design is primarily a load / store architecture.

### **Loop Count**

The loop count register, register r26 is used with the DBRA branch instruction to form counted loops. It may be automatically decremented and tested when the branch instruction is executing.

### Code Address Registers

Thor2022 has eight code address registers C0 to C7. These are also referred to as branch registers in other architectures. C7 refers to the current instruction pointer.

### **Code Address Register Format**

A code address register is composed of a 112-bit virtual address field, and a 12-bit micro-code IP field. Four bits are reserved for future use. The micro-code IP field is needed to record the micro-code IP for interrupts. The value of this field is normally zero.

127	116	115	112	111		0
Mic	roIP				Offset <sub>112</sub>	

Reg #		Usage
0	available for use	zero by convention
1	Subroutine return address	dedicated for subroutine linkage
2	Milli-code return address	dedicated for subroutine linkage
3	available for use	
4	available for use	
5	available for use	
6	available for use	
7	Instruction Pointer	dedicated to instruction addressing

8 to 15	Exception Instruction Pointer	stack of exception instruction pointers

The presence of multiple code address registers allows multi-level return addresses to be used for performance. Leaf routines may use C1 as the return address. Next to leaf routines may use C2, etc. So that memory operations are avoided when implementing subroutine call and return.

The instruction pointer register is read-only. The instruction pointer cannot be modified by moving a value to this register.

CA registers eight to fifteen are not accessible via jump or branch instructions. They are used as a stack of excepted instruction pointers and used by the RTI instruction.

### **Instruction Pointer**

The instruction pointer, IP, points to the currently executing instruction. The lower 24-bits of the instruction pointer increment as instructions are processed. Branch instructions normally manipulate only the low order 24 bits of the instruction pointer. The entire pointer may be set using a branch-to-register instruction.

To conserve hardware and improve performance of the counter only the low order 24-bits increment. It is extremely rare to have 16MB or more of code without resets of the entire instruction pointer due to subroutine calls.

111	24	23	0
IP High		IP Low	7

### **Link Registers**

Related to the instruction pointer are subroutine linkage registers. The architecture has two link registers for storing subroutine return addresses.

While many architectures have only a single link register, it is sometimes useful to have a second link register, for instance to implement milli-code routines. Some architectures allow any general- purpose register to be used for subroutine linkage. Often the ABI specifies that a specific register is used for this purpose. The author feels that supporting any GPR as a link register wastes instruction encoding bits that are better used for other purposes.

	127 0
Lk1	Return Address
Lk2	Return Address

### Selector Registers

Selector registers are a piece of the segmented memory management. They are a short form for segment descriptors which they represent. There are 11 selector registers in the architecture. Several are dedicated to specific uses.

Reg	Tag	Usage

LDT	153	refers to address and size of local descriptor table
KYT	154	refers to address and size of memory key table
TCB	155	refers to address and size of current TCB

### General Purpose Vector (v0 to v31) / Registers

v0 always has the value zero.

Register	Description / Suggested Usage	Saver
v0	always reads as zero (hardware)	
v1-v31		

### Mask Registers (m0 to m7)

Mask registers are used to mask off vector operations so that a vector instruction doesn't perform the operation on all elements of the vector. Vector instructions (loads and stores) that don't explicitly specify a mask register assume the use of mask register zero (m0).

Register	Tag	Usage
m0	88	contains all ones by convention
m1	89	
m2	90	
m3	91	
m4	92	
m5	93	
m6	94	
m7	95	

### Vector Length (VL register)

The vector length register controls how many elements of a vector are processed. The vector length register may not be set to a value greater than the number of elements supported by hardware. After the vector length is set a SYNC instruction should be used to ensure that following instructions will see the updated version of the length register.

Vector length has register tag #87.

15		8	7		0
	0			Elements <sub>70</sub>	

### **Extend Precision Carry Registers**

The carry registers are used while performing extended precision arithmetic. They hold an intermediate carry value to be input to a following instruction. In normal circumstances, these

registers need not be saved or restored as part of the context. The carry registers are 128-bits wide to allow extended precision on shifts and other operations.

Reg	
P0	always zero
P1	general usage
P2	"
P3	"

### Summary of Special Purpose Registers

### $[U/S/H/M]_IE (0x?004)$

This register contains interrupt enable bits. The register is present at all operating levels. Only enable bits at the current operating level or lower are visible and may be set or cleared. Other bits will read as zero and ignore writes. Only the lower four bits of this register are implemented. The bits have individual bit set / clear capability using the CSRRS, CSRRC instructions.

63 4	3	2	1	0
~	mie	hie	sie	uie

#### [U/S/H/M]\_CAUSE (CSR- 0x?006)

This register contains a code indicating the cause of an exception or interrupt. The break handler will examine this code to determine what to do. Only the low order 16 bits are implemented. The high order bits read as zero and are not updateable.

#### $[U/S/H/M]_SCRATCH - CSR 0x?041$

This is a scratchpad register. Useful when processing exceptions. There is a separate scratch register for each operating mode.

#### $[U/S/H/M]_TIME (0x?FE0)$

The TIME register corresponds to the wall clock real time. This register can be used to compute the current time based on a known reference point. The register value will typically be a fixed number of seconds offset from the real wall clock time. The lower 32 bits of the register are driven by the tm\_clk\_i clock time base input which is independent of the cpu clock. The tm\_clk\_i input is a fixed frequency used for timing that cannot be less than 10MHz. The low order 32 bits represent the fraction of one second. The upper 32 bits represent seconds passed. For example, if the tm\_clk\_i frequency is 100MHz the low order 32 bits should count from 0 to 99,999,999 then cycle back to 0 again. When the low order 32 bits cycle back to 0 again, the upper 32 bits of the register is incremented. The upper 32 bits of the register represent the number of seconds passed since an arbitrary point in the past.

Note that this register has a fixed time basis, unlike the TICK register whose frequency may vary with the cpu clock. The cpu clock input may vary in frequency to allow for performance and power adjustments.

### U\_FSTAT - CSR 0x0014 Floating Point Status and Control Register

The floating-point status and control register may be read using the CSR instruction. Unlike other CSR's the control register has its own dedicated instructions for update. See the section on floating point instructions for more information.

	1	1 -	T
Bit		Symbol	Description
63:53			reserved
52		inexact	inexact
51		dbz	divide by zero
50		under	underflow
49		over	overflow
48		invop	invalid operation
47		~	reserved
46:44	RM	rm	rounding mode
43	E5	inexe	- inexact exception enable
42	E4	dbzxe	- divide by zero exception enable
41	E3	underxe	- underflow exception enable
40	E2	overxe	- overflow exception enable
39	E1	invopxe	- invalid operation exception enable
38	NS	ns	- non standard floating point indicator
Result S	tatus		
32		fractie	- the last instruction (arithmetic or conversion) rounded
			intermediate result (or caused a disabled overflow
			exception)
31	RA	rawayz	rounded away from zero (fraction incremented)
30	SC	С	denormalized, negative zero, or quiet NaN
29	SL	neg <	the result is negative (and not zero)
28	SG	pos >	the result is positive (and not zero)
27	SE	zero =	the result is zero (negative or positive)
26	SI	inf ?	the result is infinite or quiet NaN
Exception	n Occ	currence	
21 to 25			reserved
20	X6	swt	{reserved} - set this bit using software to trigger an invalid
			operation
19	X5	inerx	- inexact result exception occurred (sticky)
18	X4	dbzx	- divide by zero exception occurred
17	Х3	underx	- underflow exception occurred
16	X2	overx	- overflow exception occurred
15	X1	giopx	- global invalid operation exception – set if any invalid
			operation exception has occurred
14	GX	gx	- global exception indicator – set if any enabled exception
4.0	0)/		has happened
13	SX	sumx	- summary exception – set if any exception could occur if it
			was enabled
<b>F</b> 4*	<u> </u>	. D	- can only be cleared by software
-	n Typ	e Resoluti	
8 to 12			reserved
7	X1T	cvt	- attempt to convert NaN or too large to integer
6	X1T	sqrtx	- square root of non-zero negative
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison
			instructions

4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN

### $S_PTBR - CSR 0x1003$

This register contains the base address of the page table, which must be a multiple of 4096. Also included in this register is table parameters depth and type. Register tag #152.

127	64	63 12	11	10 8	7 6	5	4	3 1	0
	~	Page Table Address <sub>6312</sub>	~	Levels	$AL_2$	~	S	~	Type

Type: 0 = inverted page table, 1 = page table

S: 1=software managed TLB miss, 0 = hardware table walking

Levels are ignored for the inverted page table.

AL<sub>2</sub>: TLB entry replacement algorithm, 0=fixed,1=LRU,2=random,3=reserved

### $S_ASID - CSR 0x101F$

This register contains the address space identifier (ASID) or memory map index (MMI). The ASID is used in this design to select (index into) a memory map in the paging tables. Only the low order eight bits of the register are implemented.

### S\_KEYS - CSR 0x1020 to 0x1027

These eight registers contain the collection of keys associated with the process for the memory lot system. Each key is thirty-two bits in size. All eight registers are searched in parallel for keys matching the one associated with the memory page. Keyed memory enhances the security and reliability of the system.

	31 0
1020	key0
1021	keyl
1027	key7

#### CA0,CA1,...CA15 (CAREGS) - M CSR 0x3100 to 0x310F

This set of registers allows access to the code address register array. Since code address registers are larger than 64-bits they are split across two register locations for each code address register.

Reg #	Name	Alternate Name	Reg Tag
0x3100	CA0		64
0x3106	CA6		70
0x3107	CA7	IP	71
0x3108	CA8	EIP	72
•••			
0x310F	CA15		79

### M\_CR0 (CSR 0x3000) Control Register Zero

This register contains miscellaneous control bits including a bit to enable protected mode.

Bit		Description
0	Pe	Protected Mode Enable: 1 = enabled, 0 = disabled
8 to 13		
16		
30	DCE	data cache enable: 1=enabled, 0 = disabled
32	BPE	branch predictor enable: 1=enabled, 0=disabled
33	BTBE	branch target buffer enable: 1=enabled, 0=disabled, default=1
34	WBM	write buffer merging enable: 1 = enabled, 0 = disabled
35	SPLE	speculative load enable (1 = enable, 0 = disable) (0 default)
36		
63	D	debug mode status. this bit is set during an interrupt routine if the
		processor was in debug mode when the interrupt occurred.

This register supports bit set / clear CSR instructions.

#### DCE

Disabling the data cache is useful for some codes with large data sets to prevent cache loading of values that are used infrequently. Disabling the data cache may reduce security risks for some kinds of attacks. The instruction cache may not be disabled. Enabling / disabling the data cache is also available via the CACHE instruction.

#### **BPE**

Disabling branch prediction will significantly affect the cores performance but may be useful for debugging. Disabling branch prediction causes all branches to be predicted as not-taken. No entries will be updated in the branch history table if the branch predictor is disabled.

#### WBM bit

Merging of values stored to memory may be disabled by setting this bit. On reset write buffer merging is disabled because it is likely desirable to setup I/O devices. Many I/O devices require updates to individual bytes by separate store instructions. (Write buffer merging is not currently implemented).

### **SPLE**

Enabling speculative loads give the processor better performance at an increased security risk to meltdown attacks.

#### M\_HARTID (CSR 0x3001)

This register contains a number that is externally supplied on the hartid\_i input bus to represent the hardware thread id or the core number.

#### M\_TICK (CSR 0x3002)

This register contains a tick count of the number of clock cycles that have passed since the last reset. Note that this register should not be used for precise timing as the processor's clock frequency may vary for performance and power reasons. The TIME CSR may be used for wall-clock timing as it has its own timing source.

#### M\_SEED (CSR 0x3003)

This register contains a random seed value based on an external entropy collector. The most significant bit of the state is a busy bit.

63 60	59 16	15 0
State <sub>4</sub>	~44	$seed_{16}$

State <sub>4</sub>	
Bit	
0	dead
1	test
2	valid, the seed value is valid
3	Busy, the collector is busy collecting a new seed value

#### M\_BADADDR (CSR 0x3007)

This register contains the effective address for a load / store operation that caused a memory management exception or a bus error. Note that the address of the instruction causing the exception is available in the EIP register.

#### M\_BAD\_INSTR (CSR 0x300B)

This register contains a copy of the exceptioned instruction.

#### M\_DBADx (CSR 0x3018 to 0x301B) Debug Address Register

These registers contain selectors for addresses of instruction or data breakpoints. The registers may also be used as trace triggering address registers.

31	24	23	22	0	
PL	8	T		Index <sub>23</sub>	

#### M\_DBCR (CSR 0x301C) Debug Control Register

This register contains bits controlling the circumstances under which a debug interrupt will occur.

bits		
3 to 0	Enables a specific debug address register to do address matching. If the	
	corresponding bit in this register is set and the address (instruction or	
	data) matches the address in the debug address register then a debug	

	interrupt will be taken.					
17, 16	This pair of bits determine what should match the debug address					
	register zero in order for a debug interrupt to occur.					
	17:16					
	00 match the instruction address					
	01 match a data store address					
	10 reserved					
	11 match a data load or store address					
19, 18	reserved					
23 to 20	Same as 16 to 19 except for debug address register one.					
27 to 24	Same as 16 to 19 except for debug address register two.					
31 to 28	Same as 16 to 19 except for debug address register three.					
32 to 35	Trace enable on address register					
36	Enable branch compression for trace.					
55 to 62	These bits are a history stack for single stepping mode. An exception					
	will automatically disable single stepping mode and record the single					
	step mode state on stack. Returning from an exception pops the single					
	step mode state from the stack.					
63	This bit enables SSM (single stepping mode)					

#### M\_DBSR (CSR 0x301D) - Debug Status Register

This register contains bits indicating which addresses matched. These bits are set when an address match occurs and must be reset by software.

bit	
0	matched address register zero
1	matched address register one
2	matched address register two
3	matched address register three
63 to 4	not used, reserved

#### M TVEC - CSR 0x3030 to 0x3037

These registers contain the address of the exception handling routine for a given operating level. TVEC[3] (0x3036) is used directly by hardware to form an address of the debug routine. The lower eight bits of TVEC[3] are not used. The lower bits of the exception address are determined from the operating level. TVEC[0] to TVEC[2] are used by the REX instruction. The low half of the register contains the offset of the exception processing routine. The high half of the register contains the selector value of the exception processing routine.

A sync instruction should be used after modifying one of these registers to ensure the update is valid before continuing program execution.

Reg #	
0x3030	TVEC[0] low
0x3031	TVEC[0] high
0x3036	TVEC[3] low
0x3037	TVEC[3] high

#### M PLSTACK - CSR 0x303F

This register contains an eight-entry stack of privilege levels. Each stack entry occupies eight bits. When an exception occurs, this register is shifted to the left by eight bits and the low order bits are set to the highest privilege level, 0xFF. When an RTI instruction is executed this register is shifted to the right by eight bits restoring the previous privilege level.

#### M\_PMSTACK - CSR 0x3040

This register contains an eight-entry operating mode and interrupt mask stack. When an exception or interrupt occurs, this register is shifted to the left by eight bits and the low order bits are set according to the exception mode, when an RTI instruction is executed this register is shifted to the right by eight bits. On RTI the last stack entry is set to \$3F masking all interrupts on stack underflow. The low order eight bits represent the current operating mode and interrupt mask.

63	8	7 6	5 4	3 1	0
<seven groups="" more=""></seven>		~2	OM	IPL	IM

OM = operating mode, 0 to 4

IPL = interrupt priority level

IM = interrupt mask

#### M SCRATCH - CSR 0x3041

This is a scratchpad register. Useful when processing exceptions.

#### D VSTEP – CSR 0x4046

This register holds the current vector step number. It may need to be saved and restored during exception processing to ensure vector operations work as expected.

#### D VTMP - CSR 0x4047

This register holds state for an internal temporary register used during vector processing. This register may need to be saved and restored during exception processing.

#### M KYT – CSR 0x3053

The KYT register holds the selector for the memory key table. Register tag #154.

31	24	23	22		0
PI	<b>-</b> 8	T		Index <sub>23</sub>	

#### M\_TCB - CSR 0x3054

This register holds the selector for the currently active task control block. Register tag #155.

31	24	23	22		0
PI		T		Index <sub>23</sub>	

#### M TIME – CSR 0x?FE0

The TIME register corresponds to the wall clock real time. This register can be used to compute the current time based on a known reference point. The register value will typically be a fixed number of seconds offset from the real wall clock time. The lower 32 bits of the register are driven by the tm\_clk\_i clock time base input which is independent of the cpu clock. The tm\_clk\_i input is a fixed frequency used for timing that cannot be less than 10MHz. The low order 32 bits represent the fraction of one second. The upper 32 bits represent seconds passed. For example, if the tm\_clk\_i frequency is 100MHz the low order 32 bits should count from 0 to 99,999,999 then

cycle back to 0 again. When the low order 32 bits cycle back to 0 again, the upper 32 bits of the register is incremented. The upper 32 bits of the register represent the number of seconds passed since an arbitrary point in the past.

This register is available to all operating modes, however it may be written only from machine mode.

Note that this register has a fixed time basis, unlike the TICK register whose frequency may vary with the cpu clock. The cpu clock input may vary in frequency to allow for performance and power adjustments.

#### M TIMECMP - CSR 0x3FE1

If the wall-clock time TIME register is equal to the value in this register, then an interrupt will be generated.

### Hardware Queues

There are sixteen hardware FIFO queues. Queue #15 is used to implement instruction tracing. The queues are accessible with the PUSHQ, POPQ, PEEKQ, and STATQ system instructions.

Queue #	Usage
0	Graphics
15	Instruction Trace

# **Operating Modes**

The core operates in one of four basic modes: application/user mode, supervisor mode, hypervisor mode or machine mode. Machine mode is switched to when an interrupt or exception occurs, or when debugging is triggered. On power-up the core is running in machine mode. An RTI instruction must be executed to leave machine mode after power-up.

A subset of instructions is limited to machine mode.

# **Exceptions**

# **External Interrupts**

There is little difference between an externally generated exception and an internally generated one. An externally caused exception will set the exception cause code for the currently fetched instruction.

There are eight priority interrupt levels for external interrupts. When an external interrupt occurs the mask level is set to the level of the current interrupt. A subsequent interrupt must exceed the mask level to be recognized.

# Polling for Interrupts

To support code that needs to run with interrupts disabled an interrupt polling instruction (PFI) is provided in the instruction set. For instance, the system could be running a high priority task with interrupts disabled. There may be sections of code where it is possible to process an interrupt however. In some code environments, it is not enough to disable and enable interrupts around critical code. The code must be effectively run with interrupt disabled all the time. This makes it necessary to poll for interrupts in software. For instance, stack prologue code may cause false pointer matches for the garbage collector because stack space is allocated before the contents are defined. If the GC scan occurs on this allocated but undefined area of memory, there could be false matches.

### **Effect on Machine Status**

The operating mode is always switched to machine mode on exception. It is up to the machine mode code to redirect the exception to a lower operating mode when desired. Further exceptions at the same or lower interrupt level are disabled automatically. Machine mode code must enable interrupts at some point.

# **Exception Stack**

The current register set, operating mode and interrupt enable bits are pushed onto an internal stack when an exception occurs. This stack is only eight entries deep as that is the maximum amount of nesting that can occur. Further nesting of exceptions can be achieved by saving the state contained in the exception registers.

# **Exception Vectoring**

Exceptions are handled through a vector table. The vector table has four entries, one for each operating level the core may be running at. The location of the vector table is determined by TVEC[3]. If the core is operating at mode three for instance and an interrupt occurs vector table address number three is used for the interrupt handler. Note that the interrupt automatically switches the core to operating mode three. An exception handler at the machine level may redirect exceptions to a lower-level handler identified in one of the vector registers. More specific exception information is supplied in the cause register.

Operating Level	Address (If TVEC[3] contains \$FFC0000)	
0	\$FFC0000	Handler for operating level zero
1	\$FFC0020	
2	\$FFC0040	
3	\$FFC0060	

### Reset

Reset is treated as an exception. The reset routine should exit using an RTI instruction. The PL ad PM stack registers must be set appropriately for the return.

The core begins executing instructions at address \$F...FD0000. All registers are in an undefined state.

### Precision

Exceptions in Thor2021 are precise. They are processed according to program order of the instructions. If an exception occurs during the execution of an instruction, then an exception field is set in the reorder buffer. The exception is processed when the instruction commits which happens in program order. If the instruction was executed in a speculative fashion, then no exception processing will be invoked unless the instruction makes it to the commit stage.

# **Exceptions During Vector Operations**

If an exception occurs during a vector operation, the vector state is recorded, and the operation aborted. The vector operation may be continued after the exception is processed. The vector state consists of a step number and a temporary register.

# **Exception Cause Codes**

The following table outlines the cause code for a given purpose. These codes are specific to Thor2021. Under the HW column an 'x' indicates that the exception is internally generated by the processor; the cause code is hard-wired to that use. An 'e' indicates an externally generated interrupt, the usage may vary depending on the system.

Cause		HW	Description
Code			
0			no exception
1	IBE	X	instruction bus error
2	EXF	X	Executable fault
4	TLB	X	tlb miss
			FMTK Scheduler
128		e	
129	KRST	e	Keyboard reset interrupt
130	MSI	e	Millisecond Interrupt
131	TICK	e	
156	KBD	e	Keyboard interrupt
157	GCS	e	Garbage collect stop
158	GC	e	Garbage collect
159	TSI	e	FMTK Time Slice Interrupt
3			Control-C pressed
20			Control-T pressed
26			Control-Z pressed

32	SSM	X	single step
33	DBG	X	debug exception
34	TGT	X	call target exception
35	MEM	X	memory fault
36	IADR	X	bad instruction address
37	UNIMP	X	unimplemented instruction
38	FLT	X	floating point exception
39	CHK	X	bounds check exception
40	DBZ	X	divide by zero
41	OFL	X	overflow
11	OLE	A	O TOTAL W
47			
48	ALN	X	data alignment
49	KEY	X	memory key fault
50	DWF	X	Data write fault
51	DRF	X	data read fault
52	SGB	X	segment bounds violation
53	PRIV	X	privilege level violation
54	CMT	X	commit timeout
55	BT	X	branch target
56	STK	X	stack fault
57	CPF	X	code page fault
58	DPF	X	data page fault
59	LVL	X	level error
60	DBE	X	data bus error
61	PMA	X	physical memory attributes check fail
62	NMI	X	Non-maskable interrupt
63	BRK		BRK instruction encountered
200	PFX	X	Too many instruction prefixes
225	FPX_IOP	X	Floating point invalid operation
226	FPX_DBZ	X	Floating point divide by zero
227	FPX_OVER	X	floating point overflow
228	FPX_UNDER	X	floating point underflow
229	FPX_INEXACT	X	floating point inexact
231	FPX_SWT	X	floating point software triggered
239			Software exception handling
240	SYS		Call operating system (FMTK)
241			FMTK Schedule interrupt
242	TMR	X	system timer interrupt
243	GCI	X	garbage collect interrupt
253	RST	X	reset
254	NMI	X	non-maskable interrupt
255	PFI		reserved for poll-for-interrupt instruction

### **DBG**

A debug exception occurs if there is a match between a data or instruction address and an address in one of the debug address registers.

### **IADR**

This exception is currently not implemented but reserved for the purpose of identifying bad instruction addresses. If the two least significant bits of the instruction address are non-zero then this exception will occur.

### **UNIMP**

This exception occurs if an instruction is encountered that is not supported by the processor. It may also occur if there is an attempt to use an instruction in a mode that does not support it.

### **OFL**

If an arithmetic operation overflows (multiply, add, or shift) and the overflow exception is enabled in the arithmetic exception enable register then an OFL exception will be triggered.

### **KEY**

This fault will occur if an attempt is made to access memory for which the app does not have the key.

### FLT

A floating-point exception is triggered if an exceptional condition occurs in the floating-point unit and the exception is enabled. Please see the section on floating-point for more details.

# DRF, DWF, EXF

Data read fault, data write fault, and execute fault are exceptions that are returned by the memory management unit when an attempt is made to access memory for which the corresponding access type is not allowed. For instance, if the memory page is marked as non-executable an attempt is made to load the instruction cache from the page then an execute fault EXF exception will occur.

### CPF, DPF

The code page fault and data page fault exceptions are activated by the mmu if the page is not present in memory. Access may be allowed but simply unavailable. These faults are not currently implemented.

### **PRIV**

Some instructions and CSR registers are legal to use only at a higher operating level. If an attempt is made to use the privileged instruction by a lower operating level, then a privilege violation exception may occur. For instance, attempting to use RTI instruction from user operating level.

### STK

If the value loaded into one of the stack pointer registers (the stack pointer sp or frame pointer fp) is outside of the bounds defined by the stack bounds registers, then a stack fault exception will be triggered.

### **DBE**

A timeout signal is typically wired to the err\_i input of the core and if the data memory does not respond with an ack\_i signal fast enough an error will be triggered. This will happen most often when the core is attempting to access an unimplemented memory area for which no ack signal is generated. When the err\_i input is activated during a data fetch, an exception is flagged in a result register for the instruction. The core will process the exception when the instruction commits. If the instruction does not commit (it could be a speculated load instruction) then the exception will not be processed.

### **PMA**

The addressed memory did not pass the physical memory attributes testing. For example a write operation attempted to a ROM address space.

### **IBE**

A timeout signal is typically wired to the err\_i input of the core and if the instruction memory does not respond with an ack\_i signal fast enough and error will be triggered. This will happen most often when the core is attempting to access an unimplemented memory area for which no ack signal is generated. When the err\_i input is activated during an instruction fetch, a breakpoint instruction is loaded into the cache at the address of the error.

### **NMI**

Non-maskable interrupt.

### BT

The core will generate the BT (branch target) exception if a branch instruction points back to itself. Branch instructions in this sense include jump (JMP) and call (CALL) instructions.

# Memory Management Regions

In any processing system there are typically several different types of storage assigned to different physical address ranges. These include memory mapped I/O, MMIO, DRAM, ROM, configuration space, and possibly others. Thor2022 has a region table that supports up to eight separate regions.

The region table is a list of region entries. Each entry has a start address, an end address, an access type field, and a pointer to the PMT, page management table. To determine legal access types, the physical address is searched for in the region table, and the corresponding access type returned. The search takes place in parallel for all eight regions.

Once the region is identified the access rights for a particular page within the region can be found from the PMT corresponding to the region.

# PMA - Physical Memory Attributes Checker

### **Overview**

The physical memory attributes checker is a hardware module that ensures that memory is being accessed correctly according to its physical attributes.

Physical memory attributes are stored in an eight-entry region table. This table includes the address range the attributes apply to and the attributes themselves. Address ranges are resolved only to bit four of the address. Meaning the granularity of the check is 16 bytes.

Most of the entries in the table are hard-coded and configured when the system is built. However, they may be modified with the <u>RGNRW</u> instruction.

Physical memory attributes checking is applied in all operating modes.

# **Register Description**

Regno	Bits		
00	64	start	start address bits 4 to 67 of the physical address range
08	64	nd	end address bits 4 to 67 of the physical address range
10	64	pmt	associated PMT address
18	16	at	memory attributes
•••	•••		6 more register sets
E0	64	start	start address bits 4 to 67 of the physical address range
E8	64	nd	end address bits 4 to 67 of the physical address range

F0	64	pmt	associated PMT address
F8	16	at	memory attributes

### **PMT Address**

The PMT address specifies the location of the associated PMT and the size of PMT entries. Bits 0,1 of the PMT address select a size of 16,32,64 or 128 bytes for the PMTE.

### **Attributes**

Bitno		
0	X	may contain executable code
1	W	may be written to
2	R	may be read
3	С	may be cached
4-6	G	granularity
		G
		0 byte accessible
		1 wyde accessible
		2 tetra accessible
		3 octa accessible
		4 hexi accessible
		5 to 7 reserved
7	~	reserved
8-15	T	device type (rom, dram, eeprom, I/O, etc)

# Page Management Table - PMT

### **Overview**


After the region is determined and page number calculated the page management table is referenced to obtain the access rights to the page. The table contains an assortment of information most of which is managed by software. Pieces of information include the key needed to access the page, the privilege level, and read-write-execute permissions for the page. The table is

organized as rows of access rights table entries (PMTEs). There are as many PMTEs as there are pages of memory in the region.

# **PMTE Description**

The first part of the PMTE is fixed as it used by hardware to load access rights into the TLB. The second part of the PMTE is provided for the OS to use. The size of a PMTE entry is set in the low order bits of the PMT address in the region table. The PMTE may be 16, 32, 64, or 128 bytes in size.

#### Page Management Table Entry

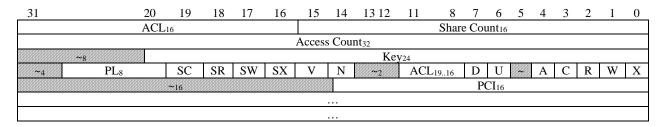

### **Access Control List**

The ACL field is a reference to an associated access control list.

### **Share Count**

The share count is the number of times the page has been shared to processes. A share count of zero means the page is free.

### **Access Count**

This part uses the term 'access count' to refer to the number of times a page is accessed. This is usually called the reference count, but that phrase is confusing because reference counting may also refer to share counts. So, the phrase 'reference count' is avoided. Some texts use the term reference count to refer to the share count. Reference counting is used in many places in software and refers to the number of times something is referenced.

Every time the page of memory is accessed, the access count of the page is incremented. Periodically the access count is aged by shifting it to the right one bit.

The access count may be used by software to help manage the presence of pages of memory.

# Key

The access key is a 32-bit value associated with the page and present in the key ring of processes. To obtain access to the page it is necessary for the process to have a matching key OR if the key to match is set to zero in the ARTE then a key is not needed to access the page.

# **Privilege Level**

The current privilege level is compared with the privilege level of the page, and if access is not appropriate then a privilege violation occurs. For data access, the current privilege level must be at least equal to the privilege level of the page. If the page privilege level is zero anybody can access the page.

### N

indicates a conforming page of executable code. Conforming pages may execute at the current privilege level. In which case the PL field is ignored.

- C indicates that the page may be cached by users.
- **R** Indicates the page may be read by users
- W Indicates the page may be written by users
- X Indicates the page may be executed by user programs.

SC, SR, SW, and SX serve the same purpose as C, R, W, and X except for system software.

### Page Tables


### Intro

Page tables are part of the memory management system used map virtual addresses to real physical addresses. There are several types of page tables. Hierarchical page tables are probably the most common. Almost all page tables map only the upper bits of a virtual address, called a page. The lower bits of the virtual address are passed through without being altered. The page size often 4kB which means the low order 12-bits of a virtual address will be mapped to the same 12-bits for the physical address.

# **Hierarchical Page Tables**

Hierarchical page tables organize page tables in a multi-level hierarchy. They are capable of mapping the entire virtual address range. At the topmost level a register points to a page directory, that page directory points to a page directory at a lower level until finally a page directory points to a page containing page table entries. To map an entire 64-bit virtual address range approximately five levels of tables are required.

# Paged MMU Mapping

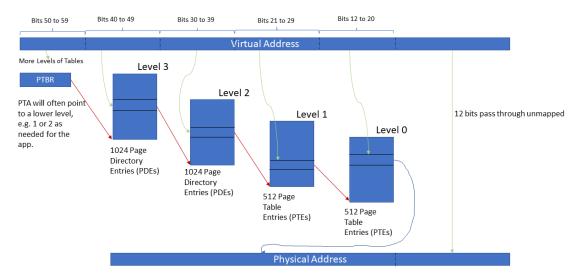

# **Inverted Page Tables**


An inverted page table is a table used to store address translations for memory management. The idea behind an inverted page table is that there is a fixed number of pages of memory no matter how it is mapped. It should not be necessary to provide for a map of every possible address, only addresses that correspond to real pages of memory. Each page of memory can be allocated only once. It is either allocated or it is not. Compared to a non-inverted paged memory management system where tables are used to map potentially the entire address space an inverted page table uses less memory. There is typically only a single inverted page table supporting all applications in the system. This is a different approach than a non-inverted page table which may provide separate page tables for each process.

# The Simple Inverted Page Table

The simplest inverted page table contains only a record of the virtual address mapped to the page, and the index into the table is used as the physical page number. There are only as many entries in the inverted page table as there are physical pages of memory. A translation can be made by scanning the table for a matching virtual address, then reading off the value of the table index. The attraction of an inverted page table is its small size compared to the typical hierarchical page table. Unfortunately, the simplest inverted page table is not practical when there are thousands or millions of pages of memory. It simply takes too long to scan the table. The alternative solution to scanning the table is to hash the virtual address to get a table index directly.

# Inverted Page Table

Entry number identifies physical page number

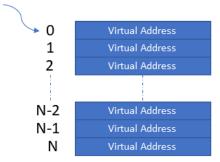

# **Hashed Page Tables**

#### **Hashed Table Access**

Hashes are great for providing an index value immediately. The issue with hash functions is that they are just a hash. It is possible that two different virtual address will hash to the same value. What is then needed is a way to deal with these hash collisions. There are a couple of different methods of dealing with collisions. One is to use a chain of links. The chain has each link in the chain pointing the to next page table entry to use in the event of a collision. The hash page table is slightly more complicated then as it needs to store links for hash chains. The second method is to use open addressing. Open addressing calculates the next page table entry to use. The calculation may be linear, quadratic or some other function dreamed up. A linear probe simply chooses the next page table entry in succession from the previous one if no match occurred. Quadratic probing calculates the next page table entry to use based on squaring the count of misses.

### **Shared Memory**

Another issue to deal with is shared memory. Sometimes applications share memory with other apps for communication purposes, and to conserve memory space where there are common elements. With a hierarchical paged memory management system, it is easy to share memory, just modify the page table entry to point to the same physical memory as is used by another process. With an inverted page table having only a single entry for each physical page is not sufficient to support shared memory. There needs to be multiple page table entries available for some physical pages but not others because multiple virtual addresses might map to the same physical address. One solution would be to have multiple buckets to store virtual addresses in for each physical address. However, this would waste a lot of memory because much of the time only a single mapped address is needed. There must be a better solution. Rather than reading off the table index as the physical page number, the association of the virtual and physical address can be stored. Since we now need to record the physical address multiple times the simple mechanism of using the table index as the physical page number cannot be used. Instead, the physical page number needs to be stored in the table in addition to the virtual page number.

That means a table larger than the minimum is required. A minimally sized table would contain only one entry for each physical page of memory. So, to allow for shared memory the size of the table is doubled. This smells like a system configuration parameter.

# **Thor2022 Page Tables**

# **Thor2022 Hash Page Table Setup**

#### Page Table Entries - PTE

We have determined that a page table entry needs to store both the physical page number and the virtual page number for the translations. In addition to those two items additional bookkeeping bits are stored. The physical and virtual page numbers are 52 bits each for a total of 104 bits. The other bookkeeping bits require 103 bits of storage, so the total is 207 bits. It is also probably a good idea to leave a little bit of extra space to expand the virtual address for instance. Software often needs to store additional information in the page table entry as well. A size of 256 bits was chosen.

#### Page Table Entry

31			20	19	18	17	16		14	13 1	2	11	8	7	6	5	4	3	2	1	0
							Physi	cal P	age N	umber	310										
EN <sub>3</sub>	N	N PL8 Physical Page Number4732																			
							Virtu	ıal Pa	ige Ni	ımber3	10										
MI	MB <sub>6</sub> ME <sub>6</sub>				~₄ Virtu					l Page Number4732											
	ASID <sub>12</sub>				S	SCRW	X	V	G	Av	~	BC	4	D	U	S	Α	C	R	W	X
	~8										Ke	<b>y</b> 24									
								Acce	ss Co	unt <sub>32</sub>											
	RFU <sub>16</sub>												PC	$CI_{16}$							

#### Fields Description

ASID	Address Space Identifier
V	translation Valid
G	Global translation
BC	Bounce Count
D	dirty
U	unspecified use
S	Page Size (Shortcut)
A	Accessed
С	Cacheable
R	Readable
W	Writeable
X	Executable
SC,SR,SW,SX	system mode C,R,W,X
Av	Access rights info valid
PL	privilege level
N	conforming code
EN	PTG entry number
Key	protection key
MB	page access mask begin
ME	page access mask end
CI	compressed area indicator bitmap

The page table does not include everything needed to manage pages of memory. There is additional information such as share counts and privilege levels to take care of, but this information is better managed in a separate table.

The virtual to physical address mapping is for a 64kB page. But the entire 64kB page does not need to be accessible by the process. The base and limit fields allow access with a 1kB granularity.

The base field is added to bits 10 through 15 of the virtual address. The effect is to rotate a 1kB block of memory so that it begins at start of the 64kB block. This field is used to allocate less than 64kB to a process. It allows the 64kB page to be shared by different virtual addresses.

#### Page Table Groups – PTG

We want the search for translations to be fast. That means being able to search in parallel. So, PTEs are stored in groups that are searched in parallel for translations. This is sometimes referred to as a clustered table approach. Access to the group should be as fast as possible. There are also hardware limits to how many entries can be searched at once while retaining a high clock rate. So, the convenient size of 2048 bits was chosen as the amount of memory to fetch.

A page table group then contains eight page-table entries. All entries in the group are searched in parallel for a match. Note that the entries are searched as the PTG is loaded, so that the PTG group load may be aborted early if a matching PTE is found before the load is finished.

255		0
	PTE0	
	PTE1	
	PTE2	
	PTE3	
	PTE4	
	PTE5	
	PTE6	
	PTE7	

#### For a system with 512MB of RAM:

There are 8192 64kB pages. 8192 PTEs are required without considering sharing. Since we decided to double the table size for sharing 16384 PTEs need to be accommodated. This works out to 2048 groups of PTEs, or about 512kB. This is about 0.1% of memory. To get to a page table group fast a hash function is needed then that returns a 11-bit number.

#### **Hash Function**

The hash function needs to reduce the size of a virtual address down to a 11-bit number. The asid should be considered part of the virtual address. Including the asid an address is 76 bits. The first thing to do is to throw away the lowest sixteen bits as they pass through the MMU unaltered. We now have 60-bits to deal with. We can probably throw away some high order bits too, as a process is not likely to use the full 64-bit address range.

The hash function chosen uses the asid combined with virtual address bits 18 to 28 and bits 29 to 39. This should space out the PTEs according to the asid. Address bits 16 and 17 select one of four address ranges. the PTG supports eight PTEs. The translations where address bits 16 and 17

are involved are likely consecutive pages that would show up in the same PTG. The hash is the asid exclusively or'd with address bis 18 to 28 exclusively or'd with address bits 29 to 39.

#### **Collision Handling**

Quadratic probing of the page table is used when a collision occurs. The next PTG to search is calculated as the hash plus the square of the miss count. On the first miss the PTG at the hash plus one is searched. Next the PTG at the hash plus four is searched. After that the PTG at the hash plus nine is searched, and so on.

#### Finding a Match

Once the PTG to be searched is located using the hash function, which PTE to use needs to be sorted out. The match operation must include both the virtual address bits and the asid, address space identifier, as part of the test for a match. It is possible that the same virtual address is used by two or more different address spaces, which is why it needs to be in the match.

#### Locality of Reference

The page table group may be cached in the system read cache for performance. It is likely that the same PTG group will be used multiple times due to the locality of reference exhibited by running software.

#### Access Rights

To avoid duplication of data the access rights are stored in another table called the PMT for access rights table. The first time a translation is loaded the access rights are looked-up from the PMT. A bit is set in the TLB entry indicating that the access rights are valid. On subsequent translations the access rights are not looked up, but instead they are read from values cached in the TLB.

#### Location of Page Table

Thor2022's hash page table is in the physical address space at \$FFAxxxxx. It is a specially dedicated block RAM memory which has two sides. One side is updateable and readable via the load hexi-byte pair and store hexi-byte pair LDHP, STHP instructions. The other side is updateable and readable in terms of page groups by the hash page table control logic.

# **Thor2022 Hierarchical Page Table Setup**

#### Page Table Entries - PTE

For hierarchical tables the structure is like that of hashed page tables except that there is no need to store the virtual address or the ASID. We know the virtual address because it is what is being translated and there is no chance of collisions unlike the hash table. Since there is a separate page table for each process the ASID does not need to be stored in it. The structure is 128 bits in size. This allows 4096 PTEs to fit into a 64kB page.

#### Page Table Entry Format

	Physical Page Number310									
	~16		Physic	cal Page	Numbe	<b>r</b> 4732				
$MB_6$	ME <sub>6</sub>	SCRWX	$PL_8$	N C	Av	S	С	R	W	X
LVL <sub>3</sub> V M U	A P	~8		PC	$I_{16}$					

E: ald	C:	Distriction
Field	Size	Purpose
PPN	48	Physical page number
~	16	reserved
X	1	1=executable
W	1	1=writeable
R	1	1=readable
C	1	1=cacheable
S	1	1=super page
Av	1	1=access rights valid
G	1	1=global translation
N	1	1=conforming code
PL	8	privilege level
SCRWX	4	cacheable, read, write, execute for system mode
ME	6	page mask end
MB	6	page mask begin
PCI	16	page compression indicators
~	8	reserved
P	1	1 if page is present in memory
A	1	1 if entry was accessed
U	1	operating system use
M	1	not used, reserved
V	1	1 if entry is valid, otherwise 0
LVL	3	the page table level of the entry pointed to

Note the LVL field for both PTEs and PDEs is in the same position.

### Page Directory Entries - PDE

A hierarchical table usually consists of multiple levels of pages for the page table. The leaf entries are the PTEs non-leaf entries are page directory entries or PDEs. PDEs are 128-bits in size, therefore 4096 PDEs fit in one 64kB page of memory.

### Page Directory Entry Format

•	Virtual Page Number <sub>310</sub>								
	Virtual Page Number <sub>6332</sub>								
	Virtual Page Number9564								
LVL <sub>3</sub>	V	M U	Α	P	~8	Virtual Page Number11196			

Field	Size	Purpose
VPN	112	Virtual page number of next lower page table
~	8	reserved
P	1	1 if present in memory
A	1	1 if entry was accessed
U	1	operating system use
M	1	not used, reserved
V	1	1 if entry is valid, otherwise 0
LVL	3	the page table level of the entry pointed to

#### MMU Cache

To improve the performance of PDE lookups. The MMU has a small fully associative cache for PDE lookups.

### TLB – Translation Lookaside Buffer

### **Overview**

The page map is limited in the translations it can perform because of its size. The solution to allowing more memory to be mapped is to use main memory to store the translations tables.

However, if every memory access required two or three additional accesses to map the address to a final target access, memory access would be quite slow, slowed down by a factor or two or three, possibly more. To improve performance, the memory mapping translations are stored in another unit called the TLB standing for Translation Lookaside Buffer. This is sometimes also called an address translation cache ATC. The TLB offers a means of address virtualization and memory protection. A TLB works by caching address mappings between a real physical address and a virtual address used by software. The TLB deals with memory organized as pages. Typically, software manages a paging table whose entries are loaded into the TLB as translations are required.

The TLB is a cache specialized for address translations. Thor2022's TLB is quite large being five way associative with 1024 entries per way. This choice of size was based on the minimum number of block RAMs that could be used to implement the TLB. On a TLB miss the page table is searched for a translation and if found the translation is stored in one of the ways of the TLB. The way selected is determined either randomly or in a least-recently-used fashion as one of the first four ways. The fifth way may not be updated automatically by a page table search, it must be updated by software.

# Size / Organization

The TLB has 1024 entries per set. The size was chosen as it is the size of one block ram for 32-bit data in the FPGA. This is quite a large TLB. Many systems use smaller TLBs. Typically, systems vary between 64 and 1024 entries. There is not really a need for such a large one, however it is available.

The TLB is organized as a five-way set associative cache. The fifth way may only be updated by software. The fifth way allows translations to be stored that will not be overwritten.

### **TLB Entries - TLBE**

Closely related to page table entries are translation look-aside buffer, TLB, entries. TLB entries have more fields to provide access counting and keyed access. The additional field are populated from the page management table, PMT.

31			20	19	18	17	16		14	13 1	2	11	8	7	6	5	4	3	2	1	0							
							Physic	cal P	age N	umber	310																	
$EN_3$	EN <sub>3</sub> N PL <sub>8</sub> ~4											Physica	al Pa	ge N	umbe	er <sub>473</sub>	32											
							Virtu	al Pa	ige Ni	ımber3	10																	
MI	$MB_6$ $ME_6$ $\sim_4$											Virtua	l Pag	ge Nu	mbe	r <sub>4732</sub>	2											
		ASID <sub>1</sub>	2		S	CRW	X	V	G	Av	4	BC <sub>2</sub>	1	D	U	S	Α	С	R	W	X							
	~8									Key <sub>24</sub>																		
							1	Acce	ss Co	unt <sub>32</sub>																		
			RF	U16										PC	$CI_{16}$													

### What is Translated

The TLB processes addresses including both instruction and data addresses for all modes of operation. It is known as a *unified* TLB.

# **Page Size**

Because the TLB caches address translations it can get away with a much smaller page size than the page map can for a larger memory system. 4kB is a common size for many systems. There are some indications in contemporary documentation that a larger page size would be better. In this case the TLB uses 64kB. For a 512MB system (the size of the memory in the test system) there are 8192 64kB pages.

# Management

The TLB unit may be updated by either software or hardware. This is selected in the page table base register. If software miss handling is selected when a translation miss occurs, an exception is generated to allow software to update the TLB. It is left up to software to decide how to update the TLB. There may be a set of hierarchal page tables in memory, or there could be a hash table used to store translations.

The TLB is updated using the TLBRW instruction which both reads and writes the TLB. More descriptive text is present at the TLBRW instruction description.

### Addressing the TLB

The TLB is addressed in the physical memory space in the address range \$FFExxxxx. The low order bits of the address determine which way to update in the TLB if the algorithm is a fixed or LRU way algorithm. Otherwise, a way to update will be selected randomly. The data is hexi-byte pair aligned. When the LRU algorithm is active the most recently used entry is placed in way #0.

127	15	31	16	15	14	5	4 3	2 0
FFFF		FFE	E0h <sub>16</sub>	0	Entry N	ımber <sub>10</sub>	~2	way <sub>3</sub>

### **TLB Entry Replacement Policies**

The TLB supports three algorithms for replacement of entries with new entries on a TLB miss. These are fixed replacement (0), least recently used replacement (1) and random replacement (2). The replacement method is stored in the  $AL_2$  bits of the page table base register.

For fixed replacement, the way to update must be specified by a software instruction. Least recently used replacement, LRU, rotates the most recent address translation to the first way and updates by over-writing the value in the third way. Random replacement chooses a way to replace at random.

# Flushing the TLB

The TLB maintains the address space (ASID) associated with a virtual address. This allows the TLB translations to be used without having to flush old translations from the TLB during a task switch.

### Reset

On a reset the TLB is preloaded with translations that allow access to the system ROM.

#### Global Bit

In addition to the ASID the TLB entries contain a bit that indicates that the translation is a global translation and should be present in every address space.

# Page Management

There are typically at least three primary lists that a page may be on. These are the active list, the inactive list, and the free list. Typically, a list link field would be present in the PMTE.

# Key Cache

### **Overview**

Associated with each page of memory is a memory key. To access a page of memory the memory key must match with one of the keys in the applications keyset. The keyset is maintained in the keys CSRs. The key size of 20 bits is a minimum size recommended for security purposes.

The key associated with each memory page is stored in a table in main memory. Each key occupies a tetra-byte of memory to keep caching simple. So that two memory accesses are not required to access a page of memory this table of keys is cached. When a page of memory is accessed the key cache is accessed in parallel.

The key cache is a direct mapped cache organized as 256 lines of 16 keys. Key values are stored in LUT rams. 256 address tags are stored in LUT ram.

### Card Table

### **Overview**

Also present in the memory system is the Card table. The card table is a telescopic memory which reflects with increasing detail where in the memory system a pointer write has occurred. This is for the benefit of garbage collection systems. Card table is updated using a write barrier when a pointer value is stored to memory, or it may be updated automatically using the STPTR instruction.

### **Organization**

Memory is divided into 512-byte card memory pages. Each card has a single byte recording whether a pointer store has taken place in the corresponding memory area. To cover a 512MB

memory system 1MB card memory is required at the outermost layer. The outer most 1MB card memory layer is itself divided into 2048 512-byte card pages. Note that each byte represents the pointer store status for a 512B region. The 2048B memory is further resolved to single octa indicating if any pointer store has taken place. Thus, for a 512MB memory system a three-level card memory is used.

Layer	Resolving Power	
0	1 MB	512B regions
1	2 kB	256kB regions
2	4 B	128 MB regions

There is only a single card memory in the system, used by all tasks.

### Location

Card memory must be based at physical address zero, extending up to the amount of card memory required. This is so that the address calculation of the memory update may be done with a simple right-shift operation.

# **Operation**

As a program progresses it writes pointer values to memory using the write barrier. Storing a pointer triggers an update to all the layers of card memory corresponding to the main memory location written. A byte is set in each layer of the card memory system corresponding to the memory location of the pointer store.

The garbage collection system can very quickly determine where pointer stores have occurred and skip over memory that has not been modified.

; store the value to memory at a1

; compute card address ; clear byte in card memory ; repeat for each table level

# Sample Write Barrier

```
; Milli-code routine for garbage collect write barrier.
```

; Usable with up to 64-bit memory systems.

; Three level card memory

;

#### GCWriteBarrier:

STO	a0,[a1]
SRL	a1,a1,#8
STB	x0,[a2+a1]
SRL	a1,a1,#8
STB	x0,[a2+a1]
SRL	a1,a1,#8
STB	x0,[a2+a1]
; more stores	as needed
JMP	lk2

# System Memory Map

There are several components to the system which use tables in memory. These tables are statically allocated at the time the system is built. The table sizes depend on the size of main memory. The card memory table must be located at address zero. So, it is probably best to group the tables together at the low end of memory.

Address	Usage	
\$00000000 to \$001FFFFF	Card Table (2 MB)	
\$00210000 to \$0022FFFF	PAM (128kB 2 copies)	
\$00280000 to \$0029FFFF	Key memory (128 kB)	

# **Debugging Unit**

### Overview

The Thor2021 has several debug features including debug exceptions on address matches and instruction tracing. Instruction trace trigger registers are shared with the debug address registers. Which function is triggered on an address match is controlled in the debug control register.

# **Instruction Tracing**

Instruction tracing is enabled by setting the trace enable bit (bit 32 to 35) for the corresponding debug address match register. Tracing will begin when an address match occurs and continue until the trace buffer is full. The trace queue is 8kB in size allowing thousands of instructions to be traced.

# Trace Queue Entry Format

The trace queue stores both complete instruction pointer addresses and branch taken-not-taken (TNT) history. The low order two bits of the trace entry indicate the type of record stored by the entry. There are currently two record types. Record type zero is an instruction pointer address. Record type one is a history record for branches.

111				2	1	0
					Rect	type <sub>2</sub>
~14	Selector Value <sub>32</sub>	Instruction Pointer bits 0	to 63		0	0
111		9	8	2	1	0
	Branch Taken	-Not-Taken History <sub>103</sub>	col	unt <sub>7</sub>	0	1

Up to 103 bits of branch TNT history may be stored in a single record. The number of bits stored is recorded in bits 2 to 8 of the record. After four full branch TNT history records, the trace will record the current instruction address in whole.

### Trace Readback

A trace of instructions executed may be read back from the trace queue using the PEEKQ and POPQ instructions. The processor trace queue is accessible as queue number 15. Queue 15 contains the raw history record. Software should get the status using the STATQ instruction to see if data is available, then pop queue 15 to get the data record.

# **Address Matching**

The debug and trace unit use selectors to select an address range to match against.

### **Extended Precision Arithmetic**

Extended precision arithmetic is supported by the CARRY instruction and carry storage registers P0 to P7. The CARRY instruction specifies which of the following instructions input or output a carry value. The instruction group covered by the CARRY instruction is executed with interrupts disabled. Because the instructions are treated as a group there is no need to store or retrieve intermediate carry values through context switches.

# Instruction Set Architecture Description Overview

Like the original Thor core, the instruction set is variable length. Instructions vary from two to eight bytes in length (2, 4, 6 or 8). Commonly used instructions often have short forms. While adding complexity to the processor, variable length instructions make better use of the cache.

Thor2021 uses 16-bit instruction parcels as a minimum. All instructions are a multiple of two bytes in length. Formats were considered that varied by a single byte in size. An issue with using instructions that vary by only a single byte in size is that there are twice as many instruction length decoders required in hardware. The instruction aligner would be larger and more complex with byte aligned instructions. The 16-bit parcel is an engineering compromise between minimizing instruction size and minimizing processor complexity. Seriously considered was packing three 41-bit instructions into 128-bit bundles. One issue with this approach is software complexity of the assembler and linker. Byte aligned instructions are handled well by existing software, bit aligned instructions are not as popular.

Thor2021 has the capacity to represent any instruction as a vector instruction. A single bit in the instruction indicates if it is a vector instruction. This avoids the issue many instruction set architectures have of having large numbers of instructions duplicated for operation with vectors. There are literally hundreds of instructions that make sense to have vector versions. Having two sets of opcodes would add too much complexity to the processor. Because of the large number of vector instructions it ends up consuming an opcode bit anyways.

# Root Opcode

The root opcode determines the class of instructions executed. Some commonly executed instructions are also encoded at the root level to make more bits available for the instruction. The root opcode is always present in all instructions as the lowest eight bits of the instruction. The instruction length is determined entirely by the value of the root opcode.

Byte 3		Byte 2		В	yte 1	Byte 0				
31	21	20	15	14	9	8	7	<b>V</b>		
Constar	Constant <sub>11</sub>			R	t <sub>6</sub>	v	Opc	ode <sub>8</sub>		

### **Vector Instruction Indicator**

The processing core needs to know if an instruction is a vector instruction before it is fully decoded. Depending on if the instruction is a vector instruction, it may be re-decoded and sent into the pipeline multiple times. The processor needs to know very quickly and simply at the instruction fetch stage if the instruction is a vector operation. So, to help things along Thor2021 encodes this information in bit 8 of all instructions. If bit 8 is a '1' then the instruction is a vector instruction. See the sample instruction below.

V

31	21	20	15	14	9	8	7	0
Consta	$ant_{11}$	R	$a_6$	Rt	6	v	O	ocode <sub>8</sub>

# Target Register Spec

Most instructions have a target register. The register spec for the target register is usually in the same position, bits 9 to 14 of an instruction. If the instruction is a vector instruction, then the target register will be a vector register, otherwise it is a scalar register.

				•	′			
31	21	20	15	14	9	8	7	0
Constant <sub>2</sub>	1	R	$a_6$	Rt	t <sub>6</sub>	V	Opc	ode <sub>8</sub>

# **Register Formats**

### **R1** (one source register)

		24 22							-		0
Fun	IC <sub>7</sub>	$m_3$	Z	$Sz_2$	R	$a_5$	R	t <sub>5</sub>	v	Opc	ode <sub>8</sub>

# R2 (two source register)

3130	29 27	26	25	24	23	19	18	14	13	9	8	7	0
$Sz_2$	$m_3$	Z	P	Tb	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	R	t <sub>5</sub>	v	Op	code <sub>8</sub>

# **R3** (three source register)

4	7 41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
]	Func <sub>7</sub>	m <sub>3</sub>	Z	~2	$Sz_3$	P	Tc	Ro	C <sub>5</sub>	Tb	R	<b>b</b> 5	Ra	<b>1</b> 5	Rt	5	v	Opc	ode <sub>8</sub>

### **Immediate Format**

# RIL (with prefix)

The immediate prefix replaces the sign extension from bit 23 to the machine width with bits from the prefix instruction.

Bytes 9 to 11	Byte 8	Byte 7	Byte 6	Bytes 1 to 5	Byte 0
---------------	--------	--------	--------	--------------	--------

#### Scalar Immediate

	Instruction									Prefix	ζ.		
47 19 18 14 13 9 8 7 0									47	9	8	7	0
Immediate <sub>280</sub>		Ra	as	Rt	t5	0	Opc	code8	Immed	liate6325	V	1	Fh <sub>6</sub>

The instruction prefix may be 2, 4, 6 or 8 bytes in size.

#### **Vector Immediate**

		Instr	Prefix	(					
47 45	47 45   44   43   19   18   14   13   9   8   7						47 9	8	7 0
m <sub>3</sub>	Z	7   Immediates		Rt <sub>5</sub>	1	Opcode8	Immediate <sub>6325</sub>	V	1Fh <sub>6</sub>

# **Clock Cycles**

Clock cycles given for instructions are approximate and represent a relative relationship between instructions. An instruction with a given clock cycle count of two will take approximately twice as long to execute as an instruction with a given clock cycle count of one. Generally, a clock cycle count of one means the instruction requires only a single clock to execute. However, the effective execution time of the instruction may be less if multiple execution units can execute the instruction or if execution of the instruction may be overlapped with execution of other instructions.

# **Execution Units**

Most instructions execute on a particular type of execution unit. For instance, the ADD instruction is executed on an ALU while the LDB instruction is executed on a memory unit. The execution unit for the instruction is listed in the instruction's description. The execution of some instructions is supported on only a single execution unit even if multiple execution units of the same type are available. For instance, infrequently used instructions like bitfield manipulations or sub-word shifts and rotates are supported on only a single ALU. Instructions that execute on two different execution units may execute at the same time. This is important for instruction scheduling.

# **Sub-word Operations**

### **Mnemonics**

Operation sizes are specified by adding a size qualifier to the mnemonic as in ADD.T. The T stands for Tetra.

Possible size qualifiers:

.B	byte
.W	wyde
.T	tetra
.0	octa
.H	hexi
.BP	byte parallel
.WP	wyde parallel
.TP	tetra parallel
.OP	octa parallel
.HP	hexi parallel

#### **Result Format**

For sub-word operations which may be specified for instructions the results are sign extended to the word width of 128-bits.

Example:

SLL.W r1,r2,6

Will shift the first 16 bits of the register to the left by six bits, then sign extend the result from bit 15 to bit 127.

### **Instruction Encoding**

Two Bit Size Code

$Sz_2$	
0	hexis
1	octas
2	tetras
3	wydes

Four Bit Size Code

Sz <sub>4</sub>	
0	hexis
1	octas
2	tetras
3	wydes
4 to 7	reserved
8	hexi
9	octa parallel

10	tetra parallel
11	wyde parallel

# Arithmetic / Logical / Shift

# **ABS – Absolute Value**

#### **Description:**

This instruction computes the absolute value of the contents of Ra and places the result in Rt.

#### **Integer Instruction Format: R1**

 31 25	24 22	21	2019	18 14	13 9	8	7 0	
06h <sub>7</sub>	$m_3$	z Sz <sub>2</sub> Ra <sub>5</sub>		Rt <sub>5</sub>	v	01h <sub>8</sub>		
v: 0 = sc	alar, 1	= ve	ctor o	р				

#### **Operation:**

$$If Rb < 0 \\ Rt = -Rb \\ else \\ Rt = Rb$$

#### **Vector Operation**

for 
$$x=0$$
 to VL - 1 
$$if\ (Vm[x])\ Rt[x]=Ra[x]<0\ ?\ -Ra[x]:Ra[x]$$
 else  $if\ (z)\ Rt[x]=0$  else  $Rt[x]=Rt[x]$ 

**Execution Units:** Integer ALU #0

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

# **ADD - Register-Register**

#### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. All registers are integer registers.

Unless the **CARRY** instruction is used, the input carry will be zero.

#### **Instruction Format:** R2

Results are sign extended to 128-bits.

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	P	Tb	R	b <sub>5</sub>	R	$a_5$	Rt	5	v		19h <sub>8</sub>	

#### **Operation:**

$$Rt = Ra + Rb + carry$$

#### **Instruction Format:** R3

For this format, if the CARRY instruction is in use Rc should be zero.

47	41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
04	h <sub>7</sub>	$m_3$	Z	~2	$Sz_3$	P	Tc	Ro	25	Tb	R	b <sub>5</sub>	Ra	15	Rt	5	V	021	18

#### **Operation:**

$$Rt = Ra + Rb + (Rc|carry)$$

#### **Operation:**

$$Rt = Ra + Rb$$

#### **Clock Cycles:** 1

**Execution Units:** All Integer ALU's

Exceptions: none

**Notes:** 

# **ADDI - Add Immediate**

#### **Description:**

Add a register and immediate value and place the sum in the target register. The immediate is sign extended to the machine width.

Unless the CARRY instruction is used, the input carry will be zero.

#### **Instruction Format:** RI

31	19	18	14	13	9	8	7		0
Immediate	120	R	$a_5$	Rt	5	0		04h <sub>8</sub>	

**Instruction Format: RIL** 

47		19	18	14	13	9	8	7	0
	Immediate <sub>280</sub>		Ra	<b>1</b> 5	Rt <sub>5</sub>		0		D4h <sub>8</sub>

**Instruction Format:** RILV

47 45	44	43	19	18	14	13	9	8	7		0
$m_3$	Z	Immedi	ate <sub>240</sub>	Ra <sub>5</sub>		Rt <sub>5</sub>		1	$D4h_8$		

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + immediate + carry

**Exceptions:** 

**Notes:** 

# **AND** – Bitwise And

## **Description**:

Perform a bitwise 'and' operation between operands.

**Instruction Format:** R2

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	~	Tb	R	b <sub>5</sub>	R	a <sub>5</sub>	Rı	5	v		1Ah <sub>8</sub>	

## **Operation:**

Rt = Ra & Rb

## **Integer Instruction Format:** R3

4						34 32														0
	08h	17	$m_3$	Z	~2	$Sz_3$	P	Tc	Ro	25	Tb	R	b <sub>5</sub>	R	$a_5$	R	t <sub>5</sub>	v	021	$1_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb & Rc

Clock Cycles: 1

**Execution Units:** All Integer ALU's

# **ANDC – Bitwise 'And' with Complement**

## **Description**:

Perform a bitwise 'and' with complement operation between operands.

### **Integer Instruction Format: R3**

47	41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
0B	$h_7$	$m_3$	Z	~2	$Sz_3$	P	Tc	Ro	C <sub>5</sub>	Tb	Rt	<b>)</b> 5	Ra	<b>1</b> 5	Rt	5	V	02h	8

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

 $Rt = Ra \& \sim Rb \& Rc$ 

Clock Cycles: 1

**Execution Units:** All Integer ALU's

# ANDI – Bitwise 'And' Immediate

### **Description:**

Bitwise 'and' a register and immediate value and place the result in the target register. The immediate is one extended to the machine width.

**Instruction Format:** RI

31	19	18	14	13	9	8	7	0
Immediate <sub>12</sub>	20	Ra	$a_5$	Rt	5	V		$08h_{8}$

**Instruction Format: RIL** 

47	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>		Ra	<b>1</b> 5	Rt	5	0		D8h <sub>8</sub>

**Instruction Format:** RILV

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immediate <sub>240</sub>		Ra	<b>1</b> 5	Rt <sub>5</sub>		1		D8h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra & immediate

Clock Cycles: 1

**Execution Units:** All Integer ALU's

**Exceptions:** 

**Notes:** 

# ANDM - Bitwise 'And' with Mask

### **Description**:

Generates a mask consisting of '1's from the mask begin, Rb<sub>5</sub>, to the mask end Rc<sub>5</sub>, inclusive. Perform a bitwise 'and' operation between register Ra and the mask and store the result in register Rt. The immediate constant is one extended before use.

#### **Instruction Format: RM**

47					33 31									13	9	8	7	0
08	3h <sub>7</sub>	$m_3$	Z	<b>C</b> 3	$b_3$	Tc	Ro	25	Tb	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	AA	$h_8$

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven-bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field

### Operation

Rt = Ra & Immediate

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; \& \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Clock Cycles:** 1

**Execution Units:** First Integer ALU

# AND\_OR – Bitwise And then Or

### **Description**:

Perform a bitwise 'and' operation between the first two operands, Ra, Rb, then bitwise or the result with a third operand, Rc. Place the result in the target register Rt.

### **Integer Instruction Format: R3**

47	41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
78	8h <sub>7</sub>	$m_3$	Z	~2	Sz <sub>3</sub>	P	Tc	Ro	C <sub>5</sub>	Tb	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	5	v	02h	18

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = (Ra & Rb) | Rc

Clock Cycles: 1

**Execution Units:** All Integer ALU's

# BCDADD - BCD Add

## **Description:**

Adds two registers using BCD arithmetic and places the result in a target register. Unless the <u>CARRY</u> modifier is used the carry input will be zero.

### **Instruction Format:** R3

47	41	49 38	37	36 33	32 31	30	25	24	23	19	18	14	13	9	8	7	0
00h	17	$m_3$	Z	~4	$0_{2}$	0	7	Tb	Rb	<b>)</b> 5	R	a <sub>5</sub>	Rt	5	V	F5	$h_8$

**Clock Cycles:** 5

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Ra + Rb + carry

# **BCDMUL – BCD Multiply**

## **Description:**

Multiply two registers using BCD arithmetic shift the result right by Rc digits round and place the result in a target register. This instruction has been designed to implement fixed point arithmetic.

### **Instruction Format:**

47	41	49 38	37	36 31	30	29	25	24	23	19	18	14	13	9	8	7	0
02h	17	$m_3$	Z	<b>~</b> 6	Tc	Ro	25	Tb	Rł	<b>)</b> 5	Ra	<b>1</b> 5	Rt	5	v	F5	$h_8$

Clock Cycles: 150

**Execution Units:** First Integer ALU

**Operation:** 

$$Rt = (Ra * Rb) >> (Rc * 4)$$

# **BCDSUB – BCD Subtract**

## **Description:**

Subtract two registers using BCD arithmetic and places the result in a target register. Unless the carry modifier is used the carry input will be zero.

### **Instruction Format:**

47	41	49 38	37	36 33	32 31	30	25	24	23	19	18	14	13	9	8	7	0
01h	17	$m_3$	Z	~4	$0_2$	0	7	Tb	Rb	5	Ra	<b>1</b> 5	Rt	5	V	F51	$1_8$

**Clock Cycles:** 5

**Execution Units:** First Integer ALU

**Operation:** 

$$Rt = Ra - Rb - carry$$

# **BFALIGN – Bitfield Align**

### **Description**:

Align the contents of register Ra with a bitfield specified between mask begin and mask end. This instruction can be used in combination with <u>BFCLR</u> and <u>OR</u> to perform a bitfield insert.

### **Integer Instruction Format: RM**

47	41	4038	37	3635	34	33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
00	h <sub>7</sub>	m <sub>3</sub>	Z	~2	c	b	$Tc_2$	R	C <sub>5</sub>	$Tb_2$	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	AAl	18

1 clock cycle / N clock cycles (N = vector length)

b, c: most significant bit of seven bit constant for Rb, Rc.

## Operation

Rt = (Ra << Mb) & Immediate Mask

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if\ (Vm0[x])\ Vt[x]=(Va[x]<< Mb)\ \&\ Immediate\ Mask$$
 
$$else\ Vt[x]=Vt[x]$$

**Execution Units:** First Integer ALU

# **BFCHG – Bitfield Change**

### **Description**:

Flip the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Rb, and mask end, Rc, inclusive. Bitwise exclusive 'or' the mask with the value in register Ra and store the result in register Rt. This instruction is useful for flipping bit fields.

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
0A	h <sub>7</sub>	$m_3$	Z	<b>C</b> 3	$b_3$	Tc	R	<b>C</b> 5	Tb	R	<b>b</b> 5	Ra	a <sub>5</sub>	Rt	5	V	AA	$h_8$

1 clock cycle / N clock cycles (N = vector length)

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven-bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field.

### **Operation**

Rt = Ra ^ Immediate

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFCLR - Bitfield Clear**

### **Description**:

Clear the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Rb, and mask end, Rc, inclusive. Bitwise and with the complement of the mask with the value in register Ra and store the result in register Rt.

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
0E	3h <sub>7</sub>	m <sub>3</sub>	Z	<b>C</b> 3	$b_3$	Tc	R	C5	Tb	R	<b>b</b> 5	Ra	a <sub>5</sub>	Rt	5	V	AA	$h_8$

1 clock cycle / N clock cycles (N = vector length)

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven-bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field.

### Operation

Rt = Ra & ~Immediate

### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \ \& \sim Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFEXT – Bitfield Extract**

### **Description**:

Extract the bits of a bitfield specified beginning at mask begin in Rb and extending by mask width in Rc and sign extend and right align the result in the target register. The value in Rc is one less than the field width.

### **Integer Instruction Format: RM**

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
05	h <sub>7</sub>	$m_3$	Z	$c_3$	$b_3$	Tc	R	C <sub>5</sub>	Tb	R	<b>b</b> <sub>5</sub>	Ra	a <sub>5</sub>	Rt	5	V	AA	Ah <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven-bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field.

### **Operation**

Rt = sign extend (ror(Ra,Mb) & Mask)

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = sign \ extend \ (ror(Va[x],Mb) \ \& \ mask)$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFEXTU** – **Bitfield Extract Unsigned**

### **Description**:

Extract the bits of a bitfield specified beginning at mask begin in Rb and extending by mask width in Rc and zero extend and right align the result in the target register. The value in Rc is one less than the field width.

### **Integer Instruction Format: RM**

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
04	$-h_7$	$m_3$	Z	<b>C</b> <sub>3</sub>	$b_3$	Tc	R	C <sub>5</sub>	Tb	Rl	b <sub>5</sub>	Ra	$a_5$	Rt	5	V	AA	h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven-bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field.

### **Operation**

Rt = zero extend ((ror(Ra,Mb)) & Mask)

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm[x]) \ Vt[x] = zero \ extend \ ((ror(Va[x],Mb)) \ \& \ Mask)$$
 
$$else \ if \ (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# **BFFFO** –Find First One

### **Description**:

A bitfield contained in Ra is searched beginning at the most significant bit to the least significant bit for a bit that is set. The index into the bitfield of the bit that is set is stored in Rt. If no bits are set, then Rt is set equal to -1.

### **Integer Instruction Format: RM**

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
01	h <sub>7</sub>	$m_3$	Z	$c_3$	$b_3$	Tc	Rc	5	Tb	R	b <sub>5</sub>	R	a <sub>5</sub>	Rı	t <sub>5</sub>	V	AA	$h_8$

1 clock cycle / N clock cycles (N = vector length)

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven-bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field.

### **Clock Cycles**:

**Execution Units:** First Integer ALU

**Execution Units:** Integer

# **BFSET – Bitfield Set**

### **Description**:

Set the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Mb<sub>6</sub>, and mask end, Me<sub>6</sub>, inclusive. Bitwise 'or' the mask with the value in register Ra and store the result in register Rt.

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
09	h <sub>7</sub>	$m_3$	Z	<b>C</b> <sub>3</sub>	$b_3$	Tc	Ro	C <sub>5</sub>	Tb	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rı	t <sub>5</sub>	V	AAh	18

1 clock cycle / N clock cycles (N = vector length)

b<sub>3</sub>: if b<sub>3</sub> is 0xxb then Rb is a five bit register specifier.

if  $b_3$  is 1xxb then Rb is low order five-bits of a seven bit constant, the least significant two bits of  $b_3$  is bit 5 and 6 of the constant

c<sub>3</sub>: works the same way as b<sub>2</sub> except for the Rc field.

### Operation

 $Rt = Ra \mid Immediate$ 

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \ | \ Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

**Execution Units:** First Integer ALU

# BMAP – Byte Map

### **Description:**

Bytes are mapped from the 16-byte source Ra into bytes in the target register. This instruction may be used to permute the bytes in register Ra and store the result in Rt. This instruction may also pack bytes, wydes or tetras. The map is determined by the low order 64-bits of register Rb. Bytes which are not mapped will remain unchanged in the target register.

### **Integer Instruction Format: R2**

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$0_2$	$m_3$	Z	~	Tb	Rl	<b>)</b> 5	R	a <sub>5</sub>	Rt	5	v		44h <sub>8</sub>	

#### **Rb** value:

63 36					-, -,					
	$B8_4$	B7 <sub>4</sub>	B6 <sub>4</sub>	B5 <sub>4</sub>	B4 <sub>4</sub>	B3 <sub>4</sub>	B2 <sub>4</sub>	B1 <sub>4</sub>	$B0_4$	<= Target byte = Bn

**Operation:** 

**Vector Operation** 

**Execution Units:** First Integer ALU

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

# BMAPZ – Byte Map Zero

### **Description:**

First the target register is cleared, then bytes are mapped from the 16-byte source Ra into bytes in the target register. This instruction may be used to permute the bytes in register Ra and store the result in Rt. This instruction may also pack bytes, wydes or tetras. The map is determined by the low order 64-bits of register Rb. Bytes which are not mapped will end up as zero in the target register.

## **Integer Instruction Format: R2**

30 31	29 27	26	2524	23	19	18	14	13	9	8	7		0
12	$m_3$	Z	$Tb_2$	Rł	<b>)</b> 5	R	$a_5$	Rı	t <sub>5</sub>	V		44h <sub>8</sub>	

### **Rb** value:

			2724		-,					
	B8 <sub>4</sub>	B7 <sub>4</sub>	B6 <sub>4</sub>	B5 <sub>4</sub>	B4 <sub>4</sub>	B3 <sub>4</sub>	B2 <sub>4</sub>	B1 <sub>4</sub>	$B0_4$	<= Target byte = Bn

### **Operation:**

**Vector Operation** 

**Execution Units:** First Integer ALU

**Clock Cycles: 1** 

**Exceptions:** none

**Notes:** 

# **BMM – Bit Matrix Multiply**

BMM Rt, Ra, Rb

### **Description**:

The BMM instruction treats the bits of register Ra and register Rb as an 8x8 matrix and performs a bit matrix multiply of the two registers and stores the result in the target register. An alternate mnemonic for this instruction is MOR.

#### **Instruction Format**: R2

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
Fur	IC <sub>7</sub>	$m_3$	Z	~4	$0_2$	0	5	$Tb_2$	Rt	<b>)</b> 5	Ra	$a_5$	Rt	5	V	(	)2h <sub>8</sub>

Fn <sub>7</sub>	Function
30h	MOR
31h	MXOR
32h	MORT (MOR transpose)
33h	MXORT (MXOR transpose)

### **Operation**:

Clock Cycles: 1

**Execution Units:** First Integer ALU

Exceptions: none

### **Notes:**

The bits are numbered with bit 63 of a register representing I,j=0,0 and bit 0 of the register representing I,j=7,7.

# **BYTNDX** – Byte Index

### **Description:**

This instruction searches Ra, which is treated as an array of sixteen bytes, for a byte value specified by Rb and places the index of the byte into the target register Rt. If the byte is not found -1 is placed in the target register. A common use would be to search for a null byte. The index result may vary from -1 to +15. The index of the first found byte is returned (closest to zero).

If a vector BYTNDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +511 in the scalar register. Thus, BYTNDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

47	41	49 38	37	3635	3433	32 31	30	25	24	23	19	18	14	13	9	8	7	0
551	h <sub>7</sub>	$m_3$	Z	~2	$b_2$	$0_{2}$	0	6	Tb	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	02	2h <sub>8</sub>

b2: upper 2 bits of eight bit constant specified by Rb

**Clock Cycles:** 1

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

# **BYTNDXI** – Byte Index

### **Description:**

This instruction searches Ra, which is treated as an array of sixteen bytes, for a byte value specified by an immediate value and places the index of the byte into the target register Rt. If the byte is not found -1 is placed in the target register. A common use would be to search for a null byte. The index result may vary from -1 to +15. The index of the first found byte is returned (closest to zero).

If a vector BYTNDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +511 in the scalar register. Thus, BYTNDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

31 27	26	19	18	14	13	9	8	7	0
~5	Imme	diate <sub>70</sub>	R	a <sub>5</sub>	R	t <sub>5</sub>	V		55h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** First Integer ALU

**Operation:** 

 $Rt = Index of (Imm_8 in Ra)$ 

# **CARRY** – **Carry**

### **Description**:

This instruction controls carry propagation between instructions. There is a bit pair indicating carry-in and carry-out for each following instruction. The first following instruction is controlled by the bit-pair 15,16, the second by bit-pair 17,18, and so on for up to eight instructions.

Interrupts are disabled while carry propagation is in effect.

The following instructions may generate or consume carry bits.

ADD, SUB, OR, EOR, SLL, SRL, SRA, MUL, LLA.

**Instruction Format**: R3

			26 25										0
~	$IO_2$	~4	$Pn_2$	0	F3h <sub>8</sub>								

IO <sub>2</sub>	Meaning
0	no input or output carry
1	output carry
2	input carry
3	both input and output carry

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Exceptions: none

**Example:** 

# Get at high-order product bits

CARRY P1, $\{O\}\{I\}$ 

MUL a2,a1,a0

ADD a3,r0,r0

# **CHK – Check Register Against Bounds**

### **Description**:

A register is compared to two values. If the register is outside of the bounds defined by Rb and Rc then an exception will occur.

### **Instruction Format**: R3

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13 12	119	8	7	0
19h	17	$m_3$	Z	~4	$Tc_2$	Ro	C <sub>5</sub>	$Tb_2$	R	$b_5$	Ra	15	~2	cn <sub>3</sub>	V	02h	3

cn <sub>3</sub>	exception when not
0	Ra >= Rb and $Ra < Rc$
1	Ra >= Rb and $Ra <= Rc$
2	Ra > Rb and Ra < Rc
3	Ra > Rb and Ra <= Rc
4	not $(Ra \ge Rb \text{ and } Ra < Rc)$
5	not $(Ra \ge Rb \text{ and } Ra \le Rc)$
6	not (Ra > Rb and Ra < Rc)
7	not $(Ra > Rb \text{ and } Ra \le Rc)$

Clock Cycles: 1

**Execution Units:** Integer ALU

Exceptions: bounds check

**Notes:** 

The system exception handler will typically transfer processing back to a local exception handler.

# **CHKI – Check Register Against Bounds**

### **Description**:

A register is compared to two values. If the register is outside of the bounds defined by Rb and an immediate value then an exception will occur. Ra must be greater than or equal to Rb and Ra must be less than the immediate.

#### **Instruction Format: CHKI**

 47		26	25 24	23	19	18	14	13 12	11 9	8	7	0
	Immediate <sub>22</sub>		$Tb_2$	Rl	<b>b</b> 5	R	a <sub>5</sub>	$Imm_2$	cn <sub>3</sub>	V	4	2h <sub>8</sub>

cn <sub>3</sub>	exception when not
0	Ra >= Rb and Ra < Imm
1	Ra >= Rb and $Ra <= Imm$
2	Ra > Rb and Ra < Imm
3	Ra > Rb and Ra <= Imm
4	not $(Ra \ge Rb \text{ and } Ra < Imm)$
5	not $(Ra \ge Rb \text{ and } Ra \le Imm)$
6	not (Ra > Rb and Ra < Imm)
7	not (Ra > Rb and Ra <= Imm)

Clock Cycles: 1

**Execution Units:** Integer ALU

Exceptions: bounds check

#### **Notes:**

The system exception handler will typically transfer processing back to a local exception handler.

A six-bit immediate value may be specified by Tb<sub>2</sub> and Rb.

# **CLMUL – Carry-less Multiply**

## **Description**:

Compute the low order product bits of a carry-less multiply. Both operands must be in registers.

### **Integer Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2El	$h_7$	$m_3$	Z	<b>~</b> 4	$0_{2}$	0	5	$Tb_2$	Rł	<b>O</b> <sub>5</sub>	Ra	<b>1</b> 5	Rt	5	V	02	$2h_8$
4 clock cycles		cycles															

Exceptions: none

**Execution Units:** First Integer ALU

Operations

$$Rt = Ra * Rb$$

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) Vt[x] = Va[x] * Vb[x]$   
else if  $(z) Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

# **Description**:

# **CLMULH – Carry-less Multiply High**

Compute the high order product bits of a carry-less multiply. Both operands must be in registers.

## **Integer Instruction Format: R2**

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2F	h <sub>7</sub>	$m_3$	Z	~4	$0_{2}$	0	) <sub>5</sub>	Tb <sub>2</sub>	Rl	<b>b</b> <sub>5</sub>	Ra	<b>a</b> 5	Rt	5	V	02	$2h_8$
4 clock cycles		cycles															

Exceptions: none

**Execution Units:** First Integer ALU

Operations

$$Rt = Ra * Rb$$

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) Vt[x] = Va[x] * Vb[x]$   
else if  $(z) Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

# **CMOVNZ - Conditional Move**

### **Description**:

CMOVNZ moves a value from Rb or Rc depending on the value in Ra. If Ra is non-zero then Rb is moved to Rt, otherwise Rc is moved to Rt.

For the vector version of the instruction Ra is a scalar. Each bit of Ra is used corresponding to the vector element to determine if the move takes place. This instruction may be used to convert a set of bits in Ra into a Boolean vector.

#### **Instruction Format: R3**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2Dł	<b>1</b> 7	$m_3$	Z	~4	$Tc_2$	Ro	5	$Tb_2$	Rt	<b>)</b> 5	R	$a_5$	Rt	t <sub>5</sub>	V	02	$2h_8$

### **Vector Operation**

For 
$$x = 0$$
 to VL-1 
$$if (Vm[x]) \ Vt[x] = Ra.bit[x] ? \ Rb : Rc$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

Exceptions: none

**Execution Units: integer** ALU

# **CMP – Compare**

## **Description**

Compare two registers and return the relationship between them. The size field applies to only integer compares.

## **Instruction Format:** R2

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7	0
$Sz_2$	$m_3$	Z	P	Tb	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	t <sub>5</sub>	v	(	OCh <sub>8</sub>

1 clock cycle

Rt bit	Meaning
	Integer Compare Results
0	= equal
1	< less than
2	<= less than or equal
3	< magnitude less than
4	unordered
5	< unsigned less than
6	<= unsigned less than or equal
8	<> not equal
9	>= greater than or equal
10	> greater than
11	>= magnitude greater than or equal
12	ordered
13	unsigned greater than or equal
14	unsigned greater than
	Float Compare Results
16	= equal
17	< less than
18	<= less than or equal
19	< magnitude less than
20	unordered
21	<> not equal
22	>= greater than or equal
23	> greater than
24	>= magnitude greater than or equal
25	ordered
	Decimal Floating Point Compare Results
32	= equal
33	< less than
34	<= less than or equal
35	< magnitude less than
36	unordered
37	<> not equal
38	>= greater than or equal
39	> greater than

40	>= magnitude greater than or equal
41	ordered
13 to 62	zero (reserved)
63	less than

# **Operation:**

$$Rt = Ra ?Rb$$

## **Vector Operation**

$$\label{eq:for x = 0 to VL - 1} \\ if (Vm[x]) \ Vt[x] = Va[x] \ ? \ Vb[x] \\ else \ if (z) \ Vt[x] = 0 \\ else \ Vt[x] = Vt[x] \\ \end{cases}$$

**Execution Units:** Integer ALU, Floating Point Unit

# **CMPI – Compare Immediate**

### **Description**

Compare a register and an immediate value and return the relationship between them in a bit vector. See <u>CMP</u>. The immediate is sign extended to the machine width.

### **Instruction Format:** RI

31	19	18	14	13	9	8	7	0
Immediate <sub>12</sub>	20	Ra	15	Rt	5	V	0	$\mathrm{Bh}_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

47 45 44 43	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>		Ra	a <sub>5</sub>	Rt	5	0	D01	$h_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RILV**

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immediate <sub>240</sub>		Ra	$a_5$	Rt	5	1	D(	)h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra? Imm

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x]=Va[x] \ ? \ Imm$$
 
$$else \ if \ (z) \ Vt[x]=0$$
 
$$else \ Vt[x]=Vt[x]$$

**Execution Units:** Integer ALU, Floating Point Unit

# **CNTLZ – Count Leading Zeros**

## **Description**:

Count the number of leading zeros (starting at the MSB) in Ra and place the count in the target register.

## **Instruction Format: R1**

31	25	24 22	21	2019	18	14	13	9	8	7	0
00h	17	$m_3$	Z	$Sz_2$	Ra	<b>a</b> 5	R	t <sub>5</sub>	V	01	$h_8$

R1 Supported Formats: .o

Clock Cycles: 1

**Execution Units:** First Integer ALU

# **CNTPOP – Count Population**

CNTPOP r1,r2 CNTPOP v1,v2 CNTPOP r1,vm2

### **Description:**

Count the number of ones and place the count in the target register.

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = popcnt(Va[x])$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

### **Instruction Format:** R1

31	25	24 22	21	20 19	18	14	13	9	8	7	0
021	17	$m_3$	Z	$Sz_2$	R	$a_5$	Rı	5	V	0	$1h_8$

**Execution Units:** First Integer ALU

# **COM – Ones Complement**

## **Description:**

Bitwise complement all the bits in the register. 1's become 0's and 0's become 1's. This is an alternate mnemonic for the BFCHG function.

### **Instruction Format: RM**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0Ał	17	$m_3$	Z	32	6.	36	22	C	) <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	A	$Ah_8$
1 clock cycle		cycle														

### **Operation**

$$Rt = Ra$$

### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if (Vm[x]) \ Vt[x] = \sim Va[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **CPUID – CPU Identification**

## **Description:**

This instruction returns general information about the core. Register Ra is used as a table index to determine which row of information to return.

### **Instruction Format:**

31		19	18	14	13	9	8	7	0
	<b>~</b> 13		R	$a_5$	R	t <sub>5</sub>	V	41	$1h_8$

Clock Cycles: 1

**Execution Units:** First Integer ALU

**Operation:** 

Rt = Info[Ra]

Index	bits	Information Returned
0	63 to 0	The processor core identification number. This field is determined
		from an external input. It would be hard wired to the number of
		the core in a multi-core system.
2	63 to 0	Manufacturer name first eight chars "Finitron"
3	63 to 0	Manufacturer name last eight characters
4	63 to 0	CPU class "64BitSS"
5	63 to 0	CPU class
6	63 to 0	CPU Name "Thor2021"
7	63 to 0	CPU Name
8	63 to 0	Model Number "M1"
9	63 to 0	Serial Number "1234"
10	63 to 0	Features bitmap
11	31 to 0	Instruction Cache Size (32kB)
11	63 to 32	Data cache size (16kB)

# **DIF** – **Difference**

### **Description:**

This instruction is an alternate mnemonic for the <u>PTRDIF</u> instruction where Rc is zero. This instruction computes the difference between two signed values in registers Ra and Rb and places the result in a target Rt register. The difference is calculated as the absolute value of Ra minus Rb.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
14h	7	$m_3$	Z	$0_2$	0	6	$Tb_2$	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>

Supported Formats: .o

Clock Cycles: 1

**Execution Units:** Integer

**Operation:** 

Rt = Abs(Ra - Rb)

# **DIV** – **Division**

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. Both operands are treated as signed values. This instruction may cause a divide by zero or overflow exception if enabled. The exception is enabled by the 'X' bit of the instruction.

#### **Instruction Format: R2**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
10h	17	$m_3$	Z	$Sz_4$	$0_{2}$	0	5	$Tb_2$	Rł	<b>)</b> 5	R	a <sub>5</sub>	Rt	5	V	02	$h_8$

**Execution Units**: First Integer ALU

Clock Cycles: 150

**Exceptions**: DBZ

# **DIVI – Divide by Immediate**

### **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as signed values.

#### **Instruction Format: RI**

31 19	18	14	13	9	8	7	0
Immediate <sub>120</sub>	R	$a_5$	R	t <sub>5</sub>	V		40h <sub>8</sub>

**Instruction Format: RIL** 

47 45 44	43	19	18	14	13	9	8	7	0
Immediate <sub>280</sub>			Ra <sub>5</sub>		Rt <sub>5</sub>		0	I	DDh <sub>8</sub>

**Instruction Format: RILV** 

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immediate <sub>240</sub>	Immediate <sub>240</sub>		Ra <sub>5</sub>		Rt <sub>5</sub>		I	DDh <sub>8</sub>

**Execution Units:** ALU

Clock Cycles: 130

Exceptions: none

**Notes:** 

Divide by zero is not checked for because the divisor is a constant.

## **DIVU – Divide Unsigned**

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. Both operands are treated as unsigned values.

#### **Instruction Format: R2**

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
111	17	$m_3$	Z	$Sz_4$	$0_{2}$	0:	5	$Tb_2$	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	5	V	02	$2h_8$

**Execution Units**: First Integer ALU

Clock Cycles: 130

Exceptions: none

## **DIVUI – Divide Unsigned by Immediate**

## **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as unsigned values.

### **Instruction Format: RI**

31	19	18	14	13	9	8	7	0
Immediate <sub>12</sub>	20	R	$a_6$	Rt	6	v	2	4Fh <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 130

Exceptions: none

# DIVSU – Divide Signed by Unsigned

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. The register operand Ra is a signed value, Rb is an unsigned value.

### **Instruction Format: R2**

_						32 31												
	12h	17	$m_3$	Z	Sz <sub>4</sub>	$0_2$	0	5	$Tb_2$	R	b <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	02	2h <sub>8</sub>

**Execution Units:** ALU

Clock Cycles: 130

## **ENOR – Bitwise Exclusive Nor**

## **Description**:

Perform a bitwise exclusive 'nor' operation between operands.

## **Integer Instruction Format: R3**

47	7 41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
	02h <sub>7</sub>	$m_3$	Z	$Sz_4$	$Tc_2$	Ro	C <sub>5</sub>	$Tb_2$	R	b <sub>5</sub>	R	$a_5$	R	t <sub>5</sub>	v	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = \sim (Ra \land Rb \land Rc)$$

**Execution Units:** All Integer ALU's

## **EOR – Bitwise Exclusive Or**

## **Description**:

Perform a bitwise 'or' operation between operands. The carry input will be zero unless the <u>CARRY</u> instruction is in use.

**Instruction Format:** R2

30 31	29 27	26	2524	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	$Tb_2$	R	b <sub>5</sub>	Ra	a <sub>5</sub>	R	t <sub>5</sub>	v		14h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra ^ Rb ^ carry

**Integer Instruction Format:** R3

47	41	49 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
0.4	Ah <sub>7</sub>	$m_3$	Z	Sz <sub>4</sub>	$Tc_2$	Ro	5	$Tb_2$	Rt	<b>)</b> 5	R	a <sub>5</sub>	Rt	5	V	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

 $Rt = Ra \wedge Rb \wedge Rc \wedge carry$ 

Clock Cycles: 1

**Execution Units:** All Integer ALU's

## **EORI – Bitwise Exclusive 'Or' Immediate**

### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate is zero extended to the machine width.

## **Instruction Format: RI**

31	19	18	14	13	9	8	7	0
Immediate	120	R	$a_5$	Rı	5	v	C	Ah <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

47 45	44	43	19	18	14	13	9	8	7	0
		Immediate <sub>280</sub>		Ra	<b>1</b> 5	Rt <sub>5</sub>		0		DAh <sub>8</sub>

#### **Instruction Format: RILV**

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immediate <sub>240</sub>		Ra	<b>1</b> 5	Rt	5	1	Ι	OAh <sub>8</sub>

### **Operation**

## **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

## EXI8 – Extend Immediate by 8 Bits

## **Description:**

Extend the immediate field of the following instruction by 8 bits beginning at bit 24. The 32-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI8

15	9	8	7	1	0
Imm <sub>3</sub>	3125	V		23h <sub>7</sub>	$I_{24}$

**Clock Cycles:** 1

Execution Units: All ALU's

**Operation:** 

**Exceptions:** 

**Notes:** 

# EXI24 – Extend Immediate by 24 Bits

### **Description:**

Extend the immediate field of the following instruction by 24 bits beginning at bit 24. The 48-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI23

31	9	8	7	1	0
Imm <sub>4725</sub>		V	2	24h <sub>7</sub>	$I_{24}$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

## EXI40 – Extend Immediate by 40 Bits

## **Description:**

Extend the immediate field of the following instruction by 40 bits beginning at bit 24. The 64-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI40

47	9	8	7	2	0	
Immediate <sub>6325</sub>	•	V	' '	5h <sub>7</sub>	$I_{24}$	

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 


**Notes:** 

## EXI56 – Extend Immediate by 56 Bits

### **Description:**

Extend the immediate field of the following instruction by 56 bits beginning at bit 24. The 80-bit immediate result is sign extended to the machine width.

**Instruction Format:** EXI56



Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

## **EXIM – Extend Immediate Middle**

### **Description:**

Extend the immediate field of the following instruction by 55 bits beginning at bit 80. The EXIM prefix should be used before other immediate extension prefixes to ensure the constant is properly built.

**Instruction Format: EXIM** 

63	9	8	7	0
Imn	nediate <sub>13480</sub>	V	50h <sub>8</sub>	

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

**Example:** 

EXIM 0x12345678 EXI56 0x90123456 ADDI r1,r2,0x123

## **LDI – Load Immediate**

## **Description:**

This is an alternate mnemonic for the <u>ADDI</u> instruction where register Ra is zero. Add register zero and a sign extended immediate value and place the sum in the target register. If the Ra register field is zero then the value zero is used for Ra.

**Instruction Format:** RI

31	19	18	14	13	9	8	7		0
Immediate	2120	0	6	Rt	5	0		04h8	

**Instruction Format:** RIL

47 45 4	4 43	19	18	14	13	9	8	7	0
	Immediate <sub>280</sub>		$0_{5}$		Rt <sub>5</sub>	5	0	D4h	18

**Instruction Format:** RILV

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Immed	iate <sub>240</sub>		05	Rt	5	1		D4h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = immediate

**Exceptions:** 

## MAX - Maximum Value

## **Description:**

Determines the maximum of three values in registers Ra, Rb and Rc and places the result in the target register Rt.

#### **Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
29h	17	$m_3$	Z	$Sz_4$	$Tc_2$	Ro	5	$Tb_2$	Rl	b <sub>5</sub>	R	a <sub>5</sub>	Rt	5	V	02	$h_8$

Clock Cycles: 1

**Execution Units:** ALU #0 only

### **Operation:**

$$IF (Ra > Rb \text{ and } Ra > Rc)$$
 
$$Rt = Ra$$
 
$$else \text{ if } (Rb > Rc)$$
 
$$Rt = Rb$$
 
$$else$$
 
$$Rt = Rc$$

## MIN - Minimum Value

## **Description:**

Determines the minimum of three values in registers Ra, Rb and Rc and places the result in the target register Rt.

#### **Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2	8h <sub>7</sub>	$m_3$	Z	Sz <sub>4</sub>	$Tc_2$	Ro	5	$Tb_2$	R	b <sub>5</sub>	R	a <sub>5</sub>	Rt	t <sub>5</sub>	V	02	h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** ALU #0 only

**Operation:** 

#### **Operation:**

$$IF (Ra < Rb \text{ and } Ra < Rc)$$
 
$$Rt = Ra$$
 
$$else \text{ if } (Rb < Rc)$$
 
$$Rt = Rb$$
 
$$else$$
 
$$Rt = Rc$$

## MKBOOL - Make Boolean

## **Description:**

This instruction is an alternate mnemonic for the <u>CMOVNZ</u> instruction. This instruction places a zero in the target register if the source register is zero, otherwise one is placed in the target register. This instruction reduces the source operand to a Boolean value.

#### **Integer Instruction Format:** R3

47	41	39 38	37	36 33	32 31	30	26	25 24	23	19	18	14	13	9	8	7	0
2Dł	17	$m_3$	Z	$Sz_4$	22	$0_{5}$		$2_2$	1	5	Ra	<b>1</b> 5	Rt	5	V	021	$h_8$

### **Operation:**

$$Rt = Ra == 0 ? 0 : 1$$

**Execution Units:** Integer ALU

**Clock Cycles: 1** 

Exceptions: none

# **MOV – Move Register-Register**

## **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves one general purpose register to another.

## **Instruction Format:**

				36 35												0
04h	.7	$m_3$	Z	32	6.	36	$2_2$	0	6	R	$a_6$	Rt	6	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

## **MOVSXB – Move Byte, Sign Extend**

## **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a byte from one general purpose register to another.

#### **Instruction Format:**

47	41	4038	37	36 34	33 31	30	29	25	24	23	19	18	14	13	9	8	7	0
05	h <sub>7</sub>	$m_3$	Z	43	4 <sub>3</sub>	0	7	5	0	(	<b>)</b> <sub>5</sub>	R	$a_5$	Rt	5	V	AA	$4h_8$

0A120E0000AA

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

# **MOVSXO – Move Octa, Sign Extend**

### **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a octa from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	7	$m_3$	Z	22	6.	36	22	0	) <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	AA	$h_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

# MOVSXT – Move Tetra, Sign Extend

## **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves a tetra from one general purpose register to another.

### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	3	16	$2_2$	0	6	R	$a_6$	Rt	6	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

## MOVSXW – Move Wyde, Sign Extend

## **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a wyde from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	1:	56	$2_2$	0	) <sub>6</sub>	R	$a_6$	Rı	$t_6$	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

## **MOVZXB – Move Byte, Zero Extend**

### **Description:**

This is an alternate mnemonic for the <u>BFEXTU</u> instruction. This instruction moves a byte from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
041	17	$m_3$	Z	22	7	6	22	C	) <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	AA	$h_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

## MOVZXT – Move Tetra, Zero Extend

## **Description:**

This is an alternate mnemonic for the <u>BFEXTU</u> instruction. This instruction moves a tetra-byte from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	22	3	16	22	0	) <sub>6</sub>	R	$a_6$	Rt	6	V	AA	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

## MOVZXW - Move Wyde, Zero Extend

### **Description:**

This is an alternate mnemonic for the <u>BFEXTU</u> instruction. This instruction moves a wyde from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	$2_{2}$	1:	5 <sub>6</sub>	$2_{2}$	0	6	Ra	$a_6$	Rt	6	V	A	$\overline{Ah_8}$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

# **MUL – Multiply**

## **Description**:

Multiply two values add a third value. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. All the operands are treated as signed 128-bit values, the result is a signed result.

The carry will be zero unless made available by the **CARRY** instruction.

#### **Integer Instruction Format:** R3

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
06h	17	$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>
 20 c	lock	cycles	5													

Exceptions: none

**Execution Units: ALU** 

**Operation** 

$$Rt = Ra * Rb + Rc + carry$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x] = Va[x] * Vb[x] + Vc[x]$$
 
$$else \ if \ (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

Exceptions: overflow, if enabled

# MULH – Multiply High

## **Description**:

Compute the high order product of two values. Both operands must be in registers. Both the operands are treated as signed values, the result is a signed result.

## **Integer Instruction Format:** R3

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0Fł	17	$m_3$	Z	$0_{2}$	0	6	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	Rt	t <sub>6</sub>	V	0	2h <sub>8</sub>
4 clo	ock o	cycles														

Exceptions: none

**Execution Units:** ALU

## **Operation**

$$Rt = Ra * Rb$$

### **Vector Operation**


for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = Va[x] * Vb[x]$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

## **MULI – Multiply Immediate**

## **Description**:

Multiply two values. The first operand must be in a register. The second operand is an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result.

#### **Integer Instruction Format: RI**

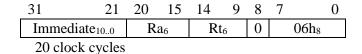

#### **Integer Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		R	$a_6$	Rt	6	0		D2h <sub>8</sub>
20 clock cycles								

#### **Integer Instruction Format: RILV**

	47 45	44	43	21	20	15	14	9	8	7		0
Ī	$m_3$	Z	Immediate <sub>220</sub>		R	$a_6$	Rt	6	1		D2h <sub>8</sub>	
	20 clo	ock c	ycles									

**Execution Units: ALU** 

#### **Operation:**

Rt = Ra \* Immediate

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if \ (Vm0[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ Vt[x] = Vt[x]$$

## **MULF – Fast Unsigned Multiply**

## **Description**:

Multiply two values located in registers Ra and Rb and add the value of Rc. All operands are treated as unsigned values. The result is an unsigned result. The fast multiply multiplies only the low order 24 bits of the first operand times the low order 16 bits of the second. The result is a 40-bit unsigned product.

### **Integer Instruction Format: R2**

4	47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	15h	7	$m_3$	Z	$Tc_2$	R	$c_6$	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

5 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

$$Rt = Ra * Rb + Rc + carry$$

**Execution Units: ALU** 

Clock Cycles: 1

## **MULFI – Fast Unsigned Multiply Immediate**

### **Description**:

Multiply two values. The first operand is in register Ra. The second operand is an immediate value specified in the instruction. Both the operands are treated as unsigned values. The result is an unsigned result. The fast multiply multiplies only the low order 24 bits of the first operand times the low order 11 bits of the second. The result is a 35-bit unsigned product.

#### **Integer Instruction Format: RI**

31	21	20	15	14	9	8	7		0
Immediat	e <sub>100</sub>	R	$a_6$	Rı	6	0		15h <sub>8</sub>	
5 clock c	ycle / ]	N clo	ck cy	cles (	$N = \frac{1}{2}$	vect	or l	ength)	

**Execution Units: ALU** 

**Clock Cycles:** 1

Exceptions: none

## **MULU – Multiply Unsigned**

## **Description**:

Multiply two values. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result.

#### **Integer Instruction Format: R3**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	1Eh <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	$t_6$	v	(	02h <sub>8</sub>
	20 clock	cvcles	3													

**Exceptions**: none

**Execution Units: ALU** 

**Operation** 

$$Rt = Ra * Rb + Rc + carry$$

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if (Vm[x]) \ Vt[x] = Va[x] * Vb[x] + Vc[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

Exceptions: overflow, if enabled

## **MUX** – **Multiplex**

### **Description:**

If a bit in Ra is set then the bit of the target register is set to the corresponding bit in Rb, otherwise the bit in the target register is set to the corresponding bit in Rc.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
34h	7	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	Rt	<b>)</b> <sub>6</sub>	Ra	$a_6$	Rt	6	V	02	$2h_8$

Clock Cycles: 1

**Execution Units:** ALU #0 only

#### **Operation:**

$$For \; n = 0 \; to \; 63$$
 
$$If \; Ra_{[n]} \; is \; set \; then$$
 
$$Rt_{[n]} = Rb_{[n]}$$
 
$$else$$
 
$$Rt_{[n]} = Rc_{[n]}$$

Exceptions: none

## NAND - Bitwise Nand

### **Description**:

Perform a bitwise 'nand' operation between operands.

### **Integer Instruction Format: R2**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
00h	7	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	Rl	06	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = (Ra \& Rb \& Rc)$$

# **NEG - Negate**

### **Description:**

This is an alternate mnemonic for the **SUB** instruction where Ra is zero.

This instruction takes the negative of a value contained in a register Rb.

#### **Instruction Format**: R3

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	7	$m_3$	Z	$0_2$	0	6	$Tb_2$	RI	b <sub>6</sub>	0	6	Rı	t <sub>6</sub>	V	02	$h_8$

## **Scalar Operation**

$$Rt = -Rb$$

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = -Vb[x]$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

**Notes** 

**Exceptions:** 

## **NOR – Bitwise Nor**

### **Description**:

Perform a bitwise 'nor' operation between operands.

### **Integer Instruction Format: R2**

47 41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
01h <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = \sim (Ra \mid Rb \mid Rc)$$

# NOT – Logical Not

## **Description:**

This instruction places a one in the target register if the source register is zero, otherwise zero is placed in the target register. This instruction reduces the source operand to a Boolean value.

## **Integer Instruction Format: R1**

31	25	24 22	21	2019	18	14	13	9	8	7	0
04h	17	$m_3$	Z	$Sz_2$	R	a <sub>5</sub>	Rı	5	V	01	$h_8$

## **Operation:**

$$Rt = Ra = 0?1:0$$

Execution Units: I

**Clock Cycles: 1** 

Exceptions: none

## OR - Bitwise Or

### **Description**:

Perform a bitwise 'or' operation between operands. The carry input will be zero unless the <u>CARRY</u> instruction is in use.

**Instruction Format:** R2

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	~	Tb	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	5	v		13h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

 $Rt = Ra \mid Rb \mid carry$ 

#### **Integer Instruction Format: R3**

_	47	41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
	091	h <sub>7</sub>	$m_3$	Z	~2	$Sz_3$	P	Tc	Ro	25	Tb	RI	<b>)</b> 5	Ra	a <sub>5</sub>	Rt	5	V	02h	8

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

 $Rt = Ra \mid Rb \mid Rc \mid carry$ 

**Execution Units:** All Integer ALU's

Exceptions: none

## **ORC – Bitwise 'Or' with Complement**

### **Description**:

Perform a bitwise 'or' with complement operation between operands.

#### **Integer Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
03h <sub>7</sub>	7	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

$$Rt = Ra \mid \sim Rb \mid Rc$$


**Execution Units:** All Integer ALU's

## ORI - Bitwise 'Or' Immediate

## **Description**:

Perform a bitwise or operation between operands. The immediate value is shifted to the left by a multiple of 16 bits before the operation takes place. The immediate is zero extended to the machine width and padded with zeros on the right. This instruction may be used to 'or' a large constant or build a 64-bit constant in a register.

#### **Instruction Format: RI**

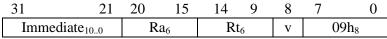

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

_	47 45	44	43	21	20	15	14	9	8	7		0
			Immediate <sub>260</sub>		Ra	$\mathfrak{d}_6$	Rt	6	0		D9h <sub>8</sub>	

#### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	<b>1</b> 6	Rto	5	1		D9h <sub>8</sub>

#### **Instruction Format: RIXL**

_	95 93	92	91 85	84 21	20 15	14	9	8	7	0
	$m_3$	Z	~7	Immediate <sub>630</sub>	$Ra_6$	R	t <sub>6</sub>	V	E9h <sub>8</sub>	

#### **Operation**

Rt = Ra | Immediate

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; | \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Execution Units:** All Integer ALU's

# **ORN** – Bitwise 'Or' with Complement

## **Description**:

This is an alternate mnemonic for the ORC instruction. Perform a bitwise 'or' with complement operation between operands.

## **Integer Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
03h	.7	$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

$$Rt = Ra \mid \sim Rb \mid Rc$$

## **PTRDIF – Difference Between Pointers**

## **Description**:

Subtract two values then shift the result right. Both operands must be in a register. The right shift is provided to accommodate common object sizes. It may still be necessary to perform a divide operation after the PTRDIF to obtain an index into odd sized or large objects. Sc may vary from zero to fifteen.

### **Instruction Format**: R3

47							28 27							8	7	0
14	h <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	Rı	t <sub>6</sub>	V	02	$2h_8$

### **Operation**:

$$Rt = Abs(Ra - Rb) >> Rc_{[3:0]}$$

Clock Cycles: 1

**Execution Units: Integer** 

**Exceptions**:

None

## **REVBIT – Reverse Bit Order**

## **Description:**

This instruction reverses the order of bits in Ra and stores the result in Rt. Bits may be reversed in individual bytes, wydes, tetras or octas.

## **Integer Instruction Format: R1**

31	25	24 22	21	20 19	18	14	13	9	8	7	0
28	$h_7$	$m_3$	Z	$Sz_2$	R	$a_5$	R	t <sub>5</sub>	V	01	$h_8$
v: 0	= sc	alar 1	$= v\epsilon$	ector of	า						<u>-</u>

$Sz_2$	Ext.	Meaning
0	.BP	reverse order within bytes (byte parallel)
1	.WP	reverse order within wydes (wyde parallel)
2	.TP	reverse order within tetras (tetra parallel)
3	.OP	reverse order within octas (octa parallel)

**Operation:** 

**Vector Operation** 

**Execution Units:** I

**Clock Cycles: 1** 

Exceptions: none

## **ROL – Rotate Left**

## **Description**:

Left rotate an operand value by an operand value and place the result in the target register. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rc field of the instruction, or an immediate value.

#### **Instruction Format:** R2

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$Sz_2$	m <sub>3</sub>	Z	P	Tb	Rb <sub>5</sub>		R	a <sub>5</sub>	Rt	t <sub>5</sub>	V		5Bh <sub>8</sub>	

0=128 bits,1=64 bits,2=32 bits

### **Integer Instruction Format:** SHIFTI

4	7 41	49 38	37	36	29	28 26	25	24	23	19	18	14	13	9	8	7	0
	43h <sub>7</sub>	$m_3$	Z	Ar	nt <sub>8</sub>	$Sz_3$	P	0	(	<b>)</b> <sub>5</sub>	R	$a_5$	Rt	t <sub>5</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

0=128 bits,1=64 bits,2=32 bits,3=16 bits

**Operation Size:** .w, .t, .o, .h, .wp, .tp, .op, .hp

**Execution Units**: integer ALU

Exceptions: none

**Example**:

# **ROR – Rotate Right**

## **Description**:

Right rotate an operand value by an operand value and place the result in the target register. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rc field of the instruction, or an immediate value.

This is an alternate mnemonic for the **SRLP** instruction.

#### **Instruction Format:** R2

$\begin{bmatrix} Sz_2 & m_3 & z & P & Tb & Rb_5 & Ra_5 & Rt_5 & v \end{bmatrix}$	5Ch <sub>8</sub>

0=128 bits,1=64 bits,2=32 bits

#### **Integer Instruction Format: SHIFTI**

47	41	49 38	37	36	29	28 26	25	24	23	19	18	14	13	9	8	7	0
44	h <sub>7</sub>	$m_3$	Z	Ar	nt <sub>8</sub>	$Sz_3$	P	0	0	5	R	a <sub>5</sub>	R	<b>t</b> 5	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

0=128 bits,1=64 bits,2=32 bits,3=16 bits

**Operation Size:** .w, .t, .o, .h, .wp, .tp, .op, .hp

**Execution Units**: integer ALU

**Exceptions**: none

**Example**:

# **SEQ – Set if Equal**

## **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero.

### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
26h	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	Ra	$a_6$	R	6	V	02	$2h_8$

## Operation:

$$if (Ra == Rb)$$

$$Rt = Rc$$

$$else$$

$$Rt = 0$$

## **SEQI – Set if Equal Immediate**

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediate	2100	R	$a_6$	Rt	6	V		16h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **SEQIL – Set if Equal Immediate Low**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

#### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$a_6$	Rt	6	0	D6	$h_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		R	$a_6$	Rt	6	1	D	5h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

# SGE / SLE – Set if Greater Than or Equal

### **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than or equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero. The operands are treated as signed values.

This instruction may also be used to test less than or equal to by swapping the operands.

#### **Instruction Format: R3**

				36 35												
21h	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Rı	t <sub>6</sub>	V	(	)2h <sub>8</sub>

## **Operation**:

$$if (Ra >= Rb)$$

$$Rt = Rc$$

$$else$$

$$Rt = 0$$

# SGEU / SLEU – Set if Greater Than or Equal Unsigned

## **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than or equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero. The operands are treated as unsigned values.

This instruction may also be used to test less than or equal to by swapping the operands.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
23h	7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02	$2h_8$

### **Operation**:

$$if (Ra >= Rb)$$

$$Rt = Rc$$

$$else$$

$$Rt = 0$$

## SGTI – Set if Greater Than Immediate

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RI**

31 2	1 20	15	14	9	8	7	0
Immediate <sub>100</sub>		$Ra_6$	R	t <sub>6</sub>	V		1Bh <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## SGTIL – Set if Greater Than Immediate Low

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

#### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra <sub>6</sub>		Rt <sub>6</sub>		0	DBh <sub>8</sub>	

 $1 \ clock \ cycle \ / \ N \ clock \ cycles \ (N = vector \ length)$ 

#### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
m <sub>3</sub>	Z	Immediate <sub>220</sub>		Ra <sub>6</sub>		Rt <sub>6</sub>		1	$DBh_8$	


1 clock cycle / N clock cycles (N = vector length)

## SGTUI – Set if Greater Than Immediate Unsigned

## **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The operands are treated as unsigned values.

#### **Instruction Format: RI**

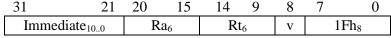

1 clock cycle / N clock cycles (N = vector length)

# **SGTUIL – Set if Greater Than Immediate Unsigned Low**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is greater than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is zero extended to the machine width. The operands are treated as unsigned values.

#### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$\mathfrak{d}_6$	Rt	6	0		DFh <sub>8</sub>
1 clock cycle								

#### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	$a_6$	Rt	6	1	DFl	18

1 clock cycle / N clock cycles (N = vector length)

# **SLEI – Set if Less Than or Equal Immediate**

### **Description:**

This instruction is an alternate mnemonic for the SLTI instruction where the constant has been adjusted by one. For instance, SLEI \$t0,\$a0,#4 is the same as SLTI \$t0,\$a0,#5. The assembler will adjust the constant and use the SLTI instruction.

# **Instruction Format:** RI

31	21	20	15	14	9	8	7	0
Immediate <sub>1</sub>	100	Ra	$a_6$	Rt	6	v	-	18h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

# **SLL –Shift Left Logical**

### **Description**:

Left shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the least significant bits. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

#### **Instruction Format:** R2

31 30	29 27	26		24	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	P	Tb	Rb	5	R	$a_5$	Rı	t <sub>5</sub>	v		58h <sub>8</sub>	

0=128 bits,1=64 bits,2=32 bits

#### **Integer Instruction Format: SHIFTI**

47	41	49 38	37	36	29	28 26	25	24	23	19	18	14	13	9	8	7	0
40h	.7	$m_3$	Z	An	nt <sub>8</sub>	$Sz_3$	P	0	C	5	R	a <sub>5</sub>	Rt	5	v	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

0=128 bits,1=64 bits,2=32 bits,3=16 bits,5=2x64 bits,6=4x32 bits,7=8x16 bits

Operation Size: .w, .t, .o, .h, .wp, .tp, .op, .hp

### **Operation:**

 $Rt = Ra \ll Rb$ 

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

Example:

# SLT / SGT - Set if Less Than

#### **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand in register (Rb) then the target register is set to the value of Rc, otherwise the target register is set to a zero. The operands are treated as signed values.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
20h	7	$m_3$	Z	$Tc_2$	R	c <sub>6</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	h <sub>8</sub>

#### **Operation**:

$$if (Ra < Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

#### **Instruction Format: R2**

31 29	28	27	26	21	20	15	14	9	8	7	0
$m_3$	Z	Tb	R	$b_6$	R	$a_6$	R	$t_6$	V	4]	Eh <sub>8</sub>

$$if (Ra < Rb) \\ Rt = 1 \\ else \\ Rt = 0$$

# **SLTI – Set if Less Than Immediate**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediate	100	R	$a_6$	Rt	6	v		18h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		R	$a_6$	Rt	6	0		$D3h_8$

1 clock cycle

#### **Instruction Format: RILV**

47 45	44	43		21	20	15	14	9	8	7	0
m <sub>3</sub>	Z		Immediate <sub>220</sub>		Ra	<b>1</b> 6	Rt	6	1		D3h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

$$if (Ra < Rb) \\ Rt = 1 \\ else \\ Rt = 0$$

# SLTU / SGTU – Set if Less Than Unsigned

### **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand in register (Rb) then the target register is set to the value of Rc, otherwise the target register is set to a zero. The operands are treated as unsigned values.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
22h	17	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	021	$h_8$

$$if (Ra < Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

# **SNE – Set if Not Equal**

# **Description:**

The set instruction places Rc or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand in register (Rb) then the target register is set to the value in Rc, otherwise the target register is set to a zero.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
27h	<b>1</b> 7	$m_3$	Z	$Tc_2$	R	$c_6$	Tb <sub>2</sub>	R	$2b_6$	R	$a_6$	Rt	6	V	02	$2h_8$

$$if (Ra \Leftrightarrow Rb) \\ Rt = Rc \\ else \\ Rt = 0$$

# **SNEI – Set if Not Equal Immediate**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero. The immediate constant is sign extended to the machine width.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediate	2100	Ra	$a_6$	Rt	6	v	1	17h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Instruction Format: RIL**

47 45 44 43	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$a_6$	Rt	6	0	D7	$h_8$

1 clock cycle

#### **Instruction Format: RILV**

47 45	44	43	21	20	15	14	9	8	7	0	
m <sub>3</sub>	Z	Immediate <sub>220</sub>		Ra	<b>l</b> 6	Rte	5	1	]	D7h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

# SRA –Shift Right Arithmetic

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. The most significant bit is preserved. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

#### **Instruction Format:** R2

31 30				24			18	14		9	8	7	0
$\mathbf{Sz}_2$	$m_3$	Z	P	Tb	R	b <sub>5</sub>	R	$a_5$	R	t <sub>5</sub>	V		5Ah <sub>8</sub>

0=128 bits,1=64 bits,2=32 bits

#### **Integer Instruction Format: SHIFTI**

47	41	49 38	37	36	29	28 26	25	24	23	19	18	14	13	9	8	7	0
42	h <sub>7</sub>	$m_3$	Z	An	nt <sub>8</sub>	$Sz_3$	P	0	0	5	R	a <sub>5</sub>	Ri	t <sub>5</sub>	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

0=128 bits,1=64 bits,2=32 bits,3=16 bits,5=2x64 bits,6=4x32 bits,7=8x16 bits

**Operation Size:** .w, .t, .o, .h, .wp, .tp, .op, .hp

**Execution Units**: integer ALU

Exceptions: none

Example:

# **SRL** –**Shift Right Logical**

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the most significant bits. The first operand must be in a register specified by Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

#### **Instruction Format:** R2

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	P	Tb	Rl	b <sub>5</sub>	R	$a_5$	Rt	5	V		59h <sub>8</sub>	
Λ 1	20.1.	1 /	. 1 1 '		20.1.									

0=128 bits,1=64 bits,2=32 bits

#### **Integer Instruction Format: SHIFTI**

4	7	41	49 38	37	36	29	28 26	25	24	23	19	18	14	13	9	8	7	0
	41h	7	$m_3$	Z	Ar	nt <sub>8</sub>	$Sz_3$	P	0	C	)5	R	a <sub>5</sub>	R	<b>t</b> 5	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

0=128 bits,1=64 bits,2=32 bits,3=16 bits,5=2x64 bits,6=4x32 bits,7=8x16 bits

Operation Size: .w, .t, .o, .h, .wp, .tp, .op, .hp

**Execution Units**: integer ALU

Exceptions: none

**Example:** 

# **SUB – Subtract**

# **Description:**

Subtract Rb from Ra and place the difference in the target register Rt. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions.

#### **Instruction Format:** R2

	29 27				19		14		9	8	7		0
$Sz_2$	$m_3$	Z	$Tb_2$	R	<b>b</b> 5	Ra	a <sub>5</sub>	R	t <sub>5</sub>	v		$0Dh_8$	

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra - Rb

Exceptions: none

# **SUBFI – Subtract from Immediate**

### **Description:**

Subtract a register from a sign extended immediate value and place the difference in the target register. For the vector instruction both Ra and Rt are vector registers.

**Instruction Format: RI** 

31	21	20	15	14	9	8	7	0
Immediate <sub>100</sub>	0	Ra	6	Rt	6	v		$05h_{8}$

**Clock Cycles:** 1

Execution Units: All ALU's

**Operation:** 

Rt = Immediate - Ra

Exceptions: none

**Notes:** 

# SXB – Move Byte, Sign Extend

### **Description:**

This is an alternate mnemonic for the <u>BFEXT</u> instruction. This instruction moves a byte from one general purpose register to another.

#### **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
051	<b>1</b> 7	m <sub>3</sub>	Z	$2_{2}$	7	6	22	C	) <sub>6</sub>	R	a <sub>6</sub>	R	t <sub>6</sub>	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

# SXT – Move Tetra, Sign Extend

# **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves a tetra from one general purpose register to another.

# **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	3	16	$2_2$	0	6	Ra	$a_6$	Rt	6	V	AA	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

# SXW – Move Wyde, Sign Extend

# **Description:**

This is an alternate mnemonic for the  $\underline{BFEXT}$  instruction. This instruction moves a wyde from one general purpose register to another.

# **Instruction Format:**

47	41	40 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
05h	.7	$m_3$	Z	$2_{2}$	1:	56	$2_2$	0	) <sub>6</sub>	R	$a_6$	Rı	$t_6$	V	A	$Ah_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

# UTF21NDX – UTF21 Index

#### **Description:**

This instruction searches Ra, which is treated as an array of three UTF21 characters, for a value specified by Rb and places the index of the character into the target register Rt. If the character is not found -1 is placed in the target register. A common use would be to search for a null character. The index result may vary from -1 to +2. The index of the first found character is returned (closest to zero).

If a vector UTF21NDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +191 in the scalar register. Thus, UTF21NDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format:** R2

				36 35												
1Ch	17	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	Rl	<b>)</b> 6	R	$a_6$	Rt	6	V	02	$2h_8$

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

# **UTF21NDXI – UTF21 Index**

#### **Description:**

This instruction searches Ra, which is treated as an array of three UTF21 character, for a value specified by an immediate value and places the index of the value into the target register Rt. If the character is not found -1 is placed in the target register. A common use would be to search for a null character. The index result may vary from -1 to +2. The index of the first found character is returned (closest to zero).

If a vector UTF21NDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +191 in the scalar register. Thus, UTF21NDX may be used to determine the length of a null termination string in the vector register.

Only the first 2<sup>20</sup> UTF21 characters may be searched for by the immediate form of the instruction.

#### **Instruction Format: RI**

47 45	44	43	21	20	15	14	9	8	7	0	
$m_3$	Z	Immediate <sub>220</sub>		Ra	6	Rt <sub>6</sub>		V	57	7h <sub>8</sub>	1

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_{21} in Ra)$ 

# WYDENDX – WYDE Index

### **Description:**

This instruction searches Ra, which is treated as an array of four wydes, for a wyde value specified by Rb and places the index of the wyde into the target register Rt. If the wyde is not found -1 is placed in the target register. A common use would be to search for a null wyde. The index result may vary from -1 to +3. The index of the first found wyde is returned (closest to zero).

If a vector WYDENDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +255 in the scalar register. Thus, WYDENDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format:** R2

							28 27									0
1Bh	17	$m_3$	Z	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	Rł	<b>)</b> 6	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

# WYDENDXI – Wyde Index

#### **Description:**

This instruction searches Ra, which is treated as an array of four wydes, for a value specified by an immediate value and places the index of the value into the target register Rt. If the wyde is not found -1 is placed in the target register. A common use would be to search for a null wyde. The index result may vary from -1 to +3. The index of the first found wyde is returned (closest to zero).

If a vector WYDENDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +255 in the scalar register. Thus, WYDENDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

47 45	44	43	21	20	15	14	9	8	7	(	0
m <sub>3</sub>	Z	Immediate <sub>220</sub>		Ra	$a_6$	Rt	5	V		56h <sub>8</sub>	

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_8 in Ra)$ 

Exceptions: none

# **XNOR – Bitwise Exclusive Nor**

#### **Description:**

Perform a bitwise 'nor' operation between operands. This is an alternate mnemonic for the ENOR instruction.

#### **Integer Instruction Format: R2**

47	41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
02	2h <sub>7</sub>	$m_3$	Z	~2	$Sz_3$	P	Tc	Ro	25	Tb	Rl	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rt	5	V	(	)2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

# **XOR – Bitwise Exclusive Or**

# **Description**:

Perform a bitwise 'or' operation between operands.

**Instruction Format:** R2

31 30	29 27	26	25	24	23	19	18	14	13	9	8	7		0
$Sz_2$	$m_3$	Z	?	Tb	R	$b_5$	R	a <sub>5</sub>	R	t <sub>5</sub>	v		1Eh <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

# **Operation:**

Rt = Ra ^ Rb ^ carry

#### **Integer Instruction Format: R3**

47	41	40 38	37	36 35	34 32	31	30	29	25	24	23	19	18	14	13	9	8	7	0
0.4	$h_7$	$m_3$	Z	~2	$Sz_3$	P	Tc	Ro	$C_5$	Tb	R	$b_5$	Ra	a <sub>5</sub>	Rt	5	V	$02h_8$	

1 clock cycle / N clock cycles (N = vector length)

# **Operation:**

 $Rt = Ra \wedge Rb \wedge Rc$ 


**Execution Units:** All Integer ALU's

# **XORI – Bitwise Exclusive 'Or' Immediate**

#### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate is zero extended to the machine width.

**Instruction Format: RI** 



1 clock cycle / N clock cycles (N = vector length)

#### **Operation**

Rt = Ra ^ Immediate

### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \land Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

Execution Units: All Integer ALU's

Exceptions: none

# **XORIL** – Bitwise Exclusive 'Or' Immediate Low

### **Description:**

Bitwise exclusive 'or' a register and immediate value and place the sum in the target register. The immediate is zero extended to the machine width.

**Instruction Format: RIL** 

47 45 44	43	21	20	15	14	9	8	7	0
	Immediate <sub>260</sub>		Ra	<b>l</b> 6	Rt	6	0		$DAh_8$

**Clock Cycles:** 1

**Instruction Format: RILV** 

47 45	44	43	21	20	15	14	9	8	7	0
$m_3$	Z	Immediate <sub>220</sub>		Ra	6	Rt <sub>6</sub>		1	D	$Ah_8$

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

 $Rt = Ra ^ immediate$ 

**Exceptions:** 

# Floating-Point Instructions

# **Overview**

All floating-point operations take place in double precision unless otherwise noted.

# FABS – Absolute Value

#### **Description:**

This instruction takes the absolute value of a register and places the result in a target register. The values are treated as double precision floating-point values. The sign bit of the number is cleared, no rounding of the number takes place.

#### **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
20	h <sub>7</sub>	n	<b>1</b> 3	Z	R	$a_6$	Rt	t <sub>6</sub>	V	61	$h_8$
v: 0	= sca	lar.	1 = 1	vecto	or on						

### **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

#### **Vector Operation**

```
for x=0 to VL - 1 if (Vm[x]) Rt[x] = Ra[x] < 0 ? -Ra[x] : Ra[x] else if (z) Rt[x] = 0 else Rt[x] = Rt[x]
```

**Execution Units:** F

**Clock Cycles: 1** 

**Exceptions:** none

# FADD – Add Register-Register

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
04h	.7	$m_3$	Z	`	<b>'</b> 5	$Rm_3$	$Tb_2$	Rl	$b_6$	R	$a_6$	Rt	6	V	62	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

# FCLASS – Classify Value

# **Description**:

FCLASS classifies the value in register Ra and returns the information as a bit vector in the integer register Rt.

# **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
1El	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	t <sub>6</sub>	v	6	1h <sub>8</sub>

v: 0 = scalar, 1 = vector op

Bit in Rt	Meaning
0	1 = negative infinity
1	1 = negative number
2	1 = negative subnormal number
3	1 = negative zero
4	1 = positive zero
5	1 = positive subnormal number
6	1 = positive number
7	1 = positive infinity
8	1 = signalling nan
9	1 = quiet nan
10 to 62	not used
63	1 = negative, $0 = $ positive number


# FCMP - Compare

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as a float value of -1.0, 0.0 or +1.0. If the comparison is unordered 2.0 is returned.

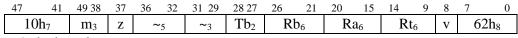

#### 1 clock cycle

### **Operation:**

$$Rt = Ra < Rb ? -1 : Ra = Rb ? 0 : 1$$

#### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x]=Va[x]< Vb[x] \ ?-1: Va[x]=Vb[x] \ ? \ 0: 1$$
 
$$else \ if \ (z) \ Vt[x]=0$$
 
$$else \ Vt[x]=Vt[x]$$

# FCMPB - Compare

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The value returned is a bit vector as outlined in the table below. Note that the less than status is returned in both bits 1 and 63 so that a BLT may be used.

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
151	17	$m_3$	Z	`	5	~3	$Tb_2$	R	$b_6$	R	$a_6$	Rı	t <sub>6</sub>	V	62	2h <sub>8</sub>

1 clock cycle

The float comparison returns a bit vector containing the status of all possible relationships. This may then be tested with the BBS instruction.

Rt bit	Meaning
0	= equal
1	< less than
2	<= less than or equal
3	< magnitude less than
4	unordered
5 to 7	zero (reserved)
8	<> not equal
9	>= greater than or equal
10	> greater than
11	>= magnitude greater than or equal
12	ordered
13 to 62	zero (reserved)
63	less than

#### **Operation:**

**Vector Operation** 

# FCX – Clear Floating-Point Exceptions

# **Description:**

This instruction clears floating point exceptions. The Exceptions to clear are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
11h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation clears the following:
	- division of infinities
	- zero divided by zero
	<ul> <li>subtraction of infinities</li> </ul>
	- infinity times zero
	- NaN comparison
	- division by zero
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	summary exception

# FDIV – Divide Register-Register

### **Description:**

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand may be a register specified by the Rb field of the instruction. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
09h	17	$m_3$	Z	~	<b>'</b> 5	Rm <sub>3</sub>	$Tb_2$	Rl	$b_6$	Ra	$a_6$	Rt	6	V	62	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra / Rb

**Exceptions:** 

# **FDX** – Disable Floating Point Exceptions

# **Description:**

This instruction disables floating point exceptions. The Exceptions disabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
13h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

### **Exceptions:**

Bit	Exception Disabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **FEX – Enable Floating Point Exceptions**

### **Description:**

This instruction enables floating point exceptions. The Exceptions enabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
12h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

#### **Exceptions:**

Bit	Exception Enabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **FFINITE – Number is Finite**

# **Description:**

Test the value in Ra to see if it's a finite number and return Z=1 or Z=0 in register Rt.

# **Integer Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
0F	0Fh <sub>7</sub>		13	Z	R	$a_6$	Rt	t <sub>6</sub>	V	61	$h_8$
v: 0	= sca	lar, i	1 = 1	vecto	or op						

v. 0 = Section, 1 = vec

Clock Cycles: 1

**Execution Units:** Floating Point

**Example:** 

finite \$cr1,\$f7

# FMA – Floating Point Multiply Add

# **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$0h_4$	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	63	$8h_8$

### **Operation:**

Rt = Ra \* Rb + Rc

**Clock Cycles: 30** 

# FNMA – Floating Point Negate Multiply Add

# **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
2h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	63	$3h_8$

# **Operation:**

$$Rt = -Ra * Rb + Rc$$

**Clock Cycles: 30** 

# **FNMS – Floating Point Negate Multiply Subtract**

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
3h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	Ro	<sup>2</sup> 6	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	63	$3h_8$

# **Operation:**

$$Rt = -Ra * Rb - Rc$$

**Clock Cycles: 30** 

# FMAN - Mantissa of Number

### **Description:**

This instruction provides the mantissa of a double precision floating point number contained in a general-purpose register as a 52-bit zero extended result. The hidden bit of the floating-point number remains hidden.

#### **Integer Instruction Format: R1**

	31	25	24	22	21	20	15	14	9	8	7	0
	07h <sub>7</sub>		$m_3$		Z	R	$\overline{a_6}$	Rt	6	V	61h <sub>8</sub>	
•	v: 0											

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

# FMS – Floating Point Multiply Subtract

# **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$1h_4$	$Rm_3$	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	63	$3h_8$

# **Operation:**

Rt = Ra \* Rb - Rc

**Clock Cycles: 30** 

# FMUL – Floating point multiplication

## **Description:**

Multiply two double precision floating point numbers in registers Ra and Rb and place the result into target register Rt.

### **Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
08h	7	$m_3$	Z	,	<b>-</b> 5	Rm <sub>3</sub>	$Tb_2$	Rl	$o_6$	R	$a_6$	R	$t_6$	V	6	2h <sub>8</sub>


**Clock Cycles: 25** 

# **FNEG – Negate Register**

#### **Description:**

This instruction negates a double precision floating point number contained in a general-purpose register. The sign bit of the number is inverted. No rounding takes place.

#### **Integer Instruction Format: R1**

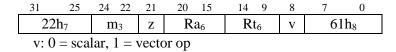

Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = -Ra

# FRM – Set Floating Point Rounding Mode

### **Description:**

This instruction sets the rounding mode bits in the floating-point control register (FPSCR). The rounding mode bits are set to the bitwise 'or' of an immediate field in the instruction and the contents of register Ra. Either Ra or the immediate field should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
14h <sub>7</sub>		^	<b>'</b> 3	?	R	$a_6$	uim	$m_6$	0	6	1h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

 $FPSCR.RM = Ra \mid Immediate$ 

# FRSQRTE - Float Reciprocal Square Root Estimate

### **Description:**

Estimate the reciprocal of the square root of the number in register Ra and place the result into target register Rt.

#### **Instruction Format: R1**

31 25	24 22	21	20 15	14 9	8	7 0
01h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>

**Clock Cycles: 5** 

**Execution Units:** Floating Point

#### **Notes:**

The estimate is only accurate to about 3%. The estimate is performed in single precision (32-bit) floating point, then converted to a 64-bit format. That means that input values must in the range of a 32-bit floating point number. Values outside of this range will return infinity or zero as a result.

Taking the reciprocal square root of a negative number results in a Nan output.

# **FSEQ - Float Set if Equal**

## **Description:**

The register compare instruction compares two registers as floating-point values for equality and sets the compare results register as a result. Note that negative and positive zero are considered equal.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

						31 29										0
111	17	$m_3$	Z	~	<b>'</b> 5	~3	$Tb_2$	R	$b_6$	R	$a_6$	Rı	6	V	62	$h_8$
	-	•														

1 clock cycle

Clock Cycles: 1

**Execution Units:** Floating Point

#### **Operation:**

# **FSIGMOID – Sigmoid Approximate**

#### **Description:**

This function uses a 1024 entry 32-bit precision lookup table with linear interpolation to approximate the logistic sigmoid function in the range -8.0 to +8.0. Outside of this range 0.0 or +1.0 is returned. The sigmoid output is between 0.0 and +1.0. The value of the sigmoid for register Ra is returned in register Rt as a 64-bit double precision floating-point value.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
28	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	6	v	6	l h <sub>8</sub>

**Clock Cycles: 5** 

# FSIGN – Sign of Number

### **Description:**

This instruction provides the sign of a double precision floating point number contained in a general-purpose register as a floating-point double result. The result is +1.0 if the number is positive, 0.0 if the number is zero, and -1.0 if the number is negative.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
06	06h <sub>7</sub>		13	Z	R	$a_6$	R	t <sub>6</sub>	v	6.	1h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = sign of (Ra)

# **FSLT - Float Set if Less Than**

## **Description:**

The register compare instruction compares two registers as floating-point values for less than and sets the target register as a result.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
12	h <sub>7</sub>	$m_3$	Z	,	<b>7</b> 5	~3	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	R	$t_6$	V	6	52h <sub>8</sub>
1 c	lock (	cycle														

## Clock Cycles: 1

**Execution Units:** Floating Point

## **Operation:**

$$if \ Ra < Rb$$
 
$$Rt = 1$$
 
$$else$$

Rt = 0

# **FSNE - Float Set if Not Equal**

## **Description:**

The register compare instruction compares two registers as floating-point values for inequality and sets the compare results register as a result. Note that negative and positive zero are considered equal.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
14h <sub>7</sub>		$m_3$	Z	^	<b>'</b> 5	~3	$Tb_2$	Rl	<b>b</b> <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	62	$2h_8$

1 clock cycle

**Clock Cycles:** 1

**Execution Units:** Floating Point

### **Operation:**

$$\label{eq:Ra} \begin{array}{l} \text{if } Ra == Rb \\ Rt = 1 \\ \text{else} \\ Rt = 0 \end{array}$$

# FSQRT – Floating point square root

## **Description:**

Take the square root of the floating-point number in register Ra and place the result into target register Rt. The sign bit (bit 63) of the register is set to zero. This instruction can generate NaNs.

## **Instruction Format: R1, R1L**

31 25	24 22	21	20 15	14 9	8	7 0	
08h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>	

## **Operation:**

Rt = sqrt (Ra)

Clock Cycles: 64 (est).

# **FSTAT – Get Floating Point Status and Control**

## **Description:**

The floating-point status and control register may be read using the FSTAT instruction. The format of the FPSCR register is outlined on the next page.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
0Ch <sub>7</sub>	~3	~	<b>~</b> 6	Rt <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

Rt = FPSCR

# **Floating Point Status And Control Register Format:**

Bit		Symbol	Description
31:29	RM	rm	rounding mode (unimplemented)
28	E5	inexe	- inexact exception enable
27	E4	dbzxe	- divide by zero exception enable
26	E3	underxe	- underflow exception enable
25	E2	overxe	- overflow exception enable
24	E1	invopxe	- invalid operation exception enable
23	NS	ns	- non standard floating point indicator
Result S	tatus		
22		fractie	- the last instruction (arithmetic or conversion) rounded
			intermediate result (or caused a disabled overflow exception)
21	RA	rawayz	rounded away from zero (fraction incremented)
20	SC	С	denormalized, negative zero, or quiet NaN
19	SL	neg <	the result is negative (and not zero)
18	SG	pos >	the result is positive (and not zero)
17	SE	zero =	the result is zero (negative or positive)
16	SI	inf ?	the result is infinite or quiet NaN
Exceptio	n Occ	urrence	
15	X6	swt	{reserved} - set this bit using software to trigger an invalid
			operation
14	X5	inerx	- inexact result exception occurred (sticky)
13	X4	dbzx	- divide by zero exception occurred
12	Х3	underx	- underflow exception occurred
11	X2	overx	- overflow exception occurred
10	X1	giopx	- global invalid operation exception – set if any invalid
			operation exception has occurred
9	GX	gx	- global exception indicator – set if any enabled exception
			has happened
8	SX	sumx	- summary exception - set if any exception could occur if it
			was enabled
			- can only be cleared by software
Exceptio		e Resoluti	
7	X1T	cvt	- attempt to convert NaN or too large to integer
6	X1T	sqrtx	- square root of non-zero negative
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison
			instructions
4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN

Greyed out items are not implemented.

# FSUB – Subtract Register-Register

### **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

**Instruction Format: R2** 

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
05h	17	$m_3$	Z	`	<b>'</b> 5	$Rm_3$	$Tb_2$	Rl	$b_6$	Ra	$a_6$	Rt	6	V	6	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# FTOI – Float to Integer

#### **Description:**

This instruction converts a floating-point double value to an integer value.

**Instruction Format: R1** 

31	25	24	22	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	6	v	6	1h <sub>8</sub>

**Clock Cycles: 2** 

# FTRUNC - Truncate Value

#### **Description**:

The FTRUNC instruction truncates off the fractional portion of the number leaving only a whole value. For instance, ftrunc(1.5) equals 1.0. Ftrunc does not change the representation of the number. To convert a value to an integer in a fixed-point representation see the FTOI instruction.

#### **Instruction Format**: R1

31	25	24	22	21	20	15	14	9	8	7	0
15	h <sub>7</sub>	n	13	Z	R	$a_6$	Ri	6	v	6	1h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Floating Point

# **FTX** – Trigger Floating Point Exceptions

### **Description:**

This instruction triggers floating point exceptions. The Exceptions to trigger are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
10	h <sub>7</sub>	`	<b>'</b> 3	~	R	$a_6$	uim	$m_6$	0	61	lh <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# ISNAN – Is Not a Number

## **Description:**

Test the value in Ra to see if it's a nan (not a number) and return true Z=1 or false Z=0 in register Rt.

## **Instruction Format: R1**

3	31	25	24	22	21	20	15	14	9	8	7	0
	0Eh	7	n	13	Z	R	$a_6$	Rt	6	v	6	1h <sub>8</sub>

**Clock Cycles: 1** 

**Execution Units:** Floating Point

Example:

isnan \$cr1,\$f7

# ITOF – Integer to Float

## **Description:**

This instruction converts an integer value to a double precision floating point representation.

## **Instruction Format: F1, F1L**

31	25	24	22	21	20	15	14	9	8	7	0
03	h <sub>7</sub>	n	13	Z	R	$a_6$	Ri	t <sub>6</sub>	v	61	lh <sub>8</sub>

**Clock Cycles: 2** 

# **Decimal Floating-Point Instructions**

# **DFABS – Absolute Value**

### **Description:**

This instruction takes the absolute value of a register and places the result in a target register. The values are treated as quad precision decimal floating-point values. The sign bit of the number is cleared, no rounding of the number takes place.

## **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
20	h <sub>7</sub>	m	13	Z	R	$a_6$	Ri	t <sub>6</sub>	V	65	5h <sub>8</sub>
v: 0	= sca	lar, I	r = 1	vecto	or op						

#### **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

#### **Vector Operation**

```
for x=0 to VL - 1 if \ (Vm[x]) \ Rt[x] = Ra[x] < 0 \ ? \ -Ra[x] : Ra[x] else \ if \ (z) \ Rt[x] = 0 else \ Rt[x] = Rt[x]
```

**Execution Units:** F

**Clock Cycles: 1** 

**Exceptions:** none

# **DFADD** – **Add Register-Register**

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as quad precision decimal floating-point values.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34 32	31 29	28 27	26	21	20	15	14	9	8	7	0
041	17	$m_3$	Z	~2	~3	Rm <sub>3</sub>	$Tb_2$	Rb	<b>)</b> 6	Ra	$\mathfrak{d}_6$	Rt	6	V	66	5h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

# **DFCX – Clear Floating-Point Exceptions**

## **Description:**

This instruction clears floating point exceptions. The Exceptions to clear are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	5 24 22	21	20 15	14 9	8	7 0
11h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation clears the following:
	- division of infinities
	- zero divided by zero
	- subtraction of infinities
	- infinity times zero
	- NaN comparison
	- division by zero
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	summary exception

# **DFDIV – Divide Register-Register**

### **Description:**

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand must be a register specified by the Rb field of the instruction. The values are treated as quad precision decimal floating-point values. This instruction takes many clock cycles to complete but is interruptible.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
091	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rl	$b_6$	R	$a_6$	Rı	6	V	60	$5h_8$

#### **Instruction Format: R2L**

_	47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
	091	h <sub>7</sub>	<b>~</b> <sub>5</sub>	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	76h <sub>8</sub>	1

Clock Cycles: 3,000 est.

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra / Rb

**Exceptions:** 

# DFDIVIDEND\_ADJ - Dividend Adjustment for Division

### **Description:**

Takes the dividend and divisor and returns the dividend with the exponent adjusted for a divisor between 0.5 and 1.0. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format: R3**

47	41	40 38	37	36	29	28 27	26	21	20	15	14	9	8	7	0
20	h <sub>7</sub>	$m_3$	Z	~	8	$Tb_2$	RI	<b>o</b> <sub>6</sub>	R	$a_6$	Ri	$t_6$	v	66	5h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

**Notes:** 

# DFDIVISOR\_ADJ - Divisor Adjustment for Division

## **Description:**

Takes the divisor sets the exponent to the bias value, then scales the significand to between 0.5 and 1.0 adjusting the exponent as needed. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format: R3**

47	41	40 38	37	36	29	28 27	26	21	20	15	14	9	8	7	0
21h <sub>7</sub>		$m_3$	Z	~	8	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	Rt	6	V	66	$5h_8$

**Clock Cycles: 1** 

Execution Units: All ALU's

**Operation:** 

**Exceptions:** 

# DFDIVISOR\_BITADJ – Divisor Adjustment for Division

# **Description:**

Returns the number of bits the divisor needed to be shifted to the left during scaling. This is in preparation for a Newton-Raphson division routine.

### **Instruction Format:** R3

47	41	40 38	37	36	29	28 27	26	21	20	15	14	9	8	7	0
21	h <sub>7</sub>	$m_3$	Z	~~	Κ	$Tb_2$	R	$b_6$	R	$a_6$	Ri	$t_6$	V	66	5h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

# **DFDX – Disable Floating Point Exceptions**

## **Description:**

This instruction disables floating point exceptions. The Exceptions disabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
13h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

### **Exceptions:**

Bit	Exception Disabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **DFEX – Enable Floating Point Exceptions**

## **Description:**

This instruction enables floating point exceptions. The Exceptions enabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
12h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

## **Operation:**

### **Exceptions:**

Bit	Exception Enabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# **DFMA – Floating Point Multiply Add**

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
00	)h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	67	7h <sub>8</sub>

### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
00	)h <sub>7</sub>	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	77h <sub>8</sub>

## **Operation:**

Rt = Ra \* Rb + Rc

**Clock Cycles: 30** 

# **DFNMA – Floating Point Negate Multiply Add**

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	67	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
02	2h <sub>7</sub>	~5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	77h <sub>8</sub>

# **Operation:**

Rt = -Ra \* Rb + Rc

**Clock Cycles: 30** 

# **DFNMS** – Floating Point Negate Multiply Subtract

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	67	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
02	$h_7$	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	77h <sub>8</sub>

## **Operation:**

Rt = -Ra \* Rb - Rc

**Clock Cycles: 30** 

# **DFMAN – Mantissa of Number**

## **Description:**

This instruction provides the mantissa of a double precision floating point number contained in a general-purpose register as a 52-bit zero extended result. The hidden bit of the floating-point number remains hidden.

### **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
07h <sub>7</sub>		m	13	Z	R	$a_6$	Rt	t <sub>6</sub>	V	65	5h <sub>8</sub>
v: 0											

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = Ra

# **DFMS – Floating Point Multiply Subtract**

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
011	h <sub>7</sub>	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	67	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
01	h <sub>7</sub>	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	$77h_8$

## **Operation:**

Rt = Ra \* Rb - Rc

**Clock Cycles: 30** 

# **DFMUL – Floating point multiplication**

## **Description:**

Multiply two quad precision decimal floating point numbers in registers Ra and Rb and place the result into target register Rt.

### **Instruction Format:** R2

47						31 29							9	8	7	0
08h	17	$m_3$	Z	~2	~3	$Rm_3$	$Tb_2$	Rb	6	Ra	$\mathfrak{d}_6$	Rt	6	V	•	66h <sub>8</sub>


**Clock Cycles: 25** 

# **DFNEG – Negate Register**

#### **Description:**

This instruction negates a double precision floating point number contained in a general-purpose register. The sign bit of the number is inverted. No rounding takes place.

### **Integer Instruction Format: R1**



Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = -Ra

# **DFRES** – Reciprocal Approximate

## **Description:**

Returns an approximation of the reciprocal of a number which must be between 0.1 and 1.0. The reciprocal has approximately three decimal digits of accuracy. This is in preparation for a Newton-Raphson division routine.

#### **Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
17	h <sub>7</sub>	n	<b>1</b> 3	Z	R	$a_6$	R	t <sub>6</sub>	V	65	5h <sub>8</sub>

**Clock Cycles: 4** 

**Execution Units:** All ALU's

**Operation:** 

**Exceptions:** 

# **DFRM – Set Floating Point Rounding Mode**

## **Description:**

This instruction sets the rounding mode bits in the floating-point control register (FPSCR). The rounding mode bits are set to the bitwise 'or' of an immediate field in the instruction and the contents of register Ra. Either Ra or the immediate field should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
1	4h <sub>7</sub>	`	<b>'</b> 3	?	R	$a_6$	uim		0	65	5h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

 $FPSCR.RM = Ra \mid Immediate$ 

# **DFSIGN – Sign of Number**

#### **Description:**

This instruction provides the sign of a double precision floating point number contained in a general-purpose register as a floating-point double result. The result is +1.0 if the number is positive, 0.0 if the number is zero, and -1.0 if the number is negative.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
06h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	v	65h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = sign of (Ra)

# **DFSTAT – Get Floating Point Status and Control**

#### **Description:**

The floating-point status and control register may be read using the FSTAT instruction. The format of the FPSCR register is outlined on the next page.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
0Ch <sub>7</sub>	~3	~	~6	Rt <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

Rt = FPSCR

# **Floating Point Status And Control Register Format:**

Bit		Symbol	Description
31:29	RM	rm	rounding mode (unimplemented)
28	E5	inexe	- inexact exception enable
27	E4	dbzxe	- divide by zero exception enable
26	E3	underxe	- underflow exception enable
25	E2	overxe	- overflow exception enable
24	E1	invopxe	- invalid operation exception enable
23	NS	ns	- non standard floating point indicator
Result S	tatus		
22		fractie	- the last instruction (arithmetic or conversion) rounded
			intermediate result (or caused a disabled overflow exception)
21	RA	rawayz	rounded away from zero (fraction incremented)
20	SC	С	denormalized, negative zero, or quiet NaN
19	SL	neg <	the result is negative (and not zero)
18	SG	pos >	the result is positive (and not zero)
17	SE	zero =	the result is zero (negative or positive)
16	SI	inf ?	the result is infinite or quiet NaN
Exceptio	n Occ	urrence	
15	X6	swt	{reserved} - set this bit using software to trigger an invalid
			operation
14	X5	inerx	- inexact result exception occurred (sticky)
13	X4	dbzx	- divide by zero exception occurred
12	Х3	underx	- underflow exception occurred
11	X2	overx	- overflow exception occurred
10	X1	giopx	- global invalid operation exception – set if any invalid
			operation exception has occurred
9	GX	gx	- global exception indicator – set if any enabled exception
			has happened
8	SX	sumx	- summary exception - set if any exception could occur if it
			was enabled
			- can only be cleared by software
Exceptio		e Resoluti	
7	X1T	cvt	- attempt to convert NaN or too large to integer
6	X1T	sqrtx	- square root of non-zero negative
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison
			instructions
4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN

Greyed out items are not implemented.

# **DFSUB – Subtract Register-Register**

#### **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 2	1	20	15	14	9	8	7	0
05h <sub>7</sub>		$m_3$	Z	$Tb_2$	$Rb_6$		R	$a_6$	R	$t_6$	V	60	$5h_8$

#### **Instruction Format: R2L**

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
051	$h_7$	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	76h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# **DFTOI – Float to Integer**

#### **Description:**

This instruction converts a quad precision decimal floating-point value to an integer value.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
02h <sub>7</sub>		m <sub>3</sub> z		R	Ra <sub>6</sub>		t <sub>6</sub>	v	65	$5h_8$	

**Clock Cycles: 2** 

# **DFTX – Trigger Floating Point Exceptions**

## **Description:**

This instruction triggers floating point exceptions. The Exceptions to trigger are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31	25	24 22	21	20 15	14 9	8	7	0
	10h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>	

**Execution Units:** All Floating Point

### **Operation:**

### **Exceptions:**

Bit	Exception Enabled							
0	global invalid operation							
1	overflow							
2	underflow							
3	divide by zero							
4	inexact operation							
5	reserved							

# ITODF – Integer to Float

## **Description:**

This instruction converts an integer value to a quad precision decimal floating point representation.

**Instruction Format: F1, F1L** 

31 25	24 22	21	20 15	14 9	8	7 0
03h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	65h <sub>8</sub>

**Clock Cycles: 2** 

# **Posit Instructions**

# PADD – Add Register-Register

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as posit values.

**Instruction Format: R2** 

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
04h	17	$m_3$	Z	~5		$Rm_3$	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	Ra	$a_6$	Rt	6	v	6A	h <sub>8</sub>

**Clock Cycles: 25** 

**Execution Units:** Posit Arithmetic

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# PMUL – Posit multiplication

#### **Description:**

Multiply two posit numbers in registers Ra and Rb and place the result into target register Rt.

**Instruction Format: R2** 

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
08h	.7	m <sub>3</sub>	Z	,	-5	$Rm_3$	$Tb_2$	Rł	<b>)</b> 6	Ra	$a_6$	Rt	6	V	6A	$h_8$

**Clock Cycles: 25** 

**Execution Units:** Posit Arithmetic

# **PSUB – Subtract Register-Register**

# **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as posit values.

**Instruction Format:** R2

47	41	49 38	37	36	32	31 29	28 27	26	21	20	15	14	9	8	7	0
051	17	$m_3$	Z	,	<b>-</b> 5	Rm <sub>3</sub>	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	Rı	t <sub>6</sub>	V	6 <i>A</i>	$h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# Load / Store Instructions

# **Overview**

# **Addressing Modes**

Load and store instructions have two addressing modes, register indirect with displacement and indexed addressing. Note that register indirect with displacement addressing is limited to scalar instructions.

For vector indexed addressing Ra acts as a base address register. If Rb is a scalar value then it is used to increment the load / store address according to the vector element. Otherwise, if Rb is a vector value it is used directly as an index.

The 'C' bit of the instruction indicates the vector is compressed in memory. When compressed, for stores if a mask bit is clear then no value is stored to memory and the memory address does not increment. Loads are similar.

# **Load Formats**

### Register Indirect with Displacement Format

For register indirect with displacement addressing the load or store address is the sum of a register Ra and a displacement constant found in the instruction.

	47							19	18	14	13	9	8	7	0
			Dis	placen	nent <sub>28</sub>	30			Ra <sub>5</sub>		Rt	5	0	Opc	ode <sub>8</sub>
Index	ed Fori	nat													
	31 29	28	27	2625	24	23	19	18	14	13	9	)	8	7	0
	m <sub>3</sub>	Z	C	~2	Tb	R	<b>b</b> 5		Ra <sub>5</sub>		Rt <sub>5</sub>	,	V	Opco	de <sub>8</sub>

# **Store Formats**

#### Register Indirect with Displacement Format

For register indirect with displacement addressing the load or store address is the sum of a register Ra and a displacement constant found in the instruction.

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	Rs	S5	0	Opc	ode <sub>8</sub>

### **Indexed Format**

 31 29													0
$m_3$	Z	С	~2	Tb	R	$b_5$	R	$a_5$	Rs	5	V	Opo	code <sub>8</sub>

# **CACHE – Cache Command**

## **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time. The address of the cache line to be invalidated is passed in Ra if needed.

#### **Instruction Format:**

47	19	18	14	13 11	109	8	7	0
Displacement <sub>280</sub>		Ra	<b>1</b> 5	DC <sub>3</sub>	IC <sub>2</sub>	0	9Fh	18

## **Commands:**

$IC_2$	Mne.	Operation
0	NOP	no operation
1	invline	invalidate line associated with given address
2	invall	invalidate the entire cache (address is ignored)
3		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

**Clock Cycles:** 3

Execution Units: All ALU's / Memory

**Operation:** 

**Exceptions:** DBG

# **CACHEX - Cache Command**

# **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time.

### **Instruction Format:**

			-				-				-	-	0
$m_3$	Z	C	~	$Tb_2$	Rb	5	Ra	a <sub>5</sub>	$DC_3$	$IC_2$	V	(	CFh <sub>8</sub>

## **Commands:**

$IC_2$	Mne.	Operation
0	NOP	no operation
1	invline	invalidate line associated with given address
2	invall	invalidate the entire cache (address is ignored)
3		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

**Clock Cycles:** 

Execution Units: All ALU's / Memory

**Operation:** 

**Exceptions:** DBG

# **CAS – Compare and Swap**

## **Description:**

If the contents of the addressed memory cell is equal to the contents of Rb then a sixty-four bit value is stored to memory from the source register Rc. The original contents of the memory cell are loaded into register Rt. The memory address is contained in register Ra. The memory address must be word aligned. If the operation was successful then Rt and Rb will be the same value. The compare and swap operation is an atomic operation; the bus is locked during the load and potential store operation. This operation assumes that the addressed memory location is part of the volatile region of memory and bypasses the data cache.

The stack pointer cannot be used as the target register.

### **Instruction Format:**

						36 35												
;	Sel <sub>3</sub>	}	~3	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	Rl	<b>)</b> <sub>6</sub>	R	$a_6$	Rı	6	v	97	$7h_8$

## **Operation:**

 $\begin{aligned} Rt &= memory \ [Ra] \\ if \ memory [Ra] &= Rb \\ memory [Ra] &= Rc \end{aligned}$ 

### **Assembler:**

CAS Rt,Rb,Rc,[Ra]

# LDB - Load Byte

# **Description:**

An eight-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format: RIL**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	$a_5$	Rt	5	0		80h <sub>8</sub>

### **Instruction Format: RILV**

C	44	43	43		19	18	14	13	9	8	7	0
m <sub>3</sub>	Z	C		Displacement <sub>230</sub>		R	a <sub>5</sub>	R	<b>t</b> 5	1		$80h_8$

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_8[Ra+displacement])$ 

# LDBU – Load Byte, Unsigned

# **Description:**

An eight-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format: RIL**

47		19	18	14	13	9	8	7	0
	Displacement <sub>280</sub>		R	$a_5$	Rt	5	0		81h <sub>8</sub>

### **Instruction Format: RILV**

C	44	43	43		19	18	14	13	9	8	7	0
$m_3$	Z	C		Displacement <sub>230</sub>		Ra	a <sub>5</sub>	R	t <sub>5</sub>	1	~	31h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_8[Ra+displacement])$ 

# **LDBUX – Load Byte Unsigned Indexed**

# **Description:**

An eight-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and register Rb.

## **Instruction Format:**

31	29	28	27	2625	24	23	19	18	14	13	9	8	7	0
n	<b>n</b> 3	Z	C	~2	Tb	Rt	<b>)</b> 5	R	a <sub>5</sub>	Rt	5	v	В	1h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_8[Ra+Rb])$ 

# LDBX – Load Byte Indexed

## **Description:**

An eight-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb. For vector instructions Ra is a scalar register.

## **Instruction Format:**

31 29					-		-		-	-			
$m_3$	Z	С	~2	Tb	R	$b_5$	R	$a_5$	Rt	5	V	E	80h <sub>8</sub>

C: 1=compressed vector load

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_8[Ra+Rb*Sc])$ 

# **LDCTX – Load Context**

# **Description:**

All sixty-four general purpose registers are loaded from the context area. The context area is specified by a descriptor selected by the contents of the specified selector register.

## **Instruction Format:**

15	13	12 9	8	7	0
Sel	l <sub>3</sub>	$0_{4}$	0	8	$8Dh_8$

Clock Cycles: 320 (32 memory access) (64 for 8 cache access)

Execution Units: All ALU's / Memory

**Operation:** 

# LDH - Load Hexi

## **Description:**

A 128-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

### **Instruction Format: RIL**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	Rt	5	0		88h <sub>8</sub>

### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	a <sub>5</sub>	R	t <sub>5</sub>	1		88h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{128}[Ra+displacement])$ 

Exceptions: DBE, DBG, LMT, TLB


# LDHS - Load Hexi, Short Format

## **Description:**

A 128-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**



**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{128}[Ra+displacement])$ 

# **LDHX – Load Hexi-byte Indexed**

# **Description:**

A 128-bit value is loaded from memory and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

## **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	Ra	a <sub>5</sub>	Rt	5	V	В	$8h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+Rb*Sc])$ 

# LDO - Load Octa

## **Description:**

A sixty-four-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rt	5	0	80	$5h_8$

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	<b>1</b> 5	Ri	t <sub>5</sub>	1		86h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

## **Operation:**

Rt = sign extend (memory<sub>64</sub>[Ra+displacement])

# LDOU - Load Octa Unsigned

## **Description:**

A sixty-four-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rt	5	0	8	7h <sub>8</sub>

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	<b>1</b> 5	Ri	t <sub>5</sub>	1		87h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+displacement])$ 

# LDOX - Load Octa Indexed

## **Description:**

A sixty-four-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

## **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	R	a <sub>5</sub>	Rt	5	v	E	36h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+Rb*Sc])$ 

# **LDOUX – Load Octa Unsigned Indexed**

## **Description:**

A sixty-four-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

## **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	Ra	<b>a</b> 5	Rt	5	V	В	$7h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+Rb*Sc])$ 

# LDT - Load Tetra

## **Description:**

A thirty-two-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	$a_5$	Rt	t <sub>5</sub>	0	84	$-h_8$

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	a <sub>5</sub>	Ri	t <sub>5</sub>	1		84h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

## **Operation:**

 $Rt = sign extend (memory_{32}[Ra+displacement])$ 

# **LDTU – Load Tetra Unsigned**

## **Description:**

A thirty-two-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	$a_5$	Rt	5	0	8:	5h <sub>8</sub>

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	<b>1</b> 5	Ri	5	1	00	$85h_8$

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_{32}[Ra+displacement])$ 

# **LDTUX – Load Tetra Unsigned Indexed**

# **Description:**

A thirty-two-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

## **Instruction Format:**

4	7 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
1	m <sub>3</sub>	Z	С	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	Tb <sub>2</sub>	R	$b_6$	Ra	$a_6$	Rt	6	v	B51	$h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_{32}[Ra+Rb*Sc])$ 

# LDTX - Load Tetra Indexed

# **Description:**

A thirty-two-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and register Rb.

## **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	Ra	a <sub>5</sub>	Rt	5	V	В	$4h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{32}[Ra + Rb])$ 

# LDW - Load Wyde

## **Description:**

A sixteen-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	$a_5$	Rt	5	0	8	2h <sub>8</sub>

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	a <sub>5</sub>	Ri	5	1		82h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{16}[Ra+displacement])$ 

# LDWU - Load Wyde Unsigned

## **Description:**

A sixteen-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rt	5	0	8	$3h_8$

#### **Instruction Format: RIVL**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	<b>1</b> 5	R	t <sub>5</sub>	1		83h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

## **Operation:**

 $Rt = zero extend (memory_{16}[Ra+offset])$ 

# LDWX – Load Wyde Indexed

# **Description:**

A sixteen-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and register Rb.

## **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	Ra	a <sub>5</sub>	Rt	5	V	В	2h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{16}[Ra + Rb])$ 

# LDWUX – Load Wyde Unsigned Indexed

# **Description:**

A sixteen-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and register Rb.

## **Instruction Format:**

31 29	28	27	26	2524	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~	$Tb_2$	R	<b>b</b> 5	Ra	a <sub>5</sub>	Rt	t <sub>5</sub>	V	В	$3h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = zero \ extend \ (memory_{16}[Ra + Rb])$ 

# **LEA – Load Effective Address**

## **Description:**

This instruction is an alternate mnemonic for the <u>ADDI</u> instruction. The virtual address is calculated and placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

### **Instruction Format: RIL**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	R	t <sub>5</sub>	0	C	04h <sub>8</sub>

### **Instruction Format: RIVL**

47 45	44	43	19	18	14	13	9	8	7	0
$m_3$	Z	Displacement <sub>240</sub>		R	$a_5$	R	t <sub>5</sub>	1	(	04h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

Exceptions: none

# **LEAX – Load Effective Address Indexed**

# **Description:**

This instruction is an alternate mnemonic for the <u>ADD</u> instruction. The virtual address is calculated and placed in the target register. The memory address is the sum of register Ra and register Rb.

#### **Instruction Format:**

31 30												0	
$0_2$	$m_3$	Z	0	Tb	R	<b>b</b> 5	R	a <sub>5</sub>	Ri	t <sub>5</sub>	V	19h <sub>8</sub>	

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

Rt = Ra + Rb

Exceptions: none

# **VIRT2PHYS** – Convert Virtual to Physical Address

# **Description:**

The virtual address in register Ra is converted to the physical address.

## **Instruction Format:**

_	40	34	33 31	30	29	28 27	26	21	20	15	14	9	8	7		0
	36h	7	$m_3$	Z	~	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V		02h <sub>8</sub>	

**Clock Cycles:** 3

**Execution Units:** Memory

**Operation:** 

Rt = Virt2Phys(Ra)

Exceptions: none

# **STB – Store Byte**

# **Description:**

An eight-bit value is stored to memory from the source register Rs. The memory address is the sum of the sign extended displacement and register Ra.

## **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rs	S <sub>5</sub>	0	90	$0h_8$

## **Instruction Format: RILV**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	$a_5$	Rs	35	1		90h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_8[Ra + displacement] = Rs_{[7..0]}$ 

# STBX – Store Byte Indexed

## **Description:**

An eight-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and register Rb.

## **Instruction Format:**

31 29	28	27	2625	24	23	19	18	14	13	9	8	7	0
$m_3$	Z	C	~2	Tb	Rb <sub>5</sub>		R	a <sub>5</sub>	Rs	<b>S</b> 5	V	C	$0h_8$

C: 1=compressed vector store

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All AGU's / Memory

## **Operation:**

$$memory_8[Ra+Rb] = Rs_{[7:0]}$$

## **Vector Operation:**

$$\begin{array}{c} y = 0 \\ \text{for } x = 0 \text{ to } VL - 1 \\ \text{ if } (Rb \text{ is scalar}) \\ n = Rb * y \\ \text{ else} \\ n = Rb[n] \\ \text{IF } (Vm[n]) \\ \text{ memory}_8[Ra+n] = Rs[n]_{[7:0]} \\ \text{IF } (C) \\ y = y + Vm[n] \\ \text{ELSE} \\ y = y + 1 \end{array}$$

# **STCTX – Store Context**

## **Description:**

All sixty-four general purpose registers are stored to the context area. The context area is specified by a descriptor selected by the contents of the specified selector register.

## **Instruction Format:**

15 13	12 9	8	7	0
Sel <sub>3</sub>	$0_{4}$	0	ç	PDh <sub>8</sub>

Clock Cycles: 320 (32 memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

Exceptions: DBE, DBG, TLB, LMT

## Example;

# setup the FS to point to the TCB area MFSEL t0,11 # TCB selector

MTSEL FS,t0

. . .

# store context STCTX FS

# STH – Store Hexi-byte

# **Description:**

A register is stored to memory. The memory address is the sum of the sign extended displacement and register Ra.

## **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rs	S <sub>5</sub>	0	94	$h_8$

## **Instruction Format: RILV**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	C		Displacement <sub>230</sub>		R	$a_5$	R	S <sub>5</sub>	1		94h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{128}[Ra+displacement] = Rs$ 

# STHC – Store Hexi, Clear Reservation

# **Description:**

A 128-bit value from the source register Rs is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of the sign extended displacement and register Ra.

### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	Rs	55	0	9	96h <sub>8</sub>

## **Instruction Format: RILV**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	C		Displacement <sub>230</sub>		Ra	$a_5$	R	t <sub>5</sub>	1		96h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{128}[Ra+displacement] = Rb$ 

# STHP – Store Hexi-byte Pair

## **Description:**

A pair of registers is stored to memory. The memory address is the sum of the sign extended displacement and register Ra. The address must be hexi-byte pair aligned. The register pair must be an even, odd pair of registers.

### **Instruction Format:**

47	19	18	14	13	10	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	R	S4	0	0	9	4h <sub>8</sub>

### **Instruction Format: RILV**

47 45	44	43	42		19	18	14	13	10	9	8	7	0
$m_3$	Z	C		Displacement <sub>230</sub>		R	$a_5$	R	S <sub>4</sub>	0	1	94	$h_8$

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

## **Operation:**

 $memory_{128}[Ra+displacement] = Rs$ 

 $memory_{128}[Ra+displacement+16] = Rs+1$ 

# STHS – Store Hexi, Short Addressing

## **Description:**

A 128-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

## **Instruction Format:**

31 19	18	14	13	9	8	7	0
Disp <sub>120</sub>	I	Ra <sub>5</sub>	R	S <sub>5</sub>	0		95h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

# STHX – Store Hexi-byte Indexed

## **Description:**

A 128-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and register Rb.

## **Instruction Format:**

31 29	28	27	2625	24	23	19	18	14	13	9	8	7	0
m <sub>3</sub>	Z	С	~2	Tb	Rl	<b>b</b> 5	R	a <sub>5</sub>	Rs	S5	v	(	C4h <sub>8</sub>

C: 1=compressed vector store

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{128}[Ra + Rb] = Rs$ 

## STO – Store Octa

## **Description:**

A sixty-four-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

_ 47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rs	55	0	93	3h <sub>8</sub>

#### **Instruction Format: RILV**

47 45	44	43	42	19	18	14	13	9	8	7	0
$m_3$	Z	C	Displacement <sub>230</sub>		R	$a_5$	R	S <sub>5</sub>	1	93	$h_8$

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

Exceptions: DBE, DBG, TLB, LMT

# STHCX – Store Hexi, Clear Reservation Indexed

### **Description:**

A 128-bit value from the source register Rs is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

31 29	28	27	2625	24	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~2	Tb	R	<b>b</b> <sub>5</sub>	R	$a_5$	Rs	S <sub>5</sub>	V	С	4h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{128}[Ra + Rc] = Rb$ 

Exceptions: DBE, DBG, LMT, TLB

## STOO – Store Octa Octet

### **Description:**

An octet of registers is stored to memory. The memory address must be 64-byte aligned. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44		27	26	21	20	15	14 12	119	8	7	0
$Sel_3$		Displacement <sub>236</sub>		0	6	R	$a_6$	$Rs_3$	13	0		96h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

### **Operation:**

$$\begin{split} & memory_{64}[Ra+displacement+00] = Rs+0 \\ & memory_{64}[Ra+displacement+08] = Rs+1 \\ & memory_{64}[Ra+displacement+16] = Rs+2 \\ & memory_{64}[Ra+displacement+24] = Rs+3 \\ & memory_{64}[Ra+displacement+32] = Rs+4 \\ & memory_{64}[Ra+displacement+40] = Rs+5 \\ & memory_{64}[Ra+displacement+48] = Rs+6 \\ & memory_{64}[Ra+displacement+56] = Rs+7 \end{split}$$

Exceptions: DBE, DBG, TLB, LMT

## STOOX - Store Octa Octet Indexed

#### **Description:**

An octet of registers is stored to memory. The memory address must be 64-byte aligned. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 45	44	43	42 35	34 32	31 29	2827	26	21	20	15	14	9	8	7	0
$m_3$	Z	C	Disp <sub>8</sub>	Sel <sub>3</sub>	$Sc_3$	$Tb_2$	R	$b_6$	R	$a_6$	Rs	S <sub>6</sub>	V	C	C6h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

### **Operation:**

 $memory_{64}[Ra+Rb*Sc+00] = Rs+0$ 

 $memory_{64}[Ra+Rb*Sc+08] = Rs+1$ 

 $memory_{64}[Ra+Rb*Sc+16] = Rs+2$ 

 $memory_{64}[Ra+Rb*Sc+24] = Rs+3$ 

 $memory_{64}[Ra+Rb*Sc+32] = Rs+4$ 

 $memory_{64}[Ra+Rb*Sc+40] = Rs+5$ 

 $memory_{64}[Ra+Rb*Sc+48] = Rs+6$ 

 $memory_{64}[Ra+Rb*Sc+56] = Rs+7$ 

**Exceptions:** DBE, DBG, LMT, TLB

# STOX - Store Octa Indexed

### **Description:**

A sixty-four-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

31 29	28	27	2625	24	23	19	18	14	13	9	8	7	0
$m_3$	z	C	~2	Tb	R	<b>b</b> <sub>5</sub>	R	a <sub>5</sub>	Rs	S <sub>5</sub>	V	C	$23h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+Rb*Sc] = Rs$ 

Exceptions: DBE, DBG, LMT, TLB

## **STPTR – Store Pointer**

### **Description:**

A register is stored to memory. The memory address is the sum of the sign extended displacement and register Ra. A telescopic write of zero bytes to the card table takes place.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rs	S <sub>5</sub>	0	A	$8h_8$

#### **Instruction Format: RILV**

4745	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	C		Displacement <sub>230</sub>		Ra	<b>a</b> 5	R	t <sub>5</sub>	1	1	$A8h_8$

C: 1=compressed vector load

Clock Cycles: 10 (one memory access)

### Operation:

```
\begin{split} tmp &= Ra + displacement - region.start \\ do \\ tmp &= tmp >> 8 \\ memory_8[tmp + region.cta] = 0 \\ until (tmp &= 0) \end{split}
```

**Execution Units:** All ALU's / Memory

### **Operation:**

 $memory_{128}[Ra+displacement+00] = Rs$ 


Exceptions: DBE, DBG, TLB, LMT

## STPTRX – Store Pointer Indexed

#### **Description:**

A register is stored to memory from register Rs. The memory address is the sum of register Ra and register Rb. A telescopic write of zero bytes to the card table takes place.

#### **Instruction Format:**



C: 1=compressed vector store

**Clock Cycles:** 10 (one memory access)

Execution Units: All AGU's / Memory

#### **Operation:**

```
\begin{split} memory_8[Ra+Rb] &= Rs \\ tmp &= Ra + Rb - region.start \\ do \\ tmp &= tmp >> 8 \\ memory_8[tmp+region.cta] &= 0 \\ until (tmp &= 0) \end{split}
```

#### **Vector Operation:**

```
\begin{array}{l} y = 0 \\ \text{for } x = 0 \text{ to } VL - 1 \\ \text{ if } (Rb \text{ is scalar}) \\ n = Rb * y \\ \text{else} \\ n = Rb[n] \\ \text{IF } (Vm[n]) \\ \text{memory}_8[Ra+n] = Rs[n]_{[7:0]} \\ \text{IF } (C) \\ y = y + Vm[n] \\ \text{ELSE} \\ y = y + 1 \end{array}
```

Exceptions: DBE, DBG, LMT, TLB

# STT – Store Tetra

### Description:

A thirty-two-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		R	a <sub>5</sub>	Rs	S <sub>5</sub>	0	Ç	92h <sub>8</sub>

#### **Instruction Format: RILV**

47 45	44	43	42		19	18	14	13	9	8	7	0	
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	a <sub>5</sub>	Rs	S5	1		92h <sub>8</sub>	

C: 1=compressed vector load

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_{32}[Ra+displacement] = Rs_{[31..0]}$ 

Exceptions: DBE, DBG, TLB, LMT

## STTX – Store Tetra Indexed

### **Description:**

A thirty-two-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and register Rb.

#### **Instruction Format:**

31 29	28	27	2625	24	23	19	18	14	13	9	8	7	0
$m_3$	Z	С	~2	Tb	R	b <sub>5</sub>	R	a <sub>5</sub>	Rs	<b>S</b> 5	v	(	C2h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{32}[Ra+Rb*Sc] = Rs_{[31:0]}$ 

Exceptions: DBE, DBG, LMT, TLB

# STW – Store Wyde

## **Description:**

A sixteen-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47	19	18	14	13	9	8	7	0
Displacement <sub>280</sub>		Ra	a <sub>5</sub>	Rs	S <sub>5</sub>	0	9	1h <sub>8</sub>

#### **Instruction Format: RILV**

47 45	44	43	42		19	18	14	13	9	8	7	0
$m_3$	Z	С		Displacement <sub>230</sub>		Ra	$a_5$	Rs	S <sub>5</sub>	1	'	91h <sub>8</sub>

C: 1=compressed vector load

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{16}[Ra+displacement] = Rs_{[15..0]}$ 

Exceptions: DBE, DBG, TLB

# STWX – Store Wyde Indexed

## **Description:**

A sixteen-bit value is stored to memory from register Rs. The memory address is the sum of register Ra and register Rb.

#### **Instruction Format:**

31 29	28	27	2625	24	23	19	18	14	13	9	8	7	0
$m_3$	Z	C	~	Tb	R	b <sub>5</sub>	R	a <sub>5</sub>	Rs	<b>S</b> 5	v	C	1h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{16}[Ra+Rb*Sc] = Rs_{[15:0]}$ 

Exceptions: DBE, DBG, LMT, TLB

## **Block Instructions**

# **BCMPx – Block Compare**

### **Description:**

This instruction compares data from the memory location addressed by Ra to the memory location addressed by Rb until the loop counter LC reaches zero or until a mismatch occurs. Ra and Rb increment by independently specified amounts. This instruction is interruptible. The data must be in the same segment and appropriately aligned.

#### **Instruction Format:**

47 45	44	43 41	49 38	37	36 33	32	29	28 27	26	21	20	15	1413	129	8	7	0
Sel <sub>3</sub>	Ce	$Sz_3$	$m_3$	Z	~4	Bi	i <sub>4</sub>	$Tb_2$	Rł	<b>)</b> 6	Ra	<b>a</b> 6	~2	Ai <sub>4</sub>	V	9Ah	8

Ai <sub>4</sub> /Bi <sub>4</sub>	Adjustment Amount
0	0
1	1
2	2
3	4
4	8
5	16
15	-1
14	-2
13	-4
12	-8
11	-16
others	reserved

#### **Assembler Example**

LDI LC,200
BCMPO [Ra]+,[Rb]+
SUBF LC,LC,200 ; get index of difference

**Execution Units:** Memory

### **Operation:**

```
temp = 0 while LC <> 0 and mem[Rb] = mem[Ra] Ra = Ra + amt Rb = Rb + amt LC = LC - 1
```

# BFNDx – Block Find

### **Description:**

This instruction compares data from the memory location addressed by Ra to the data in register Rb until the loop counter LC reaches zero or until a match occurs. This instruction is interruptible. The data must be appropriately aligned.

#### **Instruction Format:**

47 45	44	43 41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
Sel <sub>3</sub>	~	$O_3$	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	R	$b_6$	Ra	$a_6$	Ro	26	V	9B1	18

$O_3$	Assembler Mnemonic	
0	STFND.BI	byte incrementing
1	STFND.WI	wyde incrementing
2	STFND.TI	tetra incrementing
3	STFND.OI	octa incrementing
4	STFND.BD	byte decrementing
5	STFND.WD	wyde decrementing
6	STFND.TD	tetra decrementing
7	STFND.OD	octa decrementing

**Execution Units:** Memory

### **Operation:**

```
temp = 0
while LC <> 0
if (mem[Ra] = Rb)
stop
Ra = Ra + amt
LC = LC - 1
```

## **BMOVx** -Block Move

#### **Description:**

This instruction moves a data from the memory location addressed by Ra to the memory location addressed by Rb until the loop counter LC reaches zero. Ra and Rb are adjusted by a specified amount after the move. This instruction is interruptible. The data moved must be in the same segment and appropriately aligned. During the move, if the Ce bit is set data will be moved into the cache this may improve performance of the move due to fewer external memory cycles.

This instruction may be used to stream data to or from an I/O port by keeping one of the addresses fixed.

#### **Instruction Format:**

47 45	44	43 41	49 38	37	36 33	32	29	28 27	26	21	20	15	1413	129	8	7	0
Sel <sub>3</sub>	Ce	$Sz_3$	$m_3$	Z	~4	В	<b>i</b> 4	$Tb_2$	Rł	<b>)</b> 6	R	$a_6$	~2	Ai <sub>4</sub>	V	99h	8

Ai <sub>4</sub> /Bi <sub>4</sub>	Adjustment Amount
0	0
1	1
2	2
3	4
4	8
5	16
15	-1
14	-2
13	-4
12	-8
11	-16
others	reserved

#### **Assembler Example**

LDI LC,200 BMOVB [Ra]+,[Rb]+

**Execution Units:** Memory

### **Operation:**

```
temp = 0 while LC \Leftrightarrow 0 t0 = mem[Ra] mem[Rb] = t0 Ra = Ra + amt Rb = Rb + amt LC = LC - 1
```

## BSETx - Block Set

### **Description:**

This instruction stores data contained in register Rb to consecutive memory locations beginning at the address in Ra until the loop counter reaches zero. Ra is updated by the number of bytes written. The data address must be appropriately aligned.

#### **Instruction Format:**

47 45	44	43	42	35	34 32	31 29	2827	26	21	20	15	1413	12 9	8	7	0
$m_3$	Z	С		~8	Sel <sub>3</sub>	$Sz_3$	$0_{2}$	$Rb_6$		Ra	6	~2	Ai <sub>4</sub>	0	9	$98h_8$

Ai <sub>4</sub>	Adjustment Amount
0	0
1	1
2	2
3	4
4	8
5	16
15	-1
14	-2
13	-4
12	-8
11	-16
others	reserved

$Sz_3$	
0	byte
1	wyde
2	tetra
3	octa
4 to 7	reserved

**Execution Units:** Memory

### **Operation:**

$$if \ LC <> 0$$
 
$$mem[Ra] = Rb$$
 
$$Ra = Ra + amt$$
 
$$LC = LC - 1$$

### **Assembler Example**

LDI LC,200 BSETB Rb,[Ra]+

## Branch / Flow Control Instructions

## Overview

#### **Mnemonics**

There are two sets of mnemonics for branch instructions. Branch instructions that are IP relative, specify Ca = 7 in the branch instruction and are referred to with a 'B' as in BEQ. Using mnemonics that begin with 'B' imply the code address register is the instruction pointer, C7. Branch instructions that are relative to other code address registers are referred to as jump instructions and begin with a 'J' in the mnemonic.

There are further mnemonics for specifying the comparison method. Floating-point comparisons prefix the branch mnemonic with 'F' as in FBEQ. Decimal-floating point comparisons prefix the branch mnemonic with 'DF' as in DFBEQ. And finally posit comparisons prefix the branch mnemonic with a 'P' as in 'PBEQ'.

#### **Conditions**

Conditional branches branch to the target address only if the condition is true. The condition is determined by the comparison of two general-purpose registers.

The original Thor machine used instruction predicates to implement conditional branching. Another instruction was required to set the predicate before branching. Combining compare and branch in a single instruction may reduce the dynamic instruction count. An issue with comparing and branching in a single instruction is that it may lead to a wider instruction format.

The comparison used is determined by a three-bit field in the instruction. There are four comparison types that may be performed as outlined in the table below.

Cm <sub>3</sub>	Comparison Type
0	signed integer comparisons
1	quad float comparison
2	quad decimal float comparison
3	posit comparison
4	unsigned integer comparisons
5 to 7	reserved

## **Conditional Branch Format**

Branches use 48-bit opcodes.

A 32-bit opcode would not leave a large enough target field and would end up using two or more instructions to implement most branches. With the prospect of using two instructions to perform compare then branches as many architectures do, it is more space efficient to simply use a wider instruction format.

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	$Lk_2$	0	2x	$h_8$

# **Branch Conditions**


The branch opcode determines the condition under which the branch will execute.

47				23								0
	Target <sub>19</sub>	Ca <sub>3</sub>	$Tb_2$	$Rb_5$	R	$a_5$	Cı	$n_3$	$Lk_2$	0	2x	$h_8$

2x	Integer Comparison Test	Float / Decimal Float	Posit
28h	signed less than	less than	less than
29h	signed greater or equal	greater than or equal	greater than or equal
2Ah	signed less than or equal	less than or equal	less than or equal
2Bh	signed greater than	greater than	greater than
2Ch		magnitude less than	
2Dh			
2Eh			
2Fh			
26h	equal	equal	equal
27h	not equal	not equal	not equal
24h	bit clear	ordered	
25h	bit set	unordered	

## Linkage

Branches may specify a linkage register which is updated with the address of the next instruction. This allows subroutines to be called. There are two link registers in the architecture.

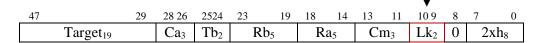

Lk <sub>2</sub>	Meaning
0	do not store return address
1	use Lk1
2	use Lk2
3	reserved

# **Branch Target**

For conditional branches, the target address is formed as the sum of a code address register and a 19-bit constant specified in the instruction. Branches may be IP relative with a range of  $\pm 512$ kB.

	▼		lacktriangle											
47		29	28 26	2524	23	19	18	14	13	11	109	8	7	0
Target <sub>19</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Cn	13	Lk <sub>2</sub>	0	2x	$h_8$

# **Branch to Register**

The branch to register instruction allows a conditional return from subroutine to be used or a branch to a value in a register. Branching to a value in a register allows all bits of the instruction pointer to be set. Since addresses are formed as the sum of a code address register and a constant in the instruction, branching to a register is inherent in the instruction. The target constant may be set to zero. Specifying Ca = 0 will use the value zero rather than the contents of Ca zero. This allows absolute address branches to be formed.

	▼		▼											
47		29	28 26	2524	23	19	18	14	13	11	109	8	7	0
Target <sub>19</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	Rb	5	R	$a_5$	Cı	m <sub>3</sub>	Lk <sub>2</sub>	0	2x	h <sub>8</sub>

## **BBC - Branch if Bit Clear**

### **Description**:

This instruction branches to the target address if bit Rb of Ra is clear, otherwise program execution continues with the next instruction. Rb may specify either a register or a six-bit unsigned immediate. For a further description see Branch Instructions. Only the first 64-bits of a register may be tested.

### Formats Supported: B

47	2	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		7 <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		Ra	<b>1</b> 5	Cm <sub>3</sub>	$Lk_2$	0	241	$h_8$

### **Operation:**

$$\begin{split} Lk &= next \ IP \\ If \ (Ra.bit[Rb_6] == 0) \\ IP &= IP + Constant \end{split}$$

**Execution Units:** Branch

Exceptions: none

## **BBS** – Branch if Bit Set

## **Description**:

This instruction branches to the target address if a bit of Ra is set, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. Only the first 64-bits of a register may be tested.

### Formats Supported: B

47	28	27 25	24	23	19	18	14	13 11	109	8	7	0
Target <sub>20</sub>		73	Tb	Rb	5	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	251	$h_8$

## **Operation:**

**Execution Units:** Branch

Exceptions: none

## **BEQ** – Branch if Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra equals the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. Note that for float comparisons positive and negative zero are considered equal.

#### Formats Supported: B

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		7 <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	Ra	<b>1</b> 5	$Cm_3$	$Lk_2$	0	26	$h_8$

#### **Operation:**

**Execution Units**: Branch

Exceptions: none

**Notes:** 

For a floating-point comparison positive and negative zero are considered equal.

## **BEQZ** – Branch if Equal to Zero

### **Description**:

This instruction branches to the target address if the contents of the Ra equals zero, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. In many cases it is sufficient to test and branch if a register is zero. Since this is a common case there is a short-hand instruction format available.

#### **Formats Supported**: B

31 29	28		19	18	14	13	9	8	7	0
7 <sub>3</sub>		Tgt <sub>10</sub>		R	$a_5$	Tg	ţt <sub>5</sub>	0	1	$0h_8$

### **Operation:**

If 
$$(Ra==0)$$
  
 $IP = IP + Constant$ 

**Execution Units:** Branch

Exceptions: none

# **BGE – Branch if Greater Than or Equal**

## **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>	73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	29	$h_8$

### **Operation:**

$$Lk = next IP$$
If  $(Ra >= Rb)$ 

$$IP = IP + Constant$$

**Execution Units**: Branch

# **BGEU** – Branch if Greater Than or Equal Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		Ra	a <sub>5</sub>	43	$Lk_2$	0	29h	18

### **Operation:**

$$Lk = next IP$$

$$If (Ra>=Rb)$$

$$IP = IP + Constant$$

**Execution Units**: Branch

# **BGT – Branch if Greater Than**

## **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: B

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Cm <sub>3</sub>	$Lk_2$	0	2B	$h_8$

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

# **BGTU – Branch if Greater Than Unsigned**

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Bl	18

### **Operation:**

$$\begin{split} Lk &= next \; IP \\ If \; (Ra > Rb) \\ IP &= IP + Constant \end{split}$$

**Execution Units**: Branch

# **BLE – Branch if Less Than or Equal**

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>	i	R	$a_5$	Cm <sub>3</sub>	$Lk_2$	0	2A	$h_8$

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

# **BLEU – Branch if Less Than or Equal Unsigned**

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

_ 47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Ał	18

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

## **BLT – Branch if Less Than**

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target	19	73	Tb <sub>2</sub>	Rb <sub>5</sub>	5	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	28	$h_8$

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units**: Branch

# **BLTU** – Branch if Less Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	28h	18

### **Operation:**

$$\begin{split} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= IP + Constant \end{split}$$

**Execution Units**: Branch

## **BNE** – Branch if Not Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. Float comparisons treat positive and negative zero as equal.

### Formats Supported: B

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		73	$Tb_2$	Rb <sub>5</sub>		Ra	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	27l	18

#### **Operation:**

$$Lk = next IP$$
If  $(Ra != Rb)$ 

$$IP = IP + Constant$$

**Execution Units**: Branch

Exceptions: none

**Notes:** 

## **BNEZ** – Branch if Not Equal to Zero

#### **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to zero, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

#### Formats Supported: B

31 29	28	19	18	14	13	9	8	7	0
73	Tg	gt <sub>10</sub>	R	$a_5$	Tg	ţt <sub>5</sub>	0	12	2h <sub>8</sub>

#### **Operation:**

**Execution Units**: Branch

Exceptions: none

## **BRA** – **Branch Always**

### **Description**:

This instruction always branches to the target address. The target address range is  $\pm 8GB$ .

### Formats Supported: B

_	47		32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
		Target <sub>16</sub>		73			Tar	get <sub>18</sub>				0	0	20	$h_8$

### **Operation:**

IP = IP + Constant

**Execution Units:** Branch

Exceptions: none

**Notes:** 

## **BSR** – Branch to Subroutine

#### **Description**:

This instruction always jumps to the target address. The address of the next instruction is stored in a link register.

### Formats Supported: B

47		32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
	Target <sub>16</sub>		7 <sub>3</sub>			Tar	get <sub>18</sub>				$Lk_2$	0	201	$h_8$

### **Operation:**

Lk = next IP

IP = IP + Constant

**Execution Units:** Branch

Exceptions: none

## **DBRA – Decrement and Branch**

## **Description**:

This instruction always branches to the target address if the loop count is non-zero. The target address range is  $\pm 8GB$ . The register used as the loop counter is r58.

#### Formats Supported: B

	47	32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Γ	Target <sub>16</sub>		73			Tar	get <sub>18</sub>				0	0	21	$h_8$

### **Operation:**

If (LC 
$$!= 0$$
)
$$IP = IP + Constant$$

$$LC = LC - 1$$

**Execution Units:** Branch

**Exceptions**: none

**Notes:** 

## **DJMP – Decrement and Jump**

### **Description**:

This instruction always jumps to the target address. The target address range is  $\pm 8GB$ .

#### **Instruction Format**: JMP

47	32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Target <sub>16</sub>		Ca <sub>3</sub>			Tar	get <sub>18</sub>				0	0	211	

### **Operation:**

If (LC != 0)  

$$Lk = next IP$$
  
 $IP = Ca + sign extend (Constant_{27})$   
 $LC = LC - 1$ 

**Execution Units**: Branch

Exceptions: none

# JBC – Jump if Bit Clear

## **Description**:

This instruction branches to the target address if a bit of Ra is clear, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: J

47	29	28 26	2524	23 1	9	18 14	13 1	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		Ra <sub>5</sub>	$0_{3}$	Lk <sub>2</sub>	0	24h <sub>8</sub>	

## **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra.bit[Rb] &== 0) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

Exceptions: none

# JBS – Jump if Bit Set

## **Description**:

This instruction branches to the target address if a bit of Ra is set, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

## Formats Supported: J

47	29	28 26	2524	23 1	9	18 1	4	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		Ra <sub>5</sub>		$0_{3}$	$Lk_2$	0	25h <sub>8</sub>	3

## **Operation:**

**Execution Units**: Branch

Exceptions: none

# JEQ – Jump if Equal

## **Description**:

This instruction branches to the target address if the contents of the Ra equals the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

#### Formats Supported: J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	5	R	a <sub>5</sub>	$Cm_3$	Lk <sub>2</sub>	0	26h	8

## **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &== Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

Exceptions: none

## **JGE – Jump if Greater Than or Equal**

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	291	$h_8$

#### **Operation:**

$$Lk = next IP$$
If  $(Ra >= Rb)$ 

$$IP = Ca + Constant$$

**Execution Units:** Branch

## JGEU – Jump if Greater Than or Equal Unsigned

#### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>	9	Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	$Lk_2$	0	29h	18

#### **Operation:**

$$Lk = next IP$$

$$If (Ra >= Rb)$$

$$IP = Ca + Constant$$

**Execution Units:** Branch

## JGT – Jump if Greater Than

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	:	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	;	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	2B1	$h_8$

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

## JGTU – Jump if Greater Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	2	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	;	R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Bh	18

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

## JLE – Jump if Less Than or Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	29	28 26	2524	23 1	9	18	14	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	$Rb_5$		Ra	<b>1</b> 5	Cm <sub>3</sub>	Lk <sub>2</sub>	0	2Ah <sub>8</sub>	

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

## JLEU – Jump if Less Than or Equal Unsigned

#### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	29	28 26	2524	23 1	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	43	Lk <sub>2</sub>	0	2Ah <sub>8</sub>	;

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &<= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

## JLT – Jump if Less Than

## **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>		R	a <sub>5</sub>	Cm <sub>3</sub>	$Lk_2$	0	28h	18

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# JLTU – Jump if Less Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: J

47	2	29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	43	$Lk_2$	0	281	18

#### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra < Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

## JNE – Jump if Not Equal

## **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions. For floats, positive and negative zero are considered equal.

#### **Formats Supported:** J

47		29	28 26	2524	23	19	18	14	13 11	109	8	7	0
	Target <sub>19</sub>		Ca <sub>3</sub>	$Tb_2$	Rb <sub>5</sub>	i	R	a <sub>5</sub>	Cm <sub>3</sub>	Lk <sub>2</sub>	0	271	$h_8$

## **Operation:**

$$Lk = next IP$$
If (Ra != Rb)
$$IP = Ca + Constant$$

**Execution Units:** Branch

Exceptions: none

# JMP – Jump

## **Description**:

This instruction always jumps to the target address. The target address range is  $\pm 8GB$ .

## **Instruction Format**: JMP

_ 47	32 31 29	2827 26	21 20	15	14	11	10 9	8	7 0
Target <sub>16</sub>	Ca <sub>3</sub>		Target <sub>18</sub>				0	0	20h <sub>8</sub>

## **Operation:**

$$Lk = next IP$$

 $IP = Ca + sign extend (Constant_{27})$ 

**Execution Units**: Branch

Exceptions: none

# JSR – Jump to Subroutine

## **Description**:

This instruction always jumps to the target address. The address of the next instruction is stored in a link register. The target address range is  $\pm 8GB$ .

## Formats Supported: JMP

47	32	31 29	2827	26	21	20	15	14	11	10 9	8	7	0
Target <sub>16</sub>		Ca <sub>3</sub>			Tar	get <sub>18</sub>				Lk <sub>2</sub>	0	20	$h_8$

## **Operation:**

Lk = next IPIP = Ca + Constant

**Execution Units**: Branch

Exceptions: none

# **NOP – No Operation**

## **Description:**

This instruction does not do anything.

## **Integer Instruction Format:**

15	9	8	7	0
~7		V	F	$1h_8$

Operation: none

**Vector Operation** 

**Execution Units:** I

**Clock Cycles: 1** 

Exceptions: none

## **RTS – Return from Subroutine**

#### **Description**:

This instruction returns from a subroutine by transferring program execution to the address calculated as the sum of a link register and a constant. The const field is shifted left once before use.

#### **Formats Supported:** RTS

15	11	10 9	8	7	0
Cor	ıst <sub>5</sub>	$Lk_2$	0	F	2h <sub>8</sub>

Flags Affected: none

**Operation:** 

**Execution Units**: Branch

Exceptions: none

**Notes**:

A branch instruction may also be used to return from a subroutine

Return address prediction hardware may make use of the RTS instruction.

## **System Instructions**

## **BRK** – Break

## **Description**:

This instruction initiates the processor debug routine. The processor enters debug mode. The cause code register is set to indicate execution of a BRK instruction. Interrupts are disabled. The instruction pointer is reset to the contents of tvec[3] and instructions begin executing. There should be a jump instruction placed at the break vector location. The address of the BRK instruction is stored in the EIP register, C6.

#### **Instruction Format: BRK**

15	9	8	7	0
~7		0	00	)h <sub>8</sub>

#### **Operation:**

PMSTACK = (PMSTACK << 8) | 3Eh PLSTACK = (PLSTACK << 8) | FFh CAUSE = FLT\_BRK C[8+stk\_depth] = IP IP = tvec[3]

**Execution Units:** Branch

**Clock Cycles:** 

Exceptions: none

## **CSRx – Control and Special / Status Access**

#### **Description**:

The CSR instruction group provides access to control and special or status registers in the core. For the read operation the current value of the CSR is placed in the target register Rt.

#### **Instruction Format: CSR**

47 45	44	43 41	40 37	36	2	21	20	15	14	9	8	7	0
$m_3$	Z	$O_3$	~4		Immediate <sub>150</sub>		Ra	16	Rt	6	v	(	)Fh <sub>8</sub>

O <sub>3</sub>		Operation
0	CSRRD	Only read the CSR, no update takes place, Ra should be x0.
1	CSRRW	Read/Write to CSR
2	CSRRS	Read/Set CSR bits
3	CSRRC	Read/Clear CSR bits
4 to 7		Reserved

CSRRS and CSRRC operations are only valid on registers that support the capability.

The Regno<sub>[15..12]</sub> field is reserved to specify the operating mode. Note that registers cannot be accessed by a lower operating mode.

Execution Units: Integer, the instruction may be available on only a single execution unit (not supported on all available integer units).

#### Clock Cycles: 1

**Exceptions**: privilege violation attempting to access registers outside of those allowed for the operating mode.

## **DI – Disable Interrupts**

## **Description:**

This instruction disables interrupts for a short period of time. The Rb field specifies the number of following instructions for which interrupts are disabled. Interrupts may be disabled for the execution of a maximum of seven instructions.

#### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
16h	7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	6	~	6	V	07	$7h_8$

**Operation:** 

**Execution Units**: ALU

**Clock Cycles:** 

Exceptions: none

## **INT** – Generate Interrupt

#### **Description:**

Generate interrupt. This instruction invokes the system exception handler. The return address is stored in the EIP register (code address register #8 to 15).

The return address stored is the address of the interrupt instruction, not the address of the next instruction. To call system routines use the  $\underline{SYS}$  instruction.

The level of the interrupt is checked and if the interrupt level in the instruction is less than or equal to the current interrupt level then the instruction will be ignored.

#### **Instruction Format:**

31		20	19	17	16	9	8	7	0
	~12		Lv	/13	Cau	se <sub>8</sub>	0		A6h <sub>8</sub>

### **Operation:**

```
\begin{split} PMSTACK &= (PMSTACK << 8) \mid 30h + (Lvl_3 * 2) \\ PLSTACK &= (PLSTACK << 8) \mid FFh \\ CAUSE &= Cause_8 \\ C[8+stk\_depth] &= IP \\ IP &= tvec[3] \end{split}
```

# **LDPTG – Load from Page Table Group**

## **Description**:

This instruction reads the PTG. Which translation entry to load is set in register Ra. The current value of the entry selected by Ra is copied to register pair Rt.

The group number for Ra comes from a hash of the virtual address and ASID.

#### **Instruction Format:** OSR3

	47	41	49 38	37	36 34	33	32 31	30	26	25 24	23	19	18	14	13	10	9	8	7	0
Ī	24h	17	$m_3$	Z	~3	1	$0_2$	~	5	$0_2$	~	<b>′</b> 5	R	$a_5$	R	.t <sub>4</sub>	0	v	0	7h <sub>8</sub>

**Clock Cycles:** 5

**Execution Units**: Memory

Ra Value Format

31	20	19	18	17	16	15 14	13 12	1110	8	7	6	5	4	3	2	1	0
	~16							PTG Nu	mbe	<b>r</b> 13						EN <sub>3</sub>	1

# **MEMDB – Memory Data Barrier**

## **Description:**

All memory accesses before the MEMDB command are completed before any memory accesses after the data barrier are started.

#### **Instruction Format:**

15	9	8	7	0
~7		0		F9h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Memory

# **MEMSB – Memory Synchronization Barrier**

## **Description:**

All instructions before the MEMSB command are completed before any memory access is started.

#### **Instruction Format:**

15	9	8	7	0
~7		0		F8h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Memory

## MFLK – Move from Link Register

#### **Description**:

This instruction moves a link register to a general-purpose register. Only the offset portion of the link register is moved. Link registers including the selector portion are available with the CSR instructions.

**Instruction Format: MFLK** 

## MTLK – Move to Link Register

### **Description**:

This instruction moves a general-purpose register to a link register. Only the offset portion of the link register is moved. Link registers including the selector portion are available with the CSR instructions.

**Instruction Format: MFLK** 

# MFSEL – Move from Selector Register

## **Description:**

This instruction moves a selector register indirectly specified by Rb or directly if Rb is a constant, to register Rt.

#### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
28h	17	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	$b_6$	~	<b>'</b> 6	R	t <sub>6</sub>	V	071	$h_8$

## **Operation:**

$$Rt = Sel[Rb]$$

### **Examples:**

LDI \$t1,#7 MFSEL \$t0,[\$t1]

; get CS

STO \$t0,CSSave

**Execution Units:** ALU

**Clock Cycles:** 

## **MTSEL** – **Move to Selector Register**

#### **Description:**

This instruction moves register Ra to the selector register identified indirectly by the contents of Rb or directly if Rb is a constant. This instruction will load the associated descriptor cache from either the GDT or LDT tables.

It is not possible to move a value directly to the CS register as that would cause an unexpected change of program flow. Instead, the CS register must be loaded via a branch instruction.

#### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
29h	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	~	5	V	(	)7h <sub>8</sub>

#### **Operation:**

$$B[Rb] = Ra$$

#### **Selector Registers:**

#	Reg	Usage
0	ZS	
1	DS	data selector
2	ES	
3	FS	
4	GS	
5	HS	
6	SS	stack selector
7	CS	code selector
8	PMA0	physical memory attributes
9	PMA1	
10	PMA2	
11	PMA3	
12	PMA4	
13	PMA5	
14	PMA6	
15	PMA7	
16	PTA	page table address
17	LDT	local descriptor table selector
18	KYT	memory key table selector

#### **Examples:**

MTSEL DS,a0

LDI a1,3

MTSEL a1,a0 # move indirect a0 to b[a1]

**Execution Units:** ALU

**Clock Cycles**:

Exceptions: none

# PEEKQ – Peek at Queue / Stack

## **Description**:

This instruction returns the top value into Rt from the hardware queue specified in Rb. The hardware queue position is <u>not</u> advanced. Unused value bits should read as zero. Used the STATQ instruction to get the queue status.

#### **Instruction Format**: OSR2

_	47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	0Ah	17	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	~	6	R	t <sub>6</sub>	V	07	7h <sub>8</sub>

## **PFI – Poll for Interrupt**

#### **Description**:

The poll for interrupt instruction polls the interrupt status lines and performs an interrupt service if an interrupt is present. Otherwise, the PFI instruction is treated as a NOP operation. Polling for interrupts is performed by managed code. PFI provides a means to process interrupts at specific points in running software. Rt is loaded with the cause code in the low order eight bits, and the interrupt level in bits eight to eleven of the register.

**Instruction Format: OSR2** 

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
111	<b>1</b> 7	$m_3$	Z	~2	~	<b>'</b> 6	~2	`	<b>-</b> 6	~	<b>'</b> 6	Rı	6	V	07	$h_8$

Clock Cycles: 1 (if no exception present)

#### **Operation:**


```
 \begin{split} & \text{if (irq <> 0)} \\ & \text{Rt[7:0] = cause code} \\ & \text{Rt[11:8] = irq level} \\ & \text{PMSTACK = (PMSTACK << 4) | 6} \\ & \text{CAUSE = Const}_8 \\ & \text{C6 = IP} \\ & \text{IP = tvec[3]} \end{split}
```

**Execution Units: Branch** 

# **POPQ – Pop from Queue / Stack**

## **Description**:

This instruction pops a value into Rt from the hardware queue specified in Rb. The hardware queue position <u>is</u> advanced. Unused value bits should read as zero. To check the queue status, use the STATQ instruction.

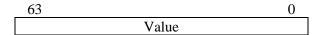

Value: the value that was pushed to the queue

**Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
09h	17	m <sub>3</sub>	Z	~2	~	<b>'</b> 6	$Tb_2$	Rl	<b>)</b> 6	~	6	Rt	6	v	07h	18

Exceptions: none

**Notes:** 

Queue #15 is the instruction trace que

# **PUSHQ – Push on Queue / Stack**

## **Description**:

This instruction pushes an N-bit value in Ra onto the hardware queue specified in Rb. Where N is implementation defined between 1 and 64 bits. To check the queue status, use the STATQ instruction.

#### **Instruction Format**: OSR2

_	47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
	08h	.7	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	07	$h_8$

# **RESETQ – Reset Queue / Stack**

## **Description**:

This instruction resets the hardware queue specified by Rb.

**Instruction Format**: OSR2

47 41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0Ch <sub>7</sub>	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	~	<b>'</b> 6	~	6	V	07h	8

## **REX – Redirect Exception**

#### **Description**:

This instruction redirects an exception from an operating mode to a lower operating mode. This instruction if successful jumps to the target exception handler and does not return. If this instruction fails execution will continue with the next instruction.

This instruction may fail if exceptions are not enabled at the target level.

The location of the target exception handler is found in the trap vector register for that operating mode (tvec[xx]).

The cause (cause) and bad address (badaddr) registers of the originating mode are copied to the corresponding registers in the target mode.

#### **Instruction Format: REX**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14 11	109	8	7	0
10h	17	$m_3$	Z	~2	~	6	~2	~	6	R	$a_6$	~4	$Tm_2$	V	07h	18

$Tm_2$	
0	redirect to user mode
1	redirect to supervisor mode
2	redirect to hypervisor mode
3	reserved

#### **Clock Cycles:** 4

**Execution Units: Branch** 

#### Example:

REX 1 ; redirect to supervisor handler

; If the redirection failed, exceptions were likely disabled at the target level.

; Continue processing so the target level may complete its operation.

RTE ; redirection failed (exceptions disabled ?)

#### Notes:

Since all exceptions are initially handled in machine mode the machine handler must check for disabled lower mode exceptions.

# **RGNRW** – **Region Read or Write**

## **Description:**

This instruction updates or reads the memory region table.

**Instruction Format:** OSR3

47	41	49 38	37	36 34	33	32 31	30	26	25 24	23	19	18	14	13	10	9	8	7	0
1Ch	17	$m_3$	Z	~3	U	~2	~	5	$Tb_2$	R	<b>b</b> <sub>5</sub>	R	$a_5$	R	.t <sub>4</sub>	0	V	07	h <sub>8</sub>

Clock Cycles: 5

U: 1= update, 0=read

Rb[5:3] select the region to access. Rb[2:0] select the field

Ra contains the value to update the region field with

Rt returns the value of the field.

Rb[2:0]	Field Selected
0	start address of region
1	end address of region
2	address of PMT table for region
3	card table address
4	accessibility

**Execution Units**: Memory

## **RTI – Return from Interrupt or Exception**

#### **Description**:

Restore the previous interrupt enable setting, operating mode, and privilege level and transfer program execution back to the address in the exception address register (one of C8 to C15). One of sixty-four semaphore registers specified by the Rb field of the instruction may also be cleared. Semaphore register zero is always cleared by this instruction.

This instruction may be encoded to return a short distance past the exception address point. This may be useful to return to the next instruction or return to a point past inline parameters. The constant<sub>6</sub> field specifies a return offset in terms of bytes.

There is only a single instruction to return from any mode for an exception. Although there are several additional mnemonics.

#### **Instruction Format: OSR2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
13h	7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	<b>'</b> 6	Con	ıst <sub>6</sub>	V	0	7h <sub>8</sub>

Flags Affected: none

#### **Operation:**

PMSTACK = PMSTACK >> 8 PLSTACK = PLSTACK >> 8 Semaphore[0] = 0 Semaphore[Rb] = 0 IP = C[7+stk\_depth] + Constant

**Execution Units**: Branch

**Clock Cycles:** 

Exceptions: none

## **SEI – Set Interrupt Level**

## **Description:**

The interrupt mask is set, disabling lower level maskable interrupts. The current interrupt mask level is stored in the target register Rt. The new interrupt mask level is set to the contents of Rb. This instruction is available only in machine mode.

#### **Instruction Format:**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
17h <sub>7</sub>		$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	$b_6$	~	<b>'</b> 6	R	t <sub>6</sub>	V	071	$h_8$

Clock Cycles: 1

**Operation:** 

 $im = Rb_{[2:0]}$ 

## STATQ – Get Status of Queue / Stack

### **Description**:

This instruction returns a queue status value into Rt from the hardware queue specified in Rb. The hardware queue position is not advanced. Unused value bits should read as zero.

63	62	61	48	47		0
Qe	Dv	Data (	Count		Extended Data (XD)	

#### Fields

Qe: empty. If set, this bit indicates that the queue/stack is empty.

Dv: data valid. If this bit is set it indicates that valid data is present at the queue.

Dc: data count: The number of items left in the queue

XD: The high order 48 bits of the data stored by the queue if the queue is wider than 64 bits.

#### **Instruction Format:** OSR2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
0B1	$h_7$	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	~	<b>'</b> 6	R	$t_6$	V	0′	7h <sub>8</sub>

## STPTG – Store to Page Table Group

## **Description**:

This instruction writes the PTG entry. Which translation entry to update is set in register Ra. The value to use comes from the value in register pair Rb, Rc which contains the virtual page number, ASID, and physical page number. The current value of the entry selected by Ra is copied to register pair Rt.

The group number for Ra comes from a hash of the virtual address and ASID.

#### **Instruction Format: OSR3**

47	41	49 38	37	36 34	33	3231	30	29	25	24	23	19	18	14	13	10	9	8	7	0
25h	17	$m_3$	Z	~3	1	0	0	Rc	5	0	R	b <sub>5</sub>	R	$a_5$	R	t <sub>4</sub>	0	V	0	7h <sub>8</sub>


**Clock Cycles: 5** 

### **Execution Units**: Memory

#### Ra Value Format

31	20	19	18	17	16	15 14	13 12	1110	8	7	6	5	4	3	2	1	0
	~16							PTG Nu	ımbe	<b>r</b> 13						EN <sub>3</sub>	;

### Rb Value Format



#### Rc Value Format

$ASID_{12}$	SCRWX	V	G	Av ~	BC <sub>4</sub>	D	U	S	Α	С	R	W	X
			Key <sub>32</sub>										
	Access Count <sub>32</sub>												
			~32										

	Meaning	
PPN	Physical page number (address bits 12 to	63)
VPN	Virtual page number high address order	bits 12 to 63
X	1 = page is executable	These three combined indicate page
W	1 = page is writeable	present (P) $0 = \text{not present}$
R	1 = page is readable	
C	1 = page is cachable	
A	Accessed, set if translation was used	
S	1 = 4MB page	
U	reserved for system usage	
D	Dirty, set if a write occurred to the page	
BC	bounce count	
~	reserved	
V	1 = translation valid (page is present)	
G	Global, global translation indicator	
SX	1 = page is executable by system	

SW	1 = page is writeable by system
SR	1 = page is readable by system
SC	1 = page is cacheable by system
ASID	ASID address space identifier

# **SYNC** -Synchronize

## **Description:**

All instructions for a particular unit before the SYNC are completed and committed to the architectural state before instructions of the unit type after the SYNC are issued. This instruction is used to ensure that the machine state is valid before subsequent instructions are executed.

#### **Instruction Format:**

15	9	8	7	0
~7		0		F7h <sub>8</sub>

## **SYS** – Call system routine

## **Description:**

This instruction invokes the system exception handler. The return address is stored in the EIP register (code address register #8 to 15). This instruction causes the core to switch to machine mode.

### **Instruction Format:**

31		17	16	9	8	7	0
	~15		Cau	se <sub>8</sub>	0		A5h <sub>8</sub>

### **Operation**:

## TLBRW - Read / Write TLB

## **Description**:

This instruction both reads and writes the TLB. Which translation entry to update and the value to use comes from the value in register pair Ra, Rb which contains the virtual page number, ASID, and physical page number. The current value of the entry selected by Ra is copied to register pair Rt. The TLB will be written only if bit 31 of Ra is set. A random way may be selected for write by setting the 'r' bit in the Ra value.

The entry number for Ra comes from virtual address bits 12 to 21.

Page numbers are in terms of a 4kB page size.

#### **Instruction Format: OSR3**

47	41	49 38	37	36 34	33	32 31	30	26	25 24	23	19	18	14	13	10	9	8	7	0
1El	h <sub>7</sub>	$m_3$	Z	~3	~	~2	~	5	~2	R	<b>b</b> <sub>5</sub>	R	$a_5$	R	t <sub>4</sub>	0	V	07ł	18

**Clock Cycles: 5** 

## **Execution Units**: Memory

#### Ra Value Format

31		20	19	18	17	16	15 14	13 12	1110	8	7	6	5	4	3	2	1	0
WR		~14				~	$AL_2$	~2	way				En	try N	O <sub>10</sub>			
	ASID <sub>12</sub>		SC	SR	SW	SX	V G	Av ~	BC	4	D	U	S	Α	С	R	W	X
							Key <sub>3</sub>											
	Access Count <sub>32</sub>																	

 $AL_2$ : update algorithm 0 =fixed, 1 =LRU, 2 =random

#### Rb Value Format

			Physical Page	Number <sub>310</sub>	
EN <sub>3</sub>	N	$PL_8$	~4	Physical Page Number <sub>4732</sub>	
			Virtual Page	Number <sub>310</sub>	
MI	36	$ME_6$	~4	Virtual Page Number <sub>47,32</sub>	•

	Meaning	
PPN	Physical page number (address bits 12 to	63)
VPN	Virtual page number high address order l	bits 12 to 63
X	1 = page is executable	These three combined indicate page
W	1 = page is writeable	present (P) $0 = \text{not present}$
R	1 = page is readable	
С	1 = page is cachable	
A	Accessed, set if translation was used	
S	1 = 4MB page	
U	reserved for system usage	
D	Dirty, set if a write occurred to the page	
BC	bounce count	
~	reserved	
V	1 = translation valid (page is present)	
G	Global, global translation indicator	
SX	1 = page is executable by system	
SW	1 = page is writeable by system	
SR	1 = page is readable by system	

SC	1 = page is cacheable by system
ASID	ASID address space identifier

Exceptions: none

# **WAIT – Wait for Signal**

## **Description**:

The WAIT instruction waits for a signal to occur before proceeding.

**Instruction Format: WAIT** 

15	11	10	9	8	7	0
~	5	D	0	0	F	$Ah_8$

**Clock Cycles**: 1 (if no exception present)

**Execution Units: Branch** 

# WFI – Wait for Interrupt

## **Description**:

The WFI instruction waits for an external interrupt to occur before proceeding. While waiting for the interrupt, the processor clock is stopped placing the processor in a lower power mode.

**Instruction Format: WAIT** 

	15	10	9	8	7	0
Ī	$0_{6}$		1	0	F.	$Ah_8$

**Clock Cycles**: 1 (if no exception present)

**Execution Units:** Branch

## **Macro Instructions**

## **DEFCAT – Default Catch Handler**

## **Description**:

DEFCAT reaches into the stack frame of the calling function to get the last registered catch handler address. It then moves this value to the return address fields of the return block so that the current function will return to the catch handler in the caller. The values in registers t0 and t1 are overwritten.

### **Instruction Format**: DEFCAT

15	9	8	7	0
~7		0	F	$0h_8$

## **Operation:**

T0 = Memory[FP]

T1 = Memory32[T0]

Memory16[FP] = T1

T1 = Memory40[T0]

Memory32[FP] = T1

## **ENTER – Enter Routine**

#### **Description**:

This instruction is used for subroutine linkage at entrance into a subroutine. First it pushes the frame pointer and return address onto the stack, next the stack pointer is loaded into the frame pointer, and finally the stack space is allocated. This instruction is code dense, replacing eight other instructions with a single instruction.

A maximum of 8MB may be allocated on the stack. An immediate prefix may not be used with this instruction. The stack and frame pointers are assumed to be r63 and r62 respectively.

Note that the constant must be a negative number and a multiple of sixteen.

Note that the instruction reserves room for two words in addition to the return address and frame pointer. One use for the extra words may to store exception handling information.

Note this instruction uses T0 as a temporary register.

#### **Integer Instruction Format: RI**

_	31	9	8	7	0
	Constant <sub>23</sub>		0	Al	Fh <sub>8</sub>

### **Operation:**

SP = SP - 64

Memory[SP] = FP

T0 = CA1

Memory16[SP] = T0

Memory32[SP] = 0

P] = 0 ; zero out catch handler address

Memory 48[SP] = 0

FP = SP

SP = SP + constant

## **LEAVE – Leave Routine**

### **Description**:

This instruction is used for subroutine linkage at exit from a subroutine. First it moves the frame pointer to the stack pointer deallocating any stack memory allocations. Next the frame pointer and return address are popped off the stack. The stack pointer is adjusted by the amount specified in the instruction. Then a jump is made to the return address. This instruction is code dense, replacing six other instructions with a single instruction. The stack pointer adjustment is multiplied by sixteen keeping the stack pointer word aligned. A three-bit constant multiplied by two is added to the link register to form the return address. This allows returning up to 16 bytes past the normal return address.

#### **Instruction Format**: LEAVE

31		13	12 9	8	7	0
	Constant <sub>19</sub>		Cnst <sub>4</sub>	0	BI	Fh <sub>8</sub>

### **Operation:**

SP = FP FP = Memory[SP] T0 = Memory16[SP] CA1 = T0  $SP = SP + 64 + Constant_{20} * 16$   $IP = CA1 + Cnst_3 * 2$ 

## **POP – Pop Register from Stack**

## **Description**:

This instruction pops a register from the stack.

#### **Instruction Format: POP**

15	14	9	8	7	0
0	Ra	$\mathfrak{d}_6$	0	В	Ch <sub>8</sub>

#### **Operation:**

Ra = Memory[SP]SP = SP + 8

# **POP – Pop Registers from Stack**

## **Description**:

This instruction pops up to four registers from the stack. The number of registers to pop is specified in the N field of the instruction.

## **Instruction Format**: POP3R

31 29	28	24	23	19	18	14	13	9	8	7	0
$N_3$	R	$d_2$	R	C <sub>5</sub>	R	<b>b</b> 5	Ra	a <sub>5</sub>	0	BI	Ξh <sub>8</sub>

## **Operation:**

if (N > 0) Ra = Memory[SP]

if (N > 1) Rb = Memory16[SP]

if (N > 2) Rc = Memory32[SP]

if (N > 3) Rd = Memory48[SP]

SP = SP + N\*16

# **PUSH – Push Register on Stack**

## **Description**:

This instruction pushes a register onto a stack.

**Instruction Format**: PUSH

15	14	9	8	7	0
0	Ra	6	0	A	Ch <sub>8</sub>

## **Operation:**

$$SP = SP - 8$$
  
Memory[SP] = Ra

# **PUSH – Push Registers on Stack**

## **Description**:

This instruction pushes up to four registers onto a stack. The number of registers to push is specified in the N field of the instruction.

## **Instruction Format**: PUSH

31 29	28	24	23	19	18	14	13	9	8	7	0
$N_3$	Ro	$d_5$	R	C <sub>5</sub>	R	<b>b</b> 5	Ra	a <sub>5</sub>	0	A)	Eh <sub>8</sub>

## **Operation:**

$$SP = SP - N * 16$$

if (N > 3) Memory<sub>16</sub>[SP+(N-4)\*16] = Rd

if (N > 2) Memory<sub>16</sub>[SP+(N-3)\*16] = Rc

if (N > 1) Memory<sub>16</sub>[SP+(N-2)\*16] = Rb

if (N > 0) Memory<sub>16</sub>[SP+(N-1)\*16] = Ra

# **Vector Specific Instructions**

## **V2BITS**

## **Description**

Convert Boolean vector to bits. A bit specified by Rb of each vector element is copied to the bit corresponding to the vector element in the target register. The target register is a scalar register. Usually, Rb would be zero so that the least significant bit of the vector is copied.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3	Dh <sub>7</sub>	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02	$2h_8$

## Operation

```
For x = 0 to VL-1

if (Vm[x])

Rt.bit[x] = Ra[x].bit[Rb]

else if (z)

Rt.bit[x] = 0

else

Rt.bit[x] = Rt.bit[x]
```

# **VBITS2V**

## **Description**

This is an alternate mnemonic for the  $\underline{CMOVNZ}$  instruction where Rb=1 and Rc=0. The effect is to generate a Boolean vector from the contents of register Ra.

## **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
2Dh	17	$m_3$	Z	22	0	6	22	1	6	R	$a_6$	Rı	t <sub>6</sub>	V	021	$h_8$

## Operation

For 
$$x = 0$$
 to VL-1 
$$if (Vm[x]) \ Vt[x] = Ra.bit[x] \ ? \ 1 : 0$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **VGIDX** – Generate Index

## **Description**

A value in a register Ra is multiplied by the element number and added to a value in Rb and copied to elements of vector register Vt guided by a vector mask register. Ra is a scalar register. This operation may be used to compute memory addresses for a subsequent vector load or store operation. Only the low order 24-bits of Ra are involved in the multiply. The result of the multiply is a product less than 41 bits in size. The multiply is a fast 24x16 bit multiply.

#### **Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3Ch	17	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	$t_6$	v	02	2h <sub>8</sub>

### **Operation**

$$y = 0$$
  
for  $x = 0$  to  $VL - 1$   
if  $(Vm[x])$   
$$Vt[y] = Ra * y + Rb$$
$$y = y + 1$$

## **VCMPRSS** – Compress Vector

## **Description**

Selected elements from vector register Va are copied to elements of vector register Vt guided by a vector mask register.

### **Instruction Format: R1**

31 25	24 22	21	20	15	14	9	8	7	0
2Ch <sub>7</sub>	m <sub>3</sub>	Z	Ra	$\mathfrak{d}_6$	R	t <sub>6</sub>	1	01	h <sub>8</sub>

### **Operation**

$$y = 0$$
 for  $x = 0$  to  $VL - 1$  
$$if (Vm[x])$$
 
$$Vt[y] = Va[x]$$
 
$$y = y + 1$$

## **VEINS / VMOVSV – Vector Element Insert**

## **Synopsis**

Vector element insert.

## **Description**

A general-purpose register Rb is transferred into one element of a vector register Vt. The element to insert is identified by Ra.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3Bh	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

## **Operation**

$$Vt[Ra] = Rb$$

## **VEX / VMOVS – Vector Element Extract**

## **Synopsis**

Vector element extract.

## **Description**

A vector register element from Vb is transferred into a general-purpose register Rt. The element to extract is identified by Ra. Ra and Rt are scalar registers.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
3Ah	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	R	6	V	0	2h <sub>8</sub>

## **Operation**

Rt = Vb[Ra]

Exceptions: none

# **MFLC – Move from Loop Counter**

### **Description**

Move loop counter register to a general-purpose register.

### **Instruction Format: R1**

31	27	26	18	17 15	14		9	8	7	0
15	h <sub>5</sub>		<b>~</b> 9	~3		Rt <sub>6</sub>		0	52	$h_8$

## Operation

Rt = VL

## MFVM – Move from Vector Mask

## **Description**

Move a mask register to a general-purpose register.

**Instruction Format: VMR2** 

31	27	26	18	17 15	14	9	8	7	0
11	h <sub>5</sub>		~9	$Vmb_3$	$Rt_6$		0	52h	8

## Operation

Rt = Vmb

**Execution Units:** ALUs

## MFVL – Move from Vector Length

### **Description**

Move vector length register to a general-purpose register.

**Instruction Format: R1** 

31	27	26	18	17 15	14	9	8	7	0
13	h <sub>5</sub>		~9	~3		Rt <sub>6</sub>	0	52	$2h_8$

### **Operation**

Rt = VL

**Execution Units:** ALUs

## MTVM - Move to Vector Mask

## **Description**

Move a general-purpose register to a mask register.

**Instruction Format: VMR2** 

31	27	26	21	20	15	14 12	11	9	8	7	0
10	h <sub>5</sub>	~	6	R	$a_6$	~3	Vn	nt <sub>3</sub>	0	52	2h <sub>8</sub>

## Operation

Vmt = Ra

# MTLC – Move to Loop Counter

## Description

Move a general-purpose register to the vector length register.

## **Instruction Format: VMR2**

31	27	26	21	20	15	14 12	11	9	8	7	0
14	h <sub>5</sub>	~	<b>'</b> 6	Ra	$\mathfrak{l}_6$	~3	~	3	0	52	$2h_8$

## Operation

$$VL = Ra$$

# MTVL – Move to Vector Length

## Description

Move a general-purpose register to the vector length register.

## **Instruction Format: VMR2**

31	27	26	21	20	15	14 12	11	9	8	7	0
12	h <sub>5</sub>	~	6	Ra	$a_6$	~3	~	3	0	5	2h <sub>8</sub>

## Operation

$$VL = Ra$$

## VMADD - Vector Mask Add

### **Description:**

Add the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14 12	11 9	8	7 0
04	$h_5$		<b>~</b> 9		$Vmb_3$	Vma <sub>3</sub>	$Vmt_3$	0	52h <sub>8</sub>
1 c	lock	cycle							

Exceptions: none

## VMAND - Vector Mask And

### **Description:**

Bitwise 'and' the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14 12	11 9	8	7	0
08	$h_5$		<b>~</b> 9		$Vmb_3$	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>	
1 (	clock	сус	le							

Exceptions: none

# **VMCNTPOP – Count Population**

CNTPOP r1,vm2

**Description:** 

Count the number of ones and place the count in the target register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14	9	8	7	0
0D	h <sub>5</sub>		~9		Vmb <sub>3</sub>	Rt <sub>6</sub>		0	52	2h <sub>8</sub>


**Execution Units: integer** ALU

## VMFILL - Vector Mask Fill

## **Description:**

Fill the contents of a vector mask register with a mask of ones beginning at  $Mb_6$  and ending at  $Me_6$  inclusive. Fill the remainder of the register with zeros.

#### **Instruction Format:**

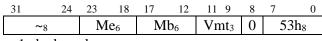

1 clock cycle

**Exceptions:** none

## VMFIRST – Find First Set Bit

## Description

The position of the first bit set in the mask register is copied to the target register. If no bits are set the value is 65536. The search begins at the least significant bit and proceeds to the most significant bit.

#### **Instruction Format: R1**

31	27	26	18	17 15	14	9	8	7	0
0E	h <sub>5</sub>		~9	$Vmb_3$	$Rt_6$		0	521	$h_8$

## Operation

Rt = first set bit number of (Vm)

Exceptions: none

# VMLAST – Find Last Set Bit

## **Description**

The position of the last bit set in the mask register is copied to the target register. If no bits are set the value is 65536. The search begins at the most significant bit of the mask register and proceeds to the least significant bit.

## **Instruction Format: VMR2**

31	27	26	18	17 15	14	9	8	7	0
0F	h <sub>5</sub>		~9	Vmb <sub>3</sub>		$Rt_6$	0	52	$h_8$

## Operation

Rt = last set bit number of (Vm)

Exceptions: none

## VMOR - Vector Mask Or

## **Description:**

Bitwise 'or' the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

31	27	26		18	17 15	14 12	11 9	8	7	0
09h <sub>5</sub>			<b>~</b> 9		Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52	2h <sub>8</sub>

1 clock cycle

Exceptions: none

# VMSLL – Vector Mask Shift Left Logical

## **Description:**

Shift a vector mask register to the left up to 63 bits.

**Instruction Format: VMR2** 

31	27	26	21	20 13	1112	11 9	8	7 0
1Ch <sub>5</sub>			<b>~</b> <sub>6</sub>	Amount <sub>6</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>
- 1	1 1		1					

1 clock cycle

Exceptions: none

## VMSRL – Vector Mask Shift Right Logical

### **Description:**

Shift a vector mask register to the right up to 63 bits.

**Instruction Format: VMR2** 

31 27	26 21	20	15	14 12	11 9	8	7	0
1Eh <sub>5</sub>	~6	Am	ount <sub>6</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52	2h <sub>8</sub>

1 clock cycle

## VMSUB – Vector Mask Subtract

## **Description:**

Subtract the contents of two vector mask registers and place the result in a vector mask register.

#### **Instruction Format: VMR2**

31	27	26	18	17 15	14 12	11 9	8	7	0
05h <sub>5</sub>		^	9	Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	521	$1_8$
1 (	clock	cycl	e						

Exceptions: none

## VMXOR - Vector Mask Exclusive Or

## **Description:**

Bitwise 'or' the contents of two vector mask registers and place the result in a vector mask register.

### **Instruction Format: VMR2**

31	27	26	18	17 15	14 12	11 9	8	7	0					
0.2	0Ah <sub>5</sub>		<b>~</b> 9	$Vmb_3$	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h	18					
1 (	1 clock cycle													

# **VSCAN**

## Description

Elements of Vt are set to the cumulative sum of a value in register Ra. The summation is guided by a vector mask register.

## **Instruction Format:** R1

31 25	24 22	21	20 15	14 9	8	7 0
1Eh <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	$Vt_6$	1	01h <sub>8</sub>

## Operation

$$sum = 0$$
 for  $x = 0$  to  $VL - 1$  
$$Vt[x] = sum$$
 
$$if (Vm[x])$$
 
$$sum = sum + Ra$$

# **VSLLV – Shift Vector Left Logical**

## **Description**

Elements of the vector are transferred upwards to the next element position. The first is loaded with the value zero. This is also called a slide operation.

### **Instruction Format:** R3

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
38h	17	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	RI	b <sub>6</sub>	R	$a_6$	Rt	t <sub>6</sub>	V	02	$2h_8$

## Operation

$$Amt = Rb$$

For 
$$x = VL-1$$
 to Amt

$$Vt[x] = Va[x-amt]$$

For 
$$x = Amt-1$$
 to 0

$$Vt[x] = 0$$

# **VSRLV – Shift Vector Right Logical**

## **Description**

Elements of the vector are transferred downwards to the next element position. The last is loaded with the value zero. This is also called a slide operation.

### **Instruction Format:** R3

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
39h	7	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	$t_6$	v	02	2h <sub>8</sub>

## Operation

$$Amt = Rb$$

For 
$$x = 0$$
 to VL-Amt

$$Vt[x] = Va[x+amt]$$

For 
$$x = VL-Amt + 1$$
 to  $VL-1$ 

$$Vt[x] = 0$$

## Cryptographic Accelerator Instructions

# **AES64DS – Final Round Decryption**

### **Description**:

Perform the final round of decryption for the AES standard. Registers Rb, Ra represent the entire AES state.

### **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
50h	7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	Rl	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	0	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

**Exceptions:** none

# **AES64DSM – Middle Round Decryption**

## **Description**:

Perform a middle round of decryption for the AES standard. Registers Rb, Ra represent the entire AES state.

#### **Integer Instruction Format: R3**

	47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
51h <sub>7</sub>		17	$m_3$	Z	~2	`	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

# **AES64ES – Final Round Encryption**

### **Description**:

Perform the final round of encryption for the AES standard. Registers Rb, Ra represent the entire AES state.

## **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
52h	17	$m_3$	Z	~2	~	<b>'</b> 6	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

Exceptions: none

# **AES64ESM – Middle Round Encryption**

### **Description**:

Perform a middle round of encryption for the AES standard. Registers Rb, Ra represent the entire AES state.

## **Integer Instruction Format: R3**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
53h	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	Rl	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	$h_8$

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

Rt = Ra & Rb

## SHA256SIG0

### **Description:**

Implements the Sigma0 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format:** R1

31	27	24 22	21	20	15	14	9	8	7	0
30h <sub>7</sub>		$m_3$	Z	R	$a_6$	Rı	t <sub>6</sub>	V	0	1h <sub>8</sub>

**Clock Cycles: 1** 

### **Operation:**

 $Rt = sign \ extend(ror32(Ra,7) \land ror32(Ra,18) \land (Ra_{32} >> 3))$ 

**Execution Units:** ALU #0

Exceptions: none

## **SHA256SIG1**

### **Description:**

Implements the Sigma1 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

### **Instruction Format:** R1

31		24 22					-			0
31	$h_7$	$m_3$	Z	R	$a_6$	Ri	t <sub>6</sub>	V	0	$1h_8$

Clock Cycles: 1

### **Operation:**

 $Rt = sign extend(ror32(Ra,17) \land ror32(Ra,19) \land (Ra_{32} >> 10))$ 

**Execution Units:** ALU #0

## SHA256SUM0

### **Description:**

Implements the Sum0 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format: R1**

31	25	24 22	21	20	15	14	9	8	7	0
32	32h <sub>7</sub>		Z	R	$a_6$	R	t <sub>6</sub>	v	0	1h <sub>8</sub>

### **Operation:**

 $Rt = sign extend(ror32(Ra,2) \land ror32(Ra,13) \land ror32(Ra,22))$ 

**Execution Units:** ALU #0

Exceptions: none

## SHA256SUM1

### **Description:**

Implements the Sum1 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

### **Instruction Format: R1**

31		24 22						8	7	0
33h	17	$m_3$	Z	R	$a_6$	Rt	t <sub>6</sub>	V	0	$1h_8$

## Operation:

 $Rt = sign extend(ror32(Ra,6) \land ror32(Ra,11) \land ror32(Ra,25))$ 

**Execution Units:** ALU #0

## SHA512SIG0

## **Description:**

Implements the Sigma0 transformation function used in the SHA2-512 hash function.

**Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
34h <sub>7</sub>		$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	V	01	$1h_8$

Clock Cycles: 1

## **Operation:**

$$Rt = ror64(Ra, 1) \land ror64(Ra, 8) \land (Ra >> 7)$$

**Execution Units:** ALU #0

Exceptions: none

## SHA512SIG1

### **Description:**

Implements the Sigma1 transformation function used in the SHA2-512 hash function.

**Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
351	h <sub>7</sub>	$m_3$	Z	R	$a_6$	Ri	6	v	0.1	lh <sub>8</sub>

Clock Cycles: 1

### **Operation:**

$$Rt = ror64(Ra, 19) \land ror64(Ra, 61) \land (Ra >> 6)$$

**Execution Units:** ALU #0

# SHA512SUM0

Description:

Instruction Format: R1

31	25	24 22	21	20	15	14	9	8	7	0
3	86h <sub>7</sub>	$m_3$	Z	R	$a_6$	R	t <sub>6</sub>	V	0	1h <sub>8</sub>

# SHA512SUM1

Description:

Instruction Format: R1

31	25	24 22	21	20	15	14	9	8	7	0
37	37h <sub>7</sub>		Z	R	$a_6$	R	t <sub>6</sub>	V	0	1h <sub>8</sub>

## **SM3P0**

Description:

Instruction Format: R1

31 25	24 22	21	20 15	14 9	8	7 0
38h <sub>7</sub>	m <sub>3</sub>	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	01h <sub>8</sub>

# SM3P1

Description:

Instruction Format: R1

31	25	24 22	21	20	15	14	9	8	7	0
39h <sub>7</sub>		$m_3$	Z	R	$a_6$	Rı	t <sub>6</sub>	V	0	$1h_8$

# **SM4ED**

## **Description:**

**Instruction Format:** R3

								28 27									
56h <sub>7</sub>		.7	$m_3$	Z	$Tc_2$	$Rc_6$		$Tb_2$	Rb <sub>6</sub>		Ra <sub>6</sub>		Rt <sub>6</sub>		V	0	2h <sub>8</sub>

# SM4KS

## **Description:**

**Instruction Format:** R3

							28 27									
57h	.7	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	Rl	<b>)</b> <sub>6</sub>	R	$a_6$	Rt	6	V	02	$2h_8$


## Neural Network Accelerator Instructions

# **Overview**

Included in the ISA are instructions for neural network acceleration. Each neuron is composed of an accumulator that sums the product of weights and inputs and an output activation function. Neurons may be biased with a bias value and may also have feedback from output to input via a feedback constant. The neurons are implemented using 16.16 fixed-point arithmetic. There are 8 neurons in a single layer which may calculate simultaneously. Following is a sketch of the NNA organization. The weights and input arrays have a depth of 1024 entries. Not all entries need be used. The number of entries in use is configurable programmatically with the base count and maximum count register using the NNA MTBC and NNA MTMC instruction.

Several of the NNA instructions allow multiple neurons to be updated at the same time by representing the neuron update list as a bitmask.

## Neural Network Accelerator – One Neuron

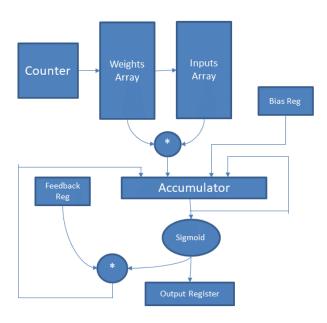

# **NNA\_MFACT – Move from Output Activation**

#### **Description:**

Move from activation output register. Move a value from the neuron's activation register output to the target register Rt. Bits 0 to 3 of Ra specify the neuron.

**Instruction Format: R1** 

31	25	24 22	21	20	15	14	9	8	7	0
(	62h <sub>7</sub>	$m_3$	Z	R	$a_6$	Rt	t <sub>6</sub>	V	0.3	1 h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

# **NNA\_MTBC – Move to Base Count**

#### **Description:**

Move to base count register. Move the value in Ra to the base count register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the base count value.

The neuron calculates the activation output using weight and input array entries between the base count and maximum count inclusive.

Manipulating the base count and maximum count registers ease the implementation of multi-layer networks that do not require the use of all array entries.

**Instruction Format: R2** 

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
65h	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	RI	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	$2h_8$

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTBIAS - Move to Bias

#### **Description:**

Move to bias value. Move the value in Ra to the bias register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the bias value.

**Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
62h	.7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	~	6	V	0	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTFB - Move to Feedback

#### **Description:**

Move to feedback constant. Move the value in Ra to the feedback constant for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the feedback constant.

The feedback constant acts to create feedback in the neuron by multiplying the output activation level by the feedback constant and using the result as an input. If no feedback is desired then this constant should be set to zero.

#### **Instruction Format:** R2

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
63h	.7	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	Rl	$b_6$	R	$a_6$	~	6	V	0	$2h_8$

**Clock Cycles:** 1

**Execution Units: NNA** 

# NNA\_MTIN - Move to Input

#### **Description:**

Move to input array. Move the value in Ra to the input memory cell identified with Rb. Bits 0 to 15 of Rb specify the memory cell address, bits 32 to 63 of Rb are a bit mask specifying the neurons to update. Bits 0 to 15 of Rb are incremented and stored in Rt.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
61h	.7	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units: NNA** 

#### **Notes:**

Multiple neurons may have their inputs updated at the same time with the same value. All the neurons may have the same inputs but the weights for the individual neurons would be different so that a pattern may be recognized.

# NNA\_MTMC - Move to Max Count

#### **Description:**

Move to maximum count register. Move the value in Ra to the maximum count register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the maximum count value.

The maximum count is the upper limit of inputs and weights to use in the calculation of the activation function. The maximum count should not exceed the hardware table size. The table size is 1024 entries.

The neuron calculates the activation output using weight and input array entries between the base count and maximum count inclusive.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
64h	17	$m_3$	Z	~2	~	<b>'</b> 6	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	0	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

# NNA\_MTWT - Move to Weights

#### **Description:**

Move to weights array. Move the value in Ra to the weight memory cell identified with Rb. Bits 0 to 15 or Rb specify the memory cell address, bits 32 to 63 of Rb are a bit mask specifying the neurons to update. Bits 0 to 15 of Rb are incremented and stored in Rt.

#### **Instruction Format: R2**

47	41	49 38	37	36 35	34	29	28 27	26	21	20	15	14	9	8	7	0
60h	17	$m_3$	Z	~2	~	6	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	021	$h_8$

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_STAT - Get Status

#### **Description:**

This instruction gets the status of the neurons. There is a bit in Rt for each neuron. A bit will be set if the neuron is finished performing the calculation of the activation function, otherwise the bit will be clear.

**Instruction Format:** R1

31	25	24 22	21	20	15	14	9	8	7	0
611	h <sub>7</sub>	$m_3$	Z	~	6	Rt	6	V	0	1h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

# NNA\_TRIG - Trigger Calc

#### **Description:**

This instruction triggers a NNA cycle for the neurons identified in the bit mask. The bit mask is contained in register Ra.

**Instruction Format: R1** 

31	25	24 22	21	20	15	14	9	8	7	0
60	h <sub>7</sub>	$m_3$	Z	R	$a_6$	~	6	V	0	1h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# Graphics

## **Overview**

Thor has an integrated graphics engine which performs graphics operations such as line or triangle drawing. The graphics engine runs asynchronously to other operations. The interface to the graphics engine is through hardware queue #0. The queue may be updated with the <u>PUSHQ</u> instruction. The queue acts as a worklist for the graphics engine. Software pushes graphics commands onto the queue and the graphics engine pops the commands during its processing.

Value for Ra

63 56	55		40	39	0
Graphics		~		Update Value	
Register					
Number					

### **Co-ordinates**

Co-ordinates are specified as 16.16 fixed point numbers.

31	16	15		0
coord.	whole		coord.fract	

### **Colors**

Colors are represented using ZRGB8888 format. Colors are placed in the low order 32-bits of a register.

31	24	23	16	15	8	7	0
Z-01	der	B1	ue	Gre	een	1	Red

# **Register Set**

Graphics registers are 40 bits wide. Some registers are infrequently updated such as the target base address or font table address registers.

Reg no		Comment
0	Control Register	
1		
2	Alpha	
3	Transparent Color	
4	Target Base address (selector)	
5	Target Size X	See Target Coordinate registers
6	Target Size Y	

7	Texture Base Address (selector)	
8	Texture Size X	
9	Texture Size Y	
10	Source Pixel #0 X	
11	Source Pixel #0 Y	
12	Source Pixel #1 X	
13	Source Pixel #1 Y	
14	Destination Pixel X	
15	Destination Pixel Y	
16	Destination Pixel Z	
17	Transform Coefficient AA	
18	Transform Coefficient AB	
19	Transform Coefficient AC	
20	Transform Coefficient AT	
21	Transform Coefficient BA	
22	Transform Coefficient BB	
23	Transform Coefficient BC	
24	Transform Coefficient BT	
25	Transform Coefficient CA	
26	Transform Coefficient CB	
27	Transform Coefficient CC	
28	Transform Coefficient CT	
29	Clip Pixel #0 X	Defines a clipping region
30	Clip Pixel #0 Y	
31	Clip Pixel #1 X	
32	Clip Pixel #1 Y	
33	Color #0	Only color #0 is used unless
34	Color #1	interpolating colors
35	Color #2	
36	U0	
37	V0	
38	U1	
39	V1	
40	U2	
41	V2	
42	Z-Buffer Base Address (selector)	
43		
44	Target X0	Defines the drawing area
45	Target Y0	
46	Target X1	
47	Target Y1	
48	Font Table Base Address (selector)	
49	Font ID	
50	Character Code	
51 to 63	reserved	

### CTRL – Reg #0

Bits moved and added for color depth.

Bit #	Access	Description
[39:32]	~	reserved
[31:30]	W	Bitset operation
[29:24]	~	Reserved
[23:20]	RW	Color Depth
[19]	W	Transform point
[18]	W	Forward point
[17:16]	RW	Active point
[15:14]	~	Reserved
[13]	W	Bézier inside shape
[12]	W	Interpolation
[11]	W	Curve write
[10]	W	Triangle write
[9]	W	Line write
[8]	W	Rect write
[7]	W	Point write
[6]	RW	Z-buffer enable
[5]	RW	Clipping enable
[4]	RW	Transparent Color enable
[3]	RW	Blending enable
[2]	RW	Texture0 enable
[1]	~	Reserved
[0]	W	Char write

Bits 0, 8, 9, 10, 18, and 19 automatically reset to zero.

Opcode	Operation						
copy bits 0 to 29 to register							
01	no operation, register unaffected						
10	clear specified bits of register						
11	set specified bits of register						

Color depth is the number of bits per color component -1.

Mode	<b>Color Depth</b>	Z,R,G,B	Pixels Per Strip
0000	4 bit	1,1,1,1	32
0001	8 bit	2,2,2,2	16
0010	12 bit	3,3,3,3	10
0011	16 bit	4,4,4,4	8
0100	20 bit	5,5,5,5	6
0101	24 bit	6,6,6,6	5
0110	28 bit	7,7,7,7	4
0111	32 bit	8,8,8,8	4
1000	36 bit	9,9,9,9	3
1001	40 bit	10,10,10,10	3

#### Alpha – reg #2

This register contains alpha values for global and point 0,1,2 alphas. 0xFF is full opacity, 0x00 is full transparency. The point alpha values are used to compute an interpolated alpha value from each point of a triangle. The interpolated alpha value is then multiplied by the global alpha value.

Bits	
0 to 7	Global Alpha
8 to 15	Point #2 alpha
16 to 23	Point #1 alpha
24 to 31	Point #0 alpha

#### Transparent Color – reg #3

Pixels colored matching the transparent color will not be drawn if the transparent color is enabled by bot4 of the control register.

#### Target Base Address – reg #4

This register contains the 32-bit selector identifying where in memory the graphics drawing target is located.

#### Texture Base Address – reg #7

This register contains the 32-bit selector identifying where in memory a texture is located.

#### Texture Size X, Y - reg #8, 9

This pair of registers defines the size of the texture area.

#### Source Pixel 0, 1 reg #10 to 13

These four registers define an area of the texture to draw from.

#### Destination Pixel X, Y, Z reg #14 to 16

This trio of registers contain the coordinates of the destination point. These registers are used in conjunction with the active point field of the control register. Three destination points are required to draw a triangle. Points are pushed into the graphics pipeline by setting the forward or transform bits of the control register.

#### Transform Coefficient reg #17 to 28

These registers are used to set the coefficients for a transformation matrix used to translate or rotate points.

#### Clip Region reg #29 to 32

These registers define a clipping region outside of which points will be discarded.

#### Color 0,1,2 reg #33 to 35

The number of bits used in the register depends on the color depth.

#### U0 to 2, V0 to 2 reg #36 to 41

These are texture coordinates.

#### Z-Buffer Base reg #42

This register contains a selector for the base address of the z-buffer.

### Target Area reg #44 to 47

This set of registers defines the target area.

#### Font Table Base Address reg #48

This register contains the selector for the base address of the font table.

#### Font ID reg #49

Contains an identifier for the currently selected font.

### Character Code reg #50

Contains the character code to draw.

## **BLEND – Blend Colors**

#### **Description**:

This instruction blends two colors whose values are in Ra and Rb according to an alpha value in Rc. The resulting color is placed in register Rt. The alpha value is an eight-bit value assumed to be a binary fraction less than one. The color values in Ra and Rb are assumed to be RGB888 format colors. The result is a RGB888 format color. The high order eight bits of the result register are set to the high order eight bits of Ra. Note that a close approximation to 1.0 - alpha is used. Each component of the color is blended independently.

#### **Instruction Format**: R3

40 38	37	3635	34	29	28 27	26	21	20	15	14	11	8	7	0
$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	44	4h <sub>8</sub>

#### **Operation**:

$$Rt.R = (Ra.R * alpha) + (Rb.R * \sim alpha)$$

$$Rt.G = (Ra.G * alpha) + (Rb.G * \sim alpha)$$

$$Rt.B = (Ra.B * alpha) + (Rb.B * \sim alpha)$$

#### **Clock Cycles**: 2

# **CLIP – Clip Point**

#### **Description:**

The clip instruction checks that the point in Ra is within the graphics target area always and clip region if enabled. The target and clip areas must have been previously set. If the point should be clipped a one is set in Rt, otherwise Rt is set to zero.

Points are represented in 16.16 fixed-point format for each coordinate.

#### **Instruction Format:** R1

40	34	33 31	30	29		21	20	15	14	9	8	7	0
201	17	$m_3$	Z		<b>~</b> 9		R	$a_6$	Rı	6	v	0	1h <sub>8</sub>

**Clock Cycles: 2** 

GFX\_PUSH

# **PLOT – Plot Point**

### **Description:**

This instruction plots a point in the graphics target area. The point's co-ordinates are in Ra, the color to use is in Rb.

#### **Instruction Format:** R2

					28 27									0
70h	7	$m_3$	Z	~	$Tb_2$	Rl	06	R	$a_6$	Rt	6	V	02h <sub>8</sub>	

# **TRANSFORM – Transform Point**

### **Description:**

The point transform instruction transforms a point from one location to another using a transform function. The transform function has 12 co-efficients in the form of a matrix to used in the calculation.

Points are represented in 16.16 fixed-point format.

#### **Instruction Format:** R1

40 3	34	33 31	30	29	28 27	26	21	20	15	14	9	8	7	0
$11h_7$		$m_3$	Z	~	~2	~	6	R	$a_6$	R	$t_6$	V		$01h_{8}$

Clock Cycles: 2

# **RW\_COEFF – Read/Write Co-efficient**

#### **Description:**

RW\_COEFF reads and writes a coefficient value to be used for the transform matrix. Ra contains the number of the coefficient to read or write. Rb contains the new value for the coefficient. Coefficients are in 16.16 fixed point format.

#### **Instruction Format: R2**

35	29	2827	2625	24 20	19	18 14	13	12 8	7	6 0
771	h <sub>7</sub>	~2	$Tb_2$	$Rb_5$	Ta	Ra <sub>5</sub>	Tt	Rt <sub>5</sub>	v	02h <sub>7</sub>

#### **Co-efficient Matrix:**

AA	AB	AC	AT
BA	BB	BC	BT
CA	СВ	CC	CT

Regno in Ra	Coefficient Accessed
0	AA
1	AB
2	AC
3	AT
4	BA
5	BB
6	BC
7	BT
8	CA
9	СВ
10	CC
11	CT
12	CMD – bit 0, 1=transform, 0 = pass through

# Opcode Maps

# Thor2021 Root Opcode

	x0	x1	x2	х3	x4	x5	х6	x7	x8	x9	xA	хB	хC	хD	хE	xF
0x	BRK	{R1}	{R2}	{R3}	ADDI	SUBFI	MULI	{SYS}	ANDI	ORI	EORI				MULUI	{CSR}
1x	BEQZ	REP	BNEZ		JGATE	MULFI	SEQI	SNEI	SLTI	ADD	AND	SGTI	SLTUI	OR	EOR	SGTUI
2x	BRA	DBRA			BBC	BBS	BEQ	BNE	BLT	BGE	BLE	BGT	BLTU	BGEU	BLEU	BGTU
3x																
4x	DIVI	CPUID	BRA	BRA	BLEND	CHKI	EXI7	EXI23		EXI55	EXIM	CMPI	BMAP	СНК	SLT	DIVUI
5x	CMPI	MLO	{VM}	VMFIL L	CMOV NZ	BYTN DX	WYDE NDX	UTF21 NDX	SLL						MFLK	MTLK
6x	{SIMD }	{FLT1}	{FLT2}	{FLT3}	MUX	{DFLT 1}	{DFLT 2}	{DFLT 3}		{PST1}	{PST2}	{PST3}	EXI41			
7x																
8x	LDB	LDBU	LDW	LDWU	LDT	LDTU	LDO	LDOS	LLAL	LLAH	LEA	LDVO AR	LDOO	LDCTX	LDOU	LDH
9x	STB	STW	STT	STO	STOC	STOS	STOO / STH	CAS	STSET	STMO V	STCMP	STFND		STCTX		CACHE
Ax						SYS	INT	MOV			{BTFL D}	MOVS	PUSH	PUSH 2R	PUSH 3R	ENTER
Bx	LDBX	LDBU X	LDWX	LDWU X	LDTX	LDTUX	LDOX	LDOO X	LLALX	LLAHX	LEAX	LDOR X	POP	POP 2R	POP 3R	LEAVE
Cx	STBX	STWX	STTX	STOX	STOCX	STHX	STOOX					LINK	UN LINK	LDHX	LDOU X	CACHE X
Dx	CMPIL		MULIL	SLTIL	ADDIL	SUBFI L	SEQIL	SNEIL	ANDIL	ORIL	EORIL	SGTIL	SLTUI L	DIVIL	MULUI L	SGTUI L
Ex																
Fx	DEFCA T	NOP	RTS	CARR Y		{BCD}	STP	SYNC	MEMS B	MEMD B	WFI	SEI	MBNE Z			

# Thor2022 Root Opcode

	0	1	2	3	4	5	6	7
0x	0 BRK	1 {R1}	2 {R2}	3 {R3}	4 ADDI	5 SUBFI	6 MULI	7 {SYS}
	8	9	10	11	12	13	14	15
1x	ANDI 16	ORI 17	EORI 18	CMPI 19	CMP 20	SUB 21	MULUI 22	CSR 23
1X	JEQZ		JNEZ	OR	EOR	MULFI	SEQI	SNEI
	24 SLTI	25 ADD	26 AND	27 SGTI	28 SLTUI	29 SGE	30 SLTU	31 SGTUI
2x	32	33	34	35	36	37	38	39
	JMP 40	DJMP 41	JBSI 42	43	JBC 44	JBS 45	JEQ 46	JNE 47
	JLT	JGE	JLE	JGT	SEQ	SNE		SGEU
3x	48	49	50	51	52	53	54	55
	56	57	58	59	60	61	62	63
4x	64	65	66	67	68	69	70	71
	DIVI 72	CPUID 73	CHKI 74	75	BMAP	BLEND 77	EXI8 78	EXI8 79
	EXI24	EXI24	EXI40	EXI40	EXI56	EXI56	SLT	DIVUI
5x	80 EXIM	81	82 {VM}	83 VMFILL	84 CMOVNZ	85 BYTNDX	86 WYDENDX	87 TETRANDX
	88	89	90	91	92	93	94	95
6x	SLL 96	SRL 97	SRA 98	ROL 99	ROR 100	SGEIL 101	MFLK 102	MTLK 103
UX	SGEI	{FLT1}	{FLT2}	{FLT3}	MUX	{DFLT1}	{DFLT2}	{DFLT3}
	104 SLEI	105 {PST1}	106 {PST2}	107 {PST3}	108	109	110	111
7x	112	113	114	1115	116	117	118	119
	120	121	122	123	124	125	126	127
	128	129	130	131	132	133	134	135
8x	LDB	LDBU	LDW	LDWU	LDT	LDTU	LDO	LDOU
	136 LDH	137 LDHS	138 LDHP	139 LDHR	140	141	142	143
9x	144	145	146	147	148	149	150	151
<i>)</i> A	STB 152	STW 152	STT 154	STO 155	STH 156	STHS 157	STHC 158	STHP 159
	BSET	BMOV	BCMP	BFND		157		CACHE
Ax	160	161	162	163	164	165	166 INT	167
	168	169	170	171	172	173	174	175
D	STPTR 176	STPTRX 177	178	179	PUSH1 180	181	PUSH 182	ENTER 183
Bx	LDBX	LDBUX	LDWX	LDWUX	LDTX	LDTUX	LDOX	LDOUX
	184 LDHX	185	186 LDHPX	187 LDHRX	188 POP1	189	190 POP	191 LEAVE
Cx	192	193 CTWY	194	195	196	197	198	199
	STBX 200	STWX 201	STTX 202	STOX 203	STHX 204	205	STHCX 206	STHPX 207
D	208	209	210	211	212	213	214	CACHEX 215
Dx	CMPIL	SLEIL	MULIL	SLTIL	ADDIL	SUBFIL	SEQIL	SNEIL
	216 ANDIL	217 ORIL	218 EORIL	219 SGTIL	220 SLTUIL	221 DIVIL	222 MULUIL	223 SGTUIL
Ex	224	225	226	227	228	229	230	231
	232	233	234	235	236	237	SLEUIL 238	SGEUIL 239
Fx	240	241 NOP	242 RTS	243 CARRY	244	245 {BCD}	246 STP	247 SYNC
	248	249	250	251	252	253	254	255
	MEMSB	MEMDB	WFI	SEI	MBNEZ			

# $\{R1 - 0x01\}$ Integer Monadic Register Ops – Func<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	CNTLZ	CNTLO	CNTPOP		NOT		ABS	NABS
x001	SQRT			TST				
x010	PTRINC	TRANSFORM						
x011					VCMPRSS		VSCAN	
x100	CLIP							
x101	REVBIT	REVBIT.HP						PTGHASH
x110	SHA256 SIG0	SHA256 SIG1	SHA256 SUM0	SHA256 SUM1	SHA512 SIG0	SHA512 SIG1	SHA512 SUM0	SHA512 SUM1
x111	SM3P0	SM3P1						
1000								
1001								
1010	AES64IM							
1011								
1100	NNA_TRIG	NNA_STAT	NNA_MFACT					
1101								

# $\{R2 - 0x02\}$ Integer Dyadic Register Ops – Func<sub>7</sub>

-			_			1		
	000	001	010	011	100	101	110	111
0000	NAND	NOR	XNOR	ORC	ADD	SUB	MUL	
0001	AND	OR	XOR	ANDC			MULU	MULH
0010	DIV	DIVU	DIVSU		PTRDIF	MULF	MULSU	PERM
0011	DIF	CHK	BYTNDX	WYDNDX	U21NDX	MULSUH	MULUH	MYST
0100	SLT / SGT	SGE / SLE	SLTU / SGTU	SGEU / SLEU			SEQ	SNE
0101	MIN	MAX	CMP		BIT	CMOVNZ	CLMUL	CLMULH
0110	BMM.or	BMM.xor	BMM	BMM	MUX		LIN2PL	LIN2PH
0111	VSLLV	VSLRV	VEX	VEINS	VGIDX	V2BITS	VBITS2V	
1000	SLL	SRL	SRA	ROL	ROR		CRYA	CRYS
1001	SLLH	SRLH	SRAH	ROLH	RORH			
1010	AES64DS	AES64DSM	AES64ES	AES64ESM	AES64KS1I	AES64KS2	SM4ED	SM4KS
1011								
1100	NNA_MTWT	NNA_MTIN	NNA_MTBIAS	NNA_MTFB	NNA_MTMC	NNA_MTBC		
1101								
1110	PLOT	LINE						RW_COEFF
1111	AND_OR	OR_AND	ANDC_OR					

# ${R3/R4 - 0x03}$ Triadic Register Ops

	000	001	010	011	100	101	110	111
0								
1	SLLP	SLLPI			BLEND	FDP		

# {F1 - 0x61} Floating-Point Monadic Ops – Funct<sub>7</sub>

		_			_			
	000	001	010	011	100	101	110	111
x000	FMOV	FRSQRTE	FTOI	ITOF			FSIGN	FMAN
x001	FSQRT	FS2D	FS2Q	FD2Q	FSTAT		ISNAN	FINITE
x010	FTX	FCX	FEX	FDX	FRM	TRUNC	FSYNC	FRES
x011	FSIGMOID	FD2S	FQ2S	FQ2D			FCLASS	UNORD
x100	FABS	FNABS	FNEG					
x101								
x110								
x111								

# {F2-0x62} Floating-Point Dyadic Ops - Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	SCALEB		FMIN	FMAX	FADD	FSUB		
x001	FMUL	FDIV	FREM	FNXT				
x010	FCMP	FSEQ	FSLT	FSLE	FSNE	FCMPB	FSETM	
x011	CPYSGN	SGNINV	SGNAND	SGNOR	SGNXOR	SGNXNOR	FCLASS	
x100								
x101								
x110								
x111								

# {F3–0x63} Floating-Point Triadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
0	FMA	FMS	FNMA	FNMS				
1								

# {DF1 - 0x65} Decimal Floating-Point Monadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	MOV	RSQRTE	FTOI	ITOF			FSIGN	FMAN
x001	SQRT	FS2D	FS2Q	FD2Q	FSTAT		ISNAN	FINITE
x010	FTX	FCX	FEX	FDX	FRM	TRUNC	FSYNC	RES
x011	SIGMOID	FD2S	FQ2S	FQ2D			FCLASS	UNORD
x100	ABS	NABS	NEG					
x101								
x110								
x111								

# {DF2} Decimal Floating-Point Dyadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	SCALEB		DFMIN	DFMAX	DFADD	DFSUB		
x001	DFMUL	DFDIV	DFREM	DFNXT				
x010	DFCMP	DFSEQ	DFSLT	DFSLE	DFSNE	DFCMPB	DFSETM	
x011	CPYSGN	SGNINV	SGNAND	SGNOR	SGNXOR	SGNXNOR	FCLASS	
x100	DIVIDEND_ADJ	DIVISOR_ADJ	DIV_BITADJ					
x101								
x110								
x111								

# $\{VM - 0x52\}$ Vector Mask Register Ops – Func<sub>5</sub>

	000	001	010	011	100	101	110	111
00					VMADD	VMSUB		
01	VMAND	VMOR	VMXOR			VMCNTPOP	VMFIRST	VMLAST
10	MTVM	MFVM	MTVL	MFVL	MTLC	MFLC		
11					VMSLL		VMSRL	

# {OSR2} System Ops

	000	001	010	011	100	101	110	111
x000								EXEC
x001	PUSHQ	POPQ	PEEKQ	STATQ	RESETQ	POPQI	PEEKQI	STATQI
x010	REX	PFI	WAI	RTE	SETKEY		DI	SEI
x011	SETTO	GETTO	GETZL		RGNRW		TLBRW	SYNC
x100	CSAVE	CRESTORE			LDPTG	STPTG	BASE	
x101	MFSEL	MTSEL						
x110	MVCI							
x111								

### MPU Hardware

# PIT – Programmable Interval Timer

## **Overview**

Many systems have at least one timer. The timing device may be built into the cpu, but it is frequently a separate component on its own. The programmable interval timer has many potential uses in the system. It can perform several different timing operations including pulse and waveform generation, along with measurements. While it is possible to manage timing events strictly through software it is quite challenging to perform in that manner. A hardware timer comes into play for the difficult to manage timing events. A hardware timer can supply precise timing. In the test system there are two groups of four timers. Timers are often grouped together in a single component. The PIT is a 32-bit peripheral as that is all that is needed. The PIT while powerful turns out to be one of the simpler peripherals in the system.

# **System Usage**

One programmable timer component, which includes four timers, is used to generate the system time slice interrupt and timing controls for system garbage collection. The second timer component is used to aid the paged memory management unit. There is a free timing channel on the second timer component.

Each PIT is given a 4kB-byte memory range to respond to for I/O access. As is typical for I/O devices part of the address range is not decoded to conserve hardware.

PIT#1 is located at \$FFFFFF960xxx

PIT#2 is located at \$FFFFFF961xxx

## **Registers**

The PIT has 16 registers addressed as 32-bit I/O cells. It occupies 64 consecutive I/O locations. All registers are read-write except for the current counts which are read-only. The control registers all refer to a single control register which is accessible at three different addresses. Current count, max count and on time are all 32-bit accessible; all 32 bits must be read or written. The control register is byte accessible. It is possible to update only part of the control register. There is a separate byte for control information for each counter in the control register.

Regno	Access	Moniker	Purpose
00	R	CC0	Current Count
04	RW	MC0	Max count
08	RW	OT0	On Time
0C	RW	CTRL	Control
10	R	CC1	Current Count
14	RW	MC1	Max count
18	RW	OT1	On Time
1C	RW		Control – this is the same register as 0C
20	R	CC2	Current Count

24	RW	MC2	Max count
28	RW	OT2	On Time
2C	RW		Control – this is the same register as 0C
30	R	CC3	Current Count
34	RW	MC3	Max count
38	RW	OT3	On Time
3C	RW		Control – this is the same register as 0C

#### Control Register

The control register is split into four independent bytes. Each byte controls an individual timer. All four timer control bytes work in the same fashion so only one is described below. The very same control register is accessible at three different I/O locations. By locating all four timer controls in a single register it is possible to precisely synchronize timing operations.

31	24	23	16	15	8	7	0
Timer#3	Control	Timer#	2 Control	Time	er#1 Control	Time	er#0 Control

#### Timer Control Byte

Bit		Purpose
0	LD	setting this bit will load max count into current count, this bit automatically
		resets to zero.
1	CE	count enable, if 1 counting will be enabled, if 0 counting is disabled and the
		current count register holds its value. On counter underflow this bit will be
		reset to zero causing the count to halt unless auto-reload is set.
2	AR	auto-reload, if 1 the max count will automatically be reloaded into the current
		count register when it underflows.
3	XC	external clock, if 1 the counter is clocked by an external clock source. The
		external clock source must be of lower frequency than the clock supplied to
		the PIT. The PIT contains edge detectors on the external clock source and
		counting occurs on the detection of a positive edge on the clock source.
4	GE	gating enable, if 1 an external gate signal will also be required to be active
		high for the counter to count, otherwise if 0 the external gate is ignored.
		Gating the counter using the external gate may allow pulse-width
		measurement.
5 to 7	~	not used, reserved

#### **Current Count**

This register reflects the current count value for the timer. The value in this register will change by counting downwards whenever a count signal is active. The current count may be automatically reloaded at underflow if the auto reload bit (bit #2) of the control byte is set. The current count may also be force loaded to the max count by setting the load bit (bit #0) of the counter control byte.

#### Max Count

This register holds onto the maximum count for the timer. It is loaded by software and otherwise does not change. When the counter underflows the current count may be automatically reloaded from the max count register.

#### On Time

The on-time register determines the output pulse width of the timer. The timer output is low until the on-time value is reached, at which point the timer output switches high. The timer output remains high until the counter reaches zero at which point the timer output is reset back to zero. So, the on time reflects the length of time the timer output is high. The timer output is low for max count minus the on-time clock cycles.

# **Programming**

The PIT is a memory mapped i/o device. The PIT is programmed using 32-bit load and store instructions (LDT and STT). Byte loads and stores (LDB, STB) may be used for control register access. It must reside in the non-cached address space of the system.

# PIC – Programmable Interrupt Controller

## **Overview**

The programmable interrupt controller manages interrupt sources in the system and presents an interrupt signal to the cpu. If two interrupts occur at the same time the controller resolves which interrupt the cpu sees. While the CPU's interrupt input is only level sensitive the PIC may process interrupts that are either level or edge sensitive. the PIC is a 32-bit I/O device.

# **System Usage**

There is just a single interrupt controller in the system. It supports 31 different interrupt sources plus a non-maskable interrupt source.

PIC#1 is located at \$FF950xxx.

# **Priority Resolution**

Interrupts have a fixed priority relationship with interrupt #1 having the highest priority and interrupt #31 the lowest. Note that interrupt priorities are only effective when two interrupts occur at the same time.

# **Registers**

The PIC contains 40 registers spread out through a 256 byte I/O region. All registers are 32-bit and only 32-bit accessible. There are two different means to control interrupt sources. One is a set of registers that works with bit masks enabling control of multiple interrupt sources at the same time using single I/O accesses. The other is a set of control registers, one for each interrupt source, allowing control of interrupts on a source-by-source basis.

Regno	Access	Moniker	Purpose		
00	R	CAUSE	interrupt cause code for currently interrupting source		
04	RW	RE	request enable, a 1 bit indicates interrupt re		
			enabled for that interrupt, a 0 bit indicates request is disabled.	the interrupt	
08	W	ID	Disables interrupt identified by low order	rive data bits.	
0C	W	IE	enables interrupt identified by low order fi	ve data bits	
10			reserved		
14	W	RSTE	resets the edge-sense circuit for edge sensi	tive interrupts, 1	
			bit for each interrupt source. This register	nas no effect on	
			level sensitive sources. This register autom	natically resets to	
			zero.		
18	W	TRIG	software trigger of the interrupt specified by the low order		
			five data bits.		
20	W	ESL	The low bit for edge sensitivity selection. ESL and ESH		
			combine to form a two bit select of the edg	ge sensitivity.	
			ESH,EHL Sensitivity		
			00 level sensitive interrupt		
			01 positive edge sensitive		

			10 negative edge sensitive		
			11 either edge sensitive		
24	W	ESH	The high bit for edge sensitivity selection		
80	RW	CTRL0	control register for interrupt #0		
84	RW	CTRL1	control register for interrupt #1		
		•••			
FC	RW	CTRL31	control register for interrupt #31		

# **Control Register**

All the control registers are identical for all interrupt sources, so only the first control register is described here.

Bits		
0 to 7	CAUSE	The cause code associated with the interrupt; this register is copied to the
		cause register when the interrupt is selected.
8 to 11	IRQ	This register determines which signal lines of the cpu are activated for
		the interrupt.
12	IE	This is the interrupt enable bit, 1 enables the interrupt, 0 disables it. This
		is the same bit reflected in the IE register.
13,14	ES	This bit controls edge sensitivity for the interrupt $00 = \text{level}$ , $01 = \text{pos}$ .
		edge sensitive, $10 = \text{neg.}$ edge sensitive. $11 = \text{either edge sensitive.}$
		These same bits are present in the ESL, ESH registers.
15 to 31		reserved

# UART – Universal Asynchronous Receiver / Transmitter

### Overview

A UART component (Universal Asynchronous Transmitter / Receiver) is used for the asynchronous transmission and reception of data. Asynchronous referring to the lack of a clock signal during transmission or reception.

uart6551 is a WDC6551 register compatible uart. The uart is a 32-bit peripheral device. It may be used as an eight-bit peripheral by connecting the high order 24-bit data input lines to ground, and grounding select lines one to three.

Baud rate is controlled by clock divider which assumes a 200MHz baud reference clock input. If a different clock frequency is used, then the divider table will need to be updated. The baud rate may also be controlled via a clock divider register. This register is 24 bits so gives a minimum frequency of 11.92 Hz assuming a 200MHz clock. (200MHz / 2^24).

# **Special Features**

- WDC6551 register compatibility

# **System Usage**

The uart is located at \$FF930xxx

## **Registers**

There are only four registers in the design. The function of the low order eight bits of the registers matches the 6551 function. The controller honors byte lane selects so only the portion of the register selected is written.

Reg	Moniker	Description	
00	UART_TRB	Transmit and receive buffer. Data written is transmitted, on a read	
		data available is read. Also reads / writes the clock multiplier if	
		access to clock multiplier is enabled.	
04	UART_STAT	Status Register. Returns status bits on a read, a write of any value	
		will cause a reset of some of the command register bits	
08	UART_CMD	Command register	
0C	UART_CTRL	Control register	

#### UART\_TRB

This register is 32-bits wide of which only the lower eight bits are used to transmit or receive data by the uart. Data written to the register is transmitted. A register read returns data received by the uart. When the fifo's are enabled writing to this register writes to the transmit fifo. Reading this register reads the receive fifo. If clock divider access is enabled (via control register bit 31) then this register allows modifying or reading the clock divider value. Writing a clock divider value to this register automatically switches the function back to transmit / receive.

### UART\_STAT

Uart status register. Writing any value to the status register resets some of the uart's command bits.

Bit	Status	
0	Parity Error	1 = parity error occurred, 0 = no error
1	Framing Error	1 = framing error
2	Overrun	1 = overrun
3	Rx Full	1 = receiver data available
4	Tx Empty	1 = open slot in transmit fifo
5	DCD	0 = data carrier present
6	DSR	0 = data set ready
7	IRQ	1 = irq occurred
	Additional Line Statu	s Byte
8	reserved	
9	reserved	
10	reserved	
11	reserved	
12	Break received	1 if a break signal is received
13	Tx Full	1 = transmit fifo full
14	reserved	
15	G Rcv Err	1 = global receiver error (set if any error status is set)
	Additional Modem St	
16	CTS	1 = CTS line changed state
17	DSR	1 = DSR line changed state
18	RI	1 = RI line changed state
19	DCD	1 = DCD line changed state
20	CTS	CTS state
21	reserved	
22	RI	RI state
23	reserved	
	IRQ Status	
24,25	zero	these two bits are zero
26 to 28	IRQENC	encoded irq value (0 to 7)
29 to 30	reserved	
31	irq	IRQ is set

### UART\_CMD

Bit		
0	DTR	output $1 = low$ , $0 = high$
1	RxIe	receiver interrupt enable 0 = enabled, 1 = disabled
2,3	RTS Control	
	00	output RTS high
	01	output RTS low, enable transmit interrupt
	10	output RTS low,
	11	output RTS low, send a break signal
4	LLB	1 = local loopback (receiver echo)
5 to 7	Parity Control	

	000	no parity
	001	odd parity
	011	even parity
	101	transmit mark parity (parity error disabled)
	111	transmit space parity (parity error disabled)
8	LSIe	line status change interrupt enable 1 = enabled
9	MSIe	modem status change interrupt enable 1 = enabled
10	RxToIe	receiver timeout interrupt enable 1 = enabled
11 to 31	reserved	

#### UART\_CTRL

I_CIRL		
Bit		
0 to 3	Baud Rate	
	0000 Use 16x external clock	This table is expanded using an extra control
	0001 50	bit #27.
	0010   75	
	0011 109.92	
	0100   134.58	
	0101 150	
	0110   300	
	0111 600	
	1000   1200	
	1001 1800	
	1010 2400	
	1011 3600	
	1100 4800	
	1101 7200	
	1110 9600	
	1111 19200	
4	Rx clock source	1 = external, $0 = $ baud rate generator
5,6	Word length	code for word length in bits
	00 8	
	01 7	
	10 6	
	11 5	
7	Stop Bit	
	0 1	
	1 1 if 8 bits and parity	
	1 1.5 if 5 bits and no parity 1 2 otherwise	
	1 2 other wise	
8 to 15	reserved	do not use
16	Fifo enable	1 = fifo's enabled
17	Rx Fifo Clear	1 = clear receiver fifo
18	Tx Fifo Clear	1 = clear transmit fifo
19	reserved	
20,21	Transmit Threshold	Threshold for DMA signal activation
	0 1 byte	If the transit fifo count is less than the
		threshold then a DMA transfer is triggered.

22, 23	1	Threshold for DMA signal activation. If the receive fifo count is greater than the threshold then a DMA transfer is triggered.
24	hwfc	1 = automatic hardware flow control
25	reserved	
26	dmaEnable	1 = dma enabled
27	Baud Rate bit 4  10000   38400  10001   57600  10010   115200  10011   230600  10100   460800  10101   921600  10110   reserved  10111   reserved  11xxx   reserved	Extended baud rate selection bit, used in combination with bits 0 to 3.
28,29	reserved	
30	selDV	1 = use clock divider register, 0 = use baud table
31	accessDV	1 = access clock divider via TRB register, 0 = normal TRB operation

Selecting the clock divider register as the baud source allows any programmable baud rate.

# ToolSet

# Compiler

The compiler currently available for Thor is the cc64 compiler. cc64 is a derivative of 'C' with a number of language extensions. Please see the cc64 language document for more information.

### Assembler

### **Overview**

The author has developed a backend for the excellent assembler, vasm which was developed by Volker Barthelmann. Please see the documentation for the assembler for more information. Contained in this document are features relevant to Thor.

Vasm is a flexible and powerful macro assembler. The backend is flexible in its recognition of mnemonics. There are many alternate mnemonics to the standard set that are recognized allowing the programmer some freedom in specifying operations.

# **Recognized Mnemonics**

# **Register Names**

The assembler will recognize the general-purpose registers either by their ABI usage names or by the name 'rn' as in 'r0', 'r1', 'r2' and so on. General-purpose registers given specific usages in the ABI may also be referenced by that set of names. For instance, the first argument register may be referenced as 'a0' which is also 'r1'. The names of the registers recognized by the assembler are shown in the table below.

Alternate	N	ame
-----------	---	-----

a0
a1
t0 to t9
s0 to s9
a2 to a9
gp2 (rodata)
gp1 (bss)
gp / gp0 (data)
fp
sp

CA0	
CA1	LK1
CA2	LK2
CA3	
CA4	
CA5	
CA6	
CA7	IP
CA8 to CA15	

ZS	
DS	
ES	
FS	

GS	
HS	
SS	
CS	
PTA	
LDT	
KYT	
TCB	

DBAD0	address #0	
DBAD1	address #1	
DBAD2	address #2	
DBAD3	address #3	
DBCTRL	Debug Control	
DBSTAT	Debug Status	

# Linker

The linker in use is vlink 'out of the box'.

# Glossary

### **AMO**

AMO stands for atomic memory operation. An atomic memory operation typically reads then writes to memory in a fashion that may not be interrupted by another processor. Some examples of AMO operations are swap, add, and, and or.

### Assembler

A program that translates mnemonics and operands into machine code OR a low-level language used by programmers to conveniently translate programs into machine code. Compilers are often capable of generating assembler code as an output.

### **ATC**

ATC stands for address translation cache. This buffer is used to cache address translations for fast memory access in a system with an mmu capable of performing address translations. The address translation cache is more commonly known as the TLB.

### **Base Pointer**

An alternate term for frame pointer.

### **Burst Access**

A burst access is several bus accesses that occur rapidly in a row in a known sequence. If hardware supports burst access the cycle time for access to the device is drastically reduced. For instance, dynamic RAM memory access is fast for sequential burst access, and somewhat slower for random access.

### **BTB**

An acronym for Branch Target Buffer. The branch target buffer is used to improve the performance of a processing core. The BTB is a table that stores the branch target from previously executed branch instructions. A typical table may contain 1024 entries. The table is typically indexed by part of the branch address. Since the target address of a branch type instruction may not be known at fetch time, the address is speculated to be the address in the branch target buffer. This allows the machine to fetch instructions in a continuous fashion without pipeline bubbles. In many cases the calculated branch address from a previously executed instruction remains the same the next time the same instruction is executed. If the address from the BTB turns out to be incorrect, then the machine will have to flush the instruction queue or pipeline and begin fetching instructions from the correct address.

## **Card Memory**

A card memory is a memory reserved to record the location of pointer stores in a garbage collection system. The card memory is much smaller than main memory; there may be card memory entry for a block of main memory addresses. Card memory covers memory

in 128 to 512-byte sized blocks. Usually, a byte is dedicated to record the pointer store status even though a bit would be adequate, for performance reasons. The location of card memory to update is found by shifting the pointer value to the right some number of bits (7 to 9 bits) and then adding the base address of the table. The update to the card memory needs to be done with interrupts disabled.

### **Commit**

As in commit stage of processor. This is the stage where the processor is dedicated or committed to performing the operation. There are no prior outstanding exceptions or flow control changes to prevent the instruction from executing. The instruction may execute in the commit stage, but registers and memory are not updated until the retire stage of the processor.

# **Decimal Floating Point**

Floating point numbers encoded specially to allow processing as decimal numbers. Decimal floating point allows processing every-day decimal numbers rounding in the same manner as would be done by hand.

### Decode

The stage in a processor where instructions are decoded or broken up into simpler control signals. For instance, there is often a register file write signal that must be decoded from instructions that update the register file.

### Diadic

As in diadic instruction. An instruction with two operands.

### Endian

Computing machines are often referred to as big endian or little endian. The endian of the machine has to do with the order bits and bytes are labeled. Little endian machines label bits from right to left with the lowest bit at the right. Big endian machines label bits from left to right with the lowest numbered bit at the left.

## **FIFO**

An acronym standing for 'first-in first-out'. Fifo memories are used to aid data transfer when the rate of data exchange may have momentary differences. Usually when fifos transfer data the average data rate for input and output is the same. Data is stored in a buffer in order then retrieved from the buffer in order. Uarts often contain fifos.

### **FPGA**

An acronym for Field Programmable Gate Array. FPGA's consist of a large number of small RAM tables, flip-flops, and other logic. These are all connected with a programmable connection network. FPGA's are 'in the field' programmable, and usually re-programmable. An FPGA's re-programmability is typically RAM based. They are

often used with configuration PROM's so they may be loaded to perform specific functions.

# Floating Point

A means of encoding numbers into binary code to allow processing. Floating point numbers have a range within which numbers may be processed, outside of this range the number will be marked as infinity or zero. The range is usually large enough that it is not a concern for most programs.

### Frame Pointer

A pointer to the current working area on the stack for a function. Local variables and parameters may be accessed relative to the frame pointer. As a program progresses a series of "frames" may build up on the stack. In many cases the frame pointer may be omitted, and the stack pointer used for references instead. Often a register from the general register file is used as a frame pointer.

### **HDL**

An acronym that stands for 'Hardware Description Language'. A hardware description language is used to describe hardware constructs at a high level.

### HLL

An acronym that stands for "High Level Language"

### Instruction Bundle

A group of instructions. It is sometimes required to group instructions together into bundle. For instance, all instructions in a bundle may be executed simultaneously on a processor as a unit. Instructions may also need to be grouped if they are oddball in size for example 41 bits, so that they can be fit evenly into memory. Typically, a bundle has some bits that are global to the bundle, such as template bits, in addition to the encoded instructions.

### **Instruction Pointers**

A processor register dedicated to addressing instructions in memory. It is also often called a program counter. The program counter got its name because it usually increments (or counts) automatically after an instruction is fetched. In early machines in some rare cases the program counter did not count in a sequential binary fashion, but instead used other forms of a counter such as a grey counter or linear feedback shift register. In some machines the program counter addresses bundles of instructions rather than individual instructions. This is common with some stack machines where multiple instructions are packed into a memory word.

### **Instruction Prefix**

An instruction prefix applies to the following instruction to modify its operation. An instruction prefix may be used to add more bits to a following immediate constant, or to add additional register fields for the instruction. The prefix essentially extends the number of bits available to encode instructions. An instruction prefix usually locks out interrupts between the prefix and following instruction.

### **Instruction Modifier**

An instruction modifier is similar to an instruction prefix except that the modifier may apply to multiple following instructions.

### ISA

An acronym for Instruction Set Architecture. The group of instructions that an architecture supports. ISA's are sometimes categorized at extreme edges as RISC or CISC. RTF64 falls somewhere in between with features of both RISC and CISC architectures.

# **Keyed Memory**

A memory system that has a key associated with each page to protect access to the page. A process must have a matching key in its key list in order to access the memory page. The key is often 20 bits or larger. Keys for pages are usually cached in the processor for performance reasons. The key may be part of the paging tables.

### **Linear Address**

A linear address is the resulting address from a virtual address after segmentation has been applied.

### Machine Code

A code that the processing machine is able execute. Machine code is lowest form of code used for processing and is not usually delt with by programmers except in debugging cases. While it is possible to assemble machine code by hand usually a tool called an assembler is used for this purpose.

### Milli-code

A short sequence of code that may be used to emulate a higher-level instruction. For instance, a garbage collection write barrier might be written as milli-code. Milli-code may use an alternate link register to return to obtain better performance.

### Monadic

An instruction with just a single operand.

## Opcode

A short form for operation code, a code that determines what operation the processor is going to perform. Instructions are typically made up of opcodes and operands.

## **Operand**

The data that an opcode operates on, or the result produced by the operation. Operands are often located in registers. Inputs to an operation are referred to as source operands, the result of an operation is a destination operand.

## Physical Address

A physical address is the final address seen by the memory system after both segmentation and paging have been applied to a virtual address. One can think of a physical address as one that is "physically" wired to the memory.

## Physical Memory Attributes (PMA)

Memory usually has several characteristics associated with it. In the memory system there may be several different types of memory, rom, static ram, dynamic ram, eeprom, memory mapped I/O devices, and others. Each type of memory device is likely to have different characteristics. These characteristics are called the physical memory attributes. Physical memory attributes are associated with address ranges that the memory is located in. There may be a hardware unit dedicated to verifying software is adhering to the attributes associated with the memory range. The hardware unit is called a physical memory attributes checker (PMA checker).

### **Posits**

An alternate representation of numbers.

## **Program Counter**

A processor register dedicated to addressing instructions in memory. It is also often and perhaps more aptly called an instruction pointer. The program counter got its name because it usually increments (or counts) automatically after an instruction is fetched. In early machines in some rare cases the program counter did not count in a sequential binary fashion, but instead used other forms of a counter such as a grey counter or linear feedback shift register. In some machines the program counter addresses bundles of instructions rather than individual instructions. This is common with some stack machines where multiple instructions are packed into a memory word.

### Retire

As in retire an instruction. This is the stage in processor in which the machine state is updated. Updates include the register file and memory. Buffers used for instruction storage are freed.

### **ROB**

An acronym for ReOrder Buffer. The re-order buffer allows instructions to execute out of order yet update the machine's state in order by tracking instruction state and variables. In FT64 the re-order buffer is a circular queue with a head and tail pointers. Instructions at the head are committed if done to the machine's state then the head advanced. New instructions are queued at the buffer's tail as long as there is room in the queue. Instructions in the queue may be processed out of the order that they entered the queue in depending on the availability of resources (register values and functional units).

### **RSB**

An acronym that stands for return stack buffer. A buffer of addresses used to predict the return address which increases processor performance. The RSB is usually small, typically 16 entries. When a return instruction is detected at time of fetch the RSB is accessed to determine the address of the next instruction to fetch. Predicting the return address allows the processing core to continuously fetch instructions in a speculative fashion without bubbles in the pipeline. The return address in the RSB may turn out to be detected as incorrect during execution of the return instruction, in which case the pipeline or instruction queue will need to be flushed and instructions fetched from the proper address.

### **SIMD**

An acronym that stands for 'Single Instruction Multiple Data'. SIMD instructions are usually implemented with extra wide registers. The registers contain multiple data items, such as a 128-bit register containing four 32-bit numbers. The same instruction is applied to all the data items in the register at the same time. For some applications SIMD instructions can enhance performance considerably.

### **Stack Pointer**

A processor register dedicated to addressing stack memory. Sometimes this register is assigned by convention from the general register pool. This register may also sometimes index into a small dedicated stack memory that is not part of the main memory system. Sometimes machines have multiple stack pointers for different purposes, but they all work on the idea of a stack. For instance, in Forth machines there are typically two stacks, one for data and one for return addresses.

## **Telescopic Memory**

A memory system composed of layers where each layer contains simplified data from the topmost layer downwards. At the topmost layer data is represented verbatim. At the bottom layer there may be only a single bit to represent the presence of data. Each layer of the telescopic memory uses far less memory than the layer above. A telescopic memory could be used in garbage collection systems. Normally however the extra overhead of updating multiple layers of memory is not warranted.

### TLB

TLB stands for translation look-aside buffer. This buffer is used to store address translations for fast memory access in a system with an mmu capable of performing address translations.

## Trace Memory

A memory that traces instructions or data. As instructions are executed the address of the executing instruction is stored in a trace memory. The trace memory may then be dumped to allow debugging of software. The trace memory may compress the storage of addresses by storing branch status (taken or not taken) for consecutive branches rather than storing all addresses. It typically requires only a single bit to store the branch status. However, even when branches are traced, periodically the entire address of the program executing is stored. Often trace buffers support tracing thousands of instructions.

### Triadic

An instruction with three operands.

# Vector Length (VL register)

The vector length register controls the maximum number of elements of a vector that are processed. The vector length register may not be set to a value greater than the number of elements supported by hardware. Vector registers often contain more elements than are required by program code. It would be wasteful to process all elements when only a few are needed. To improve the processing performance only the elements up to the vector length are examined.

### Vector Mask (VM)

A vector mask is used to restrict which elements of a vector are processed during a vector operation. A one bit in a mask register enables the processing for that element, a zero bit disables it. The mask register is commonly set using a vector set operation.

### Virtual Address

The address before segmentation and paging has been applied. This is the primary type of address a program will work with. Different programs may use the same virtual address range without being concerned about data being overwritten by another program. Although the virtual address may be the same the final physical addresses used will be different.

### Writeback

A stage in a pipelined processing core where the machine state is updated. Values are 'written back' to the register file.

## Miscellaneous

### Reference Material

Below is a short list of some of the reading material the author has studied. The author has downloaded a fair number of documents on computer architecture from the web. Too many to list.

<u>Modern Processor Design Fundamentals of Superscalar Processors by John Paul Shen, Mikko H.</u> <u>Lipasti. Waveland Press, Inc.</u>

<u>Computer Architecture A Quantitative Approach, Second Edition, by John L Hennessy & David Patterson, published by Morgan Kaufman Publishers, Inc. San Franciso, California</u> is a good book on computer architecture. There is a newer edition of the book available.

Memory Systems Cache, DRAM, Disk by Bruce Jacob, Spencer W. Ng., David T. Wang, Samuel Rodriguez, Morgan Kaufman Publishers

PowerPC Microprocessor Developer's Guide, SAMS publishing. 201 West 103<sup>rd</sup> Street, Indianapolis, Indiana, 46290

80386/80486 Programming Guide by Ross P. Nelson, Microsoft Press

Programming the 286, C. Vieillefond, SYBEX, 2021 Challenger Drive #100, Alameda, CA 94501

Tech. Report UMD-SCA-2000-02 ENEE 446: Digital Computer Design — An Out-of-Order RiSC-16

Programming the 65C816, David Eyes and Ron Lichty, Western Design Centre Inc.

Microprocessor Manuals from Motorola, and Intel,

<u>The SPARC Architecture Manual Version 8, SPARC International Inc, 535 Middlefield Road. Suite210 Menlo Park California, CA 94025</u>

The SPARC Architecture Manual Version 9, SPARC International Inc, Sab Jose California, PTR Prentice Hall, Englewood Cliffs, New Jersey, 07632

The MMIX processor: http://mmix.cs.hm.edu/doc/instructions-en.html

RISCV 2.0 Spec, Andrew Waterman, Yunsup Lee, David Patterson, Krste Asanovi´c CS Division, EECS Department, University of California, Berkeley {waterman|yunsup|pattrsn|krste}@eecs.berkeley.edu

The Garbage Collection Handbook, Richard Jones, Antony Hosking, Eliot Moss published by CRC Press 2012

RISC-V Cryptography Extensions Volume I Scalar & Entropy Source Instructions See github.com/riscv/riscv-crypto for more information.

### **Trademarks**

IBM® is a registered trademark of International Business Machines Corporation. Intel® is a registered trademark of Intel Corporation. HP® is a registered trademark of Hewlett-Packard Development Company.\_"SPARC® is a registered trademark of SPARC International, Inc.

# WISHBONE Compatibility Datasheet

The Thor2021 core may be directly interfaced to a WISHBONE compatible bus.

WISHBONE Datasheet			
WISHBONE SoC Architecture Specification, Revision B.3			
Description:	Specifications:		
General Description:	Central processing unit (CPU core)		
	MASTER, READ / WRITE		
Supported Cycles:	MASTER, READ-MODIFY-WRITE		
Supported Cycles.	MASTER, BLOCK READ / WRITE, BURST READ (FIXED ADDRESS)		
Data port, size:	128 bit		
Data port, granularity:	8 bit		
Data port, maximum operand size:	128 bit		
Data transfer ordering:	Little Endian		
Data transfer sequencing	any (undefined)		
Clock frequency constraints:	tm_clk_i must be >= 10MHz		
Supported signal list and cross reference to equivalent WISHBONE signals	Signal Name: ack_i adr_o(31:0) clk_i dat_i(127:0) dat_o(127:0) cyc_o stb_o wr_o sel_o(7:0) cti_o(2:0) bte_o(1:0)	WISHBONE Equiv. ACK_I ADR_O() CLK_I DAT_I() DAT_O() CYC_O STB_O WE_O SEL_O CTI_O BTE_O	
Special Requirements:	_*( '**/	· -	