

# THOR CORE2021 GUIDE

[Document subtitle]

# **ABSTRACT**

Details for the Thor2021 processing core including programming model, memory management and instruction set architecture.

Robert Finch

[Course title]

# Table of Contents

Overview	
History	15
Design Objectives	15
Motivation	16
Differences from the Original	16
Case Comparison Hi-lites	16
Case Comparison 6502	16
Case Comparison ARM	17
Case Comparison RISCV	17
Case Comparison MMIX	19
Case Comparison PowerPC	19
Case Comparison x86	20
Case Comparison SPARC	20
Nomenclature	20
Development Aspects	21
Device Target	21
Implementation Language	21
Programming Model	22
General Registers	22
Register Tags	23
Stack and Frame Pointers	23
Loop Count	23
Code Address Registers	23
Code Address Register Format	23
Instruction Pointer	24
Link Registers	24
Selector Registers	25
General Purpose Vector (v0 to v63) / Registers	25
Mask Registers (m0 to m7)	25
Vector Length (VL register)	25
Summary of Special Purpose Registers	26
[U/S/H/M]_IE (0x?004)	26
[U/S/H/M]_CAUSE (CSR- 0x?006)	26
[U/S/H/M]_SCRATCH - CSR 0x?041	26

[U/S/H/M]_TIME (0x?FE0)	26
U_FSTAT - CSR 0x0014 Floating Point Status and Control Register	26
S_PTA - CSR 0x1003	28
S_ASID - CSR 0x101F	28
S_KEYS - CSR 0x1020 to 0x1022	29
C0,C1,C7 (CREGS) – M_CSR 0x3100 to 0x310F	30
ZS,DS,ES,FS,GS,HS,SS,CS (SREGS) – M_CSR 0x3120 to 0x3127	30
M_CR0 (CSR 0x3000) Control Register Zero	30
M_HARTID (CSR 0x3001)	31
M_TICK (CSR 0x3002)	31
M_SEED (CSR 0x3003)	31
M_BADADDR (CSR 0x3007)	31
M_BAD_INSTR (CSR 0x300B)	32
M_DBADx (CSR 0x3018 to 0x301B) Debug Address Register	32
M_DBCR (CSR 0x301C) Debug Control Register	32
M_DBSR (CSR 0x301D) - Debug Status Register	32
M_TVEC - CSR 0x3030 to 0x3037	33
M_PM_STACK - CSR 0x3040	33
M_SCRATCH - CSR 0x3041	33
M_GDT - CSR 0x3051	33
M_LDT - CSR 0x3052	34
Hardware Queues	34
Operating Modes	34
Exceptions	35
External Interrupts	35
Polling for Interrupts	35
Effect on Machine Status	35
Exception Stack	35
Exception Vectoring	35
Reset	36
Precision	36
Exception Cause Codes	36
DBG	38
IADR	38
UNIMP	38

OFL	38
KEY	38
FLT	38
DRF, DWF, EXF	38
CPF, DPF	38
PRIV	38
STK	39
DBE	39
PMA	39
IBE	39
NMI	39
BT	39
Segmentation	40
Overview	40
Privilege levels	40
Usage	40
Software Support	40
Address Formation:	41
Selecting a segment register	41
Selectors	41
Selector Format:	41
Descriptor Cache	42
Non-Segmented Code Area	42
Changing the Code Segment	43
The Descriptor Table	43
System Segment Descriptors	44
Segment Load Exception	46
Segment Bounds Exception	46
Segment Usage Conventions	46
Power-up State	47
Segment Registers	47
TLB – Translation Lookaside Buffer	48
Overview	48
Size / Organization	48
What is Translated	48

Page Size	48
Management	48
Flushing the TLB	49
PAM – Page Allocation Map	49
Overview	49
Memory Usage	49
Organization	49
PMA - Physical Memory Attributes Checker	49
Overview	49
Register Description	50
Attributes	50
Key Cache	51
Overview	51
Card Memory	51
Overview	51
Organization	51
Location	52
Operation	52
Sample Write Barrier	52
System Memory Map	52
Debugging Unit	53
Overview	53
Instruction Tracing	53
Trace Queue Entry Format	53
Trace Readback	53
Instruction Set Description	54
Overview	54
Root Opcode	54
Vector Instruction Indicator	54
Target Register Spec	54
Register Formats	55
R1 (one source register)	55
R1L (one source register)	55
R2 (two source register)	55
R2L (two source register)	55

R3 (three source register)	55
Arithmetic / Logical / Shift	
ABS – Absolute Value	
ADD - Register-Register	
ADDI – Add Immediate	
ADDIL – Add Immediate Long	
ADDIQ – Add Immediate Quick	
ADDIS - Add Immediate Shifted	
AND – Bitwise And	61
ANDC – Bitwise And with Complement	62
ANDI – Bitwise And Immediate	
ANDIL – Bitwise And Immediate Long	64
ANDIS - And Immediate Shifted	
BCDADD – BCD Add	66
BCDMUL – BCD Multiply	66
BCDSUB – BCD Subtract	67
BFCHG – Bitfield Change	68
BFCLR – Bitfield Clear	69
BFEXT – Bitfield Extract	70
BFEXTU – Bitfield Extract Unsigned	71
BFINS – Bit-field Insert	72
BFINSI – Bit-field Insert Immediate	74
BFSET – Bitfield Set	75
BMAP – Byte Map	76
BMAPI – Byte Map Immediate	77
BMM – Bit Matrix Multiply	78
BYTNDX – Byte Index	79
BYTNDXI – Byte Index	80
CLMUL – Carry-less Multiply	83
CLMULH – Carry-less Multiply High	84
CMOVNZ – Conditional Move	85
CMP – Compare	86
CMPI – Compare Immediate	87
CMPIL – Compare Immediate Long	88
CMPIS – Compare Immediate Shifted	89

CMPU – Compare Unsigned	90
CNTPOP – Count Population	91
CNTLZ - Count Leading Zeros	92
COM – Ones Complement	93
CPUID – CPU Identification	94
DIF – Difference	95
DIV – Division	96
DIVI – Divide by Immediate	97
DIVIL – Divide by Immediate Long	97
DIVU – Divide Unsigned	98
DIVUI – Divide Unsigned by Immediate	98
DIVSU – Divide Signed by Unsigned	99
ENOR – Bitwise Exclusive Nor	100
EOR – Bitwise Exclusive Or	101
EORI – Bitwise Exclusive Or Immediate	102
EORIL – Bitwise Exclusive Or Immediate Long	103
EORIS – Exclusive Or Immediate Shifted	103
LDI – Load Immediate	104
LDIL – Load Immediate Long	105
MAX – Maximum Value	106
MIN – Minimum Value	106
MOV – Move Register-Register	107
MUL – Multiply	108
MUL[O] – Multiply	109
MULH – Multiply High	110
MULI – Multiply Immediate	111
MULF – Fast Unsigned Multiply	112
MULFI – Fast Unsigned Multiply Immediate	113
MUX – Multiplex	114
NAND – Bitwise Nand	114
NEG - Negate	115
NOR – Bitwise Nor	115
NOT – Logical Not	116
OR – Bitwise Or	117
ORC – Bitwise Or with Complement	117

	ORI – Bitwise Or Immediate	118
	ORIL – Bitwise Or Immediate Long	119
	ORIS - Or Immediate Shifted	120
	PTRDIF – Difference Between Pointers	121
	REVBIT – Reverse Bit Order	122
	ROL – Rotate Left	123
	ROR – Rotate Right	124
	SEQ – Set if Equal	125
	SEQI – Set if Equal Immediate	125
	SEQIL – Set if Equal Immediate Long	125
	SGT – Set if Greater Than	126
	SGTI – Set if Greater Than Immediate	126
	SGTIL – Set if Greater Than Immediate Long	126
	SLL –Shift Left Logical	127
	SLT – Set if Less Than	128
	SLTI – Set if Less Than Immediate	128
	SLTIL – Set if Less Than Immediate Long	128
	SLEI – Set if Less Than or Equal Immediate	129
	SNE – Set if Not Equal	130
	SNEI – Set if Not Equal Immediate	130
	SNEIL – Set if Not Equal Immediate Long	130
	SRA –Shift Right Arithmetic	131
	SRL –Shift Right Logical	132
	SUBF – Subtract From	133
	SUBFI – Subtract from Immediate	134
	WYDENDX – WYDE Index	136
	WYDENDXI – Wyde Index	137
	XNOR – Bitwise Exclusive Nor	137
	XOR – Bitwise Exclusive Or	138
	XORI – Bitwise Exclusive Or Immediate	139
	XORIL – Bitwise Exclusive Or Immediate Long	140
	XORIS – Exclusive Or Immediate Shifted	140
F	Floating-Point Instructions	141
	FABS – Absolute Value	141
	FADD – Add Register-Register	142

FCLASS – Classify Value	143
FCMP – Compare	144
FCMPB – Compare	145
FCX – Clear Floating-Point Exceptions	146
FDIV – Divide Register-Register	147
FDX – Disable Floating Point Exceptions	148
FEX – Enable Floating Point Exceptions	149
FFINITE – Number is Finite	150
FMA – Floating Point Multiply Add	151
FNMA – Floating Point Negate Multiply Add	152
FNMS – Floating Point Negate Multiply Subtract	153
FMAN – Mantissa of Number	154
FMS – Floating Point Multiply Subtract	155
FMUL – Floating point multiplication	156
FNEG – Negate Register	157
FRM – Set Floating Point Rounding Mode	157
FRSQRTE – Float Reciprocal Square Root Estimate	158
FSEQ - Float Set if Equal	159
FSIGN – Sign of Number	160
FSLT - Float Set if Less Than	161
FSQRT – Floating point square root	163
FSTAT – Get Floating Point Status and Control	164
FSUB – Subtract Register-Register	166
FTOI – Float to Integer	166
FTRUNC – Truncate Value	167
FTX – Trigger Floating Point Exceptions	167
ISNAN – Is Not a Number	168
ITOF – Integer to Float	169
Decimal Floating-Point Instructions	170
DFABS – Absolute Value	170
DFADD – Add Register-Register	171
DFCMP – Compare	172
DFCMPB – Compare	173
DFCX – Clear Floating-Point Exceptions	174
DFDIV – Divide Register-Register	175

DFDX – Disable Floating Point Exceptions	176
DFEX – Enable Floating Point Exceptions	177
DFMA – Floating Point Multiply Add	178
DFNMA – Floating Point Negate Multiply Add	179
DFNMS – Floating Point Negate Multiply Subtract	180
DFMAN – Mantissa of Number	181
DFMS – Floating Point Multiply Subtract	182
DFMUL – Floating point multiplication	183
DFNEG – Negate Register	184
DFRM – Set Floating Point Rounding Mode	184
DFSIGN – Sign of Number	185
DFSTAT – Get Floating Point Status and Control	185
DFSUB – Subtract Register-Register	187
DFTOI – Float to Integer	187
DFTX – Trigger Floating Point Exceptions	188
ITODF – Integer to Float	189
Load / Store Instructions	190
Overview	190
Addressing Modes	190
Load Formats	190
Store Formats	191
CACHE – Cache Command	192
CACHEL – Cache Command	193
CACHEX – Cache Command	194
LDB – Load Byte	195
LDBL – Load Byte, Long Address	197
LDBU – Load Byte, Unsigned	198
LDBUL – Load Byte Unsigned, Long Address	199
LDBUX – Load Byte Unsigned Indexed	200
LDBX – Load Byte Indexed	201
LDO – Load Octa	202
LDOL – Load Octa, Long Address	203
LDOX – Load Octa Indexed	204
LDT – Load Tetra	205
IDTL — Load Tetra Long Address	206

	LDTU – Load Tetra Unsigned	. 207
	LDTUL – Load Tetra Unsigned, Long Address	. 208
	LDTUX – Load Tetra Unsigned Indexed	. 209
	LDTX – Load Tetra Indexed	.210
	LDW – Load Wyde	211
	LDWL – Load Wyde, Long Address	.212
	LDWU – Load Wyde Unsigned	213
	LDWUL – Load Wyde Unsigned, Long Address	214
	LDWX – Load Wyde Indexed	.215
	LDWUX – Load Wyde Unsigned Indexed	216
	LLAH – Load Linear Address High	217
	LLAHL – Load Linear Address High Long	217
	LLAHX – Load Linear Address High Indexed	.218
	LLAL – Load Linear Address Low	.219
	LLALL – Load Linear Address Low Long	219
	LLALX – Load Linear Address Low Indexed	220
	STB – Store Byte	. 221
	STBL – Store Byte, Long Addressing	. 222
	STBX – Store Byte Indexed	. 223
	STO – Store Octa	. 224
	STOC – Store Octa, Clear Reservation	. 225
	STOCL - Store Octa, Clear Reservation, Long Addressing	. 225
	STOCX – Store Octa, Clear Reservation Indexed	226
	STOL – Store Octa, Long Addressing	. 227
	STOX – Store Octa Indexed	. 228
	STT – Store Tetra	. 229
	STTL – Store Tetra, Long Addressing	. 230
	STTX – Store Tetra Indexed	.231
	STW – Store Wyde	.232
	STWL – Store Wyde, Long Addressing	.233
	STWX – Store Wyde Indexed	. 234
E	Branch / Flow Control Instructions	. 235
	Overview	. 235
	Branch Format	. 235
	Branch Conditions	236

Linkage	236
Branch Target	237
Near or Far Branching	238
Branch to Register	238
[D]BBC – Branch if Bit Clear	239
[D]BBS – Branch if Bit Set	240
[D]BEQ – Branch if Equal	241
[D]BGE – Branch if Greater Than or Equal	242
[D]BGEU – Branch if Greater Than or Equal Unsigned	243
[D]BGT – Branch if Greater Than	244
[D]BGTU – Branch if Greater Than Unsigned	245
[D]BLE – Branch if Less Than or Equal	246
[D]BLEU – Branch if Less Than or Equal Unsigned	247
[D]BLT – Branch if Less Than	248
[D]BLTU – Branch if Less Than Unsigned	249
[D]BNE – Branch if Not Equal	250
[D]BRA – Branch Always	251
[D]BSR – Branch to Subroutine	251
[D]JBC – Jump if Bit Clear	253
[D]JBS – Jump if Bit Set	254
[D]JEQ – Jump if Equal	255
[D]JGE – Jump if Greater Than or Equal	256
[D]JGEU – Jump if Greater Than or Equal Unsigned	257
[D]JGT – Jump if Greater Than	258
[D]JGTU – Jump if Greater Than Unsigned	259
[D]JLE – Jump if Less Than or Equal	260
[D]JLEU – Jump if Less Than or Equal Unsigned	261
[D]JLT – Jump if Less Than	262
[D]JLTU – Jump if Less Than Unsigned	263
[D]JNE – Jump if Not Equal	264
[D]JMP – Jump	265
[D]JSR – Jump to Subroutine	266
NOP – No Operation	267
RTS – Return from Subroutine	
ystem Instructions	269

BRK – Break	269
CSRx - Control and Special / Status Access	270
DI – Disable Interrupts	271
INT – Generate Interrupt	271
MEMDB – Memory Data Barrier	272
MEMSB – Memory Synchronization Barrier	273
MFSEL – Move from Selector Register	274
MTSEL – Move to Selector Register	275
PEEKQ – Peek at Queue / Stack	277
PFI – Poll for Interrupt	278
POPQ – Pop from Queue / Stack	279
PUSHQ – Push on Queue / Stack	279
REX – Redirect Exception	280
RTE – Return from Exception	281
SEI – Set Interrupt Level	282
STATQ – Get Status of Queue / Stack	283
SYNC -Synchronize	284
SYS – Call system routine	284
TLBRW – Read / Write TLB	285
WFI – Wait for Interrupt	286
Vector Specific Instructions	287
V2BITS	287
VBITS2V	288
VCIDX – Compress Index	288
VCMPRSS – Compress Vector	289
VEINS / VMOVSV – Vector Element Insert	289
VEX / VMOVS – Vector Element Extract	290
MFVM – Move from Vector Mask	291
MFVL – Move from Vector Length	291
MTVM – Move to Vector Mask	291
MTVL – Move to Vector Length	292
VMADD – Vector Mask Add	
VMAND – Vector Mask And	293
VMCNTPOP – Count Population	293
VMFII I – Vector Mask Fill	294

VMFIRST – Find First Set Bit	294
VMLAST – Find Last Set Bit	295
VMOR – Vector Mask Or	296
VMSLL – Vector Mask Shift Left Logical	296
VMSRL – Vector Mask Shift Right Logical	296
VMSUB – Vector Mask Subtract	297
VMXOR – Vector Mask Exclusive Or	297
VSCAN	298
VSLLV – Shift Vector Left Logical	299
VSRLV – Shift Vector Right Logical	300
Opcode Maps	314
Root Opcode	321
{LDxX} Scaled Indexed Loads – Func <sub>7</sub>	321
{STxX} Scaled Indexed Stores – Func <sub>6</sub>	321
{R1 – 0x01} Integer Monadic Register Ops – Func <sub>7</sub>	322
{R2 – 0x02} Integer Dyadic Register Ops – Func <sub>7</sub>	323
{R3/R4 – 0x03} Triadic Register Ops	323
{F1/F1L - 0x61/0x71} Floating-Point Monadic Ops – Funct <sub>7</sub>	324
{F2/F2L – 0x62,0x72} Floating-Point Dyadic Ops – Funct <sub>7</sub>	324
{F3 – 0x63} Floating-Point Dyadic Ops – Funct <sub>7</sub>	324
{DF2} Decimal Floating-Point Dyadic Ops – Funct <sub>7</sub>	325
{VM – 0x52} Vector Mask Register Ops – Func <sub>5</sub>	326
Glossary	327
AMO	327
ATC	327
Burst Access	327
BTB	327
Card Memory	327
FPGA	328
Instruction Bundle	328
Instruction Pointers	328
Instruction Prefix	328
Instruction Modifier	328
ISA	329
Keved Memory	329

Linear Address	329
Opcode	329
Physical Address	329
Physical Memory Attributes (PMA)	329
Program Counter	330
ROB	330
RSB	330
SIMD	330
Stack Pointer	330
Telescopic Memory	331
TLB	
Vector Length (VL register)	331
Vector Mask (VM)	
Miscellaneous	332
Reference Material	332
Trademarks	
WISHBONE Compatibility Datasheet	

# Overview

Thor is a powerful 64-bit superscalar processor that represents a generational refinement of processor architecture. The processor contains 64, 64 bit general purpose integer registers. Thor uses variable length instructions varying between two and eight bytes in length and handles 8, 16, 32, and 64 bit data within a 64 bit address space.

# History

Thor2021 is a work in progress beginning in October 2021. Thor2021 originated from Thor which originated from RiSC-16 by Dr. Bruce Jacob. RiSC-16 evolved from the Little Computer (LC-896) developed by Peter Chen at the University of Michigan. See the comment in Thor2021.v. The author has tried to be innovative with this design borrowing ideas from many other processing cores.

# **Design Objectives**

This processor is somewhat pedantic in nature and targeted towards high performance operation as a general-purpose processor. Following are some of the criteria that were used on which to base the design.

- Designed for Superscalar operation the ability to execute more than one instruction at a time. To achieve high performance it is generally accepted that a processor must be able to execute more than a single instruction in any given clock cycle.
- □ Support for vector operations.
- Simplicity architectural simplicity leads to a design that is easy to implement resulting in reliability and assured correctness along with easy implementation of supporting tools such as compilers. Simplicity also makes it easier to obtain high performance and results in lower overall cost.
- □ Extensibility the design must be extensible so that features not present in the first release can easily be added at a later date.
- □ Low Cost

This design meets the above objectives in the following ways. The instruction set has been designed to minimize the interactions between instructions, allowing instructions to be executed as independent units for superscalar operation. There are a sufficient number of registers to allow the compiler to schedule parallel processing of code. A reasonably large general purpose register set is available making the design reasonably compatible with many existing compilers and assemblers. Where needed, additional specialized instructions have been added to the processor to support a sophisticated operating system and interrupt management.

# **Motivation**

The author wanted an FPGA based processing core for experimental purposes.

# Differences from the Original

The string instructions in the original Thor ISA are no longer present.

Stack operations have been removed.

Mnemonics changed for load and store instructions.

Byte, wyde and UTF21 search instructions have been added.

Support for decimal floating-point has been added.

Support for cryptographic accelerator functions has been added.

# Case Comparison Hi-lites

Some of the more striking points of a handful of architectures are compared to what is available in Thor2021.

# Case Comparison 6502

6502 vs Thor2021

### Overview

This is a bit of an apples to oranges comparison as the two designs are for different environments. The 6502 was designed for a much smaller operating environment and is extremely frugal with transistor usage. The Thor2021 was designed as 64-bit processor used for experimentation in a much larger environment.

### Instruction Format

The 6502 as a byte-oriented design has a compact variable instruction length encoding. Many instructions are encoded using an average of about two bytes.

While variable sized instructions offer great advantage for code density, they add complexity to the processing core. Thor2021 also uses a variable size instruction encoding. As such for a given single instruction it requires roughly twice the memory of a 6502. However, the instructions in the Thor2021 operate on 64-bit values, to perform the same operations in the 6502 would require many more bytes. Several instructions in the Thor2021 are more powerful than what can be found in the 6502.

### Registers

The Thor2021 has many more registers than the 6502. It is a general-purpose register-oriented design while the 6502 is accumulator oriented. A register file of about 32 registers has been found to be a good match to many computing environments. This is somewhat of a historical determination. The Thor2021 has available many more transistors than were available to the 6502 design. The Thor2021 has many special purpose registers. The 6502 does not have any.

### *Instructions*

The 6502 uses relative branches to allow a code dense instruction encoding. Thor2021 also uses relative branches to help reduce the instruction size. It has a larger branch displacement than the 6502 as that is what could be encoded easily.

The 6502 offers only basic instructions (ADD, SUB, CMP, AND, ORA, EOR, LDA, STA) as examples. There are no complex instructions in the 6502 ISA. All instructions execute within a handful of clock cycles. the Thor2021 has a ton of instructions compared to a 6502. It supports floating point and posit arithmetic.

The 6502 is an accumulator-based architecture that allows one memory-based operand for most instructions. Thor2021 is register based and the only instructions accessing memory are load and store type instructions.

# **Case Comparison ARM**

### Overview

The ARM architecture has become extremely popular.

### Instruction Format

The ARM machine was originally a 32-bit fixed instruction format machine. It has had added onto it 16-instruction formats.

### Registers

The program counter is referenced using one the registers codes available for general purpose registers.

The author is not fond of architectures that use a general-purpose register as the program counter. He believes a separate register is a better approach. Having the pc as part of the general register file is archaic.

# **Case Comparison RISCV**

RISCV vs Thor2021

### *Instruction Format*

While variable sized instructions offer great advantage for code density, they add complexity to the processing core.

In RISCV support for 16-bit compressed instructions consumes two opcode bits, and opcode bits are valuable. The use of these two bits and the reduction of the opcode space for other instructions is an excellent trade-off. Compressed instructions can improve code density by about 25% or more and consequently make better use of the cache. There is only the occasional instruction that can not be encoded using two fewer encoding bits, so only a very small percentage would be gained back in code density by having two more bits available. Thor2021 uses a variable length instruction encoding which allow it to achieve code density similar to RISCV.

The JAL instruction in RISCV allows any register to be used to store the return address. In practice only one or two registers which are fixed by the ABI are used. This means that there are about four bits of opcode space wasted for unnecessary register specification. Making use of

these extra four bits is extremely valuable. The Thor2021 design only requires two bits to specify the return address register. The presence of four extra bits to specify the target address makes absolute addressing appealing for this design.

To build constants the LUI instruction is used. In RISCV the LUI instruction allows any register to be used as the target and has a 20-bit constant field because of encoding constraints. In practice it is possible to get by using only one or two registers to build constants with. Thor2021 has more direct support for constants larger than 32 bits. It makes use of ADDIS (add immediate shifted), ORIS, and ANDIS instructions to build 64-bit constants. These instructions support building 64-bit constants directly. RISCV does not really provide much for building constants over 32 bits.

### Instructions

RISCV does not include indexed addressing modes in the standard implementation. Indexed addressing is accomplished when required using additional instructions and registers to calculate the effective address. Thor2021 directly supports indexed addressing with an optionally scaled index register. When indexed addressing is required Thor2021 is more code dense than RISCV. However indexed addressing is not used that often.

RISCV accesses memory and I/O exclusively using load and store instructions. Thor2021 has several additional instructions which access memory and I/O.

### Register File

RISCV does almost everything using general-purpose registers. This paradigm increases the pressure on the register file. In the Thor2021 design there are more register files involved. Effectively, there are a few more additional registers which reduce the pressure on the general-purpose register file. There is a trend to place some global variables in the register file for performance reasons. These variables include operating vars for garbage collection, pointers to global and thread data and pointers for exception handling.

One reason to use more register files is that in a superscalar design it may allow more instructions to be committed at the same time. There is usually a limit on the number of write ports to the general register file. This limit affects how many instructions can be committed at once. By providing separate register files for some operations it effectively increases the number of write ports available making it possible to commit more instructions per cycle.

### Return Address Registers

There is not a requirement for more than a couple of return address registers. The instruction set may be refined to allow only a single bit to specify the return address register.

# Compare Results Registers

RISCV stores comparison results if needed in general-purpose registers. It has just a single instruction (SLT) dedicated to generating compare results. RISCV makes use of branches that compare-and-branch encoded in a single instruction. This is effective at removing the need for most compare operations. The intermediate result of the compare is hidden in the architecture; there is no need for visible compare results registers. There is still a need for the computed result of a compare operation. Sometimes software records the comparison result for later usage. For example, there may be a line of code: x = y > 10. Which will set x true if y is greater than 10.

Compares are tightly coupled to branch operations. Some architectures like RISCV compare and branch in a single instruction. Other architectures use a flags register or several flags registers. Yet other architectures simply use the general-purpose registers.

One reason to use a separate group of compare results registers is that in a superscalar design it may allow more instructions to be committed at the same time. There is usually a limit on the number of write ports to the general register file. This limit affects how many instructions can be committed at once. By providing separate register files for some operations it effectively increases the number of write ports available making it possible to commit more instructions per cycle.

# Operating modes.

This design uses four operating modes. It has the RISCV operating modes. The author has seen a comment to the effect that debug on a RISCV processor really acts like an additional mode.

### Memory Management

RISCV offers several memory management options including several different paging arrangements and a couple of optional base and bound registers.

# **Case Comparison MMIX**

### **Instruction Format**

MMIX comes across as more of a pedantic processor design. MMIX instructions are structure simply for the most part using a 32-bit format divided into four-byte regions. The author assumes this is primarily to enhance the readability of instructions. The constant field is often limited to eight bits. Thor2021 has fewer registers and that allows more constant bits to be encoded in the same size instruction.

### Register File

MMIX has a 256-entry register file. It is not clear that this number of registers has any benefit over a 32-register design, but it makes the instruction format clear and easy to understand which may be a goal for a processor used for academic purposes.

### Instructions

There are a lot of conditional move instructions in the MMIX ISA. Thor2021 currently supports only a single conditional move instruction.

# **Case Comparison PowerPC**

### Instruction Format

The PowerPC uses a fixed 32-bit instruction format.

### Instructions

The PowerPC supports indexed addressing like the Thor2021 although index scaling is not present. The author has found indexed addressing makes up about 3% of instructions and scaled indexes a much smaller percentage.

### Registers

The PowerPC has a dedicated link register and eight condition code registers. Thor2021 has with a pair of link registers dedicated in the GPR file. The PowerPC also has a loop count register used for counted loops. Thor2021 also has a loop count register.

# Case Comparison x86

### Registers

The x86 series has a register file that is accessible in subparts. Parts of a single register may be referred to instructions. For example, EAX is a 32-bit register that is also accessible as AL for byte operations. This has no-doubt complicated the x86 design. This contrasts with Thor2021 and many RISC designs where the registers are always manipulated as whole units.

# **Case Comparison SPARC**

# Registers

The SPARC machine uses register windowing, where a subset of registers is available from a much larger set that is "windowed". In the SPARC the subset register window scrolls up and down automatically during subroutine calls and returns. The idea was to improve performance by not having to stack and unstack registers to memory during subroutine operations. However, with a good modern optimizing compiler the performance level of the SPARC is not much different than that of other architectures.

# Nomenclature

The ISA refers to primitive object sizes following the convention suggested by Knuth of using Greek.

Number of Bits		Instructions
8	byte	LDB, STB
16	wyde	LDW, STW
32	tetra	LDT, STT
64	octa	LDO, STO
128	hexi	LDH, STH

The register used to address instructions is referred to as the instruction pointer or IP register. The instruction pointer is a synonym for instruction pointer or PC register.

# Development Aspects Device Target

The core has been developed with FPGA usage in mind. In particular it is expected that the register file is built out of block memories.

# Implementation Language

The core is implemented in the System Verilog language primarily for its ability to process array objects. Much of the core is plain vanilla Verilog code.

# Programming Model General Registers

There are 64 general purpose registers. General purpose registers are 64 bits wide. The general register file is unified and may hold integer or floating-point values.

Register #0 is always zero.

r0	always zero
r1	return value / arg0
r2	return value / arg1
r3	temporary register caller save
r4	temporary register
r5	temporary register
r6	temporary register
r7	temporary register
r8	temporary register
r9	temporary register
r10	temporary register
r11	register var callee save
r12	register var
r13	register var
r14	register var
r15	register var
r16	register var
r17	register var
r18	register var
r19	
r20	
r21	
r22	
r24	Type number
r25	Class Pointer
r26	Base Pointer
r27	User Stack Pointer <sup>1</sup>
r28	Interrupt Stack Pointer
r29	Exception Stack Pointer
r30	Debug Stack Pointer
r31	Kernel task register
r32/F0	Floating point
r63/F31	

LC	Loop Counter
C0	available
C1	return address
C2	milli-code return address
C3	available
C4	available
C5	available
C6	exceptioned IP
C7	Instruction pointer, read only

ZS	
DS	
ES	
FS	
GS	
HS	
SS	
CS	

DBAD0	Debug Address #0
DBAD1	Debug address #1
DBAD2	Debug address #2
DBAD3	Debug Address #3
DBCTRL	Debug Control
DBSTAT	Debug Status

r27 is special in that it refers to one of r27, r28, r29, or r30 depending on the operating mode of the core. This allows the same code to be reused in different operating modes. For instance loading r27 while in debug mode will actually load r30 and all references to r27 will be rerouted to r30 in debug mode.

# Register Tags

For the bypassing network, commonly used registers have a register tag associated with them. The register tag for the general registers varies from 1 to 63 corresponding to registers 1 to 63. Vector registers use tags 64 to 127. Other registers use additional tags as noted in the text.

# Stack and Frame Pointers

Although the stack and frame pointer registers may be used with any instruction the core has special hardware to detect stack bounds violations by either the stack pointer or frame pointer. The stack and frame pointer registers should be kept aligned on octa-byte boundaries. That is, they should be a multiple of eight, which has the least significant three bits as zero. There is currently no hardware in the core to enforce alignment.

The author considered having the stack pointer as an independent register but that would require replicating a number of instructions (add, sub, and, or, etc.) just for the stack pointer. The author feels it is better to keep the stack pointer general-purpose in nature so that it may leverage the usage of the existing instruction set. This design is primarily a load / store architecture.

# **Loop Count**

The loop count register is used with branch instructions to form counted loops. It may be automatically decremented and tested when the branch instruction is executing.

# Code Address Registers

Thor2021 has eight code address registers C0 to C7. These are also referred to as branch registers in other architectures. C7 refers to the current instruction pointer.

# **Code Address Register Format**

A code address register is composed of a 64-bit offset field and a 32-bit selector field. It is necessary to store both the selector and offset in a linkage register so that a far return may be performed.

A branch instruction will set both the selector and offset values for the instruction pointer. The new selector value for the IP will come from one of the other code address registers as specified in the instruction.

95 6	63	
Selector <sub>32</sub>		Offset <sub>64</sub>

The selector value of a code address register may be set using the MTSPR instruction and selecting the code address selector as the target.

Reg #		Usage
0	available for use	zero by convention
1	Subroutine return address	dedicated for subroutine linkage
2	Milli-code return address	dedicated for subroutine linkage
3	available for use	
4	available for use	
5	available for use	
6	Exception Instruction Pointer	dedicated for exception processing
7	Instruction Pointer	dedicated to instruction addressing

The presence of multiple code address registers allows multi-level return addresses to be used for performance. Leaf routines may use C1 as the return address. Next to leaf routines may use C2, etc. So that memory operations are avoided when implementing subroutine call and return.

The instruction pointer register is read-only. The instruction pointer cannot be modified by moving a value to this register.

# **Instruction Pointer**

The instruction pointer, IP, points to the currently executing instruction. The lower 24-bits of the instruction pointer increment as instructions are processed. Branch instructions normally manipulate only the low order 24 bits of the instruction pointer. The entire pointer may be set using a branch-to-register instruction.

To conserve hardware and improve performance of the counter only the low order 24-bits increment. It is extremely rare to have 16MB or more of code without resets of the entire instruction pointer due to subroutine calls.

63		24	23		0
	IP High			IP Low	

# **Link Registers**

Related to the instruction pointer are subroutine linkage registers. The architecture has two link registers for storing subroutine return addresses.

While many architectures have only a single link register, it is sometimes useful to have a second link register, for instance to implement milli-code routines. Some architectures allow any general-purpose register to be used for subroutine linkage. Often the ABI specifies that a specific register is used for this purpose. The author feels that supporting any GPR as a link register wastes instruction encoding bits that are better used for other purposes.

	03
Lk1	Return Address
Lk2	Return Address

# Selector Registers

Selector registers are a piece of the segmented memory management. They are a short form for segment descriptors which they represent. There are nine selector registers in the architecture. Several are dedicated to specific uses.

Reg	Tag	Usage
ZS	144	
DS	145	data segment
ES	146	
FS	147	
GS	148	
HS	149	
SS	150	stack segment
CS	151	code segment
LDT	-	refers to address and size of local descriptor table

# General Purpose Vector (v0 to v63) / Registers

v0 always has the value zero.

Register	Description / Suggested Usage	Saver
v0	always reads as zero (hardware)	
v1-v63		

# Mask Registers (m0 to m7)

Mask registers are used to mask off vector operations so that a vector instruction doesn't perform the operation on all elements of the vector. Vector instructions (loads and stores) that don't explicitly specify a mask register assume the use of mask register zero (m0).

Register	Tag	Usage
m0	160	contains all ones by convention
m1	161	
m2	162	
m3	163	
m4	164	
m5	165	
m6	166	
m7	167	

# Vector Length (VL register)

The vector length register controls how many elements of a vector are processed. The vector length register may not be set to a value greater than the number of elements supported by

hardware. After the vector length is set a SYNC instruction should be used to ensure that following instructions will see the updated version of the length register.

Vector length has register tag #160.

15		8	7		0
	0			Elements <sub>70</sub>	

# Summary of Special Purpose Registers

# $[U/S/H/M]_IE (0x?004)$

This register contains interrupt enable bits. The register is present at all operating levels. Only enable bits at the current operating level or lower are visible and may be set or cleared. Other bits will read as zero and ignore writes. Only the lower four bits of this register are implemented. The bits have individual bit set / clear capability using the CSRRS, CSRRC instructions.

63	4	3	2	1	0
~		mie	hie	sie	uie

## [U/S/H/M]\_CAUSE (CSR- 0x?006)

This register contains a code indicating the cause of an exception or interrupt. The break handler will examine this code to determine what to do. Only the low order 16 bits are implemented. The high order bits read as zero and are not updateable.

# [U/S/H/M]\_SCRATCH - CSR 0x?041

This is a scratchpad register. Useful when processing exceptions. There is a separate scratch register for each operating mode.

### [U/S/H/M] TIME (0x?FE0)

The TIME register corresponds to the wall clock real time. This register can be used to compute the current time based on a known reference point. The register value will typically be a fixed number of seconds offset from the real wall clock time. The lower 32 bits of the register are driven by the tm\_clk\_i clock time base input which is independent of the cpu clock. The tm\_clk\_i input is a fixed frequency used for timing that cannot be less than 10MHz. The low order 32 bits represent the fraction of one second. The upper 32 bits represent seconds passed. For example, if the tm\_clk\_i frequency is 100MHz the low order 32 bits should count from 0 to 99,999,999 then cycle back to 0 again. When the low order 32 bits cycle back to 0 again, the upper 32 bits of the register is incremented. The upper 32 bits of the register represent the number of seconds passed since an arbitrary point in the past.

Note that this register has a fixed time basis, unlike the TICK register whose frequency may vary with the cpu clock. The cpu clock input may vary in frequency to allow for performance and power adjustments.

### U\_FSTAT - CSR 0x0014 Floating Point Status and Control Register

The floating-point status and control register may be read using the CSR instruction. Unlike other CSR's the control register has its own dedicated instructions for update. See the section on floating point instructions for more information.

Bit		Symbol	Description				
63:53			reserved				
52		inexact	inexact				
51		dbz	divide by zero				
50		under	underflow				
49		over	overflow				
48		invop	invalid operation				
47		~	reserved				
46:44	RM	rm	rounding mode				
43	E5	inexe	- inexact exception enable				
42	E4	dbzxe	- divide by zero exception enable				
41	E3	underxe	- underflow exception enable				
40	E2	overxe	- overflow exception enable				
39	E1	invopxe	- invalid operation exception enable				
38	NS	ns	- non standard floating point indicator				
Result S	tatus						
32		fractie	- the last instruction (arithmetic or conversion) rounded				
			intermediate result (or caused a disabled overflow				
			exception)				
31	RA	rawayz	rounded away from zero (fraction incremented)				
30	SC	С	denormalized, negative zero, or quiet NaN				
29	SL	neg <	the result is negative (and not zero)				
28	SG	pos >	the result is positive (and not zero)				
27	SE	zero =	the result is zero (negative or positive)				
26	SI	inf ?	the result is infinite or quiet NaN				
	_		Exception Occurrence				
			reserved				
Exception							
21 to 25 20	X6	swt	reserved {reserved} - set this bit using software to trigger an invalid operation				
21 to 25 20	X6	swt	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky)				
21 to 25 20 19 18	X6 X5 X4	swt inerx dbzx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred				
21 to 25 20 19 18 17	X6 X5 X4 X3	swt	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred				
21 to 25 20 19 18 17 16	X6 X5 X4 X3 X2	swt inerx dbzx underx overx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred				
21 to 25 20 19 18 17	X6 X5 X4 X3	swt inerx dbzx underx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid				
21 to 25 20 19 18 17 16 15	X6 X5 X4 X3 X2 X1	swt inerx dbzx underx overx giopx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred				
21 to 25 20 19 18 17 16	X6 X5 X4 X3 X2	swt inerx dbzx underx overx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception				
21 to 25 20 19 18 17 16 15	X6 X5 X4 X3 X2 X1 GX	swt inerx dbzx underx overx giopx gx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened				
21 to 25 20 19 18 17 16 15	X6 X5 X4 X3 X2 X1	swt inerx dbzx underx overx giopx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it				
21 to 25 20 19 18 17 16 15	X6 X5 X4 X3 X2 X1 GX	swt inerx dbzx underx overx giopx gx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled				
21 to 25 20 19 18 17 16 15 14	X6 X5 X4 X3 X2 X1 GX	swt inerx dbzx underx overx giopx gx sumx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception — set if any invalid operation exception has occurred - global exception indicator — set if any enabled exception has happened - summary exception — set if any exception could occur if it was enabled - can only be cleared by software				
21 to 25 20 19 18 17 16 15 14 13	X6 X5 X4 X3 X2 X1 GX	swt inerx dbzx underx overx giopx gx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software				
21 to 25 20 19 18 17 16 15 14 13  Exception 8 to 12	X6 X5 X4 X3 X2 X1 GX SX	swt inerx dbzx underx overx giopx gx sumx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On				
21 to 25 20 19 18 17 16 15 14 13  Exception 8 to 12 7	X6  X5  X4  X3  X2  X1  GX  SX	swt inerx dbzx underx overx giopx gx sumx ee Resoluti	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception — set if any invalid operation exception has occurred - global exception indicator — set if any enabled exception has happened - summary exception — set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer				
21 to 25 20 19 18 17 16 15 14 13  Exception 8 to 12 7 6	X6  X5  X4  X3  X2  X1  GX  SX  On Typ	swt inerx dbzx underx overx giopx gx sumx ee Resoluti cvt sqrtx	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative				
21 to 25 20 19 18 17 16 15 14 13  Exception 8 to 12 7	X6  X5  X4  X3  X2  X1  GX  SX	swt inerx dbzx underx overx giopx gx sumx ee Resoluti	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative - comparison of NaN not using unordered comparison				
21 to 25 20 19 18 17 16 15 14 13  Exception 8 to 12 7 6 5	X6  X5  X4  X3  X2  X1  GX  SX  On Typ  X1T  X1T	swt inerx dbzx underx overx giopx gx sumx  e Resoluti cvt sqrtx NaNCmp	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative - comparison of NaN not using unordered comparison instructions				
21 to 25 20  19 18 17 16 15  14  13  Exception 8 to 12 7 6 5	X6	swt inerx dbzx underx overx giopx gx sumx  e Resoluti cvt sqrtx NaNCmp infzero	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative - comparison of NaN not using unordered comparison instructions - multiply infinity by zero				
21 to 25 20  19 18 17 16 15 14 13  Exception 8 to 12 7 6 5 4 3	X6	swt inerx dbzx underx overx giopx gx sumx  e Resoluti cvt sqrtx NaNCmp infzero zerozero	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative - comparison of NaN not using unordered comparison instructions - multiply infinity by zero - division of zero by zero				
21 to 25 20  19 18 17 16 15 14 13  Exception 8 to 12 7 6 5 4 3 2	X6	swt inerx dbzx underx overx giopx gx sumx  e Resoluti  cvt sqrtx NaNCmp infzero zerozero infdiv	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative - comparison of NaN not using unordered comparison instructions - multiply infinity by zero - division of zero by zero - division of infinities				
21 to 25 20  19 18 17 16 15 14 13  Exception 8 to 12 7 6 5 4 3	X6	swt inerx dbzx underx overx giopx gx sumx  e Resoluti cvt sqrtx NaNCmp infzero zerozero	reserved {reserved} - set this bit using software to trigger an invalid operation - inexact result exception occurred (sticky) - divide by zero exception occurred - underflow exception occurred - overflow exception occurred - global invalid operation exception – set if any invalid operation exception has occurred - global exception indicator – set if any enabled exception has happened - summary exception – set if any exception could occur if it was enabled - can only be cleared by software  On  reserved - attempt to convert NaN or too large to integer - square root of non-zero negative - comparison of NaN not using unordered comparison instructions - multiply infinity by zero - division of zero by zero				

# S\_PTA - CSR 0x1003

This register contains the selector for the PTA descriptor describing the highest-level page directory for memory management. The PTA descriptor contains the paging table depth and the size of the pages mapped. Register tag #152.

31	24	23	22		0
PI	_8	T		Index <sub>23</sub>	

# PTA Descriptor

The PTA descriptor establishes the location and size of the root page table in memory. The base address must be 4kB aligned.

n+3	ACR <sub>20</sub>	~44				
n+2		Limit <sub>630</sub>				
n+1	~64					
n		Base <sub>6312</sub>	~	$TD_3$	$S_1$	~7

TD		S	
0	1 level lookup	0	map 4kB pages
1	2 level lookup	1	map 1MB pages
2	3 level lookup		
3	4 level lookup		
4 to 7	reserved		

# $S_ASID - CSR 0x101F$

This register contains the address space identifier (ASID) or memory map index (MMI). The ASID is used in this design to select (index into) a memory map in the paging tables. Only the low order eight bits of the register are implemented.

# S\_KEYS - CSR 0x1020 to 0x1027

These eight registers contain the collection of keys associated with the process for the memory lot system. Each key is twenty-one bits in size. All eight registers are searched in parallel for keys matching the one associated with the memory page. Keyed memory enhances the security and reliability of the system.

	20 0
1020	key0
1021	key1
1027	key7

# C0,C1,...C7 (CREGS) - M\_CSR 0x3100 to 0x310F

This set of registers allows access to the code address register array. Since code address registers are larger than 64-bits they are split across two register locations for each code address register.

Reg #	Name	Alternate Name	Reg Tag
0x3100	C0L		128
0x3101	C0H		129
			•••
0x310C	C6L	EIPL	140
0x310D	С6Н	EIPH	141
0x310E	C7L	IPL	142
0x310F	С7Н	IPH	143

# ZS,DS,ES,FS,GS,HS,SS,CS (SREGS) – M\_CSR 0x3120 to 0x3127

These registers reflect the values of the segment selectors currently active in the core. Writing to a selector register triggers a load of the corresponding descriptor cache. The CS selector is read-only.

Reg #	Name	Reg Tag
0x3120	ZS	144
0x3121	DS	145
0x3122	ES	146
0x3123	FS	147
0x3124	GS	148
0x310D	HS	149
0x310E	SS	150
0x310F	CS	151

m0 to  $m7 - U_CSR 0x0130$  to 0x0137

# M\_CR0 (CSR 0x3000) Control Register Zero

This register contains miscellaneous control bits including a bit to enable protected mode.

Bit		Description
0	Pe	Protected Mode Enable: 1 = enabled, 0 = disabled
8 to 13		
16		
30	DCE	data cache enable: 1=enabled, 0 = disabled
32	BPE	branch predictor enable: 1=enabled, 0=disabled
34	WBM	write buffer merging enable: 1 = enabled, 0 = disabled
35	SPLE	speculative load enable (1 = enable, 0 = disable) (0 default)
36		
63	D	debug mode status. this bit is set during an interrupt routine if the
		processor was in debug mode when the interrupt occurred.

This register supports bit set / clear CSR instructions.

### **DCE**

Disabling the data cache is useful for some codes with large data sets to prevent cache loading of values that are used infrequently. Disabling the data cache may reduce security risks for some kinds of attacks. The instruction cache may not be disabled. Enabling / disabling the data cache is also available via the CACHE instruction.

### **BPE**

Disabling branch prediction will significantly affect the cores performance but may be useful for debugging. Disabling branch prediction causes all branches to be predicted as not-taken. No entries will be updated in the branch history table if the branch predictor is disabled.

### WBM bit

Merging of values stored to memory may be disabled by setting this bit. On reset write buffer merging is disabled because it is likely desirable to setup I/O devices. Many I/O devices require updates to individual bytes by separate store instructions. (Write buffer merging is not currently implemented).

### **SPLE**

Enabling speculative loads give the processor better performance at an increased security risk to meltdown attacks.

### M HARTID (CSR 0x3001)

This register contains a number that is externally supplied on the hartid\_i input bus to represent the hardware thread id or the core number.

### M TICK (CSR 0x3002)

This register contains a tick count of the number of clock cycles that have passed since the last reset. Note that this register should not be used for precise timing as the processor's clock frequency may vary for performance and power reasons. The TIME CSR may be used for wall-clock timing as it has its own timing source.

### M SEED (CSR 0x3003)

This register contains a random seed value based on an external entropy collector. The most significant bit of the state is a busy bit.

63	60	59	16	15	0
Sta	ite <sub>4</sub>	~44		sec	$ed_{16}$

State <sub>4</sub>	
Bit	
0	dead
1	test
2	valid, the seed value is valid
3	Busy, the collector is busy collecting a new seed value

# M\_BADADDR (CSR 0x3007)

This register contains the effective address for a load / store operation that caused a memory management exception or a bus error. Note that the address of the instruction causing the exception is available in the EIP register.

# M\_BAD\_INSTR (CSR 0x300B)

This register contains a copy of the exceptioned instruction.

# M\_DBADx (CSR 0x3018 to 0x301B) Debug Address Register

These registers contain addresses of instruction or data breakpoints. The registers may also be used as trace triggering address registers.

63		0
	Address <sub>630</sub>	

# M\_DBCR (CSR 0x301C) Debug Control Register

This register contains bits controlling the circumstances under which a debug interrupt will occur.

bits						
3 to 0	Enables a	a specific debug address register to do address matching. If				
	the corres	sponding bit in this register is set and the address	S			
	(instructi	on or data) matches the address in the debug add	dress			
	register tl	nen a debug interrupt will be taken.				
17, 16	This pair	of bits determine what should match the debug	address			
	register z	ero in order for a debug interrupt to occur.				
	17:16					
00 match the instruction address						
	01	match a data store address				
	10	reserved				
	11	match a data load or store address				
19, 18	This pair	of bits determine how many of the address bits	need to			
	match in order to be considered a match to the debug address					
	register.	These bits are ignored when matching instruction	n addresses,			
	which are	e always half-word aligned.				
	19:18		Size			
	00	all bits must match	byte			
	01	all but the least significant bit should match	char			
	10	all but the two LSB's should match	tetra			
	11	all but the three LSB's should match	octa			
23 to 20	Same as	16 to 19 except for debug address register one.				
27 to 24		16 to 19 except for debug address register two.				
31 to 28	Same as	16 to 19 except for debug address register three.				
32 to 35	Trace ena	able on address register				
36	Enable branch compression for trace.					
55 to 62	These bits are a history stack for single stepping mode. An exception					
		matically disable single stepping mode and recor				
	step mode state on stack. Returning from an exception pops the					
		p mode state from the stack.				
63	This bit e	nables SSM (single stepping mode)				

# M\_DBSR (CSR 0x301D) - Debug Status Register

This register contains bits indicating which addresses matched. These bits are set when an address match occurs and must be reset by software.

bit	
0	matched address register zero
1	matched address register one

2	matched address register two
3	matched address register three
63 to 4	not used, reserved

### M TVEC – CSR 0x3030 to 0x3037

These registers contain the address of the exception handling routine for a given operating level. TVEC[3] (0x3036) is used directly by hardware to form an address of the debug routine. The lower eight bits of TVEC[3] are not used. The lower bits of the exception address are determined from the operating level. TVEC[0] to TVEC[2] are used by the REX instruction. The low half of the register contains the offset of the exception processing routine. The high half of the register contains the selector value of the exception processing routine.

A sync instruction should be used after modifying one of these registers to ensure the update is valid before continuing program execution.

Reg #	
0x3030	TVEC[0] low
0x3031	TVEC[0] high
0x3036	TVEC[3] low
0x3037	TVEC[3] high

# M\_PM\_STACK - CSR 0x3040

This register contains an eight-entry operating mode and interrupt mask stack. When an exception or interrupt occurs, this register is shifted to the left by eight bits and the low order bits are set according to the exception mode, when an RTE instruction is executed this register is shifted to the right by eight bits. On RTE the last stack entry is set to \$3F masking all interrupts on stack underflow. The low order eight bits represent the current operating mode and interrupt mask.

63	8	7 6	5 4	3 1	0
<seven groups="" more=""></seven>		~2	OM	IPL	IM

OM = operating mode, 0 to 4

IPL = interrupt priority level

IM = interrupt mask

### M SCRATCH - CSR 0x3041

This is a scratchpad register. Useful when processing exceptions.

### D VSTEP - CSR 0x4046

This register holds the current vector step number. It may need to be saved and restored during exception processing to ensure vector operations work as expected.

# D\_VTMP - CSR 0x4047

This register holds state for an internal temporary register used during vector processing. This register may need to be saved and restored during exception processing.

# $M_GDTB - CSR 0x3050$

The GDTB register holds the base location of the global descriptor table. The descriptor table must be 4kB-byte aligned.

63		0
	Table Address <sub>7512</sub>	

Note that the global descriptor table must be located in the low 76-bits of the physical address space. The address of the GDT is a physical address.

# M\_GDTL - CSR 0x3051

The GDTB register holds the size in bytes of the global descriptor table. The descriptor table must be 4kB-byte aligned. The global descriptor table has a maximum of 8388608 entries.

63	28	27	0
	~36	$\mathrm{Size}_{28}$	

### M LDT – CSR 0x3052

The LDT register holds the selector for the local descriptor table. Register tag #153.

31	24	23	22		0
PI	<b>-</b> 8	T		Index <sub>23</sub>	

## M\_KYT - CSR 0x3053

The KYT register holds the selector for the memory key table. Register tag #154.

31	24	23	22		0
PI		T		Index <sub>23</sub>	

### M TCB - CSR 0x3054

This register holds the selector for the currently active task control block. Register tag #155.

31	24	23	22		0
$PL_8$		T		Index <sub>23</sub>	

# Hardware Queues

There are sixteen hardware FIFO queues. Queue #15 is used to implement instruction tracing. The queues are accessible with the PUSHQ, POPQ, PEEKQ, and STATQ system instructions.

# **Operating Modes**

The core operates in one of four basic modes: application/user mode, supervisor mode, hypervisor mode or machine mode. Machine mode is switched to when an interrupt or exception occurs, or when debugging is triggered. On power-up the core is running in machine mode. An RTI instruction must be executed to leave machine mode after power-up.

A subset of instructions is limited to machine mode.

# **Exceptions**

# **External Interrupts**

There is little difference between an externally generated exception and an internally generated one. An externally caused exception will set the exception cause code for the currently fetched instruction.

There are eight priority interrupt levels for external interrupts. When an external interrupt occurs the mask level is set to the level of the current interrupt. A subsequent interrupt must exceed the mask level to be recognized.

# Polling for Interrupts

To support code that needs to run with interrupts disabled an interrupt polling instruction (PFI) is provided in the instruction set. For instance, the system could be running a high priority task with interrupts disabled. There may be sections of code where it is possible to process an interrupt however. In some code environments, it is not enough to disable and enable interrupts around critical code. The code must be effectively run with interrupt disabled all the time. This makes it necessary to poll for interrupts in software. For instance, stack prologue code may cause false pointer matches for the garbage collector because stack space is allocated before the contents are defined. If the GC scan occurs on this allocated but undefined area of memory, there could be false matches.

# Effect on Machine Status

The operating mode is always switched to machine mode on exception. It is up to the machine mode code to redirect the exception to a lower operating mode when desired. Further exceptions at the same or lower interrupt level are disabled automatically. Machine mode code must enable interrupts at some point.

# **Exception Stack**

The current register set, operating mode and interrupt enable bits are pushed onto an internal stack when an exception occurs. This stack is only eight entries deep as that is the maximum amount of nesting that can occur. Further nesting of exceptions can be achieved by saving the state contained in the exception registers.

# **Exception Vectoring**

Exceptions are handled through a vector table. The vector table has four entries, one for each operating level the core may be running at. The location of the vector table is determined by TVEC[3]. If the core is operating at mode three for instance and an interrupt occurs vector table address number three is used for the interrupt handler. Note that the interrupt automatically switches the core to operating mode three. An exception handler at the machine level may redirect exceptions to a lower-level handler identified in one of the vector registers. More specific exception information is supplied in the cause register.

Operating Level	Address (If TVEC[3] contains \$FFC0000)	
0	\$FFC0000	Handler for operating level zero
1	\$FFC0020	
2	\$FFC0040	
3	\$FFC0060	

## Reset

The core begins executing instructions at address \$F...FC0100. All registers are in an undefined state. Register set #0 is selected.

# Precision

Exceptions in Thor2021 are precise. They are processed according to program order of the instructions. If an exception occurs during the execution of an instruction, then an exception field is set in the reorder buffer. The exception is processed when the instruction commits which happens in program order. If the instruction was executed in a speculative fashion, then no exception processing will be invoked unless the instruction makes it to the commit stage.

# **Exception Cause Codes**

The following table outlines the cause code for a given purpose. These codes are specific to Thor2021. Under the HW column an 'x' indicates that the exception is internally generated by the processor; the cause code is hard-wired to that use. An 'e' indicates an externally generated interrupt, the usage may vary depending on the system.

Cause		HW	Description
Code			
0			no exception
1	IBE	X	instruction bus error
2	EXF	X	Executable fault
4	TLB	X	tlb miss
			FMTK Scheduler
128		e	
129	KRST	e	Keyboard reset interrupt
130	MSI	e	Millisecond Interrupt
131	TICK	e	
156	KBD	e	Keyboard interrupt
157	GCS	e	Garbage collect stop
158	GC	e	Garbage collect
159	TSI	e	FMTK Time Slice Interrupt
3			Control-C pressed
20			Control-T pressed

26			Control-Z pressed	
			Connot be pressed	
32	SSM	X	single step	
33	DBG	X	debug exception	
34	TGT	X	call target exception	
35	MEM	X	memory fault	
36	IADR	X	bad instruction address	
37	UNIMP	X	unimplemented instruction	
38	FLT	X	floating point exception	
39	СНК	X	bounds check exception	
40	DBZ	X	divide by zero	
41	OFL	X	overflow	
47				
48	ALN	X	data alignment	
49	KEY	X	memory key fault	
50	DWF	X	Data write fault	
51	DRF	X	data read fault	
52	SGB	X	segment bounds violation	
53	PRIV	X	privilege level violation	
54	CMT	X	commit timeout	
55	BT	X	branch target	
56	STK	X	stack fault	
57	CPF	X	code page fault	
58	DPF	X	data page fault	
60	DBE	X	data bus error	
61	PMA	X	physical memory attributes check fail	
62	NMI	X	Non-maskable interrupt	
225	FPX_IOP	X	Floating point invalid operation	
226	FPX_DBZ	X	Floating point divide by zero	
227	FPX_OVER	X	floating point overflow	
228	FPX_UNDER	X	floating point underflow	
229	FPX_INEXACT	X	floating point inexact	
231	FPX_SWT	X	floating point software triggered	
239			Software exception handling	
240	SYS		Call operating system (FMTK)	
241			FMTK Schedule interrupt	
242	TMR	X	system timer interrupt	
243	GCI	X	garbage collect interrupt	
253	RST	X	reset	
254	NMI	X	non-maskable interrupt	
255	PFI		reserved for poll-for-interrupt instruction	

## **DBG**

A debug exception occurs if there is a match between a data or instruction address and an address in one of the debug address registers.

## **IADR**

This exception is currently not implemented but reserved for the purpose of identifying bad instruction addresses. If the two least significant bits of the instruction address are non-zero then this exception will occur.

## **UNIMP**

This exception occurs if an instruction is encountered that is not supported by the processor. It may also occur if there is an attempt to use an instruction in a mode that does not support it.

## **OFL**

If an arithmetic operation overflows (multiply, add, or shift) and the overflow exception is enabled in the arithmetic exception enable register then an OFL exception will be triggered.

## **KEY**

This fault will occur if an attempt is made to access memory for which the app does not have the key.

## FLT

A floating-point exception is triggered if an exceptional condition occurs in the floating-point unit and the exception is enabled. Please see the section on floating-point for more details.

# DRF, DWF, EXF

Data read fault, data write fault, and execute fault are exceptions that are returned by the memory management unit when an attempt is made to access memory for which the corresponding access type is not allowed. For instance, if the memory page is marked as non-executable an attempt is made to load the instruction cache from the page then an execute fault EXF exception will occur.

## CPF, DPF

The code page fault and data page fault exceptions are activated by the mmu if the page is not present in memory. Access may be allowed but simply unavailable. These faults are not currently implemented.

## **PRIV**

Some instructions and CSR registers are legal to use only at a higher operating level. If an attempt is made to use the privileged instruction by a lower operating level, then a privilege violation exception may occur. For instance, attempting to use RTI instruction from user operating level.

## STK

If the value loaded into one of the stack pointer registers (the stack pointer sp or frame pointer fp) is outside of the bounds defined by the stack bounds registers, then a stack fault exception will be triggered.

## **DBE**

A timeout signal is typically wired to the err\_i input of the core and if the data memory does not respond with an ack\_i signal fast enough an error will be triggered. This will happen most often when the core is attempting to access an unimplemented memory area for which no ack signal is generated. When the err\_i input is activated during a data fetch, an exception is flagged in a result register for the instruction. The core will process the exception when the instruction commits. If the instruction does not commit (it could be a speculated load instruction) then the exception will not be processed.

## **PMA**

The addressed memory did not pass the physical memory attributes testing. For example a write operation attempted to a ROM address space.

## **IBE**

A timeout signal is typically wired to the err\_i input of the core and if the instruction memory does not respond with an ack\_i signal fast enough and error will be triggered. This will happen most often when the core is attempting to access an unimplemented memory area for which no ack signal is generated. When the err\_i input is activated during an instruction fetch, a breakpoint instruction is loaded into the cache at the address of the error.

## **NMI**

Non-maskable interrupt.

## BT

The core will generate the BT (branch target) exception if a branch instruction points back to itself. Branch instructions in this sense include jump (JMP) and call (CALL) instructions.

# Segmentation

## Overview

Segmentation is a low overhead means of memory protection and virtualization. Providing separate protected address spaces for different applications is the job of the operating system. Ideally segmentation hardware should not be visible to the application. The application should appear as though it has a flat memory model. The core contains eight segment registers. The segmentation system is managed via a combination of hardware and software. Up to 256 privilege levels are available.

# Privilege levels

Memory access is available according to privilege levels. The segmentation system allows up to 256 privilege levels.

## Usage

The segment register to use during address formation for data addresses is identified by a field in the instruction. This field is set to default values by the assembler. For code addresses segment register #7 (the CS) is always used.

 If segmentation is not desired then segmentation can effectively be ignored by setting all the segment registers to zero. The processor can also be built without segmentation by commenting out the 'SEGMENTATION' definition.

# Software Support

Segmentation is software supported. A software implementation allows a high degree of flexibility when implementing the segmentation model. Loading a value into a selector register causes a software segmentation exception to occur. The exception routine then loads the segment base, limit and access rights from a table in memory. It's up to the system level software to determine if protection rules are violated.

Segment registers may only be transferred to or from one of the general-purpose registers. The mtspr and mfspr instructions can be used to perform the move. A segment register may also be loaded using the LDIS instruction. After loading a segment register the instruction stream should be synchronized with a memory barrier (MEMSB) to ensure the segment value can be ready for a following memory operation.

There are two vectors in the vector table reserved for implementing far subroutine call and return instructions.

## **Address Formation:**

Non-segmented address bits 0 to 11 pass through the segmentation module unchanged. Address bits 63 to 12 are added to the contents of the segment register to form the final segmented address. Note that there is no shift associated with the segment addition. Future implementations of the processor may include additional low order address bits in the segment register to allow a finer grain for memory page / paragraph size.

Address[63:12]	Address[11:0]					
+	+					
Segment register value[63:12]	00012					
=						
Segmented address[63:0]						


# Selecting a segment register

A specific segment register for a memory operation may be selected using a segment prefix in assembler code. Segment prefixes apply to data addresses only. Code addresses always use segment register #7 – the code segment. The segment prefix indicator is encoded by a three-bit field in the instruction.

## Selectors

The core uses selectors as a more compact way to represent segment registers. Rather than pass the entire segment descriptor to routines (256 bits) and have each routine check for privilege violations, the core uses 32-bit selectors. Privilege violations are checked for at the time the segment register components (base, limit and access rights) are loaded into the descriptor cache. The selector includes a field identifying the privilege level, and a second field identifying which segment descriptor the selector is associated with. The selector format is shown below.

## **Selector Format:**

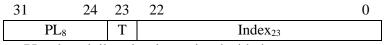

PL<sub>8</sub>: the privilege level associated with the segment

Index<sub>23</sub>: the index into the descriptor table

T: 0 = global, 1 = local descriptor table

## Selector Registers

There are eighteen selector registers.

#	Reg	Usage
0	ZS	
1	DS	data selector
2	ES	
3	FS	
4	GS	
5	HS	
6	SS	stack selector
7	CS	code selector
8	PMA0	physical memory attributes
9	PMA1	
10	PMA2	
11	PMA3	
12	PMA4	
13	PMA5	
14	PMA6	
15	PMA7	
16	LDT	local descriptor table selector
17	KYT	memory key table selector

# **Descriptor Cache**

If every memory access had to incur another memory access to load descriptor information processing speed would be adversely affected. To avoid additional memory access descriptors selected by selectors are cached in a descriptor cache for the selector register. The descriptor cache is only loaded when the value in the selector register is updated. Moving a value to a selector register with the MTSEL instruction causes the descriptor cache to be loaded from memory.

# Non-Segmented Code Area

The address range defined as 64'hFxxxxxxxxxxxxxxx (the top nibble is 'F') is a non-segmented code area. This area allows the operating system to work without paying attention to the code segment. Interrupt and exception vectors should vector into the non-segmented code area. The only way to change the code segment is by transferring to the operating system via a sys call instruction.

# Changing the Code Segment

The only way to change the code segment is by transferring to the operating system via a sys call instruction. The operating system, while operating in the non-segmented code area, can alter the code segment without causing a transfer of control. The operating system establishes the code segment for a task while running in the non-segmented code area. To support far subroutine calls and returns there are vectors in the vector table that allow implementation of a far call or return.

# The Descriptor Table

The descriptor table is a software managed table that contains information on the location and size for segments in the form of memory descriptors. Each descriptor is 32 bytes in size. Memory descriptor entries in the table have the following format:

	255 236	235 192	191 128	127 64	63 0		
w0	ACR <sub>20</sub>	~44	Limit <sub>64</sub>	~64	Base <sub>64</sub>		
w1	ACR <sub>20</sub>	~44	Limit <sub>64</sub>	~64	Base <sub>64</sub>		

The descriptor table may contain other types of descriptors beyond basic memory descriptors, such as call gates.

The base address of, and the number of entries in the descriptor table is contained in the LDT or GDT special purpose registers. The descriptor table may be updated with regular load and store instructions when the processor is at privilege level zero.

32-bit selectors are used to index into the table to determine the characteristics of the segment.

#### Memory Descriptors

Memory descriptors describe the location and size of memory segments. They have the following format:

n+3	ACR <sub>20</sub>	~44
n+2		Limit <sub>630</sub>
n+1		~64
n		Base <sub>630</sub>

#### The Access Rights Field (ACR<sub>16</sub>) – Memory Descriptor

	9		10,	,		/							
19	18	17	16	15	14	13	12	11	4	3	2	1	0

P	Sys Stk	Α	С	R	W	X	$\mathrm{DPL}_8$	Con	U2	U1	U0	1
---	---------	---	---	---	---	---	------------------	-----	----	----	----	---

P: 1 = segment present, 0 = segment not present

Sys: 0 = system descriptor, 1 = memory descriptor

Stk: 1 = stack segment

A: 1= accessed

C: 1 = cacheable (ignored for executable segments which are always cached)

R: 1 = readable

W: 1 = writeable

X: 1 = executable, 0 = data

 $DPL_8 = descriptor\ privilege\ level$ 

Con: 1 =conforming code segment

U2: available for OS use U1: available for OS use U0: available for OS use

#### Typical Values for ACR

8D000 – executable, readable code segment, privilege level zero

8E000 – read/writeable data segment, privilege level zero

AE000 – read / writeable stack segment, privilege level zero

#### Stack Segment Descriptors

Stack segment descriptors describe the location and limits of stack segments. They have the following format:

n+3	ACR <sub>20</sub> Depth <sub>44</sub>							
n+2	Upper Limit <sub>630</sub>							
n+1		~64						
n		Base <sub>630</sub>						

A stack segment descriptor is almost the same as a memory segment descriptor except that it has a stack depth associated with it. Bit 17 of the ACR for the data descriptor is set. The lower limit of the stack segment is the upper limit minus the stack depth. If either bounds are exceeded a stack fault occurs rather than a bounds violation. This provides the capacity to expand the stack. One limitation of this mechanism is that the stack is limited to 44 address bits (16TB). Note that the stack is always word aligned so the upper and lower limits represent word boundaries.

# **System Segment Descriptors**

System descriptors are identified by having bit 18 of the access rights set to one. There are potentially sixteen different system descriptor types.

### The Access Rights Field (ACR<sub>20</sub>) – System Descriptor

19 18	17 1	16 15	14	13	12	11 4	3	2	1	0
-------	------	-------	----	----	----	------	---	---	---	---

P	1 ~	A	Type <sub>4</sub>	$\mathrm{DPL}_8$	~	U2	U1	U0	
---	-----	---	-------------------	------------------	---	----	----	----	--

Type <sub>4</sub>	Gate	
0	unused	
1	PTA descriptor	specifies location and size of root page table
2	LDT descriptor	specifies location and size of local descriptor table
3	KYT descriptor	specifies location and size of memory key table
4	Call gate	
5	Task Gate	
6	Interrupt Gate	
7	Trap gate	

## PTA Descriptor

The PTA descriptor establishes the location and size of the root page table in memory. The base address must be 4kB aligned.

n+3	ACR <sub>20</sub>	~44				
n+2	Limit <sub>63.0</sub>					
n+1	~64					
n	Base <sub>6312</sub>				~7	

#### LDT Descriptor

The LDT descriptor establishes the location and size of the local descriptor table in memory.

n+3	ACR <sub>20</sub>	~44
n+2	~36	Size <sub>270</sub>
n+1	~64	
n	Base <sub>630</sub>	

#### KYT Descriptor

The KYT descriptor establishes the location and size of the memory key table in memory.

n+3	ACR <sub>20</sub>	~44
n+2	Limit <sub>630</sub>	
n+1	~64	
n		Base <sub>630</sub>

#### Call Gate Descriptor

n+3	$ACR_{20}$	~44	
n+2		$N_5$	Selector <sub>310</sub>
n+1		~64	
n		Offset <sub>630</sub>	

# Segment Load Exception

Moving a value to a selector register (a move to SPR #32 to 38,40) triggers a segment load exception to allow the segment descriptor to be loaded from one of the descriptor tables. This exception is triggered for a LDIS or MTSPR instruction. There is a separate exception vector (vectors #256 to 264) to handle each segment register. The selector value being loaded into the segment register is reflected in the ARG1 special purpose register.

# **Segment Bounds Exception**

If an address is greater than or equal to the limit specified in the segment limit register then a segment limit exception occurs. This applies for all segments including code and data segments.

# **Segment Usage Conventions**

Segment register #7 is the code segment (CS) register. All program counter addresses are formed with the code segment register unless the upper nibble of the address is 'F' in which case the code segment is ignored.

Segment register #6 is the stack segment (SS) register by convention. Future versions of the core may use this register implicitly for stack accesses. The assembler automatically selects the stack

segment when one of the stack pointer registers is specified in the instruction. Segment register #1 is the data segment (DS) by convention. The data segment is selected as the segment register for memory operations when the stack segment is not selected.

# Power-up State

On reset the value in the segment registers are undefined. Note that the processor begins executing instructions out of the non-segmented code area as the reset address is 96'hFF000007\_FFFFFFFFFC0100. One of the first tasks of the boot program would be to initialize the segment registers to known values. The segment register must be setup to perform data accesses properly.

# **Segment Registers**

Num		Long name	Comment
0	ZS	zero (NULL) segment	by convention contains zero
1	DS	data segment	by convention – default for loads/stores
2	ES	extra segment	by convention
3	FS		
4	GS		
5	HS		
6	SS	Stack segment	default for stack load/stores
7	CS	Code segment	always used for code addressing

## TLB – Translation Lookaside Buffer

## **Overview**

The page map is limited in the translations it can perform because of its size. The solution to allowing more memory to be mapped is to use main memory to store the translations tables, then cache address translations in a translation look-aside buffer or TLB. This is sometimes also called an address translation cache ATC. The TLB offers a means of address virtualization and memory protection. A TLB works by caching address mappings between a real physical address and a virtual address used by software. The TLB deals with memory organized as pages. Typically, software manages a paging table whose entries are loaded into the TLB as translations are required.

# Size / Organization

The TLB has 1024 entries per set. The size was chosen as it is the size of one block ram for 32-bit data in the FPGA. This is quite a large TLB. Many systems use smaller TLBs. There is not really a need for such a large one, however it is available.

The TLB is organized as a four-way set associative cache.

## What is Translated

The TLB processes all user mode addresses including both instruction and data addresses. It is known as a *unified* TLB. Addresses in other modes of operation are not translated. Additionally, virtual addresses with the top forty bits set are not translated to allow access to the BIOS and system rom.

# **Page Size**

Because the TLB caches address translations it can get away with a much smaller page size than the page map can for a larger memory system. 4kB is a common size for many systems. In this case the TLB uses 4kB pages to match the size of pages for keyed memory and segmentation. For a 512MB system (the size of the memory in the test system) there are 131,072 4kB pages.

# **Management**

The TLB unit is a software managed TLB. When a translation miss occurs, an exception is generated to allow software to update the TLB. It is left up to software to decide how to update the TLB. There may be a set of hierarchal page tables in memory, or there could be a hash table used to store translations.

The TLB is updated using the TLBRW instruction which both reads and writes the TLB. More descriptive text is present at the TLBRW instruction description.

# Flushing the TLB

The TLB maintains the address space (ASID) associated with a virtual address. This allows the TLB translations to be used without having to flush old translations from the TLB during a task switch.

#### Global Bit

In addition to the ASID the TLB entries contain a bit that indicates that the translation is a global translation and should be present in every address space.

# PAM – Page Allocation Map

## **Overview**

Memory is organized into 131,072 4kB pages.

The PAM is a software structure made up of 131,072 bit-pairs stored in memory. There is a bit pair for each possible physical memory page. The PAM is used by software to manage the allocation of physical pages of memory.

# **Memory Usage**

Total memory used by the PAM is 32kB.

# **Organization**

The PAM is organized as a string of bit-pairs, one pair for each physical memory page. Bit pairs are used rather than single bits to mark allocated pages as it is convenient to also mark runs of pages. Marking runs of pages using bit-pairs makes it possible to free the pages of a previous allocation.

Bit-Pair Value	Meaning
0	Page of memory is free, available for use.
1	reserved
2	Page is allocated, end of run of pages
3	Page is allocated

# PMA - Physical Memory Attributes Checker

## **Overview**

The physical memory attributes checker is a hardware module that ensures that memory is being accessed correctly according to its physical attributes.

Most of the entries in the table are hard-coded and configured when the system is built.

Physical memory attributes checking is applied in all operating modes.

# **Register Description**

Regno	Bits		
00	64	LB0	lower bound - address bits 4 to 67 of the physical address range
08	64	UB0	upper bound - address bits 4 to 67 of the physical address range
10	16	AT0	memory attributes
18	~	~	reserved
			6 more register sets
E0	64	LB7	lower bound - address bits 4 to 67 of the physical address range
E8	64	UB7	upper bound - address bits 4 to 67 of the physical address range
F0	16	AT7	memory attributes
F8	~	~	reserved

## **Attributes**

Bitno		
0	X	may contain executable code
1	W	may be written to
2	R	may be read
3	С	may be cached
4-6	G	granularity  G 0 byte accessible 1 wyde accessible 2 tetra accessible 3 octa accessible

		4 to 7	reserved	
7	~	reserved		
8-15	T	device type (rom, dram, eeprom, I/O, etc)		

# **Key Cache**

## **Overview**

Associated with each page of memory is a memory key. To access a page of memory the memory key must match with one of the keys in the applications keyset. The keyset is maintained in the keys CSRs. The key size of 20 bits is a minimum size recommended for security purposes.

The key associated with each memory page is stored in a table in main memory. Each key occupies a tetra-byte of memory to keep caching simple. So that two memory accesses are not required to access a page of memory this table of keys is cached. When a page of memory is accessed the key cache is accessed in parallel.

The key cache is a direct mapped cache organized as 256 lines of 16 keys. Key values are stored in LUT rams. 256 address tags are stored in LUT ram.

# **Card Memory**

## **Overview**

Also present in the memory system is Card memory. The card memory is a telescopic memory which reflects with increasing detail where in the memory system a pointer write has occurred. This is for the benefit of garbage collection systems. Card memory is updated using a write barrier when a pointer value is stored to memory.

# **Organization**

Memory is divided into 256-byte card memory pages. Each card has a single byte recording whether a pointer store has taken place in the corresponding memory area. To cover a 512MB memory system 2MB card memory is required at the outermost layer. The outer most 2MB card memory layer is itself divided into 4096 256-byte card pages. Note that each byte represents the pointer store status for a 256B region. The 4096B memory is further resolved to single octa indicating if any pointer store has taken place. Thus, for a 512MB memory system a three-level card memory is used.

Layer	Resolving Power	
0	2 MB	256B regions
1	4 kB	128kB regions
2	8 B	64 MB regions

There is only a single card memory in the system, used by all tasks.

## Location

Card memory must be based at physical address zero, extending up to the amount of card memory required. This is so that the address calculation of the memory update may be done with a simple right-shift operation.

# **Operation**

As a program progresses it writes pointer values to memory using the write barrier. Storing a pointer triggers an update to all the layers of card memory corresponding to the main memory location written. A byte is set in each layer of the card memory system corresponding to the memory location of the pointer store.

The garbage collection system can very quickly determine where pointer stores have occurred and skip over memory that has not been modified.

# Sample Write Barrier

```
; Milli-code routine for garbage collect write barrier.
```

; Usable with up to 64-bit memory systems.

; Three level card memory

:

#### GCWriteBarrier:

···		
STO	a0,[a1]	; store the value to memory at a1
SRL	a1,a1,#8	; compute card address
STB	x0,[a1]	; clear bit in card memory
SRL	a1,a1,#8	; repeat for each table level
STB	x0,[a1]	
SRL	a1,a1,#8	
STB	x0,[a1]	
; more stores	as needed	
JMP	ra1	

# System Memory Map

There are several components to the system which use tables in memory. These tables are statically allocated at the time the system is built. The table sizes depend on the size of main memory. The card memory table must be located at address zero. So, it is probably best to group the tables together at the low end of memory.

Address	Usage	
\$00000000 to \$001FFFFF	Card Memory (2 MB)	
\$00210000 to \$0022FFFF	PAM (128kB 2 copies)	

\$00280000 to \$0029FFFF	Key memory (128 kB)	

# **Debugging Unit**

## Overview

The Thor2021 has several debug features including debug exceptions on address matches and instruction tracing. Instruction trace trigger registers are shared with the debug address registers. Which function is triggered on an address match is controlled in the debug control register.

# **Instruction Tracing**

Instruction tracing is enabled by setting the trace enable bit (bit 32 to 35) for the corresponding debug address match register. Tracing will begin when an address match occurs and continue until the trace buffer is full. The trace queue is 8kB in size allowing thousands of instructions to be traced.

# Trace Queue Entry Format

The trace queue stores both complete instruction pointer addresses and branch taken-not-taken (TNT) history. The low order two bits of the trace entry indicate the type of record stored by the entry. There are currently two record types. Record type zero is an instruction pointer address. Record type one is a history record for branches.

111				2	1	0					
					Rec	type <sub>2</sub>					
~14	~ <sub>14</sub> Selector Value <sub>32</sub> Instruction Pointer bits 0 to 63										
111		9	8	2	1	0					
	Branch Taken-Not-Taken History <sub>103</sub> count <sub>7</sub>										

Up to 103 bits of branch TNT history may be stored in a single record. The number of bits stored is recorded in bits 2 to 8 of the record. After four full branch TNT history records, the trace will record the current instruction address in whole.

## Trace Readback

A trace of instructions executed may be read back from the trace queue using the PEEKQ and POPQ instructions. The processor trace queue is accessible as queue number 15. Queue 15 contains the raw history record. Software should get the status using the STATQ instruction to see if data is available, then pop queue 15 to get the data record.

# **Instruction Set Description**

## Overview

Like the original Thor core, the instruction set is variable length. Instructions vary from two to eight bytes in length. Commonly used instructions often have short forms. While adding complexity to the processor, variable length instructions make better use of the cache.

# Root Opcode

The root opcode determines the class of instructions executed. Some commonly executed instructions are also encoded at the root level to make more bits available for the instruction. The root opcode is always present in all instructions as the lowest eight bits of the instruction. The instruction length is determined entirely by the value of the root opcode.

							,	•
31	21	20	15	14	9	8	7	0
Consta	ant <sub>11</sub>	R	$\overline{a_6}$	R	t <sub>6</sub>	v	Opc	ode <sub>8</sub>

## **Vector Instruction Indicator**

The processing core needs to know if an instruction is a vector instruction before it is fully decoded. Depending on if the instruction is a vector instruction, it may be re-decoded and sent into the pipeline multiple times. The processor needs to know very quickly and simply at the instruction fetch stage if the instruction is a vector operation. So, to help things along Thor2021 encodes this information in bit 8 of all instructions. If bit 8 is a '1' then the instruction is a vector instruction. See the sample instruction below.

# Target Register Spec

Most instructions have a target register. The register spec for the target register is usually in the same position, bits 9 to 14 of an instruction. If the instruction is a vector instruction, then the target register will be a vector register, otherwise it is a scalar register.

				•						
31	21	20	15	14	9	8	7	0		
Consta	$nt_{21}$	R	$a_6$	Rt	t <sub>6</sub>	V	Opc	ode <sub>8</sub>		

# **Register Formats**

# **R1** (one source register)

31	25	24	22	21	20	15	14	9	8	7	0
Fui	nc <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	v	Opc	ode <sub>8</sub>

# **R1L** (one source register)

39	33	32 28	27	25	24	22	21	20	15	14	9	8	7	0
Fun	C <sub>7</sub>	<b>~</b> <sub>5</sub>	Rı	$m_3$	n	13	Z	R	$a_6$	R	t <sub>6</sub>	v	Opc	ode <sub>8</sub>

# **R2** (two source register)

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
Fur	1C7	$m_3$	Z	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	Rt	6	v	Opc	ode <sub>8</sub>

# **R2L** (two source register)

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
Fur	1C <sub>7</sub>	<b>~</b> <sub>5</sub>	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	Opcode <sub>8</sub>

# **R3** (three source register)

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
Func <sub>4</sub>	Rm <sub>3</sub>	m <sub>3</sub>	Z	$Tc_2$	Rce	6	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	v	Opc	ode <sub>8</sub>

# Arithmetic / Logical / Shift

# **ABS – Absolute Value**

### **Description:**

This instruction takes the absolute value of a register and places the result in a target register.

### **Integer Instruction Format: R1**

Both the source and target registers are treated as integer values.

31	25	24	22	21	20	15	14	9	8	7	0			
06	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	V	01	$h_8$			
v: 0 =	v: $0 = \text{scalar}$ , $1 = \text{vector op}$													

### **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

### **Vector Operation**

```
for x=0 to VL-1 if \ (Vm[x]) \ Rt[x]=Ra[x]<0 \ ? \ -Ra[x]:Ra[x] else \ if \ (z) \ Rt[x]=0 else \ Rt[x]=Rt[x]
```

**Execution Units: I** 

**Clock Cycles: 1** 

Exceptions: none

# **ADD - Register-Register**

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions.

**Instruction Format:** R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
04	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>	Ī

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

# **ADDI – Add Immediate**

### Description:

Add a register and a sign extended immediate value and place the sum in the target register. For the vector instruction both Ra and Rt are vector registers. If the Ra register field is zero then the value zero is used for Ra.

Instruction Format: RI

31	21	20	15	14	9	8	7	0
Immediate	100	R	$a_6$	Rt	t <sub>6</sub>	v	0	$4h_8$

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + immediate

**Exceptions:** 

# **ADDIL – Add Immediate Long**

### Description:

Add a register and a sign extended immediate value and place the sum in the target register. For the vector instruction both Ra and Rt are vector registers. If the Ra register field is zero then the value zero is used for Ra.

Instruction Format: RIL

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	$a_6$	Rt	6	V	4	$4h_8$

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + immediate

### **Exceptions:**

#### **Notes:**

For the large immediate instruction, a size of 35 bits for the immediate was chosen as this allows a 64-bit constant to be built in a register using only two instructions.

# **ADDIQ – Add Immediate Quick**

#### Description:

Add a register and a sign extended immediate value and place the sum in the target register. For the vector instruction both Ra and Rt are vector registers. If the Ra register field is zero then the value zero is used for Ra.

Instruction Format: RIQ

23	15	14	9	8	7	0
Immed	liate <sub>90</sub>	Rt	6	v		14h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + immediate

**Exceptions:** 

**Notes:** 

Quite often when incrementing indexes for arrays in loops the source and target registers are the same register. The constant increment is often a small number. This led to the 10-bit immediate format instruction. An even shorter instruction with a two-bit immediate was considered and discarded.

## **ADDIS - Add Immediate Shifted**

#### Description:

Add a register and immediate value and place the sum in the target register. The immediate value is shifted to the left by 32 bits before the addition takes place. This instruction combined with a 35-bit immediate ADDI instruction may be used to build a 64-bit constant.

**Instruction Format: RIS** 

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Rt	6	Ra		v	5	54h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + (immediate << 32)

**Exceptions:** 

**Notes:** 

## AND - Bitwise And

### **Description**:

Perform a bitwise 'and' operation between operands.

**Integer Instruction Format: R2** 

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
081	17	m <sub>3</sub>	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra & Rb

# **ANDC – Bitwise And with Complement**

## **Description**:

Perform a bitwise 'and' with complement operation between operands.

### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
0B	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **Operation:**

 $Rt = Ra \& \sim Rb$ 

# **ANDI – Bitwise And Immediate**

### **Description**:

Perform a bitwise and operation between operands. The immediate constant is one extended before use.

Instruction Format: RI

31	21	20	15	14	9	8	7	0
Immediate <sub>1</sub>	00	R	$a_6$	Rt	6	v	0	9h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **Integer Instruction Format: RM**

Generates a mask consisting of '1's from the mask begin,  $Mb_6$ , for a width determined by  $Mw_6$ , inclusive. Bitwise 'and' the mask with the value in register Ra and store the result in register Rt. The result may be optionally sign extended from bit  $me_6$  to the width of the machine. This instruction is useful for extracting or clearing bit fields.

39 36	35	3433	32	27	26	21	20	15	14	9	8	7	0
$8h_4$	S	~2	M	<b>W</b> 6	M	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	AA	$h_7$

### Operation

#### Rt = Ra & Immediate

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; \& \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

# **ANDIL – Bitwise And Immediate Long**

### **Description**:

Perform a bitwise or operation between operands. The immediate constant is one extended before use.

Instruction Format: RIL

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	-6	Rt	6	V	4	18h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

Operation

Rt = Ra & Immediate

**Vector Operation** 

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; \& \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

# **ANDIS - And Immediate Shifted**

### **Description:**

Bitwise 'and' a register and immediate value and place the sum in the target register. The immediate value is shifted to the left by 32 bits before the addition takes place. This instruction combined with a 35-bit immediate ORI instruction may be used to build a 64-bit constant.

#### **Instruction Format:**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Rt	6	Ra	<b>l</b> 6	v	•	58h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra & (immediate << 32)

**Exceptions:** 

# BCDADD - BCD Add

#### **Description:**

Adds two registers using BCD arithmetic and places the result in a target register. Only the low order byte of the register is used. The result is an eight-bit BCD number.

#### **Instruction Format:**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
00	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$		R	$a_6$	R	$t_6$	V	F:	$5h_8$

**Clock Cycles:** 1

**Execution Units:** ALU #0 only

**Operation:** 

Rt = Ra + Rb

Exceptions: none

# **BCDMUL – BCD Multiply**

### **Description:**

Multiply two registers using BCD arithmetic and places the result in a target register. Only the low order byte of the register is used. The result is an sixteen-bit BCD number.

#### **Instruction Format:**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
02h <sub>7</sub>		$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	F5h <sub>8</sub>	

Clock Cycles: 1

Execution Units: ALU #0 only

**Operation:** 

Rt = Ra \* Rb

# **BCDSUB – BCD Subtract**

### **Description:**

Subtract two registers using BCD arithmetic and places the result in a target register. Only the low order byte of the register is used. The result is an eight-bit BCD number.

#### **Instruction Format:**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
01h <sub>7</sub>		$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	5	R	$a_6$	R	$t_6$	V	F:	$5h_8$

Clock Cycles: 1

**Execution Units:** ALU #0 only

**Operation:** 

Rt = Ra - Rb

# **BFCHG – Bitfield Change**

### **Description**:

Flip the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Rc, and mask end, Me<sub>6</sub>, inclusive. Bitwise exclusive 'or' the mask with the value in register Ra and store the result in register Rt. This instruction is useful for flipping bit fields.

47 44	43	42	37	3635	34	29	2827	26	21	20	15	14	9	8	7	0
Ah <sub>4</sub>	0	M	$[e_6]$	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	AA	Ah <sub>7</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation**

Rt = Ra ^ Immediate

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

# **BFCLR – Bitfield Clear**

### **Description**:

Clear the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Rc, and mask end, Me<sub>6</sub>, inclusive. Bitwise and with the complement of the mask with the value in register Ra and store the result in register Rt.

47 44	43	42	37	3635	34	29	2827	26	21	20	15	14	9	8	7	0
Bh <sub>4</sub>	0	M	$e_6$	$Tc_2$	R	C <sub>6</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	AA	$h_7$

1 clock cycle / N clock cycles (N = vector length)

### **Operation**

Rt = Ra & ~Immediate

### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \ \& \sim Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

## **BFEXT – Bitfield Extract**

### **Description**:

Extract the bits of a bitfield specified beginning at mask begin and extending for mask width and right align the result in the target register. This instruction can perform the SRA and ROR operations in addition to the extract.

#### **Integer Instruction Format: RM**

Rotate the register pair Rb, Ra to the right by Mb<sub>6</sub>. Copy rotated bits 0 to Rc inclusive to the output verbatim, set the remaining bits to the value of rotated bit Rc. Rc contains the width of the bitfield.

47 44	43	42 37	3635	34 29	2827	26 21	20 15	14 9	8	7 0
5h <sub>4</sub>	1	$Me_6$	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	$Rt_6$	V	AAh <sub>7</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation**

Rt = Ra ^ Immediate

### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

# **BFEXTU – Bitfield Extract Unsigned**

### **Description**:

Extract the bits of a bitfield specified beginning at mask begin and extending for mask width and right align the result in the target register. This instruction can perform the SRL and ROR operations in addition to the extract.

#### **Integer Instruction Format: RM**

Rotate the register pair Rb, Ra to the right by Mb<sub>6</sub>. Copy rotated bits 0 to Rc inclusive to the output verbatim, set the remaining bits to zero. Rc contains the width of the bitfield.

47 44	43	42	37	3635	34	29	2827	26	21	20	15	14	9	8	7	0
5h <sub>4</sub>			$Tc_2$	R	.c <sub>6</sub>	$Tb_2$	R	$b_6$	R	$a_6$	R	6	V	AA	$h_7$	

1 clock cycle / N clock cycles (N = vector length)

#### **Operation**

Rt = (Ra & Immediate) ror by Mb

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if\ (Vm0[x])\ Vt[x] = (Va[x]\ \&\ Immediate)\ ror\ by\ Mb$$
 
$$else\ Vt[x] = Vt[x]$$

# **BFFFO** –Find First One

## **Description**:

A bitfield contained in Rb, Ra is searched beginning at the most significant bit to the least significant bit for a bit that is set. The index into the bitfield of the bit that is set is stored in Rt. If no bits are set, then Rt is set equal to -1.

#### **Instruction Format**: BF

47 44	43	42 37	3635	34	29	2827	26	21	20	15	14	9	8	7	0
$1h_4$	0	$Me_6$	$Tc_2$	$Rc_6$		$Tb_2$	R	$b_6$	R	$a_6$	Rı	6	V	AA	Ah <sub>7</sub>

**Clock Cycles:** 

**Execution Units:** Integer

# **BFINS** – Bit-field Insert

### **Description:**

Inserts a bit-field into register Ra located between the mask begin (mb) and mask end (Rc) bits from the low order bits of Rb and stores the result in the target register.

#### **Instruction Format:**

47 44	43	42 37	3635	34	29 2	2827	26 21	20	15	14	9	8	7	0
$0h_4$	0	$Me_6$	$Tc_2$	$Rc_6$	,	$Tb_2$	$Rb_6$	Ra	$a_6$	Rt	6	V	A	$h_7$

Clock Cycles: 1

**Execution Units:** ALU #0 only

# **BFINSI – Bit-field Insert Immediate**

### **Description:**

Inserts a bit-field into register Ra located between the mask begin (mb) and mask end (Rc) bits from an immediate constant in the instruction and stores the result in Rt.

#### **Instruction Format:**

47 44	43	42 37	3635	34	29	28	21	20	15	14	9	8	7	0
$6h_4$	0	$Me_6$	$Tc_2$	Ro	$c_6$	im	m <sub>8</sub>	R	$a_6$	Rı	t <sub>6</sub>	V	A.	Ah <sub>7</sub>

Clock Cycles: 1

**Execution Units:** ALU #0 only

# **BFSET – Bitfield Set**

#### **Description**:

Set the bits of a bitfield specified between mask begin and mask end.

### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Mb<sub>6</sub>, and mask end, Rc, inclusive. Bitwise 'or' the mask with the value in register Ra and store the result in register Rt.

47 44	43	42 37	3635	34 29	2827	26 21	20 15	14 9	8	7 0
9h <sub>4</sub>	0	$Me_6$	$Tc_2$	Rc <sub>6</sub>	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	v	AAh <sub>7</sub>

1 clock cycle / N clock cycles (N = vector length)

### Operation

$$Rt = Ra \mid Immediate$$

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; | \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

# BMAP – Byte Map

#### **Description:**

Bytes are mapped from the 16-byte source Rb, Ra into bytes in the target register. This instruction may be used to permute the bytes in register pair Rb, Ra and store the result in Rt. This instruction may also pack bytes, wydes or tetras. The map is determined by the low order 32-bits of register Rc.

#### **Integer Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$00_{4}$	$Rm_3$	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	v	Opc	code <sub>8</sub>

#### Rc value:

			1916					
$B7_4$	B6 <sub>4</sub>	B5 <sub>4</sub>	B4 <sub>4</sub>	B3 <sub>4</sub>	B2 <sub>4</sub>	B1 <sub>4</sub>	$B0_4$	<= Target byte = Bn

**Operation:** 

**Vector Operation** 

**Execution Units:** I

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

# **BMAPI – Byte Map Immediate**

#### **Description:**

Bytes are mapped from the 16-byte source Rb, Ra into bytes in the target register. This instruction may be used to permute the bytes in register pair Rb, Ra and store the result in Rt. This instruction may also pack bytes, wydes or tetras.

#### **Integer Instruction Format: RIL**

6360	5956	5552	5148	4744	4340	3936	3532	31 29	2827	26 21	20 15	14 9	8	7 0
B7 <sub>4</sub>	B6 <sub>4</sub>	B5 <sub>4</sub>	B4 <sub>4</sub>	B3 <sub>4</sub>	B2 <sub>4</sub>	B1 <sub>4</sub>	$B0_4$	~3	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	4Ch <sub>8</sub>

**Operation:** 

**Vector Operation** 

**Execution Units: I** 

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

# **BMM – Bit Matrix Multiply**

BMM Rt, Ra, Rb

#### **Description**:

The BMM instruction treats the bits of register Ra and register Rb as an 8x8 matrix and performs a bit matrix multiply of the two registers and stores the result in the target register. An alternate mnemonic for this instruction is MOR.

#### **Instruction Format**: R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
Fur	1C <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	028	

Fn <sub>7</sub>	Function
30h	MOR
31h	MXOR
32h	MORT (MOR transpose)
33h	MXORT (MXOR transpose)

#### **Operation**:

**Clock Cycles:** 1

**Execution Units: Integer** ALU

Exceptions: none

#### **Notes:**

The bits are numbered with bit 63 of a register representing I,j=0,0 and bit 0 of the register representing I,j=7,7.

# **BYTNDX** – Byte Index

### **Description:**

This instruction searches Ra, which is treated as an array of eight bytes, for a byte value specified by Rb and places the index of the byte into the target register Rt. If the byte is not found -1 is placed in the target register. A common use would be to search for a null byte. The index result may vary from -1 to +7. The index of the first found byte is returned (closest to zero).

If a vector BYTNDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +511 in the scalar register. Thus, BYTNDX may be used to determine the length of a null termination string in the vector register.

**Instruction Format: RI** 

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
55	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	$02h_{8}$

Clock Cycles: 1

**Execution Units:** Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

# **BYTNDXI** – Byte Index

#### **Description:**

This instruction searches Ra, which is treated as an array of eight bytes, for a byte value specified by an immediate value and places the index of the byte into the target register Rt. If the byte is not found -1 is placed in the target register. A common use would be to search for a null byte. The index result may vary from -1 to +7. The index of the first found byte is returned (closest to zero).

If a vector BYTNDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +511 in the scalar register. Thus, BYTNDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immed	iate <sub>100</sub>	R	$a_6$	Rt	6	v	4	55h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_8 in Ra)$ 

# **CHK – Check Register Against Bounds**

### **Description**:

A register is compared to two values. If the register is outside of the bounds defined by Rb and Rc then an exception will occur.

#### **Instruction Format**: R3

												14 12				
21	$h_4$	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	R	$b_6$	R	$a_6$	~3	cn <sub>3</sub>	V	03	$3h_8$

cn <sub>3</sub>	exception when not
0	Ra >= Rb and $Ra < Rc$
1	Ra >= Rb and $Ra <= Rc$
2	Ra > Rb and Ra < Rc
3	Ra > Rb and Ra <= Rc
4	not $(Ra \ge Rb \text{ and } Ra < Rc)$
5	not $(Ra \ge Rb \text{ and } Ra \le Rc)$
6	not (Ra > Rb and Ra < Rc)
7	not $(Ra > Rb \text{ and } Ra \le Rc)$

Clock Cycles: 1

Exceptions: bounds check

**Notes:** 

The system exception handler will typically transfer processing back to a local exception handler.

# **CHKI – Check Register Against Bounds**

### **Description**:

A register is compared to two values. If the register is outside of the bounds defined by Rb and an immediate value then an exception will occur. Ra must be greater than or equal to Rb and Ra must be less than the immediate.

#### **Instruction Format: CHKI**

63	29	28 27	26	21	20	15	14 12	11 9	8	7	0
Immediate <sub>35</sub>		$Tb_2$	Rt	<b>)</b> 6	R	$a_6$	~3	cn <sub>3</sub>	V	031	18

cn <sub>3</sub>	exception when not
0	Ra >= Rb and $Ra < Rc$
1	Ra >= Rb and $Ra <= Rc$
2	Ra > Rb and Ra < Rc
3	Ra > Rb and Ra <= Rc
4	not $(Ra \ge Rb \text{ and } Ra < Rc)$
5	not $(Ra \ge Rb \text{ and } Ra \le Rc)$
6	not (Ra > Rb and Ra < Rc)
7	not $(Ra > Rb \text{ and } Ra \le Rc)$

## Clock Cycles: 1

Exceptions: bounds check

#### **Notes:**

The system exception handler will typically transfer processing back to a local exception handler.

A seven-bit immediate value may be specified by Tb<sub>2</sub> and Rb.

# **CLMUL – Carry-less Multiply**

## **Description**:

Compute the low order product bits of a carry-less multiply. Both operands must be in registers.

### **Integer Instruction Format: R2**

_	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
	2E	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

4 clock cycles

Exceptions: none

**Execution Units:** ALU

Operations

$$Rt = Ra * Rb$$

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if (Vm[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **CLMULH – Carry-less Multiply High**

## **Description**:

Compute the high order product bits of a carry-less multiply. Both operands must be in registers.

## **Integer Instruction Format: R2**

 39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
2Fh	17	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

4 clock cycles

Exceptions: none

**Execution Units:** ALU

Operations

$$Rt = Ra * Rb$$

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if (Vm[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **CMOVNZ – Conditional Move**

## **Description**:

CMOVNZ moves a value from Rb or Rc depending on the value in Ra. If Ra is true then Rb is moved to Rt, otherwise Rc is moved to Rt.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
06	h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	v	03	$3h_8$

Exceptions: none

**Execution Units: integer** ALU

# **CMP – Compare**

## Description

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as signed numbers.

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
2A	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle

### **Operation:**

$$Rt = Ra < Rb ? -1 : Ra = Rb ? 0 : 1$$

$$\label{eq:for x = 0 to VL - 1} \\ if (Vm[x]) \ Vt[x] = Va[x] < Vb[x] \ ? -1 : Va[x] = Vb[x] \ ? \ 0 : 1 \\ \\ else \ if (z) \ Vt[x] = 0 \\ \\ else \ Vt[x] = Vt[x] \\ \end{aligned}$$

# **CMPI – Compare Immediate**

### **Description**

Compare a register and an immediate value and return the relationship between them.

Both values are treated as signed numbers.

#### **Instruction Format:** RI

31	21	20	15	14	9	8	7	0
Immediate <sub>100</sub>		R	$a_6$	R	t <sub>6</sub>	V	:	50h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

$$Rt = Ra < Imm ? -1 : Ra = Imm ? 0 : 1$$

for 
$$x=0$$
 to  $VL$  - 1 
$$if \ (Vm[x]) \ Vt[x] = Va[x] < Imm \ ? -1 : Va[x] = Imm \ ? \ 0 : 1$$
 
$$else \ if \ (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

# **CMPIL – Compare Immediate Long**

#### **Description**

Compare a register and an immediate value and return the relationship between them.

Both values are treated as signed numbers.

#### **Instruction Format: RIL**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	l6	Rt	6	V	6	$00h_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

$$Rt = Ra < Imm ? -1 : Ra = Imm ? 0 : 1$$

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x]=Va[x] < Imm \ ?-1: Va[x]=Imm \ ? \ 0: 1$$
 
$$else \ if \ (z) \ Vt[x]=0$$
 
$$else \ Vt[x]=Vt[x]$$

# **CMPIS – Compare Immediate Shifted**

### **Description**

Compare a register and an immediate value and return the relationship between them.

Both values are treated as signed numbers.

#### **Instruction Format: RIL**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	6	Rt	6	V	, ,	$70h_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

$$Rt = Ra < Imm ? -1 : Ra = Imm ? 0 : 1$$

for 
$$x=0$$
 to VL - 1 
$$if\ (Vm[x])\ Vt[x]=Va[x] 
$$else\ if\ (z)\ Vt[x]=0$$
 
$$else\ Vt[x]=Vt[x]$$$$

# **CMPU – Compare Unsigned**

## **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as unsigned numbers.

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
2Bl	17	$m_3$	Z	$Tb_2$	Rb	6	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

1 clock cycle

### **Operation:**

$$Rt = Ra < Rb ? -1 : Ra = Rb ? 0 : 1$$

for 
$$x=0$$
 to VL - 1 
$$if\ (Vm[x])\ Vt[x]=Va[x]< Vb[x]\ ?-1:Va[x]=Vb[x]\ ?\ 0:1$$
 
$$else\ if\ (z)\ Vt[x]=0$$
 
$$else\ Vt[x]=Vt[x]$$

# **CNTPOP – Count Population**

CNTPOP r1,r2 CNTPOP v1,v2 CNTPOP r1,vm2

#### **Description:**

Count the number of ones and place the count in the target register.

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) \ Vt[x] = popent(Va[x])$   
else if  $(z) \ Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	V	01	lh <sub>8</sub>

**Execution Units: integer** ALU

# **CNTLZ – Count Leading Zeros**

## **Description**:

Count the number of leading zeros (starting at the MSB) in Ra and place the count in the target register.

## **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
00h	17	n	13	Z	R	$a_6$	Rt	6	v	0.	1 h <sub>8</sub>

#### **Vector Mask Instruction Format: R1**

35 26	25 22	21 18	17 15	1413	12	8	7	0
$00h_{10}$	~4	$0_5$	$Vm_3$	Tt <sub>2</sub>	Rt <sub>5</sub>		3E	Eh <sub>8</sub>

R1 Supported Formats: .o

Clock Cycles: 1

**Execution Units:** Integer ALU

# **COM – Ones Complement**

## **Description:**

Bitwise complement all the bits in the register. 1's become 0's and 0's become 1's. This is an alternate mnemonic for the XOR function.

#### **Instruction Format: RM**

39 36		35	3433	32	27	26	21	20	15	14	9	8	7	0
Ah <sub>4</sub>		14 S		63	36	(	) <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	v	A	$h_7$
1 clock cycle						•	•	•	•	•			•	

#### **Operation**

$$Rt = Ra$$

#### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = \sim Va[x]$$
 
$$else \ Vt[x] = Vt[x]$$

# **CPUID – CPU Identification**

## **Description:**

This instruction returns general information about the core. Register Ra is used as a table index to determine which row of information to return.

#### **Instruction Format:**

2322	20 15	14 9	8	7 0
~2	Ra <sub>6</sub>	Rt <sub>6</sub>	0	41h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** ALU #0 only

**Operation:** 

Rt = Info[Ra]

Index	bits	Information Returned
0	63 to 0	The processor core identification number. This field is determined
		from an external input. It would be hard wired to the number of
		the core in a multi-core system.
2	63 to 0	Manufacturer name first eight chars "Finitron"
3	63 to 0	Manufacturer name last eight characters
4	63 to 0	CPU class "64BitSS"
5	63 to 0	CPU class
6	63 to 0	CPU Name "Thor2021"
7	63 to 0	CPU Name
8	63 to 0	Model Number "M1"
9	63 to 0	Serial Number "1234"
10	63 to 0	Features bitmap
11	31 to 0	Instruction Cache Size (32kB)
11	63 to 32	Data cache size (16kB)

# DIF – Difference

## **Description:**

This instruction computes the difference between two signed values in registers Ra and Rb and places the result in a target Rt register. The difference is calculated as the absolute value of Ra minus Rb.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
181	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

Supported Formats: .o

Clock Cycles: 1

**Execution Units:** Integer

**Operation:** 

Rt = Abs(Ra - Rb)

# **DIV** – **Division**

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. Both operands are treated as signed values. This instruction may cause a divide by zero exception if enabled.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
101	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

**Execution Units:** ALU

Clock Cycles: 20

# **DIVI – Divide by Immediate**

#### **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as signed values.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediat	e <sub>100</sub>	R	$a_6$	Rt	6	V	2	40h <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 20

Exceptions: none

Notes:

# **DIVIL – Divide by Immediate Long**

#### **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as signed values.

#### **Instruction Format: RIL**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	<b>l</b> 6	Rt	6	V		42h <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 20

# **DIVU – Divide Unsigned**

### **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. Both operands are treated as unsigned values.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
11	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	v	02	2h <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 20

Exceptions: none

# **DIVUI – Divide Unsigned by Immediate**

#### **Description**:

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand is an immediate value. Both operands are treated as unsigned values.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immed	diate <sub>100</sub>	R	$a_6$	Rt	6	V		4Fh <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 20 **Exceptions**: none

Notes:

# DIVSU – Divide Signed by Unsigned

## **Description**:

Divide two operand values and place the result in the target register. Both operands are in registers. The register operand Ra is a signed value, Rb is an unsigned value.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
12	2h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb	<b>)</b> 6	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

**Execution Units: ALU** 

Clock Cycles: 20

# **ENOR – Bitwise Exclusive Nor**

## **Description**:

Perform a bitwise 'nor' operation between operands.

## **Integer Instruction Format: R2**

_	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
	021	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

# **EOR – Bitwise Exclusive Or**

## **Description**:

Perform a bitwise 'or' operation between operands.

## **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26 2	1 20	15	14	9	8	7	0
0A	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	R	$a_6$	R	$t_6$	V	02	$2h_8$

1 clock cycle / N clock cycles (N = vector length)

## **EORI – Bitwise Exclusive Or Immediate**

#### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate constant is zero extended before use.

Instruction Format: RI

31	21	20	15	14	9	8	7	0
Immedia	ıte <sub>100</sub>	R	$a_6$	R	t <sub>6</sub>	V	0.	$Ah_8$

1 clock cycle / N clock cycles (N = vector length)

#### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Mb<sub>6</sub>, and mask end, Me<sub>6</sub>, inclusive. Bitwise exclusive 'or' the mask with the value in register Ra and store the result in register Rt. The result may be optionally sign extended from bit Me<sub>6</sub> to the width of the machine. This instruction is useful for flipping bit fields.

	39 36	35	3433	32	27	26	21	20	15	14	9	8	7	0
I	$Ah_4$	S	~2	M	$e_6$	M	$b_6$	R	$a_6$	R	$t_6$	V	A.	Ah <sub>7</sub>

#### Operation

Rt = Ra ^ Immediate

#### **Vector Operation**

for 
$$x = 0$$
 to VL-1 
$$if (Vm0[x]) \ Vt[x] = Va[x] \land Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

# **EORIL – Bitwise Exclusive Or Immediate Long**

#### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate constant is zero extended before use.

Instruction Format: RIL

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra <sub>6</sub>	i	Rt	6	V	4	$Ah_8$

1 clock cycle / N clock cycles (N = vector length)

Operation

Rt = Ra ^ Immediate

**Vector Operation** 

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

**Exceptions**: none

# **EORIS – Exclusive Or Immediate Shifted**

### Description:

Bitwise exclusive 'or' a register and immediate value and place the sum in the target register. The immediate value is shifted to the left by 32 bits before the addition takes place.

**Instruction Format:** 

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Rt	6	Ra	<b>1</b> 6	V	5 <i>A</i>	$h_8$

Clock Cycles: 1

Execution Units: All ALU's

Operation:

 $Rt = Ra \land (immediate << 32)$ 

**Exceptions:** 

**Notes:** 

# LDI - Load Immediate

### Description:

This is an alternate mnemonic for the ADDI instruction where register Ra is zero. Add register zero and a sign extended immediate value and place the sum in the target register. For the vector instruction both Ra and Rt are vector registers. If the Ra register field is zero then the value zero is used for Ra.

Instruction Format: RI

31	21	20	15	14	9	8	7	0
Immedi	ate <sub>100</sub>	0	6	Rt	6	V	(	)4h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + immediate

**Exceptions:** 

**Notes:** 

# **LDIL – Load Immediate Long**

### Description:

This is an alternate mnemonic for the ADDIL instruction where Ra is zero. Add zero and a sign extended immediate value and place the sum in the target register. For the vector instruction both Ra and Rt are vector registers. If the Ra register field is zero then the value zero is used for Ra.

Instruction Format: RIL

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		0	6	Rt	6	V	4	44h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + immediate

**Exceptions:** 

**Notes:** 

For the large immediate instruction, a size of 35 bits for the immediate was chosen as this allows a 64-bit constant to be built in a register using only two instructions.

## MAX - Maximum Value

#### **Description:**

Determines the maximum of two values in registers Ra and Rb and places the result in the target register Rt.

#### **Instruction Format:**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
29	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>	

Clock Cycles: 1

**Execution Units:** ALU #0 only

**Operation:** 

$$\begin{aligned} \text{IF Ra} &< \text{Rb} \\ \text{Rt} &= \text{Rb} \\ \text{else} \\ \text{Rt} &= \text{Ra} \end{aligned}$$

# MIN - Minimum Value

## **Description:**

Determines the minimum of two values in registers Ra and Rb and places the result in the target register Rt.

#### **Instruction Format:**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
28	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	b <sub>6</sub>	R	$a_6$	R	6	V	02	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** ALU #0 only

**Operation:** 

$$\begin{aligned} \text{IF Ra} &< \text{Rb} \\ \text{Rt} &= \text{Ra} \\ \text{else} \\ \text{Rt} &= \text{Rb} \end{aligned}$$

# MOV – Move Register-Register

## **Description:**

This instruction moves one general purpose register to another. This instruction is shorter and uses one less register port than using the OR instruction to move between registers.

#### **Instruction Format:**

23 21	20	15	14	9	8	7	0
~3	R	$a_6$	Rt	t <sub>6</sub>	V	A	$7h_8$

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra

# **MUL – Multiply**

### **Description**:

Multiply two values. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result. The register form of the instruction may cause an overflow exception if the overflow enable bit in the instruction is set.

#### **Integer Instruction Format: R2**

_	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
	06	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

4 clock cycles

Exceptions: none

**Execution Units: ALU** 

Operations

$$Rt = Ra * Rb$$

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) Vt[x] = Va[x] * Vb[x]$   
else if  $(z) Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

# **MUL[O] – Multiply**

### **Description**:

Multiply two values. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result. This form of the instruction may cause an overflow exception if the overflow enable bit in the instruction is set.

#### **Integer Instruction Format: R2L**

47 41	40	39 36	35 33	32 30	29	28 27	26	21	20 15	14	9	8	7	0
06h <sub>7</sub>	О	~4	~3	$m_3$	Z	$Tb_2$	Rb	6	Ra <sub>6</sub>	R	$t_6$	V	12	$2h_8$

4 clock cycles

Exceptions: none

**Execution Units: ALU** 

Operations

$$Rt = Ra * Rb$$

### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) Vt[x] = Va[x] * Vb[x]$   
else if  $(z) Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

**Exceptions**: overflow, if enabled

## MULH – Multiply High

### **Description**:

Compute the high order product of two values. Both operands must be in registers. Both the operands are treated as signed values, the result is a signed result. The register form of the instruction may cause an overflow exception if the overflow enable bit in the instruction is set.

#### **Integer Instruction Format: R2**

$\begin{array}{c c c c c c c c c c c c c c c c c c c $	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
			$m_3$		$-1$ $\mathbf{h}_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

4 clock cycles

Exceptions: none

**Execution Units:** ALU

Operations

$$Rt = Ra * Rb$$

#### **Vector Operation**


for 
$$x = 0$$
 to  $VL - 1$  
$$if (Vm[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ if (z) \ Vt[x] = 0$$
 
$$else \ Vt[x] = Vt[x]$$

## **MULI – Multiply Immediate**

#### **Description**:

Multiply two values. The first operand must be in a register. The second operand may be in a register or may be an immediate value specified in the instruction. Both the operands are treated as signed values, the result is a signed result. The register form of the instruction may cause an overflow exception if the overflow enable bit in the instruction is set.

#### **Integer Instruction Format: RI**



4 clock cycles

**Execution Units**: ALU

**Operation:** 

Rt = Ra \* Immediate

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$  
$$if \ (Vm0[x]) \ Vt[x] = Va[x] * Vb[x]$$
 
$$else \ Vt[x] = Vt[x]$$

# **MULF – Fast Unsigned Multiply**

### **Description**:

Multiply two values located in registers Ra and Rb. Both the operands are treated as unsigned values. The result is an unsigned result. The fast multiply multiplies only the low order 24 bits of the first operand times the low order 16 bits of the second. The result is a 40-bit unsigned product.

#### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
15h	17	$m_3$	Z	Tb <sub>2</sub>	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

**Execution Units:** ALU

**Clock Cycles:** 1

## **MULFI – Fast Unsigned Multiply Immediate**

### **Description**:

Multiply two values. The first operand is in register Ra. The second operand is an immediate value specified in the instruction. Both the operands are treated as unsigned values. The result is an unsigned result. The fast multiply multiplies only the low order 24 bits of the first operand times the low order 16 bits of the second. The result is a 40-bit unsigned product.

#### **Integer Instruction Format: RI**

39 37	36	21	20	15	14	9	8	7	0
~3	Const	ant <sub>16</sub>	Ra	a <sub>6</sub>	Rt	6	v	15	5h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

**Execution Units: ALU** 

**Clock Cycles:** 1

## **MUX – Multiplex**

#### **Description:**

If a bit in Ra is set then the bit of the target register is set to the corresponding bit in Rb, otherwise the bit in the target register is set to the corresponding bit in Rc.

#### **Instruction Format:**

47 44	43 41	40 38	37	3635	34 29	28 27	26	21	20	15	14	11	8	7	0
4h <sub>4</sub>	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	Rc <sub>6</sub>	$Tb_2$	R	$b_6$	Ra	$a_6$	R	$t_6$	v	03h <sub>8</sub>	;

**Clock Cycles:** 1

Execution Units: ALU #0 only

**Operation:** 

$$For \; n = 0 \; to \; 63$$
 
$$If \; Ra_{[n]} \; is \; set \; then$$
 
$$Rt_{[n]} = Rb_{[n]}$$
 
$$else$$
 
$$Rt_{[n]} = Rc_{[n]}$$

Exceptions: none

## NAND - Bitwise Nand

#### **Description**:

Perform a bitwise 'nand' operation between operands.

#### **Integer Instruction Format: R2**

_	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
	00	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	$02h_{8}$	

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

$$Rt = \sim (Ra \& Rb)$$

## **NEG - Negate**

#### **Description:**

This instruction takes the negative of a value contained in a register.

**Instruction Format**: R1

31 25	24 22	21	20 15	14 9	8	7 0	
05h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	$01h_{8}$	

### **Scalar Operation**

$$Rt = -Ra$$

#### **Vector Operation**

for 
$$x = 0$$
 to  $VL - 1$   
if  $(Vm[x]) Vt[x] = -Va[x]$   
else if  $(z) Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

**Notes** 

**Exceptions:** 

### **NOR – Bitwise Nor**

#### **Description**:

Perform a bitwise 'nor' operation between operands.

**Integer Instruction Format: R2** 

39	33	32 30	29	28 27	26 2	21 2	20	15	14	9	8	7	0
011	17	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>		Ra	$a_6$	Rı	6	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

$$Rt = \sim (Ra \mid Rb)$$

# NOT – Logical Not

#### **Description:**

This instruction places a one in the target register if the source register is zero, otherwise zero is placed in the target register. This instruction reduces the source operand to a Boolean value.

### **Integer Instruction Format: R1**

Both the source and target registers are treated as integer values.

31	25	24	22	21	20	15	14	9	8	7	0		
04h <sub>7</sub>   m <sub>3</sub>   z   Ra <sub>6</sub>   Rt <sub>6</sub>   v   01h <sub>8</sub>													
v: 0 = scalar, 1 = vector op													

#### Operation:

$$Rt = !Ra$$

#### **Vector Operation**

for 
$$x = 0$$
 to VL - 1 
$$if (Vm[x]) Rt[x] = !Ra[x]$$
 
$$else if (z) Rt[x] = 0$$
 
$$else Rt[x] = Rt[x]$$

**Execution Units: I** 

**Clock Cycles: 1** 

Exceptions: none

## OR - Bitwise Or

### **Description**:

Perform a bitwise 'or' operation between operands.

**Integer Instruction Format: R2** 

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
091	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

Exceptions: none

# **ORC – Bitwise Or with Complement**

### **Description**:

Perform a bitwise 'or' with complement operation between operands.

**Integer Instruction Format: R2** 

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
03	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>	

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

 $Rt = Ra \mid \sim Rb$ 

## **ORI – Bitwise Or Immediate**

#### **Description**:

Perform a bitwise or operation between operands. The immediate constant is zero extended before use.

Instruction Format: RI

31	21	20	15	14	9	8	7	0
Immediate <sub>100</sub>		R	a <sub>6</sub>	Rt	6	v		09h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Integer Instruction Format: RM**

Generates a mask consisting of '1's from the mask begin, Mb<sub>6</sub>, for a width determined by Mw<sub>6</sub>, inclusive. Bitwise 'or' the mask with the value in register Ra and store the result in register Rt. The result may be optionally sign extended from bit me<sub>6</sub> to the width of the machine. This instruction is useful for inserting or setting bit fields.

39 36	35	3433	32	27	26	21	20	15	14	9	8	7	0
9h <sub>4</sub>	S	~2	M	W <sub>6</sub>	M	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	AA	Ah <sub>7</sub>

#### Operation

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \ | \ Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

# **ORIL – Bitwise Or Immediate Long**

### **Description**:

Perform a bitwise or operation between operands. The immediate constant is zero extended before use.

Instruction Format: RIL

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		R	$a_6$	Rt	6	v	4	48h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

Operation

 $Rt = Ra \mid Immediate$ 

**Vector Operation** 

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; | \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

## **ORIS - Or Immediate Shifted**

### Description:

Bitwise 'or' a register and immediate value and place the sum in the target register. The immediate value is shifted to the left by 32 bits before the addition takes place. This instruction combined with a 35-bit immediate ORI instruction may be used to build a 64-bit constant.

#### **Instruction Format:**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Rt	6	Ra	<b>l</b> 6	v	5	9h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

 $Rt = Ra \mid (immediate << 32)$ 

**Exceptions:** 

**Notes:** 

## **ORN** – Bitwise Or with Complement

#### **Description**:

This is an alternate mnemonic for the ORC instruction. Perform a bitwise 'or' with complement operation between operands.

#### **Integer Instruction Format: R2**

_	39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
	03	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	R	$t_6$	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Operation:**

 $Rt = Ra \mid \sim Rb$ 

## **PTRDIF – Difference Between Pointers**

#### **Description**:

Subtract two values then shift the result right. Both operands must be in a register. The right shift is provided to accommodate common object sizes. It may still be necessary to perform a divide operation after the PTRDIF to obtain an index into odd sized or large objects. Sc may vary from zero to fifteen.

#### **Instruction Format**: R3

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
1h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	03	$8h_8$

### **Operation**:

$$Rt = Abs(Ra - Rb) >> Rc_{[3:0]}$$

Clock Cycles: 1

**Execution Units: Integer** 

**Exceptions**:

None

## **REVBIT – Reverse Bit Order**

### **Description:**

This instruction reverses the order of bits in Ra and stores the result in Rt. Bits may be reversed in individual bytes, wydes, tetras or octas.

### **Integer Instruction Format: R1**

Both the source and target registers are treated as integer values.

31	27	26 25	24 22	21	20 15	14 9	8	7 0
0.2	h <sub>5</sub>	$Sz_2$	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	01h <sub>8</sub>
v: 0	= scala	$\mathbf{r}, 1 = \mathbf{v}$	ector op					

Sz <sub>2</sub>	Ext.	Meaning
0	.BP	reverse order within bytes (byte parallel)
1	.WP	reverse order within wydes (wyde parallel)
2	.TP	reverse order within tetras (tetra parallel)
3	.OP	reverse order within octas (octa parallel)

### **Operation:**

**Vector Operation** 

**Execution Units:** I

**Clock Cycles: 1** 

Exceptions: none

## **ROL – Rotate Left**

### **Description**:

Left rotate an operand value by an operand value and place the result in the target register. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

**Instruction Formats**: R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
43	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	$Rt_6$	V	02h <sub>8</sub>

**Operation Size:** .0

**Execution Units**: integer ALU

Exceptions: none

Example:

# **ROR – Rotate Right**

### **Description**:

Right rotate an operand value by an operand value and place the result in the target register. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

**Instruction Formats**: R2

_	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
	44]	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

**Operation Size:** .0

**Execution Units**: integer ALU

Exceptions: none

Example:

## SEQ – Set if Equal

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand in register (Rb) then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
16	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

## **SEQI – Set if Equal Immediate**

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Imm	ediate <sub>100</sub>	R	$a_6$	Rt	6	v		16h <sub>8</sub>


1 clock cycle / N clock cycles (N = vector length)

## **SEQIL – Set if Equal Immediate Long**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RIL**



 $1 \; clock \; cycle \; / \; N \; clock \; cycles \; (N = vector \; length)$ 

### SGT – Set if Greater Than

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand in register (Rb) then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
1B	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

## SGTI - Set if Greater Than Immediate

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RI**

31	21	20	15	14	9	8	7	0
Immediate	100	R	$a_6$	Rt	6	V	1	Bh <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## SGTIL – Set if Greater Than Immediate Long

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RIL**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	$\mathfrak{l}_6$	Rt	6	V	1.	$Ah_8$

1 clock cycle / N clock cycles (N = vector length)

# **SLL –Shift Left Logical**

### **Description**:

Left shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the least significant bits. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

#### **Instruction Formats**: R2

	39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
Ī	40	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	Ri	6	V	02	$2h_8$

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

Example:

### SLT – Set if Less Than

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand in register (Rb) then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26 2	1	20	15	14	9	8	7	0
181	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>		Ra	$\mathfrak{a}_6$	Rı	6	V	02	2h <sub>8</sub>

### SLTI – Set if Less Than Immediate

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RI**

31		21	20	15	14	9	8	7	0
	Immediate <sub>100</sub>		Ra	$\mathfrak{d}_6$	Rt	6	V		18h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **SLTIL – Set if Less Than Immediate Long**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is less than a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RIL**

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	$\mathfrak{d}_6$	Rt	6	V		9h <sub>8</sub>

 $1 \; clock \; cycle \; / \; N \; clock \; cycles \; (N = vector \; length)$ 

# **SLEI – Set if Less Than or Equal Immediate**

### **Description:**

This instruction is an alternate mnemonic for the SLTI instruction where the constant has been adjusted by one. For instance, SLEI \$t0,\$a0,#4 is the same as SLTI \$t0,\$a0,#5. The assembler will adjust the constant and use the SLTI instruction.

### **Instruction Format:** RI

31	21	20	15	14	9	8	7	0
Immediate <sub>10</sub>	0	R	$a_6$	Rt	6	V		18h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **SNE – Set if Not Equal**

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand in register (Rb) then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
171	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

## **SNEI – Set if Not Equal Immediate**

#### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### Instruction Format: RI

31	21	20	15	14	9	8	7	0
Immediate <sub>10</sub>	00	R	$a_6$	Rt	t <sub>6</sub>	V		17h <sub>8</sub>


1 clock cycle / N clock cycles (N = vector length)

## **SNEIL – Set if Not Equal Immediate Long**

### **Description:**

The set instruction places a 1 or 0 in the target register based on the relationship between the two source operands. If operand Ra is not equal to a second operand, which is an immediate constant then the target register is set to a one, otherwise the target register is set to a zero.

#### **Instruction Format: RIL**



1 clock cycle / N clock cycles (N = vector length)

# **SRA** –**Shift Right Arithmetic**

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. The most significant bit is preserved. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

#### **Instruction Formats**: R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
42	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

Example:

# **SRL** –**Shift Right Logical**

### **Description**:

Right shift an operand value by an operand value and place the result in the target register. Zeros are shifted into the most significant bits. The first operand must be in a register specified by the Ra. The second operand may be either a register specified by the Rb field of the instruction, or an immediate value.

#### **Instruction Formats**: R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
41	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	$02h_{8}$

Operation Size: .o

**Execution Units**: integer ALU

Exceptions: none

Example:

# **SUBF – Subtract From**

### Description:

Subtract Ra from Rb and place the difference in the target register Rt. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions.

#### **Instruction Format:**

39									7 0
051	h <sub>7</sub>	m <sub>3</sub>	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + Rb

**Exceptions:** 

## **SUBFI – Subtract from Immediate**

### Description:

Subtract a register from a sign extended immediate value and place the difference in the target register. For the vector instruction both Ra and Rt are vector registers.

#### **Instruction Format:**

31	21	20	15	14	9	8	7	0
Immediate <sub>1</sub>	00	R	a <sub>6</sub>	Rt	6	V		05h <sub>8</sub>

Clock Cycles: 1

Execution Units: All ALU's

Operation:

Rt = Ra + immediate

### **Exceptions:**

#### **Notes:**

Unlike the ADDI instruction there is only a single form for this instruction. SUBFI is used far less often than ADDI.

# **UTF21NDXI – UTF21 Index**

#### **Description:**

This instruction searches Ra, which is treated as an array of three UTF21 character, for a value specified by an immediate value and places the index of the value into the target register Rt. If the character is not found -1 is placed in the target register. A common use would be to search for a null character. The index result may vary from -1 to +2. The index of the first found character is returned (closest to zero).

If a vector UTF21NDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +191 in the scalar register. Thus, UTF21NDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

47	21	20	15	14	9	8	7	0
Immediate <sub>260</sub>		Ra	$\mathfrak{d}_6$	Rt	6	V	5	$7h_8$

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_{21} in Ra)$ 

## WYDENDX – WYDE Index

### **Description:**

This instruction searches Ra, which is treated as an array of four wydes, for a wyde value specified by Rb and places the index of the wyde into the target register Rt. If the wyde is not found -1 is placed in the target register. A common use would be to search for a null wyde. The index result may vary from -1 to +3. The index of the first found wyde is returned (closest to zero).

If a vector WYDENDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +255 in the scalar register. Thus, WYDENDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7	0
56	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	$Ra_6$	$Rt_6$	V	021	18

**Clock Cycles:** 1

**Execution Units:** Integer ALU

**Operation:** 

Rt = Index of (Rb in Ra)

## WYDENDXI – Wyde Index

#### **Description:**

This instruction searches Ra, which is treated as an array of four wydes, for a value specified by an immediate value and places the index of the value into the target register Rt. If the wyde is not found -1 is placed in the target register. A common use would be to search for a null wyde. The index result may vary from -1 to +3. The index of the first found wyde is returned (closest to zero).

If a vector WYDENDX instruction is issued and the target is a scalar register then the instruction searches all the vector elements and returns a value which varies from -1 to +255 in the scalar register. Thus, WYDENDX may be used to determine the length of a null termination string in the vector register.

#### **Instruction Format: RI**

39	21	20	15	14	9	8	7	0
Immediate <sub>180</sub>		R	$a_6$	Rt	6	v	5	6h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Integer ALU

**Operation:** 

 $Rt = Index of (Imm_8 in Ra)$ 

Exceptions: none

## **XNOR – Bitwise Exclusive Nor**

#### **Description:**

Perform a bitwise 'nor' operation between operands. This is an alternate mnemonic for the ENOR instruction.

#### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
021	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

# **XOR – Bitwise Exclusive Or**

### **Description**:

Perform a bitwise 'or' operation between operands.

**Integer Instruction Format: R2** 

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
0A	h <sub>7</sub>	m <sub>3</sub>	Z	Tb <sub>2</sub>	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	02h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

## **XORI – Bitwise Exclusive Or Immediate**

### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate constant is zero extended before use.

Instruction Format: RI

31 2	21	20	15	14	9	8	7	0
Immediate <sub>100</sub>		Ra	5	Rt	6	V	0.	Ah <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

#### **Integer Instruction Format: RM**

Generates a mask consisting of '1's between the mask begin, Mb<sub>6</sub>, and mask end, Me<sub>6</sub>, inclusive. Bitwise exclusive 'or' the mask with the value in register Ra and store the result in register Rt. The result may be optionally sign extended from bit Me<sub>6</sub> to the width of the machine. This instruction is useful for flipping bit fields.

	39 36	35	3433	32	27	26	21	20	15	14	9	8	7	0
I	$Ah_4$	S	~2	M	$e_6$	M	$[b_6]$	R	$a_6$	R	$t_6$	v	A.	Ah <sub>7</sub>

### Operation

Rt = Ra ^ Immediate

#### **Vector Operation**

for 
$$x=0$$
 to VL-1 
$$if \; (Vm0[x]) \; Vt[x] = Va[x] \; ^{\wedge} \; Immediate$$
 
$$else \; Vt[x] = Vt[x]$$

## **XORIL – Bitwise Exclusive Or Immediate Long**

#### **Description**:

Perform a bitwise exclusive 'or' operation between operands. The immediate constant is zero extended before use.

Instruction Format: RIL

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		Ra	$\mathfrak{d}_6$	Rt	6	V	4	$Ah_8$

1 clock cycle / N clock cycles (N = vector length)

Operation

Rt = Ra ^ Immediate

**Vector Operation** 

for 
$$x=0$$
 to VL-1 
$$if \ (Vm0[x]) \ Vt[x] = Va[x] \land Immediate$$
 
$$else \ Vt[x] = Vt[x]$$

**Exceptions**: none

## **XORIS – Exclusive Or Immediate Shifted**

#### Description:

Bitwise exclusive 'or' a register and immediate value and place the sum in the target register. The immediate value is shifted to the left by 32 bits before the addition takes place.

**Instruction Format:** 

55	21	20	15	14	9	8	7	0
Immediate <sub>340</sub>		R	t <sub>6</sub>	Ra	$\mathfrak{l}_6$	V	5 <i>A</i>	$h_8$

Clock Cycles: 1

Execution Units: All ALU's

Operation:

 $Rt = Ra \land (immediate << 32)$ 

**Exceptions:** 

# **Floating-Point Instructions**

Overview

## FABS - Absolute Value

#### **Description:**

This instruction takes the absolute value of a register and places the result in a target register. The values are treated as double precision floating-point values. The sign bit of the number is cleared, no rounding of the number takes place.

#### **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
20h <sub>7</sub>		n	13	Z	R	$a_6$	Rı	6	v	61	$h_8$
v: 0 =	= scala	ır, 1	= v	ector	op						

### **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

#### **Vector Operation**

```
for x=0 to VL - 1 if \ (Vm[x]) \ Rt[x] = Ra[x] < 0 \ ? \ -Ra[x] : Ra[x] else \ if \ (z) \ Rt[x] = 0 else \ Rt[x] = Rt[x]
```

**Execution Units:** F

**Clock Cycles: 1** 

Exceptions: none

# FADD – Add Register-Register

### **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

**Instruction Format:** R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
041	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	62h <sub>8</sub>	1

**Instruction Format: R2L** 

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
041	h <sub>7</sub>	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	72h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

# FCLASS – Classify Value

### **Description**:

FCLASS classifies the value in register Ra and returns the information as a bit vector in the integer register Rt.

### **Integer Instruction Format: R1**

$1Eh_7$ m	13 Z	$Ra_6$	$Rt_6$	V	61h <sub>8</sub>

v: 0 = scalar, 1 = vector op

Bit in Rt	Meaning
0	1 = negative infinity
1	1 = negative number
2	1 = negative subnormal number
3	1 = negative zero
4	1 = positive zero
5	1 = positive subnormal number
6	1 = positive number
7	1 = positive infinity
8	1 = signalling nan
9	1 = quiet nan
10 to 62	not used
63	1 = negative, $0 = $ positive number

## FCMP - Compare

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as a float value of -1.0, 0.0 or +1.0. If the comparison is unordered 2.0 is returned.

3	9 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
	10h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	62h <sub>8</sub>

1 clock cycle

### **Operation:**

$$Rt = Ra < Rb ? -1 : Ra = Rb ? 0 : 1$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x]=Va[x]< Vb[x] \ ?-1: Va[x]=Vb[x] \ ? \ 0: 1$$
 
$$else \ if \ (z) \ Vt[x]=0$$
 
$$else \ Vt[x]=Vt[x]$$

## FCMPB - Compare

### **Description**

Compare two registers and return the relationship between them.

### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The value returned is a bit vector as outlined in the table below. Note that the less than status is returned in both bits 1 and 63 so that a BLT may be used.

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
15	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rl	<b>)</b> 6	R	$a_6$	Ri	6	V	62	2h <sub>8</sub>

1 clock cycle

The float comparison returns a bit vector containing the status of all possible relationships. This may then be tested with the BBS instruction.

Rt bit	Meaning
0	= equal
1	< less than
2	<= less than or equal
3	< magnitude less than
4	unordered
5 to 7	zero (reserved)
8	<> not equal
9	>= greater than or equal
10	> greater than
11	>= magnitude greater than or equal
12	ordered
13 to 62	zero (reserved)
63	less than

#### **Operation:**

**Vector Operation** 

# FCX – Clear Floating-Point Exceptions

### **Description:**

This instruction clears floating point exceptions. The Exceptions to clear are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
11h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation clears the following:
	- division of infinities
	- zero divided by zero
	<ul> <li>subtraction of infinities</li> </ul>
	- infinity times zero
	- NaN comparison
	- division by zero
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	summary exception

## FDIV – Divide Register-Register

### **Description:**

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand may be a register specified by the Rb field of the instruction. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 2	21	20	15	14	9	8	7	0
091	$h_7$	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>		R	$a_6$	R	$t_6$	V	62	$2h_8$

**Instruction Format: R2L** 

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
091	h <sub>7</sub>	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	$Ra_6$	Rt <sub>6</sub>	V	72h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra / Rb

**Exceptions:** 

**Notes:** 

## **FDX** – Disable Floating Point Exceptions

### **Description:**

This instruction disables floating point exceptions. The Exceptions disabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7	0
13h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>	

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Disabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

## **FEX – Enable Floating Point Exceptions**

### **Description:**

This instruction enables floating point exceptions. The Exceptions enabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0	)
12h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>	

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Enabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

## **FFINITE** – **Number** is **Finite**

## **Description:**

Test the value in Ra to see if it's a finite number and return Z=1 or Z=0 in register Rt.

### **Integer Instruction Format: F1**

$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	31	25	24	22	21	20	15	14	9	8	7	0
	0Fh <sub>7</sub>		n	13	Z	R	$a_6$	Rı	6	V	61	1h <sub>8</sub>

v: 0 = scalar, 1 = vector op

Clock Cycles: 1

**Execution Units:** Floating Point

**Example:** 

finite \$cr1,\$f7

## FMA – Floating Point Multiply Add

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$0h_4$	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	63	$3h_8$

## **Operation:**

Rt = Ra \* Rb + Rc

**Clock Cycles: 30** 

## FNMA – Floating Point Negate Multiply Add

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
2h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	Ro	26	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	v	63	$h_8$

## **Operation:**

$$Rt = -Ra * Rb + Rc$$

**Clock Cycles: 30** 

## **FNMS – Floating Point Negate Multiply Subtract**

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
3h <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	Ro	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	63	$3h_8$

#### **Operation:**

$$Rt = -Ra * Rb - Rc$$

**Clock Cycles: 30** 

## FMAN - Mantissa of Number

### **Description:**

This instruction provides the mantissa of a double precision floating point number contained in a general-purpose register as a 52-bit zero extended result. The hidden bit of the floating-point number remains hidden.

#### **Integer Instruction Format: R1**

31	25	24 22	21	20 15	14 9	8	7 0	
07	h <sub>7</sub>	m <sub>3</sub>	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>	
v. 0								

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = Ra

## FMS – Floating Point Multiply Subtract

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
1h <sub>4</sub>	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	63	$3h_8$

## **Operation:**

Rt = Ra \* Rb - Rc

**Clock Cycles: 30** 

## FMUL – Floating point multiplication

### **Description:**

Multiply two double precision floating point numbers in registers Ra and Rb and place the result into target register Rt.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
08	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb	ó	R	$a_6$	R	$t_6$	V	62	$2h_8$

#### **Instruction Format:** R2L

_	47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
	081	17	<b>~</b> <sub>5</sub>	$Rm_3$	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	$Ra_6$	Rt <sub>6</sub>	V	72h <sub>8</sub>


**Clock Cycles: 25** 

## **FNEG – Negate Register**

#### **Description:**

This instruction negates a double precision floating point number contained in a general-purpose register. The sign bit of the number is inverted. No rounding takes place.

#### **Integer Instruction Format: R1**



Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = -Ra

## FRM – Set Floating Point Rounding Mode

#### **Description:**

This instruction sets the rounding mode bits in the floating-point control register (FPSCR). The rounding mode bits are set to the bitwise 'or' of an immediate field in the instruction and the contents of register Ra. Either Ra or the immediate field should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
14	h <sub>7</sub>	^	<b>'</b> 3	~	R	$a_6$	uim	$m_6$	0	61	lh <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

 $FPSCR.RM = Ra \mid Immediate$ 

## FRSQRTE – Float Reciprocal Square Root Estimate

### **Description:**

Estimate the reciprocal of the square root of the number in register Ra and place the result into target register Rt.

#### **Instruction Format: R1**

31 25	24 22	21	20 15	14 9	8	7 0
01h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>

**Clock Cycles: 5** 

**Execution Units:** Floating Point

#### **Notes:**

The estimate is only accurate to about 3%. The estimate is performed in single precision (32-bit) floating point, then converted to a 64-bit format. That means that input values must in the range of a 32-bit floating point number. Values outside of this range will return infinity or zero as a result.

Taking the reciprocal square root of a negative number results in a Nan output.

## **FSEQ - Float Set if Equal**

#### **Description:**

The register compare instruction compares two registers as floating-point values for equality and sets the compare results register as a result. Note that negative and positive zero are considered equal.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
111	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	62h <sub>8</sub>

1 clock cycle

**Clock Cycles:** 1

**Execution Units:** Floating Point

#### **Operation:**

$$\label{eq:Ra} \begin{aligned} \text{if } Ra &== Rb \\ Rt &= 1 \\ \text{else} \\ Rt &= 0 \end{aligned}$$

## **FSIGMOID – Sigmoid Approximate**

#### **Description:**

This function uses a 1024 entry 32-bit precision lookup table with linear interpolation to approximate the logistic sigmoid function in the range -8.0 to +8.0. Outside of this range 0.0 or +1.0 is returned. The sigmoid output is between 0.0 and +1.0. The value of the sigmoid for register Ra is returned in register Rt as a 64-bit double precision floating-point value.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
28h	17	n	13	Z	R	$a_6$	Rt	6	v	6	$1h_8$

**Clock Cycles: 5** 

## FSIGN – Sign of Number

#### **Description:**

This instruction provides the sign of a double precision floating point number contained in a general-purpose register as a floating-point double result. The result is +1.0 if the number is positive, 0.0 if the number is zero, and -1.0 if the number is negative.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
06	$h_7$	n	13	Z	R	$a_6$	R	6	V	6	lh <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = sign of (Ra)

## **FSLT - Float Set if Less Than**

## **Description:**

The register compare instruction compares two registers as floating-point values for less than and sets the target register as a result.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
12	2h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	62	$2h_8$

1 clock cycle

## Clock Cycles: 1

**Execution Units:** Floating Point

### **Operation:**

if Ra < Rb

Rt = 1

else

Rt = 0

## **FSNE - Float Set if Not Equal**

## **Description:**

The register compare instruction compares two registers as floating-point values for inequality and sets the compare results register as a result. Note that negative and positive zero are considered equal.

#### **Instruction Format: R2**

Both values are treated as double precision (64-bit) floating point numbers. The result is returned as an integer value of 1 or 0.

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
14h	17	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	v	62	2h <sub>8</sub>

1 clock cycle

**Clock Cycles:** 1

**Execution Units:** Floating Point

### **Operation:**

$$\label{eq:Ra} \begin{array}{l} \text{if } Ra == Rb \\ Rt = 1 \\ \text{else} \\ Rt = 0 \end{array}$$

## FSQRT – Floating point square root

## **Description:**

Take the square root of the floating-point number in register Ra and place the result into target register Rt. The sign bit (bit 63) of the register is set to zero. This instruction can generate NaNs.

## **Instruction Format: R1, R1L**

31 25	24 22	21	20 15	14 9	8	7 0
08h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>

## **Operation:**

Rt = sqrt (Ra)

Clock Cycles: 64 (est).

## FSTAT – Get Floating Point Status and Control

### **Description:**

The floating-point status and control register may be read using the FSTAT instruction. The format of the FPSCR register is outlined on the next page.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
0C	Ch <sub>7</sub>	~	<b>'</b> 3	?	~	<b>'</b> 6	Rı	6	0	61	$1h_8$

**Execution Units:** All Floating Point

#### **Operation:**

Rt = FPSCR

## **Floating Point Status And Control Register Format:**

Bit		Symbol	Description
31:29	RM	rm	rounding mode (unimplemented)
28	E5	inexe	- inexact exception enable
27	E4	dbzxe	- divide by zero exception enable
26	E3	underxe	- underflow exception enable
25	E2	overxe	- overflow exception enable
24	E1	invopxe	- invalid operation exception enable
23	NS	ns	- non standard floating point indicator
Result S	tatus		
22		fractie	- the last instruction (arithmetic or conversion) rounded
			intermediate result (or caused a disabled overflow exception)
21	RA	rawayz	rounded away from zero (fraction incremented)
20	SC	С	denormalized, negative zero, or quiet NaN
19	SL	neg <	the result is negative (and not zero)
18	SG	pos >	the result is positive (and not zero)
17	SE	zero =	the result is zero (negative or positive)
16	SI	inf ?	the result is infinite or quiet NaN
Exception	n Occ	urrence	
15	X6	swt	{reserved} - set this bit using software to trigger an invalid
			operation
14	X5	inerx	- inexact result exception occurred (sticky)
13	X4	dbzx	- divide by zero exception occurred
12	Х3	underx	- underflow exception occurred
11	X2	overx	- overflow exception occurred
10	X1	giopx	- global invalid operation exception – set if any invalid operation exception has occurred
9	GX	gx	- global exception indicator – set if any enabled exception
9	OX.	y^ 	has happened
8	SX	sumx	- summary exception - set if any exception could occur if it
			was enabled
			- can only be cleared by software
Exception	n Typ	e Resoluti	on
7	X1T	cvt	- attempt to convert NaN or too large to integer
6	X1T	sqrtx	- square root of non-zero negative
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison instructions
4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN
U	_ ^	SHAHA	į - signainig ivalv

Greyed out items are not implemented.

## FSUB – Subtract Register-Register

#### **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
05	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	$Rt_6$	v	62h <sub>8</sub>	

#### **Instruction Format: R2L**

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
051	$h_7$	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	$Ra_6$	Rt <sub>6</sub>	V	72h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

## FTOI – Float to Integer

#### **Description:**

This instruction converts a floating-point double value to an integer value.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	V	61	lh <sub>8</sub>

**Clock Cycles: 2** 

## FTRUNC - Truncate Value

#### **Description**:

The FTRUNC instruction truncates off the fractional portion of the number leaving only a whole value. For instance, ftrunc(1.5) equals 1.0. Ftrunc does not change the representation of the number. To convert a value to an integer in a fixed-point representation see the FTOI instruction.

#### **Instruction Format**: R1

_	31	25	24	22	21	20	15	14	9	8	7	0
	15	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	v	6	1 h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Floating Point

## **FTX** – Trigger Floating Point Exceptions

#### **Description:**

This instruction triggers floating point exceptions. The Exceptions to trigger are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
10h <sub>7</sub>	~3	?	Ra <sub>6</sub>	uimm <sub>6</sub>	0	61h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Enabled
0	global invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

## ISNAN – Is Not a Number

## **Description:**

Test the value in Ra to see if it's a nan (not a number) and return true Z=1 or false Z=0 in register Rt.

## **Instruction Format: R1**

31 25	24 22	21	20 15	14 9	8	7 0
0Eh <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	61h <sub>8</sub>

**Clock Cycles: 1** 

**Execution Units:** Floating Point

Example:

isnan \$cr1,\$f7

# ITOF – Integer to Float

## **Description:**

This instruction converts an integer value to a double precision floating point representation.

### **Instruction Format: F1, F1L**

31	25	24	22	21	20	15	14	9	8	7	0
03h <sub>7</sub>		n	13	Z	R	$a_6$	Rt	6	v	61	$1h_8$

**Clock Cycles: 2** 


## **Decimal Floating-Point Instructions**

## **DFABS – Absolute Value**

#### **Description:**

This instruction takes the absolute value of a register and places the result in a target register. The values are treated as double precision decimal floating-point values. The sign bit of the number is cleared, no rounding of the number takes place.

#### **Integer Instruction Format: R1**



## **Operation:**

$$If Ra < 0$$

$$Rt = -Ra$$

$$else$$

$$Rt = Ra$$

#### **Vector Operation**

```
for x=0 to VL - 1 if \ (Vm[x]) \ Rt[x] = Ra[x] < 0 \ ? \ -Ra[x] : Ra[x] else \ if \ (z) \ Rt[x] = 0 else \ Rt[x] = Rt[x]
```

**Execution Units:** F

**Clock Cycles: 1** 

Exceptions: none

**Notes:** 

## **DFADD** – **Add Register-Register**

## **Description:**

Add two registers and place the sum in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision decimal floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 2	20	15	14 9	8	7	0
04	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	]	Ra <sub>6</sub>	$Rt_6$	V	66ł	18

#### **Instruction Format:** R2L

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
041	h <sub>7</sub>	<b>~</b> <sub>5</sub>	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	76h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

## **DFCMP – Compare**

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) decimal floating-point numbers. The result is returned as a float value of -1.0, 0.0 or +1.0. If the comparison is unordered 2.0 is returned.

39 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
10h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	V	66h <sub>8</sub>

1 clock cycle

#### **Operation:**

$$Rt = Ra < Rb ? -1 : Ra = Rb ? 0 : 1$$

### **Vector Operation**

for 
$$x=0$$
 to  $VL-1$  
$$if \ (Vm[x]) \ Vt[x]=Va[x]< Vb[x] \ ?-1: Va[x]=Vb[x] \ ? \ 0: 1$$
 
$$else \ if \ (z) \ Vt[x]=0$$
 
$$else \ Vt[x]=Vt[x]$$

## **DFCMPB – Compare**

### **Description**

Compare two registers and return the relationship between them.

#### **Integer Instruction Format: R2**

Both values are treated as double precision (64-bit) decimal floating-point numbers. The value returned is a bit vector as outlined in the table below. Note that the less than status is returned in both bits 1 and 63 so that a BLT may be used.

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
15	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	66h <sub>8</sub>	

1 clock cycle

The float comparison returns a bit vector containing the status of all possible relationships. This may then be tested with the BBS instruction.

Rt bit	Meaning
0	= equal
1	< less than
2	<= less than or equal
3	< magnitude less than
4	unordered
5 to 7	zero (reserved)
8	<> not equal
9	>= greater than or equal
10	> greater than
11	>= magnitude greater than or equal
12	ordered
13 to 62	zero (reserved)
63	less than

#### **Operation:**

**Vector Operation** 

# **DFCX – Clear Floating-Point Exceptions**

### **Description:**

This instruction clears floating point exceptions. The Exceptions to clear are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0
11h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>

**Execution Units:** All Floating Point

### **Operation:**

#### **Exceptions:**

Bit	Exception Enabled								
0	global invalid operation clears the following:								
	- division of infinities								
	- zero divided by zero								
	<ul> <li>subtraction of infinities</li> </ul>								
	- infinity times zero								
	- NaN comparison								
	- division by zero								
1	overflow								
2	underflow								
3	divide by zero								
4	inexact operation								
5	summary exception								

## **DFDIV – Divide Register-Register**

### **Description:**

Divide two operand values and place the result in the target register. The first operand must be in a register specified by the Ra field of the instruction. The second operand may be a register specified by the Rb field of the instruction. The values are treated as double precision decimal floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 2	. 2	20	15	14	9	8	7	0
091	$h_7$	$m_3$	Z	$Tb_2$	$Rb_6$		Ra	$\mathfrak{l}_6$	Rı	6	V	66	5h <sub>8</sub>

#### **Instruction Format:** R2L

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
091	17	<b>~</b> 5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	76h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra / Rb

**Exceptions:** 

**Notes:** 

## **DFDX – Disable Floating Point Exceptions**

### **Description:**

This instruction disables floating point exceptions. The Exceptions disabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0	
13h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>	

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Disabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

## **DFEX – Enable Floating Point Exceptions**

### **Description:**

This instruction enables floating point exceptions. The Exceptions enabled are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31 25	24 22	21	20 15	14 9	8	7 0	
12h <sub>7</sub>	~3	~	Ra <sub>6</sub>	uimm <sub>6</sub>	0	65h <sub>8</sub>	

**Execution Units:** All Floating Point

**Operation:** 

#### **Exceptions:**

Bit	Exception Enabled
0	invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

## **DFMA – Floating Point Multiply Add**

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
00	h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	67	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
001	h <sub>7</sub>	<b>~</b> 5	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	77h <sub>8</sub>

## **Operation:**

Rt = Ra \* Rb + Rc

**Clock Cycles: 30** 

## **DFNMA – Floating Point Negate Multiply Add**

### **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
02	$h_7$	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	67	7h <sub>8</sub>

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
021	17	<b>~</b> 5	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	v	$77h_8$

## **Operation:**

$$Rt = -Ra * Rb + Rc$$

**Clock Cycles: 30** 

# **DFNMS** – Floating Point Negate Multiply Subtract

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

		40 38											_			
02	$h_7$	$m_3$	Z	$Tc_2$	R	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	V	6	$7h_8$

#### **Instruction Format: R3L**

55	49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
021	17	~5	Rm <sub>3</sub>	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	v	$77h_8$

## **Operation:**

Rt = -Ra \* Rb - Rc

**Clock Cycles: 30** 

**Execution Units:** All Floating Point

# **DFMAN – Mantissa of Number**

## **Description:**

This instruction provides the mantissa of a double precision floating point number contained in a general-purpose register as a 52-bit zero extended result. The hidden bit of the floating-point number remains hidden.

## **Integer Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
07	h <sub>7</sub>	m	13	Z	R	$a_6$	Rı	6	V	65	5h <sub>8</sub>
v· 0											

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = Ra

# **DFMS – Floating Point Multiply Subtract**

## **Description:**

Multiply two floating point numbers in registers Ra and Rb add a third number from register Rc and place the result into target register Rt. The multiplication and addition are fused with no intermediate rounding.

#### **Instruction Format: R3**

47	41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
01	h <sub>7</sub>	$m_3$	Z	$Tc_2$	Ro	$c_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	67	7h <sub>8</sub>

## **Instruction Format: R3L**

5	5 49	48 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7 0
	01h <sub>7</sub>	~5	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	v	77h <sub>8</sub>

## **Operation:**

Rt = Ra \* Rb - Rc

**Clock Cycles: 30** 

**Execution Units:** All Floating Point

# **DFMUL – Floating point multiplication**

## **Description:**

Multiply two double precision floating point numbers in registers Ra and Rb and place the result into target register Rt.

## **Instruction Format:** R2

_	39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
	08	h <sub>7</sub>	$m_3$	Z	$Tb_2$	RI	$b_6$	R	$a_6$	Ri	6	v	6	$6h_8$

#### **Instruction Format:** R2L

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
08	h <sub>7</sub>	~5	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	$76h_8$	1

**Clock Cycles: 25** 


**Execution Units:** All Floating Point

# **DFNEG – Negate Register**

#### **Description:**

This instruction negates a double precision floating point number contained in a general-purpose register. The sign bit of the number is inverted. No rounding takes place.

### **Integer Instruction Format: R1**



Clock Cycles: 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = -Ra

# **DFRM – Set Floating Point Rounding Mode**

## **Description:**

This instruction sets the rounding mode bits in the floating-point control register (FPSCR). The rounding mode bits are set to the bitwise 'or' of an immediate field in the instruction and the contents of register Ra. Either Ra or the immediate field should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
14	h <sub>7</sub>	~	<b>'</b> 3	?	R	$a_6$	uim	$m_6$	0	65	5h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

 $FPSCR.RM = Ra \mid Immediate$ 

# **DFSIGN – Sign of Number**

#### **Description:**

This instruction provides the sign of a double precision floating point number contained in a general-purpose register as a floating-point double result. The result is +1.0 if the number is positive, 0.0 if the number is zero, and -1.0 if the number is negative.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
06	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	V	65	5h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All Floating Point

**Operation:** 

Rt = sign of (Ra)

# **DFSTAT – Get Floating Point Status and Control**

#### **Description:**

The floating-point status and control register may be read using the FSTAT instruction. The format of the FPSCR register is outlined on the next page.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
0C	h <sub>7</sub>	`	3	~	~	<b>'</b> 6	Rt	6	0	65	5h <sub>8</sub>

**Execution Units:** All Floating Point

**Operation:** 

Rt = FPSCR

## **Floating Point Status And Control Register Format:**

Bit		Symbol	Description
31:29	RM	rm	rounding mode (unimplemented)
28	E5	inexe	- inexact exception enable
27	E4	dbzxe	- divide by zero exception enable
26	E3	underxe	- underflow exception enable
25	E2	overxe	- overflow exception enable
24	E1	invopxe	- invalid operation exception enable
23	NS	ns	- non standard floating point indicator
Result S	tatus		
22		fractie	- the last instruction (arithmetic or conversion) rounded
			intermediate result (or caused a disabled overflow
			exception)
21	RA	rawayz	rounded away from zero (fraction incremented)
20	SC	С	denormalized, negative zero, or quiet NaN
19	SL	neg <	the result is negative (and not zero)
18	SG	pos >	the result is positive (and not zero)
17	SE	zero =	the result is zero (negative or positive)
16	SI	inf ?	the result is infinite or quiet NaN
Exception	n Occ	urrence	
15	X6	swt	{reserved} - set this bit using software to trigger an invalid
			operation
14	X5	inerx	- inexact result exception occurred (sticky)
13	X4	dbzx	- divide by zero exception occurred
12	Х3	underx	- underflow exception occurred
11	X2	overx	- overflow exception occurred
10	X1	giopx	- global invalid operation exception – set if any invalid
			operation exception has occurred
9	GX	gx	- global exception indicator – set if any enabled exception
			has happened
8	SX	sumx	- summary exception - set if any exception could occur if it
			was enabled
			- can only be cleared by software
Exception		e Resoluti	on
7	X1T	cvt	- attempt to convert NaN or too large to integer
6	X1T	sqrtx	- square root of non-zero negative
5	X1T	NaNCmp	- comparison of NaN not using unordered comparison
			instructions
4	X1T	infzero	- multiply infinity by zero
3	X1T	zerozero	- division of zero by zero
2	X1T	infdiv	- division of infinities
1	X1T	subinfx	- subtraction of infinities
0	X1T	snanx	- signaling NaN

Greyed out items are not implemented.

# **DFSUB – Subtract Register-Register**

#### **Description:**

Subtract two registers and place the difference in the target register. If the instruction is a vector addition then Ra and Rt are vector registers. Rb may be either a vector or a scalar register. The mask register is ignored for scalar instructions. The values are treated as double precision floating-point values.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26 2	1	20	15	14	9	8	7	0
05	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$		Ra	$a_6$	Rt	6	V	66	$5h_8$

#### **Instruction Format: R2L**

47	41	40 36	35 33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
05	h <sub>7</sub>	<b>~</b> <sub>5</sub>	$Rm_3$	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	V	76h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units:** All ALU's

**Operation:** 

Rt = Ra + Rb

**Exceptions:** 

**Notes:** 

# **DFTOI – Float to Integer**

#### **Description:**

This instruction converts a floating-point double value to an integer value.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
02	h <sub>7</sub>	n	13	Z	R	$a_6$	R	6	V	65	5h <sub>8</sub>

**Clock Cycles: 2** 

**Execution Units:** All Floating Point

# **DFTX – Trigger Floating Point Exceptions**

## **Description:**

This instruction triggers floating point exceptions. The Exceptions to trigger are identified as the bits set in the union of register Ra and an immediate field in the instruction. Either the immediate or Ra should be zero.

#### **Instruction Format: F1**

31	25	24	22	21	20	15	14	9	8	7	0
10h <sub>7</sub>	,	`	<b>'</b> 3	~	R	$a_6$	uim	$m_6$	0		5h <sub>8</sub>

**Execution Units:** All Floating Point

## **Operation:**

## **Exceptions:**

Bit	Exception Enabled
0	global invalid operation
1	overflow
2	underflow
3	divide by zero
4	inexact operation
5	reserved

# ITODF – Integer to Float

## **Description:**

This instruction converts an integer value to a double precision decimal floating point representation.

## **Instruction Format: F1, F1L**

31 25	24 22	21	20 15	14 9	8	7 0
03h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	65h <sub>8</sub>

**Clock Cycles: 2** 

**Execution Units:** All Floating Point

## Load / Store Instructions

## **Overview**

# **Addressing Modes**

Load and store instructions have two addressing modes, register indirect with displacement and scaled indexed addressing. There are two formats for register indirect with displacement addressing, differing in the number of bits used to represent a displacement. Store operations have two fewer bits reserved for encoding displacements in instructions.

Load and store instructions specify a segment register to use with the instruction. The assembler will provide a default value for this field that is suitable in most cases. The default can be overridden using a segment prefix indicator.

## **Load Formats**

Register Indirect with Displacement Format

For register indirect with displacement addressing the load or store address is the sum of a register Ra and a displacement constant found in the instruction.

3129	28	21	20	15	14	9	8	7	0
Seg <sub>3</sub>	Displac	ement <sub>70</sub>	R	$a_6$	R	t <sub>6</sub>	V	Opc	code <sub>8</sub>

Register Indirect with Long Displacement Format

_	4745	44	21	20	15	14	9	8	7	0
	$Seg_3$	Displacement <sub>230</sub>		R	$a_6$	R	6	V	Opc	ode <sub>8</sub>

#### Scaled Indexed Format

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
Func <sub>7</sub>	Seg <sub>3</sub>	$Sc_2$	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	v	O	pcode <sub>8</sub>

## **Store Formats**

Stores have two fewer displacement bits than loads. The scaled indexed format is wider than that of the load.

## Register Indirect with Displacement Format

For register indirect with displacement addressing the load or store address is the sum of a register Ra and a displacement constant found in the instruction.

	TD1	D1			ъ.				
$Sg_3$	$Tb_2$	$Rb_6$	R	$a_6$	Dis	$p_6$	V	Opc	ode <sub>8</sub>

## Register Indirect with Long Displacement Format

47 45	44	29	2827	26	21	20	15	14	9	8	7	0
$\overline{Sg_3}$	Displacemen	nt <sub>216</sub>	Tb <sub>2</sub>	Rl	<b>)</b> <sub>6</sub>	R	$a_6$	Dis	p <sub>6</sub>	V	Opc	ode <sub>8</sub>

#### Scaled Indexed Format

47 42	41 39	3837	3635	34 29	2827	26	21 20	15	14	9	8	7	0
00h <sub>6</sub>	Seg <sub>3</sub>	$Sc_2$	Tc <sub>2</sub>	Rc <sub>6</sub>	Tb <sub>2</sub>	Rb <sub>6</sub>		Ra <sub>6</sub>	~(	5	V	C0	h <sub>8</sub>

# **CACHE – Cache Command**

## **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time. The address of the cache line to be invalidated is passed in Ra if needed.

#### **Instruction Format:**

3129	28	21	20	15	1412	119	8	7	0
$Sg_3$	Displace	ment <sub>70</sub>	R	$a_6$	$DC_3$	IC <sub>3</sub>	V	9	Fh <sub>8</sub>

#### **Commands:**

IC <sub>3</sub>	Mne.	Operation
0	NOP	no operation
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

**Clock Cycles:** 3

**Execution Units:** All ALU's / Memory

**Operation:** 

**Exceptions:** DBG

# **CACHEL - Cache Command**

CACHE Cmd, d[Rn]

## **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time. The address of the cache line to be invalidated is passed in Ra if needed.

#### **Instruction Formats: CACHE**

474:	i	44		21	20	15	14 12	119	8	7	0
Sg			Displacement <sub>230</sub>		Ra	$\mathfrak{d}_6$	$DC_3$	$IC_3$	V	DF	$h_8$

#### **Commands:**

	$IC_3$	Mne.	Operation
	0	NOP	no operation
	3	invline	invalidate line associated with given address
Ī	4	invall	invalidate the entire cache (address is ignored)
Ī	5 to 7		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

Notes:

# **CACHEX - Cache Command**

## **Description:**

This instruction commands the cache controller to perform an operation. Commands are summarized in the command table below. Commands may be issued to both the instruction and data cache at the same time.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14 12	11 9	8	7	0
$0Ah_7$	$Seg_3$	$Sc_2$	$Tb_2$	Rb	<b>)</b> 6	Ra	$a_6$	$DC_3$	$IC_3$	V	BO	$h_8$

#### **Commands:**

IC <sub>3</sub>	Mne.	Operation
0	NOP	no operation
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

$DC_3$	Mne.	Operation
0	NOP	no operation
1	enable	enable cache (instruction cache is always enabled)
2	disable	not valid for the instruction cache
3	invline	invalidate line associated with given address
4	invall	invalidate the entire cache (address is ignored)
5 to 7		reserved

**Clock Cycles:** 

Execution Units: All ALU's / Memory

**Operation:** 

**Exceptions:** DBG

## LDB - Load Byte

#### **Description:**

An eight-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3129	28	21		20	15	14	9	8	7	(	)				
$Sg_3$	Displac	ement <sub>7</sub>	0	$Ra_6$		$Rt_6$	5	0	8	$0h_8$					
4745	44	34	33	32 30	29	2827	26	21	20	15	14	9	8	7	
Sg <sub>3</sub>	Displacen	nent <sub>100</sub>			Z	Tb <sub>2</sub>		$Rb_6$	R	$a_6$	R	t <sub>6</sub>	1	. {	301

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

#### **Operation:**

 $Rt = sign extend (memory_8[Ra+displacement])$ 

#### **Vector Operation:**

$$y=0$$
 for n = 0 to VL - 1 
$$if (Vm[n])$$
 
$$Vb[n] = memory_8[Ra+displacement + y * Rb]$$
 else if (z & ~C) 
$$Vb[n] = 0$$
 else 
$$Vb[n] = Vb[n]$$
 if (C)  $y = y + Vm[x]$  else  $y = y + 1$ 

# LDBL - Load Byte, Long Address

## Description:

An eight-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44	21	20	15	14	9	8	7	0
$Sg_3$	Displacement <sub>230</sub>		Ra	$a_6$	Rt	6	V	D	$00h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

Rt = sign extend (memory<sub>8</sub>[Ra+displacement])

# LDBU – Load Byte, Unsigned

## Description:

An eight-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra. For vector instructions Ra is a scalar register.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
$\overline{Sg_3}$	Displacement	70	Ra	1 <sub>6</sub>	Rt	6	V	8	1h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

Rt = zero extend (memory<sub>8</sub>[Ra+displacement])

# LDBUL – Load Byte Unsigned, Long Address

## Description:

An eight-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44	21	20	15	14	9	8	7	0
Sg <sub>3</sub>	Displacement <sub>230</sub>		Ra	a <sub>6</sub>	Rt	6	v	D1	h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = zero extend (memory_8[Ra+offset])$ 

# **LDBUX – Load Byte Unsigned Indexed**

## **Description:**

An eight-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

_	3938	37 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
	<b>~</b> 2	01h <sub>5</sub>	$Seg_3$	$Sc_2$	$Tb_2$	Rb <sub>6</sub>		Ra	<b>1</b> 6	Rt	6	v	В	$0h_8$

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero \ extend \ (memory_8[Ra+Rb])$ 

# **LDBX – Load Byte Indexed**

## **Description:**

An eight-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb. For vector instructions Ra is a scalar register.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
00h <sub>7</sub>	$Seg_3$	$Sc_2$	$Tb_2$	R	Rb <sub>6</sub>		$a_6$	Rt	Rt <sub>6</sub>		В	$0h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_8[Ra+Rb*Sc])$ 

# LDO - Load Octa

## **Description:**

A sixty-four-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended displacement and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ment <sub>70</sub>	R	$a_6$	Ri	6	v		86h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+displacement])$ 

# **LDOL – Load Octa, Long Address**

## **Description:**

A sixty-four-bit value is loaded from memory then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44		21	20	15	14	9	8	7	0
$Sg_3$	Displa	acement <sub>230</sub>		Ra	6	Rt	5	v	I	$O4h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign extend (memory_{64}[Ra+displacement])$ 

# LDOX - Load Octa Indexed

## **Description:**

A sixty-four-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

_	39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
	06h <sub>7</sub>	Seg <sub>3</sub>	$Sc_2$	$Tb_2$	R	Rb <sub>6</sub>		$a_6$	Rt	Rt <sub>6</sub>		В	$0h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{64}[Ra+Rb*Sc])$ 

# LDT - Load Tetra

## **Description:**

A thirty-two-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ment <sub>70</sub>	R	$a_6$	Rt	6	v		84h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{32}[Ra+displacement])$ 

# LDTL – Load Tetra, Long Address

## **Description:**

A thirty-two-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44	21	20	15	14	9	8	7	0
$Sg_3$	Displacement <sub>230</sub>		Ra	$\mathfrak{a}_6$	Rt	6	V	D	$4h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{32}[Ra+displacement])$ 

# **LDTU – Load Tetra Unsigned**

## Description:

A thirty-two-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ement <sub>70</sub>	R	$a_6$	Ri	6	v		84h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = zero \ extend \ (memory_{32}[Ra+displacement])$ 

# LDTUL - Load Tetra Unsigned, Long Address

## Description:

A thirty-two-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44 2	21	20	15	14	9	8	7	0
$Sg_3$	Displacement <sub>230</sub>		Ra	$a_6$	Rt	6	V	D	5h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = zero extend (memory_{32}[Ra+displacement])$ 

# LDTUX – Load Tetra Unsigned Indexed

## Description:

A thirty-two-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
05h <sub>7</sub>	Seg <sub>3</sub>	$Sc_2$	$Tb_2$	R	Rb <sub>6</sub>		$a_6$	R	Rt <sub>6</sub>		В	$0h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = zero \ extend \ (memory_{32}[Ra+Rb*Sc])$ 

## LDTX - Load Tetra Indexed

## **Description:**

A thirty-two-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
04h <sub>7</sub>	Seg <sub>3</sub>	$Sc_2$	$Tb_2$	R	Rb <sub>6</sub>		$a_6$	R	Rt <sub>6</sub>		В	$0h_8$

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = sign \ extend \ (memory_{32}[Ra+Rb*Sc])$ 

# LDW – Load Wyde

## Description:

A sixteen-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
Sg <sub>3</sub>	Displacement	70	Ra	a <sub>6</sub>	Rt	6	V	8:	2h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = sign extend (memory_{16}[Ra+displacement])$ 

# LDWL - Load Wyde, Long Address

## Description:

A sixteen-bit value is loaded from memory and sign extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44	21	20	15	14	9	8	7	0
Sg <sub>3</sub>	Displacement <sub>230</sub>		Ra	<b>1</b> 6	Rt	6	V	D21	h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = sign extend (memory_{16}[Ra+displacement])$ 

# LDWU – Load Wyde Unsigned

## Description:

A sixteen-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

3	129	28	21	20	15	14	9	8	7	0
- 5	$\mathbf{S}\mathbf{g}_3$	Displacemen	t <sub>70</sub>	Ra <sub>6</sub>		Rt <sub>6</sub>		v	8	33h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = zero extend (memory_{16}[Ra+offset])$ 

# LDWUL - Load Wyde Unsigned, Long Address

## **Description:**

A sixteen-bit value is loaded from memory and zero extended, then placed in the target register. The memory address is the sum of the sign extended offset and register Ra.

This instruction may load data from the cache and cause a cache load operation if the data isn't in the cache provided the current memory page is cacheable.

#### **Instruction Format:**

4745	44	21	20	15	14	9	8	7	0
$Sg_3$	Displacement <sub>230</sub>		Ra	$\mathfrak{l}_6$	Rt	5	V	Ι	)3h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero extend (memory_{16}[Ra+displacement])$ 

# LDWX - Load Wyde Indexed

## Description:

A sixteen-bit value is loaded from memory sign extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
02h <sub>7</sub>	$Seg_3$	$Sc_2$	$Tb_2$	Rb <sub>6</sub>		R	Ra <sub>6</sub>		Rt <sub>6</sub>		В	$0h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $Rt = sign \ extend \ (memory_{16}[Ra+Rb])$ 

# LDWUX – Load Wyde Unsigned Indexed

### **Description:**

A sixteen-bit value is loaded from memory zero extended and placed in the target register. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
03h <sub>7</sub>	Seg <sub>3</sub>	$Sc_2$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	В	$0h_8$

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $Rt = zero \ extend \ (memory_{16}[Ra+Rb])$ 

### LLAH – Load Linear Address High

### **Description:**

The high order 64-bits of the linear memory address is calculated and stored in the target register.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ment <sub>70</sub>	R	$a_6$	Rt	6	v	8	$Ah_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

Exceptions: DBE, DBG, LMT, TLB

### LLAHL - Load Linear Address High Long

#### **Description:**

The low order 64-bits of the linear memory address is calculated and stored in the target register.

#### **Instruction Format:**

4745	44		21	20	15	14	9	8	7	0
$Sg_3$		Displacement <sub>230</sub>		Ra	$a_6$	Rt	6	V	D.	$Ah_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

# LLAHX – Load Linear Address High Indexed

### **Description:**

The high order 64-bits of the linear memory address is calculated and stored in the target register.

### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
09h <sub>7</sub>	$Seg_3$	$Sc_2$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	t <sub>6</sub>	v	В	$0h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + Rb \* Sc

### LLAL - Load Linear Address Low

### **Description:**

The low order 64-bits of the linear memory address is calculated and stored in the target register.

#### **Instruction Format:**

3129	28	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ement <sub>70</sub>	R	$a_6$	Rt	6	V	8	$9h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

Exceptions: DBE, DBG, LMT, TLB

### LLALL - Load Linear Address Low Long

### **Description:**

The low order 64-bits of the linear memory address is calculated and stored in the target register.

#### **Instruction Format:**

4745	44 2	1	20	15	14	9	8	7	0
$Sg_3$	Displacement <sub>230</sub>		Ra	<b>1</b> 6	Rt	6	V	D	9h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

Rt = Ra + displacement

### LLALX - Load Linear Address Low Indexed

### **Description:**

The low order 64-bits of the linear memory address is calculated and stored in the target register.

#### **Instruction Format:**

39 34	33 31	3029	2827	26	21	20	15	14	9	8	7	0
08h <sub>7</sub>	$Seg_3$	$Sc_2$	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	v	В	$0h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

Rt = Ra + Rb \* Sc

# **STB – Store Byte**

### **Description:**

An eight-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

3129	2827	26 21	20 15	14 9	8	7	0
$Sg_3$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Disp <sub>6</sub>	0	90	$Oh_8$

4745	44 42	41	40 38	37	3635	3429	2827	26 21	20 15	14 9	8	7 0	
$Sg_3$	Disp <sub>3</sub>	С	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Disp <sub>6</sub>	1	90h <sub>8</sub>	

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

#### **Operation:**

$$memory_8[Ra+displacement] = Rb_{[7..0]}$$

### **Vector Operation:**

$$\begin{split} y &= 0 \\ \text{for } n &= 0 \text{ to } VL - 1 \\ &\quad \text{if } (Vm[n]) \\ &\quad \text{memory}_8[Ra + \text{displacement} + y * Rc] = Vb[n]_{[7..0]} \\ &\quad \text{else if } (z \& \sim \!\! C) \\ &\quad \text{memory}_8[Ra + \text{displacement} + y * Rc] = 0_{[7..0]} \\ &\quad \text{if } (C) \; y = y + Vm[x] \\ &\quad \text{else } y = y + 1 \end{split}$$

# STBL – Store Byte, Long Addressing

### Description:

An eight-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	29	2827	26 2	1 20	15	14	9	8	7	0
$\overline{Sg_3}$	Displacemen	nt <sub>216</sub>	Tb <sub>2</sub>	Rb <sub>6</sub>	R	$a_6$	Dis	$p_6$	v		E0h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_8[Ra+offset] = Rb_{[7..0]}$ 

# STBX – Store Byte Indexed

### Description:

An eight-bit value is stored to memory from register Rb. The memory address is the sum of register Ra and scaled register Rc.

#### **Instruction Format:**

47 42	41 39	3837	3635	34	29	2827	26	21	20	15	14	9	8	7	0
$00h_6$	Seg <sub>3</sub>	$Sc_2$	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	C	$0h_8$

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_8[Ra+Rc*Sc] = Rb_{[7:0]}$ 

# STO – Store Octa

### **Description:**

A sixty-four-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

3129	2827	26 21	20 15	14 9	8	7 0
$Sg_3$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Disp <sub>6</sub>	V	93h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

### STOC - Store Octa, Clear Reservation

#### **Description:**

A sixty-four-bit value from the source register Rb is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

_	3129	2827	26 2	20 15	14 9	8	7	0
	$Sg_3$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Disp <sub>6</sub>	v	ç	94h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+displacement] = Rb$ 

Exceptions: DBE, DBG, TLB, LMT

### STOCL - Store Octa, Clear Reservation, Long Addressing

#### **Description:**

A sixty-four-bit value from the source register Rb is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	29	2827	26	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ement <sub>216</sub>	$Tb_2$	Rl	$b_6$	R	$a_6$	Dis	$p_6$	v		E4h <sub>8</sub>

**Clock Cycles:** 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+offset] = Rb$ 

# STOCX – Store Octa, Clear Reservation Indexed

### **Description:**

A sixty-four-bit value from the source register Rb is stored to memory if a reservation exists at the target address. The reservation at the target address is cleared. The memory address is the sum of register Ra and scaled register Rb.

#### **Instruction Format:**

47 42	41 39	3837	3635	34 29	2827	26 21	20 15	14 9	8	7 0
$04h_6$	Seg <sub>3</sub>	$Sc_2$	$Tc_2$	$Rc_6$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	~6	V	C0h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+Rc*Sc] = Rb$ 

# STOL – Store Octa, Long Addressing

### **Description:**

A sixty-four-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	29	2827	26	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ement <sub>216</sub>	$Tb_2$	R	$b_6$	R	$a_6$	Dis	$p_6$	V		E3h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+offset] = Rb$ 

# STOX - Store Octa Indexed

### **Description:**

A sixty-four-bit value is stored to memory from register Rb. The memory address is the sum of register Ra and scaled register Rc.

#### **Instruction Format:**

47 42	41 39	3837	3635	34	29	2827	26	21	20	15	14	9	8	7	0
$03h_6$	Seg <sub>3</sub>	$Sc_2$	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	R	.b <sub>6</sub>	R	$a_6$	~	6	v	C	$0h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{64}[Ra+Rc*Sc] = Rb$ 

### STT – Store Tetra

### Description:

A thirty-two-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

3129	2827	26 21	20 15	14 9	8	7 0
$Sg_3$	$Tb_2$	Rb <sub>6</sub>	Ra <sub>6</sub>	Disp <sub>6</sub>	V	92h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_{32}[Ra+displacement] = Rb_{[31..0]}$ 

# STTL – Store Tetra, Long Addressing

### Description:

A thiry-two-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	29	2827	26	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ment <sub>216</sub>	$Tb_2$	R	$b_6$	R	$a_6$	Dis	$p_6$	V		E2h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_{32}[Ra+offset] = Rb_{[31..0]}$ 

# STTX – Store Tetra Indexed

### **Description:**

A thirty-two-bit value is stored to memory from register Rb. The memory address is the sum of register Ra and scaled register Rc.

#### **Instruction Format:**

47 42	41 39	3837	3635	34 29	2827	26 21	20 15	14 9	8	7 0
$02h_6$	Seg <sub>3</sub>	$Sc_2$	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	~6	v	C0h <sub>8</sub>

Clock Cycles: 10 (one memory access)

**Execution Units:** All ALU's / Memory

**Operation:** 

 $memory_{32}[Ra+Rc*Sc] = Rb_{[31:0]}$ 

# STW – Store Wyde

### Description:

A sixteen-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

3129	2827	26 21	20 15	14 9	8	7	)
$\overline{Sg_3}$	Tb <sub>2</sub>	Rb <sub>6</sub>	Ra <sub>6</sub>	Disp <sub>6</sub>	V	91h <sub>8</sub>	_

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

Operation:

 $memory_{16}[Ra+displacement] = Rb_{[15..0]}$ 

# STWL – Store Wyde, Long Addressing

### **Description:**

A sixteen-bit value is stored to memory from the source register Rb. The memory address is the sum of the sign extended displacement and register Ra.

#### **Instruction Format:**

47 45	44	29	2827	26	21	20	15	14	9	8	7	0
$Sg_3$	Displace	ment <sub>216</sub>	$Tb_2$	R	$b_6$	R	$a_6$	Dis	$p_6$	V		E1h <sub>8</sub>

Clock Cycles: 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{16}[Ra+offset] = Rb_{[15..0]}$ 

# STWX – Store Wyde Indexed

### **Description:**

A sixteen-bit value is stored to memory from register Rb. The memory address is the sum of register Ra and scaled register Rc.

#### **Instruction Format:**

47 42	41 39	3837	3635	34	29	2827	26	21	20	15	14	9	8	7	0
$01h_6$	Seg <sub>3</sub>	$Sc_2$	$Tc_2$	R	C <sub>6</sub>	$Tb_2$	R	.b <sub>6</sub>	R	$a_6$	~	6	v	C	$0h_8$

**Clock Cycles:** 10 (one memory access)

Execution Units: All ALU's / Memory

**Operation:** 

 $memory_{16}[Ra+Rc*Sc] = Rb_{[15:0]}$ 

### Branch / Flow Control Instructions

### Overview

#### **Mnemonics**

There are two sets of mnemonics for branch instructions. Branch instructions that are IP relative, specify Ca = 7 in the branch instruction and are referred to with a 'B' as in BEQ. Using mnemonics that begin with 'B' imply the code address register is the instruction pointer, C7. Branch instructions that are relative to other code address registers are referred to as jump instructions and begin with a 'J' in the mnemonic.

Instructions that decrement the loop counter begin with a 'D' in the mnemonic as in DBEQ standing for decrement and branch if equal.

#### **Conditions**

Conditional branches branch to the target address only if the condition is true. The condition is determined by the comparison of two general-purpose registers. The Rb register field may also specify a quick immediate value.

The original Thor machine used instruction predicates to implement conditional branching. Another instruction was required to set the predicate before branching. Combining compare and branch in a single instruction may reduce the dynamic instruction count. An issue with comparing and branching in a single instruction is that it may lead to a wider instruction format.

### **Branch Format**

There are two conditional branch formats, short and long, differing only in the number of bits used for the target address constant. The remainder of the branch instruction functions identically.

In many cases the branch target is located a short distance away from the branch. It would be wasteful to use a long format for all cases. A short displacement of 10 bits is suitable for about 90% of branches. However, calling subroutines typically requires more address bits than is available in the short format. For branching to more distant targets the long form of the branch instruction supports a 26-bit displacement constant. Unconditional branches support an even larger displacement target, either 24 or 40 bits. Unconditional branches are used for subroutine calls and typically require a larger range than conditional branches. Hence, a longer format branch instruction is also available.

	_	39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		$\begin{array}{c cccc} Target_8 & Ca_3 & Tb_2 & Rb_6 \end{array}$		$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2x	th <sub>8</sub>			
	•														
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targe	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3x	:h <sub>8</sub>

### **Branch Conditions**

The branch opcode determines the condition under which the branch will execute.

Target <sub>24</sub>			Ca <sub>3</sub>	$Tb_2$	Rl	<b>)</b> <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3x	:h <sub>8</sub>
55		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
										•				▼

2x/3x	Comparison Test
28h	signed less than
29h	signed greater or equal
2Ah	signed less than or equal
2Bh	signed greater than
2Ch	unsigned less than
2Dh	unsigned greater or equal
2Eh	unsigned less than or equal
2Fh	unsigned greater than
26h	equal
27h	not equal
24h	bit clear
25h	bit set

Cn <sub>2</sub>	
0	ignore loop counter, branch if condition is true
1	decrement loop counter, branch if loop counter is non-zero and condition is true
2	reserved
3	reserved

# Linkage


Branches may specify a linkage register which is updated with the address of the next instruction. This allows subroutines to be called. There are two link registers in the architecture.

39	32	31 29	2827	26	21	20	15	1413	1211	▼ 10 9	8	7	0
Targ	get <sub>8</sub>	Ca <sub>3</sub>	$Tb_2$	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	$Cn_2$	Lk <sub>2</sub>	0	2x	kh <sub>8</sub>

Lk <sub>2</sub>	Meaning
0	do not store return address
1	use Lk1
2	use Lk2
3	reserved (C3)

### **Branch Target**

For the short format branches, the target address is formed as the sum of a code address register and a 10-bit constant specified in the instruction. Branches may be IP relative with a range of  $\pm 512B$ .



For the long format branches, the target address is formed as the sum of a code address register and a 26-bit constant specified in the instruction. Branches may be IP relative with a range of  $\pm 32$ MB. To perform a far branch operation, specify a code address register containing the target selector value as part of the target address.

	▼	▼						▼						
55		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>		Ca <sub>3</sub>	$Tb_2$	Rb	6	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3x	h <sub>8</sub>

### **Near or Far Branching**

In a segmented system a question that comes to mind is how to perform a far jump or call versus performing a near one. For Thor2021 all branches are effectively far branches as the target selector is always loaded into the IP register. The return address selector is always stored in a link register. However, if addresses are formed using IP relative addressing,  $Ca_3 = 7$ , then the selector value will remain unchanged making the branch effectively a near branch. If the  $Ca_3$  field is specified as a zero, then the IP selector value will remain unchanged. A non-zero  $Ca_3$  register is needed to perform a far branch.

### **Branch to Register**

The branch to register instruction allows a conditional return from subroutine to be used or a branch to a value in a register. Branching to a value in a register allows all bits of the instruction pointer to be set. Since addresses are formed as the sum of a code address register and a constant in the instruction, branching to a register is inherent in the instruction. The target constant may be set to zero.

Targ	et <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	RI	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2x	h <sub>8</sub>	
39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0	
▼		▼						▼						

# [D]BBC – Branch if Bit Clear

### **Description**:

This instruction branches to the target address if the Rb bit of Ra is clear, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

39 32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
Target <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	Rl	<b>0</b> <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	24	$h_8$

_ 55	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
Target <sub>24</sub>		73	$Tb_2$	Rb	<b>)</b> 6	R	$a_6$	Tgt <sub>2</sub>	$Cn_2$	Lk <sub>2</sub>	0	34	$h_8$

### **Operation:**

**Execution Units:** Branch

Exceptions: none

**Notes:** 

# [D]BBS – Branch if Bit Set

### **Description**:

This instruction branches to the target address if the Rb bit of Ra is set, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tar	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	a <sub>6</sub>	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	25	h <sub>8</sub>
55	·		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	35	h <sub>8</sub>	

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra.bit[Rb] &== 1) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

Exceptions: none

**Notes:** 

# [D]BEQ – Branch if Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra equals the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

#### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	26	5h <sub>8</sub>
E E			22	31 29	2827	26	21	20	15	1413	1211	10.0	0	7	0
55		32		31 29	2021	26	21	20	15	1413	1211	10 9	0	7	0
	Targe	et <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	36	5h <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra &== Rb) \\ IP &= IP + Constant \end{aligned}$$

**Execution Units:** Branch

Exceptions: none

**Notes:** 

For a floating-point comparison positive and negative zero are considered equal.

# [D]BGE – Branch if Greater Than or Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Targ	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	29	Ph <sub>8</sub>
55	L		22	31 29	2827	26	21	20	15	1413	1211	10 9	0	7	0
		32		31 29	2021	20	21	20	13	1413	1211	10 9	0	,	U
	Targe	et <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	39	h <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra >= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# [D]BGEU – Branch if Greater Than or Equal Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: BR,BRL

	39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Ta	rget <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	a <sub>6</sub>	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2D	Oh <sub>8</sub>
55		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	<b>b</b> <sub>6</sub>	R	a <sub>6</sub>	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3E	h <sub>8</sub>

### **Operation:**

**Execution Units:** Branch

# [D]BGT – Branch if Greater Than

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Targ	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2B	Bh <sub>8</sub>
E E	L		32	31 29	2827	26	21	20	15	1413	1211	10.0	0	7	0
55			32	31 29	2021	26	21	20	15	1413	1211	10 9	0	7	0
	Targe	et <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3E	Bh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# [D]BGTU – Branch if Greater Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Targ	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2F	Fh <sub>8</sub>
E E			22	21.20	2827	26	21	20	15	1412	1211	10.0	0	7	0
55			32	31 29	2021	26	21	20	15	1413	1211	10 9	0	7	0
	Targe	et <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3F	h <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]BLE – Branch if Less Than or Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Targ	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2A	Nh <sub>8</sub>
55	·		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targe	et <sub>24</sub>	32	7 <sub>3</sub>	Tb <sub>2</sub>		b <sub>6</sub>	1	a <sub>6</sub>	Tgt <sub>2</sub>				-	Nh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra <= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# [D]BLEU – Branch if Less Than or Equal Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tar	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2E	Eh <sub>8</sub>
55	'		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targ	et <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>		$\frac{b_6}{b_6}$	1	$\frac{a_6}{a_6}$	Tgt <sub>2</sub>		T		-	Eh <sub>8</sub>
										Ü					

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra <= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]BLT – Branch if Less Than

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

#### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Targ	get <sub>8</sub>	7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	28	Sh <sub>8</sub>
E E	L		32	31 29	2827	26	21	20	15	1413	1211	10.0	0	7	0
55			32	31 29	2021	26	21	20	15	1413	1211	10 9	0	7	0
	Targe	et <sub>24</sub>		7 <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	38	Sh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# [D]BLTU – Branch if Less Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: BR,BRL

39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
Targ	et <sub>8</sub>	7 <sub>3</sub>	$Tb_2$	Rl	<b>)</b> 6	R	$a_6$	Tgt <sub>2</sub>	$Cn_2$	Lk <sub>2</sub>	0	20	Ch <sub>8</sub>

_ 55	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
Target <sub>24</sub>		7 <sub>3</sub>	$Tb_2$	Rt	<b>)</b> <sub>6</sub>	R	$a_6$	$Tgt_2$	$Cn_2$	$Lk_2$	0	30	Ch <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]BNE – Branch if Not Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
Targe	et <sub>8</sub>	Ca <sub>3</sub>	$Tb_2$	Rl	<b>3</b> 6	R	$a_6$	$Tgt_2$	$Cn_2$	Lk <sub>2</sub>	0	27	7h <sub>8</sub>

 55 3	2	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
Target <sub>24</sub>		Ca <sub>3</sub>	$Tb_2$	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	$Cn_2$	$Lk_2$	0	37	h <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra \ != Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

Exceptions: none

**Notes:** 

# [D]BRA – Branch Always

### **Description**:

This instruction always branches to the target address.

### Formats Supported: BRA, BRAL

_	39	32	31 29	28		13	1211	10 9	8	7	0
	Targ	get <sub>8</sub>	7 <sub>3</sub>		Target <sub>16</sub>		$Cn_2$	$Lk_2$	0	201	$h_8$
_					-			<u>l</u>			

55 32	31 29	28 13	1211	10 9	8	7 0
Target <sub>24</sub>	7 <sub>3</sub>	$Target_{16}$	Cn <sub>2</sub>	Lk <sub>2</sub>	0	30h <sub>8</sub>

### **Operation:**

Lk = next IP

IP = Ca + Constant

**Execution Units:** Branch

Exceptions: none

**Notes:** 

### [D]BSR - Branch to Subroutine

### **Description**:

This instruction always jumps to the target address. The address of the next instruction is stored in a link register.

#### Formats Supported: BRA, BRAL

	39	32	31 29	28	13	1211	10 9	8	7	0
		Target <sub>8</sub>			Target <sub>16</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	20h <sub>8</sub>	
			<u> </u>	ı		I				
55		32	31 29	28	13	1211	10 9	8	7	0
Target <sub>24</sub>			7 <sub>3</sub>		Target <sub>16</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	30h	18

### **Operation:**

Lk = next IP

IP = IP + Constant

**Execution Units:** Branch

Exceptions: none

# [D]JBC – Jump if Bit Clear

## **Description**:

This instruction branches to the target address if the Rb bit of Ra is clear, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Targ	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	24	lh <sub>8</sub>
55	-		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targe	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	34	lh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra.bit[Rb] &== 0) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

Exceptions: none

# [D]JBS – Jump if Bit Set

## **Description**:

This instruction branches to the target address if the Rb bit of Ra is set, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tar	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	25	h <sub>8</sub>
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targ	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	35	h <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra.bit[Rb] &== 1) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

Exceptions: none

# [D]JEQ – Jump if Equal

## **Description**:

This instruction branches to the target address if the contents of the Ra equals the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tar	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	26	bh <sub>8</sub>
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	0	7	0
			32	31 29	2021	20	21	20	13	1413	1211	10 9	0		<u> </u>
	Targ	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	36	h <sub>8</sub>

## **Operation:**

$$Lk = next IP$$

$$If (Ra == Rb)$$

$$IP = Ca + Constant$$

**Execution Units:** Branch

Exceptions: none

# [D]JGE – Jump if Greater Than or Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	29	Ph <sub>8</sub>
			22	21.20	2027	26	21	20	1.5	1412	1211	10.0	0	7	
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	39	h <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra >= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JGEU – Jump if Greater Than or Equal Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	20	Oh <sub>8</sub>
				24.20	2025	2.5	24	20		1440	1011	10.0	•		
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targe	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3E	Oh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra >= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JGT – Jump if Greater Than

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2B	Bh <sub>8</sub>
	•					_									
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3E	Bh <sub>8</sub>

## **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JGTU – Jump if Greater Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is greater than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2F	Fh <sub>8</sub>
						_									
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targe	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3F	Fh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units**: Branch

# [D]JLE – Jump if Less Than or Equal

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2A	Nh <sub>8</sub>
						_									
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3A	Nh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra <= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JLEU – Jump if Less Than or Equal Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than or equal to that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

#### Formats Supported: BR,BRL

	39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Tar	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	Rl	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	2E	Eh <sub>8</sub>
55		32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	Rl	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	3E	Eh <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra <= Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JLT – Jump if Less Than

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as signed integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	28	Sh <sub>8</sub>
			22	24.20	2025	2.5	24	20		1440	1011	10.0			
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	R	b <sub>6</sub>	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	38	Sh <sub>8</sub>

## **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JLTU – Jump if Less Than Unsigned

### **Description**:

This instruction branches to the target address if the contents of the Ra is less than that of Rb, otherwise program execution continues with the next instruction. The values are treated as unsigned integers. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tarş	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	20	Ch <sub>8</sub>
														_	
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Target <sub>24</sub>			Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	30	Ch <sub>8</sub>

### **Operation:**

$$\begin{aligned} Lk &= next \ IP \\ If \ (Ra > Rb) \\ IP &= Ca + Constant \end{aligned}$$

**Execution Units:** Branch

# [D]JNE – Jump if Not Equal

## **Description**:

This instruction branches to the target address if the contents of the Ra is not equal to the contents of Rb, otherwise program execution continues with the next instruction. For a further description see Branch Instructions.

### Formats Supported: BR,BRL

		39	32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
		Tar	get <sub>8</sub>	Ca <sub>3</sub>	Tb <sub>2</sub>	R	$b_6$	R	$a_6$	Tgt <sub>2</sub>	Cn <sub>2</sub>	Lk <sub>2</sub>	0	27	h <sub>8</sub>
55			32	31 29	2827	26	21	20	15	1413	1211	10 9	8	7	0
	Targ	et <sub>24</sub>		Ca <sub>3</sub>	Tb <sub>2</sub>	_	b <sub>6</sub>	1	$a_6$	Tgt <sub>2</sub>	1			-	′h <sub>8</sub>

## **Operation:**

$$Lk = next IP$$
If  $(Ra != Rb)$ 

$$IP = Ca + Constant$$

**Execution Units:** Branch

Exceptions: none

# [D]JMP – Jump

### **Description**:

This instruction always jumps to the target address.

### Formats Supported: BRA, BRAL

_	39	32	31 29	28		13	1211	10 9	8	7	0
	Targe	et <sub>8</sub>	Ca <sub>3</sub>		Target <sub>16</sub>		Cn <sub>2</sub>	$0_2$	0	20	h <sub>8</sub>
•											

55	32	31 29	28		13	1211	10 9	8	7	0
Target <sub>24</sub>		Ca <sub>3</sub>		Target <sub>16</sub>		$Cn_2$	$0_2$	0	30	h <sub>8</sub>

## **Operation:**

Lk = next IP

IP = Ca + Constant

Execution Units: Branch

Exceptions: none

# [D]JSR – Jump to Subroutine

### **Description**:

This instruction always jumps to the target address. The address of the next instruction is stored in a link register.

### Formats Supported: BRA, BRAL

39	32	31 29	28		13	1211	10 9	8	7	0
Target	8	Ca <sub>3</sub>		Target <sub>16</sub>		Cn <sub>2</sub>	$Lk_2$	0	20	$h_8$

55	32	31 29	28	13	1211	10 9	8	7	0
Target	24	Ca <sub>3</sub>		Target <sub>16</sub>	$Cn_2$	Lk <sub>2</sub>	0	30	)h <sub>8</sub>

### **Operation:**

Lk = next IP

IP = Ca + Constant

**Execution Units**: Branch

Exceptions: none

# **NOP – No Operation**

Description:

This instruction does not do anything.

### **Integer Instruction Format:**

15	9	8	7	0
~	7	V	F1	$h_8$

Operation:

**Vector Operation** 

Execution Units: I

**Clock Cycles: 1** 

Exceptions: none

# **RTS – Return from Subroutine**

### **Description**:

This instruction returns from a subroutine by transferring program execution to the address calculated as the sum of a link register and a constant.

### **Formats Supported: RET**

15	11	10	9	8	7	0
Const <sub>5</sub>		Ll	ζ2	0	F.	$2h_8$

Flags Affected: none

**Operation:** 

**Execution Units:** Branch

Exceptions: none

Notes:

A branch instruction may also be used to return from a subroutine

Return address prediction hardware may make use of the RET instruction.

# **System Instructions**

## **BRK** – Break

### **Description**:

This instruction initiates the processor debug routine. The processor enters debug mode. The cause code register is set to indicate execution of a BRK instruction. Interrupts are disabled. The instruction pointer is reset to the contents of tvec[3] and instructions begin executing. There should be a jump instruction placed at the break vector location. The address of the BRK instruction is stored in the EIP register, C6.

#### **Instruction Format: BRK**

15	9	8	7	0
~7		0	00	Oh <sub>8</sub>

### **Operation:**

**Execution Units:** Branch

**Clock Cycles:** 

Exceptions: none

## **CSRx – Control and Special / Status Access**

### **Description**:

The CSR instruction group provides access to control and special or status registers in the core. For the read operation the current value of the CSR is placed in the target register Rt.

#### **Instruction Format**: CSR

39		24	2321	20	15	14	9	8	7	0
	Regno <sub>16</sub>		O <sub>3</sub>	Ra <sub>6</sub>	i	R	6	0	0F	h <sub>8</sub>

$O_3$		Operation
0	CSRRD	Only read the CSR, no update takes place, Ra should be x0.
1	CSRRW	Read/Write to CSR
2	CSRRS	Read/Set CSR bits
3	CSRRC	Read/Clear CSR bits
4 to 7		Reserved

CSRRS and CSRRC operations are only valid on registers that support the capability.

The Regno<sub>[15..12]</sub> field is reserved to specify the operating mode. Note that registers cannot be accessed by a lower operating mode.

Execution Units: Integer, the instruction may be available on only a single execution unit (not supported on all available integer units).

#### Clock Cycles: 1

**Exceptions**: privilege violation attempting to access registers outside of those allowed for the operating mode.

## DI – Disable Interrupts

### **Description:**

This instruction disables interrupts for a short period of time. The Rb field specifies the number of following instructions for which interrupts are disabled. Interrupts may be disabled for a maximum of seven instructions.

#### **Instruction Format:**

39	33	3229	2827	26 21	20 15	14 9	8	7 0
16	h <sub>7</sub>	~4	Tb <sub>2</sub>	$Rb_6$	$0_{6}$	~6	0	07h <sub>8</sub>

#### **Operation:**

**Execution Units: ALU** 

**Clock Cycles:** 

Exceptions: none

**Notes:** 

# **INT** – Generate Interrupt

### **Description:**

Generate interrupt. This instruction invokes the system exception handler. The return address is stored in the EIP register (code address register #6).

The return address stored is the address of the interrupt instruction, not the address of the next instruction. To call system routines use the <u>SYS</u> instruction.

The level of the interrupt is checked and if the interrupt level in the instruction is less than or equal to the current interrupt level then the instruction will be ignored.

#### **Instruction Format:**

23	20	19	17	16	9	8	7	0
~	4		v1 <sub>3</sub>	Cau	ıse <sub>8</sub>	0		A6h <sub>8</sub>

# **MEMDB – Memory Data Barrier**

### **Description:**

All memory accesses before the MEMDB command are completed before any memory accesses after the data barrier are started.

#### **Instruction Format:**

15	9	8	7	0
~7		0		F9h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Memory

# **MEMSB – Memory Synchronization Barrier**

### **Description:**

All instructions before the MEMSB command are completed before any memory access is started.

#### **Instruction Format:**

15	9	8	7	0
~7		0		F8h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** Memory

# MFSEL – Move from Selector Register

### **Description:**

This instruction moves a selector register indirectly specified by Rb or directly if Rb is a constant, to register Rt.

### **Instruction Format:**

39	33	3229	2827	26	21	20	15	14	9	8	7	0
28h	17	~4	Tb <sub>2</sub>	Rl	b <sub>5</sub>	0	6	R	t <sub>6</sub>	0	07	′h <sub>8</sub>

### **Operation:**

$$Rt = B[Rb]$$

### **Examples:**

LDI \$t1,#7

MFSEL \$t0,[\$t1] ; get CS

STO \$t0,CSSave

**Execution Units:** ALU

**Clock Cycles:** 

## MTSEL – Move to Selector Register

### **Description:**

This instruction moves register Ra to the selector register identified indirectly by the contents of Rb or directly if Rb is a constant. This instruction will load the associated descriptor cache from either the GDT or LDT tables.

It is not possible to move a value directly to the CS register as that would cause an unexpected change of program flow. Instead, the CS register must be loaded via a branch instruction which uses one of ES, FS, or GS as the selector.

#### **Instruction Format:**

39	33	3229	28 27	26 21	20	15	14	9	8	7	0
29	h <sub>7</sub>	~4	$Tb_2$	Rb <sub>5</sub>	F	Ra <sub>6</sub>	~	6	0	07	7h <sub>8</sub>

#### **Operation:**

B[Rb] = Ra

### **Selector Registers:**

#	Reg	Usage
0	ZS	
1	DS	data selector
2	ES	
3	FS	
4	GS	
5	HS	
6	SS	stack selector
7	CS	code selector
8	PMA0	physical memory attributes
9	PMA1	
10	PMA2	
11	PMA3	
12	PMA4	
13	PMA5	
14	PMA6	
15	PMA7	
16	LDT	local descriptor table selector
17	KYT	memory key table selector

### **Examples:**

MTSEL DS,\$a0 LDI \$a1,#3

MTSEL [\$a1],\$a0 ; move indirect \$a0 to b[\$a1]

**Execution Units: ALU** 

**Clock Cycles:** 

Exceptions: none

# PEEKQ – Peek at Queue / Stack

### **Description**:

This instruction returns the top value into Rt from the hardware queue specified in Ra. The hardware queue position is <u>not</u> advanced. Unused value bits should read as zero. Used the STATQ instruction to get the queue status.

**Instruction Format**: SYSR2

_	39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
	0A	.h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	~	<b>'</b> 6	R	t <sub>6</sub>	v	07	7h <sub>8</sub>

## PFI – Poll for Interrupt

### **Description**:

The poll for interrupt instruction polls the interrupt status lines and performs an interrupt service if an interrupt is present. Otherwise, the PFI instruction is treated as a NOP operation. Polling for interrupts is performed by managed code. PFI provides a means to process interrupts at specific points in running software. Rt is loaded with the cause code in the low order eight bits, and the interrupt level in bits eight to eleven of the register.

#### **Instruction Format: SYS**

_	39	33	32		15	14	9	8	7	0
	11	h <sub>7</sub>		~18		Rt	6	0	1 07	h <sub>8</sub>

**Clock Cycles**: 1 (if no exception present)

### **Operation:**


```
 \begin{split} & \text{if (irq $<>$ 0)} \\ & \text{Rt}[7:0] = \text{cause code} \\ & \text{Rt}[11:8] = \text{irq level} \\ & \text{PMSTACK} = (\text{PMSTACK} << 4) \mid 6 \\ & \text{CAUSE} = \text{Const}_8 \\ & \text{C6} = \text{IP} \\ & \text{IP} = \text{tvec}[3] \end{split}
```

**Execution Units: Branch** 

# **POPQ – Pop from Queue / Stack**

### **Description**:

This instruction pops a value into Rt from the hardware queue specified in Rb. The hardware queue position <u>is</u> advanced. Unused value bits should read as zero. To check the queue status, use the STATQ instruction.

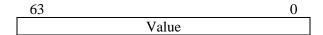

Value: the value that was pushed to the queue

**Instruction Format:** SYSR2

_	39	33	32 30	29	28 27	26 2	1	20	15	14	9	8	7	0
	091	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>		`	<b>'</b> 6	R	t <sub>6</sub>	V	07	h <sub>8</sub>

Exceptions: none

**Notes:** 

Queue #15 is the instruction trace que

# **PUSHQ – Push on Queue / Stack**

### **Description**:

This instruction pushes an N-bit value in Ra onto the hardware queue specified in Rb. Where N is implementation defined between 1 and 64 bits. To check the queue status, use the STATQ instruction.

**Instruction Format:** SYSR2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
08	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	~	6	v	07	$7h_8$

**Instruction Format**: PUSHQ

## **REX – Redirect Exception**

### **Description**:

This instruction redirects an exception from an operating mode to a lower operating mode. This instruction if successful jumps to the target exception handler and does not return. If this instruction fails execution will continue with the next instruction.

This instruction may fail if exceptions are not enabled at the target level.

The location of the target exception handler is found in the trap vector register for that operating mode (tvec[xx]).

The cause (cause) and bad address (badaddr) registers of the originating mode are copied to the corresponding registers in the target mode.

#### **Instruction Format: REX**

39	33	32 31	30	21	20	15	14	9	8	7	0
10	h <sub>7</sub>	$Tm_2$	~	10	R	$a_5$	0	6	0	07	$7h_8$

$Tm_2$	
0	redirect to user mode
1	redirect to supervisor mode
2	redirect to hypervisor mode
3	reserved

#### **Clock Cycles:** 4

**Execution Units: Branch** 

#### Example:

REX 1 ; redirect to supervisor handler

; If the redirection failed, exceptions were likely disabled at the target level.

; Continue processing so the target level may complete its operation.

RTE ; redirection failed (exceptions disabled ?)

#### Notes:

Since all exceptions are initially handled in machine mode the machine handler must check for disabled lower mode exceptions.

## **RTE – Return from Exception**

### **Description**:

Restore the previous interrupt enable setting and operating level and transfer program execution back to the address in the exception address register (C6). One of sixty-four semaphore registers specified by the Rb field of the instruction may also be cleared. Semaphore register zero is always cleared by this instruction.

This instruction may be encoded to return a short distance past the exception address point. This may be useful to return to the next instruction or return to a point past inline parameters. The constant<sub>12</sub> field specifies a return offset in terms of bytes.

There is really only a single instruction to return from any mode for an exception. Although there are several additional mnemonics.

#### **Instruction Format: SYS**

39	33	3229	2827	26	21	20	9	8	7	0
13h	17	~4	$Tb_2$	R	$b_6$	Cons	tant <sub>12</sub>	0	07	$7h_8$

Flags Affected: none

### **Operation:**

PMSTACK = PMSTACK >> 4 Semaphore[0] = 0 Semaphore[Rb] = 0 IP = C6 + Constant

**Execution Units**: Branch

**Clock Cycles:** 

Exceptions: none

# **SEI – Set Interrupt Level**

### **Description:**

The interrupt mask is set, disabling lower level maskable interrupts. The current interrupt mask level is stored in the target register. The new interrupt mask level is set to the bitwise or of a three-bit level field, Lvl<sub>3</sub> and the low order three bits of register Ra. This instruction is available only in machine mode.

#### **Instruction Format:**

23 21	20	15	14	9	8	7	0
Lvl <sub>3</sub>	R	$a_6$	Rt	6	0		FBh <sub>8</sub>

**Clock Cycles:** 1

#### **Operation:**

 $im = Lvl_3 \mid Ra_{[2:0]}$ 

# STATQ – Get Status of Queue / Stack

### **Description**:

This instruction returns a queue status value into Rt from the hardware queue specified in Rb. The hardware queue position is not advanced. Unused value bits should read as zero.

63	62	61	48	47		0
Qe	Dv	Data Co	ount		Extended Data (XD)	

#### Fields

Qe: empty. If set, this bit indicates that the queue/stack is empty.

Dv: data valid. If this bit is set it indicates that valid data is present at the queue.

Dc: data count: The number of items left in the queue

XD: The high order 48 bits of the data stored by the queue if the queue is wider than 64 bits.

#### **Instruction Format**: SYSR2

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
0B	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	~6	Rt <sub>6</sub>	v	$07h_{8}$	

# **SYNC -Synchronize**

### **Description:**

All instructions for a particular unit before the SYNC are completed and committed to the architectural state before instructions of the unit type after the SYNC are issued. This instruction is used to ensure that the machine state is valid before subsequent instructions are executed.

#### **Instruction Format:**

# **SYS – Call system routine**

### **Description:**

This instruction invokes the system exception handler. The return address is stored in the EIP register (code address register #6). This instruction causes the core to switch to machine mode.

#### **Instruction Format:**

23	17	16	9	8	7	0
~	7	Cau	se <sub>8</sub>	0		A5h <sub>8</sub>

### **Operation**:

## TLBRW - Read / Write TLB

### **Description**:

This instruction both reads and writes the TLB. Which translation entry to update comes from the value in Ra. The update value comes from the value in Rb. Rb contains the virtual page number, ASID, and physical page number. The current value of the entry selected by Ra is copied to Rt. The TLB will be written only if bit 63 of Ra is set. A random way may be selected for write by setting the 'r' bit in the Ra value.

The entry number for Ra comes from virtual address bits 14 to 23.

Page numbers are in terms of a 4kB page size.

#### **Instruction Format: SYS**

39	33	3229	2827	26 21	20 15	14 9	8	7 0
1e	h <sub>7</sub>	~4	Tb <sub>2</sub>	Rb <sub>6</sub>	Ra <sub>6</sub>	Rt <sub>6</sub>	0	07h <sub>8</sub>

### **Clock Cycles: 5**

**Execution Units: Memory** 

Ra Value Format

Rb/Rt Value Format

Bits		Meaning	
0 to 21	PPN	Physical page number (bits 22 t	to 43)
22 to 25	~	reserved (expansion of physical	l page number)
26 to 49	VPN	Virtual page number high addre	ess order bits 22 to 43
48	X	1 = page is executable	These three combined indicate
49	W	1 = page is writeable	page present (P) $0 = \text{not present}$
50	R	1 = page is readable	
51	C	1 = page is cachable	
52	U	reserved for system usage	
53	A	Accessed, set if translation was	used
54	D	Dirty, set if a write occurred to	the page
55	G	Global, global translation indic	ator
56 to 63	<b>ASID</b>	ASID address space identifier	

# WFI – Wait for Interrupt

### **Description**:

The WFI instruction waits for an external interrupt to occur before proceeding. While waiting for the interrupt, the processor clock is stopped placing the processor in a lower power mode.

### **Instruction Format: SYS**

15	9	8	7	0
~7		0	FA	Ah <sub>8</sub>

**Clock Cycles**: 1 (if no exception present)

**Execution Units: Branch** 

# **Vector Specific Instructions**

## **V2BITS**

### **Description**

Convert Boolean vector to bits. The least significant bit of each vector element is copied to the corresponding bit in the target register. The target register is a scalar register.

### **Instruction Format: R1**

31	25	2422	21	20	15	14	9	8	7	0
18h <sub>7</sub>		$m_3$	Z	Ra <sub>5</sub>		Rt	6	1	01	$h_8$

### Operation

For 
$$x = 0$$
 to VL-1 
$$if (Vm[x])$$
 
$$Rt[x] = Ra[x].LSB$$
 
$$else \ if (z)$$
 
$$Rt[x] = 0$$
 
$$else$$
 
$$Rt[x] = Rt[x]$$

## **VBITS2V**

### **Description**

Convert bits to Boolean vector. Bits from a general register are copied to the corresponding vector target register.

#### **Instruction Format: R1**

31	25	24 22	21	20 15	14 9	8	7 0
	19h <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	$Vt_6$	1	01h <sub>8</sub>

### Operation

For 
$$x = 0$$
 to VL-1  
if  $(Vm[x])$   $Vt[x] = Ra.bit[x]$   
else if  $(z)$   $Vt[x] = 0$   
else  $Vt[x] = Vt[x]$ 

### Exceptions: none

# **VCIDX** – Compress Index

#### **Description**

A value in a register Ra is multiplied by the element number and copied to elements of vector register Vt guided by a vector mask register.

#### **Instruction Format: R1**

31	25	24 22	21	20 15	14 9	8	7 0
21	Oh <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	$Vt_6$	1	$01h_{8}$

### **Operation**

$$y = 0$$
 for  $x = 0$  to  $VL - 1$  
$$if (Vm[x])$$
 
$$Vt[y] = Ra * x$$
 
$$y = y + 1$$

# **VCMPRSS** – Compress Vector

### **Description**

Selected elements from vector register Va are copied to elements of vector register Vt guided by a vector mask register.

#### **Instruction Format: R1**

31 25	24 22	21	20 15	14 9	8	7 0
2Ch <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	$Vt_6$	1	01h <sub>8</sub>

### **Operation**

$$y = 0$$
 for  $x = 0$  to  $VL - 1$  
$$if (Vm[x])$$
 
$$Vt[y] = Va[x]$$
 
$$y = y + 1$$

## **VEINS / VMOVSV – Vector Element Insert**

### **Synopsis**

Vector element insert.

### **Description**

A general-purpose register Rb is transferred into one element of a vector register Vt. The element to insert is identified by Ra.

#### **Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
3B	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	Rt	6	V	02	$2h_8$

### Operation

$$Vt[Ra] = Rb$$

# **VEX / VMOVS – Vector Element Extract**

### **Synopsis**

Vector element extract.

### **Description**

A vector register element from Vb is transferred into a general-purpose register Rt. The element to extract is identified by Ra. Ra and Rt are scalar registers.

#### **Instruction Format:** R2

39 33	;	32 30	29	28 27	26	21	20	15	14	9	8	7	0
3Ah <sub>7</sub>		$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	R	t <sub>6</sub>	1	02	2h <sub>8</sub>

### Operation

Rt = Vb[Ra]

### MFVM – Move from Vector Mask

### **Description**

Move a mask register to a general-purpose register.

**Instruction Format: VMR2** 

23	18	19	17 15	14	9	8	7	0
111	14	~	Vmb <sub>3</sub>	Rt	6	0	52	2h <sub>8</sub>

### Operation

Rt = Vmb

**Execution Units:** ALUs

# MFVL – Move from Vector Length

### **Description**

Move vector length register to a general-purpose register.

**Instruction Format: R1** 

23	18	19	17 15	14	9	8	7	0
13	h <sub>4</sub>	~	~3	Rt	6	0	52	2h <sub>8</sub>

#### **Operation**

Rt = VL

**Execution Units: ALUs** 

# MTVM – Move to Vector Mask

### **Description**

Move a general-purpose register to a mask register.

**Instruction Format: VMR2** 

23	18	19	17	12	11	9	8	7	0
10	h <sub>4</sub>	~	R	$a_6$	Vn	nt <sub>3</sub>	0	52	$2h_8$

### Operation

Vmt = Ra

**Execution Units: ALUs** 

# MTVL – Move to Vector Length

### Description

Move a general-purpose register to the vector length register.

### **Instruction Format: VMR2**

23	18	19	17	12	11	9	8	7	0
12	$h_4$	~	R	$a_6$	~	3	0	52	$2h_8$

### Operation

VL = Ra

**Execution Units:** ALUs

## VMADD - Vector Mask Add

### **Description:**

Add the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

23	19	18	17 15	14 12	11 9	8	7	0
04	lh <sub>5</sub>	~	Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52	$2h_8$
1 clo	ck cyc	ele						

Exceptions: none

## VMAND - Vector Mask And

### **Description:**

Bitwise 'and' the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

23	19	18	17 15	14 12	11 9	8	7 0
08	h <sub>5</sub>	~	Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>
1 1	1	1					

1 clock cycle

Exceptions: none

# **VMCNTPOP – Count Population**

CNTPOP r1,vm2

**Description:** 

Count the number of ones and place the count in the target register.

**Instruction Format: VMR2** 

23	19	18	17 15	14	9	8	7	0
0D	)h <sub>5</sub>	~	Vmb <sub>3</sub>	Rt <sub>6</sub>		0	52	2h <sub>8</sub>

**Execution Units: integer** ALU

## VMFILL - Vector Mask Fill

### **Description:**

Fill the contents of a vector mask register with a mask of ones beginning at Mb<sub>6</sub> and ending at Me<sub>6</sub> inclusive. Fill the remainder of the register with zeros.

#### **Instruction Format:**

23 18		17 12		11 9	8	7	0
$Me_6$		M	$b_6$	Vmt <sub>3</sub>	0	53	$h_8$
4 1 1	•						

1 clock cycle

**Exceptions:** none

### VMFIRST – Find First Set Bit

### Description

The position of the first bit set in the mask register is copied to the target register. If no bits are set the value is 65536. The search begins at the least significant bit and proceeds to the most significant bit.

#### **Instruction Format: R1**

23	19	18	17 15	14	9	8	7	0
0E	Eh <sub>5</sub>	~	$Vmb_3$	$Rt_6$		0	52	$2h_8$

### Operation

Rt = first set bit number of (Vm)

Exceptions: none

**Execution Units:** ALUs

# VMLAST – Find Last Set Bit

### **Description**

The position of the last bit set in the mask register is copied to the target register. If no bits are set the value is 65536. The search begins at the most significant bit of the mask register and proceeds to the least significant bit.

### **Instruction Format: VMR2**

23	19	18	17 15	14	9	8	7	0
0F	h <sub>5</sub>	~	$Vmb_3$	$Rt_6$		0	52	$2h_8$

### Operation

Rt = last set bit number of (Vm)

Exceptions: none

**Execution Units:** ALUs

## VMOR - Vector Mask Or

### **Description:**

Bitwise 'or' the contents of two vector mask registers and place the result in a vector mask register.

**Instruction Format: VMR2** 

23 19	18	17 15	14 12	11 9	8	7 0	)
09h <sub>5</sub>	~	Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>	

1 clock cycle

Exceptions: none

# VMSLL – Vector Mask Shift Left Logical

### **Description:**

Shift a vector mask register to the left up to 31 bits.

**Instruction Format: VMR2** 

23 20 19 Eh <sub>4</sub> Am		15	14 12	11 9	8	7	0	
Eh <sub>4</sub>		Amo	ount <sub>5</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52	2h <sub>8</sub>

1 clock cycle

Exceptions: none

## VMSRL – Vector Mask Shift Right Logical

### **Description:**

Shift a vector mask register to the right up to 31 bits.

**Instruction Format: VMR2** 

23 20 Fh <sub>4</sub>		19 15		14 12	11	9	8	7	0
Fh <sub>4</sub>		Amo	ount <sub>5</sub>	Vma <sub>3</sub>	Vn	ıt3	0	52	$2h_8$

1 clock cycle

## VMSUB – Vector Mask Subtract

### **Description:**

Subtract the contents of two vector mask registers and place the result in a vector mask register.

#### **Instruction Format: VMR2**

	23	19	18	17 15	14 12	11 9	8	7	0
	05h <sub>5</sub>		~	Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52	$h_8$
1	1 clock cycle								

Exceptions: none

## VMXOR - Vector Mask Exclusive Or

### **Description:**

Bitwise 'or' the contents of two vector mask registers and place the result in a vector mask register.

#### **Instruction Format: VMR2**

2	23 19	18	17 15	14 12	11 9	8	7 0
	0Ah <sub>5</sub>	~	Vmb <sub>3</sub>	Vma <sub>3</sub>	Vmt <sub>3</sub>	0	52h <sub>8</sub>
	1 1	1					

1 clock cycle

# **VSCAN**

### Description

Elements of Vt are set to the cumulative sum of a value in register Ra. The summation is guided by a vector mask register.

### **Instruction Format:** R1

31 25	24 22	21	20 15	14 9	8	7 0
1Eh <sub>7</sub>	$m_3$	Z	Ra <sub>6</sub>	$Vt_6$	1	01h <sub>8</sub>

### Operation

$$sum = 0$$
 for  $x = 0$  to  $VL - 1$  
$$Vt[x] = sum$$
 
$$if (Vm[x])$$
 
$$sum = sum + Ra$$

# **VSLLV – Shift Vector Left Logical**

### **Description**

Elements of the vector are transferred upwards to the next element position. The first is loaded with the value zero. This is also called a slide operation.

#### **Instruction Format:** R2

	39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
ĺ	38	h <sub>7</sub>	m <sub>3</sub>	Z	$Tb_2$	Rl	<b>)</b> 6	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

### Operation

$$Amt = Rb$$

For 
$$x = VL-1$$
 to Amt

$$Vt[x] = Va[x-amt]$$

For 
$$x = Amt-1$$
 to 0

$$Vt[x] = 0$$

# **VSRLV – Shift Vector Right Logical**

### **Description**

Elements of the vector are transferred downwards to the next element position. The last is loaded with the value zero. This is also called a slide operation.

#### **Instruction Format:** R2

	39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
ĺ	39	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	<b>b</b> <sub>6</sub>	R	$a_6$	Rt	t <sub>6</sub>	V	02	2h <sub>8</sub>

### Operation

$$Amt = Rb$$

For 
$$x = 0$$
 to VL-Amt

$$Vt[x] = Va[x+amt]$$

For 
$$x = VL-Amt + 1$$
 to  $VL-1$ 

$$Vt[x] = 0$$

# Cryptographic Accelerator Instructions

# **AES64DS – Final Round Decryption**

### **Description**:

Perform the final round of decryption for the AES standard. Registers Rb, Ra represent the entire AES state.

#### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26 2	21 20	) 15	14	9	8	7	0
50l	17	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>		Ra <sub>6</sub>	R	$t_6$	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra & Rb

Exceptions: none

# **AES64DSM – Middle Round Decryption**

### **Description**:

Perform a middle round of decryption for the AES standard. Registers Rb, Ra represent the entire AES state.

#### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
501	17	$m_3$	Z	$Tb_2$	Rb <sub>6</sub>	j	R	$a_6$	R	t <sub>6</sub>	V	02	h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra & Rb

# **AES64ES – Final Round Encryption**

### **Description**:

Perform the final round of encryption for the AES standard. Registers Rb, Ra represent the entire AES state.

### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
50l	17	$m_3$	Z	$Tb_2$	Rl	<b>)</b> 6	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra & Rb

Exceptions: none

# **AES64ESM – Middle Round Encryption**

### **Description**:

Perform a middle round of encryption for the AES standard. Registers Rb, Ra represent the entire AES state.

### **Integer Instruction Format: R2**

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
50ł	<b>1</b> 7	$m_3$	Z	$Tb_2$	Rl	<b>0</b> <sub>6</sub>	R	$a_6$	R	t <sub>6</sub>	V	02	2h <sub>8</sub>

1 clock cycle / N clock cycles (N = vector length)

### **Operation:**

Rt = Ra & Rb

### SHA256SIG0

### **Description:**

Implements the Sigma0 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
30	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	v	01	lh <sub>8</sub>

**Clock Cycles: 1** 

#### **Operation:**

 $Rt = sign \ extend(ror32(Ra,7) \land ror32(Ra,18) \land (Ra_{32} >> 3))$ 

**Execution Units:** ALU #0

Exceptions: none

### **SHA256SIG1**

### **Description:**

Implements the Sigma1 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
31	h <sub>7</sub>	n	13	Z	R	$a_6$	R	$t_6$	V	01	h <sub>8</sub>

Clock Cycles: 1

#### **Operation:**

 $Rt = sign extend(ror32(Ra,17) \land ror32(Ra,19) \land (Ra_{32} >> 10))$ 

**Execution Units:** ALU #0

### SHA256SUM0

### **Description:**

Implements the Sum0 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
32	h <sub>7</sub>	n	13	Z	R	$a_6$	R	6	v	0.1	1 h <sub>8</sub>

### **Operation:**

 $Rt = sign extend(ror32(Ra,2) \land ror32(Ra,13) \land ror32(Ra,22))$ 

**Execution Units:** ALU #0

Exceptions: none

### SHA256SUM1

### **Description:**

Implements the Sum1 transformation function used in the SHA2-256 and SHA2-224 hash function. Only the low order 32 bits of Ra are operated on. The 32-bit result is sign extended to the machine width.

#### **Instruction Format: R1**

31	25	24	22	21	20	15	14	9	8	7	0
33h <sub>7</sub>		n	13	Z	R	$a_6$	R	6	V	01	lh <sub>8</sub>

### **Operation:**

 $Rt = sign extend(ror32(Ra,6) \land ror32(Ra,11) \land ror32(Ra,25))$ 

**Execution Units:** ALU #0

## SHA512SIG0

### **Description:**

Implements the Sigma0 transformation function used in the SHA2-512 hash function.

**Instruction Format:** R1

31 25	24 22	21	20 15	14 9	8	7	0
34h <sub>7</sub>	m <sub>3</sub>	Z	Ra <sub>6</sub>	Rt <sub>6</sub>	V	01h <sub>8</sub>	3

Clock Cycles: 1

### **Operation:**

$$Rt = ror64(Ra, 1) \land ror64(Ra, 8) \land (Ra >> 7)$$

**Execution Units:** ALU #0

Exceptions: none

### SHA512SIG1

#### **Description:**

Implements the Sigma1 transformation function used in the SHA2-512 hash function.

**Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
35	h <sub>7</sub>	n	13	Z	R	$a_6$	R	t <sub>6</sub>	V	01	lh <sub>8</sub>

Clock Cycles: 1

**Operation:** 

$$Rt = ror64(Ra, 19) \land ror64(Ra, 61) \land (Ra >> 6)$$

**Execution Units:** ALU #0

# SHA512SUM0

Description:

Instruction Format: R1

31	25	24	22	21	20	15	14	9	8	7	0
36	$h_7$	n	13	Z	R	$a_6$	Rı	6	V	01	$1h_8$

# SHA512SUM1

Description:

Instruction Format: R1

31	25	24	22	21	20	15	14	9	8	7	0
37	h <sub>7</sub>	n	13	Z	R	$a_6$	R	t <sub>6</sub>	V	01	lh <sub>8</sub>

# **SM3P0**

Description:

Instruction Format: R1

31	25	24	22	21	20	15	14	9	8	7	0
38	h <sub>7</sub>	n	13	Z	R	$a_6$	Rt	6	v	01	lh <sub>8</sub>

# SM3P1

Description:

Instruction Format: R1

31	25	24	22	21	20	15	14	9	8	7	0
39	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	V	0.	lh <sub>8</sub>

# **SM4ED**

Description:

**Instruction Format:** 

47 44	43 41	40 38	37	3635	34	29	28 27	26	21	20	15	14	9	8	7	0
$0E_4$	$Rm_3$	$m_3$	Z	$Tc_2$	Rc	6	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	v	03	$3h_8$

# **SM4KS**

**Description:** 

### **Instruction Format:**


47 44	43 41	40 38	37	3635	34 29	28 27	26 21	20 15	14 9	8	7	0
$0F_4$	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	Rt <sub>6</sub>	v	031	$h_8$

### Neural Network Accelerator Instructions

### **Overview**

Included in the ISA are instructions for neural network acceleration. Each neuron is composed of an accumulator that sums the product of weights and inputs and an output activation function. Neurons may be biased with a bias value and may also have feedback from output to input via a feedback constant. The neurons are implemented using 16.16 fixed-point arithmetic. There are 8 neurons in a single layer which may calculate simultaneously. Following is a sketch of the NNA organization. The weights and input arrays have a depth of 1024 entries. Not all entries need be used. The number of entries in use is configurable programmatically with the base count and maximum count register using the NNA MTBC and NNA MTMC instruction.

## **Neural Network Accelerator**

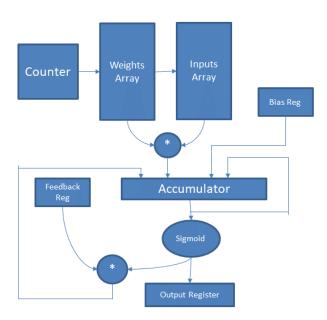

## NNA\_MFACT

### **Description:**

Move from activation output register. Move a value from the neuron's activation register output to the target register Rt. Bits 0 to 3 of Ra specify the neuron.

**Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
62	h <sub>7</sub>	n	13	Z	R	$a_6$	Rı	6	V	01	lh <sub>8</sub>

**Clock Cycles:** 1

**Execution Units: NNA** 

**Notes:** 

## NNA MTBC

#### **Description:**

Move to base count register. Move the value in Ra to the base count register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the base count value.

The neuron calculates the activation output using weight and input array entries between the base count and maximum count inclusive.

Manipulating the base count and maximum count registers ease the implementation of multi-layer networks that do not require the use of all array entries.

**Instruction Format: R2** 

39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0
65	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	~6	V	02h <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTBIAS

### **Description:**

Move to bias value. Move the value in Ra to the bias register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the bias value.

**Instruction Format:** R2

_	39	33	32 30	29	28 27	26 21	20 15	14 9	8	7 0	
	621	h <sub>7</sub>	$m_3$	Z	$Tb_2$	$Rb_6$	Ra <sub>6</sub>	~6	V	02h <sub>8</sub>	

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTFB

### **Description:**

Move to feedback constant. Move the value in Ra to the feedback constant for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the feedback constant.

The feedback constant acts to create feedback in the neuron by multiplying the output activation level by the feedback constant and using the result as an input. If no feedback is desired then this constant should be set to zero.

**Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
63	h <sub>7</sub>	m <sub>3</sub>	Z	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	02	$2h_8$

Clock Cycles: 1

**Execution Units: NNA** 

# NNA\_MTIN

### **Description:**

Move to input array. Move the value in Ra to the input memory cell identified with Rb.

**Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
61	h <sub>7</sub>	$m_3$	Z	$Tb_2$	Rł	<b>)</b> <sub>6</sub>	R	$a_6$	~	6	V	02	2h <sub>8</sub>

Clock Cycles: 1

**Execution Units:** NNA

## NNA\_MTMC

### **Description:**

Move to maximum count register. Move the value in Ra to the maximum count register for the neurons identified with a bitmask in Rb. Each bit of Rb represents a neuron. Multiple neurons may be initialized at the same time. Ra contains the maximum count value.

The maximum count is the upper limit of inputs and weights to use in the calculation of the activation function. The maximum count should not exceed the hardware table size. The table size is 1024 entries.

The neuron calculates the activation output using weight and input array entries between the base count and maximum count inclusive.

**Instruction Format: R2** 

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
64	h <sub>7</sub>	m <sub>3</sub>	Z	$Tb_2$	RI	<b>)</b> 6	R	$a_6$	~	6	V	02	$2h_8$

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

## NNA\_MTWT

#### **Description:**

Move to weights array. Move the value in Ra to the weight memory cell identified with Rb. Bits 0 to 15 or Rb specify the memory cell address, bits 16 to 19 of Rb specify the neuron.

**Instruction Format:** R2

39	33	32 30	29	28 27	26	21	20	15	14	9	8	7	0
60	h <sub>7</sub>	$m_3$	Z	$Tb_2$	R	$b_6$	R	$a_6$	~	6	V	02	2h <sub>8</sub>

**Clock Cycles:** 1

**Execution Units: NNA** 

# NNA\_STAT

### **Description:**

This instruction gets the status of the neurons. There is a bit in Rt for each neuron. A bit will be set if the neuron is finished performing the calculation of the activation function, otherwise the bit will be clear.

#### **Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
61	h <sub>7</sub>	n	13	Z	~	<b>6</b>	Rı	6	v	01	lh <sub>8</sub>

Clock Cycles: 1

**Execution Units: NNA** 

**Notes:** 

# NNA\_TRIG

### **Description:**

This instruction triggers a NNA cycle for the neurons identified in the bit mask. The bit mask is contained in register Ra.

#### **Instruction Format:** R1

31	25	24	22	21	20	15	14	9	8	7	0
60h <sub>7</sub>		n	13	Z	R	$a_6$	~	6	v	01	$1h_8$

Clock Cycles: 1

**Execution Units: NNA** 

# Graphics

# **Co-ordinates**

Co-ordinates are specified as 16.16 fixed point numbers. x, y, z co-ordinates occupy bits 0 to 31, 32 to 63, and 64 to 95 respectively of a register.

127	96	95	64	63	32	31	0
~		z cc	oord		y coord	X C	oord

## **Colors**

Colors are represented using RGB888 format. Colors are placed in the low order 24-bits of a register.

127	32	31	24	23	16	15	8	7	0
~		Z-o	rder	Bl	ue	Gre	en	F	Red

## **BLEND - Blend Colors**

### **Description**:

This instruction blends two colors whose values are in Ra and Rb according to an alpha value in Rc. The resulting color is placed in register Rt. The alpha value is an eight-bit value assumed to be a binary fraction less than one. The color values in Ra and Rb are assumed to be RGB888 format colors. The result is a RGB888 format color. The high order eight bits of the result register are set to the high order eight bits of Ra. Note that a close approximation to 1.0 – alpha is used. Each component of the color is blended independently.

#### **Instruction Format**: R3

					34										
Ch <sub>4</sub>	$Rm_3$	$m_3$	Z	$Tc_2$	$Rc_6$	$Tb_2$	R	$b_6$	R	$a_6$	R	$t_6$	V	0	$3h_8$

### **Operation**:

$$Rt.R = (Ra.R * alpha) + (Rb.R * \sim alpha)$$

$$Rt.G = (Ra.G * alpha) + (Rb.G * \sim alpha)$$

$$Rt.B = (Ra.B * alpha) + (Rb.B * \sim alpha)$$

### **Clock Cycles: 2**

# **CLIP – Clip Point**

### **Description:**

The clip instruction checks that the point in Ra is within the graphics target area always and clip region if enabled. The target and clip areas must have been previously set. If the point should be clipped a one is set in Rt, otherwise Rt is set to zero.

Points are represented in 16.16 fixed-point format.

35	29	28 24	23 21	20	19	18 14	13	12 8	7	6 0	0
20h	17	<b>~</b> 5	$m_3$	Z	Ta	Ra <sub>5</sub>	Tt	$Rt_5$	V	01h <sub>7</sub>	

Clock Cycles: 2

## **PLOT – Plot Point**

### **Description:**

This instruction plots a point in the graphics target area. The point's co-ordinates are in Ra, the color to use is in Rb.

35	29	2827	2625	24 20	19	18 14	13	12 8	7	6 0
34	$h_7$	~2	$Tb_2$	Rb <sub>5</sub>	Ta	Ra <sub>5</sub>	Tt	Rt <sub>5</sub>	v	02h <sub>7</sub>

# **TRANSFORM – Transform Point**

### **Description:**

The point transform instruction transforms a point from one location to another using a transform function. The transform function has 12 co-efficients in the form of a matrix to used in the calculation.

Points are represented in 16.16 fixed-point format.

_	35	29	28 24	23 21	20	19	18 14	13	12 8	7	6	00
	11h	7	~5	$m_3$	Z	Ta	Ra <sub>5</sub>	Tt	$Rt_5$	V	01h <sub>7</sub>	

Clock Cycles: 2

# **RW\_COEFF – Read/Write Co-efficient**

### **Description:**

RW\_COEFF reads and writes a coefficient value to be used for the transform matrix. Ra contains the number of the coefficient to read or write. Rb contains the new value for the coefficient. Coefficients are in 16.16 fixed point format.

#### **Instruction Format: R2**

35	29	2827	2625	24 20	19	18 14	13	12 8	7	6 0	
3El	17	~2	$Tb_2$	Rb <sub>5</sub>	Ta	Ra <sub>5</sub>	Tt	Rt <sub>5</sub>	V	02h <sub>7</sub>	

#### **Co-efficient Matrix:**

AA	AB	AC	AT
BA	BB	BC	BT
CA	СВ	CC	CT

Regno in Ra	Coefficient Accessed
0	AA
1	AB
2	AC
3	AT
4	BA
5	BB
6	BC
7	BT
8	CA
9	СВ
10	CC
11	CT
12	CMD – bit 0, 1=transform, 0 = pass through

# Opcode Maps

# Root Opcode

	x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	хB	хC	xD	хE	xF
0x	BRK	{R1}	{R2}	{R3}	ADDI	SUBFI	MULI	{SYS}	ANDI	ORI	EORI		ADCI	SBCFI	MULUI	{CSR}
1x	JGATE	{R1R}	{R2R}	{R3R}	ADDIQ	MULFI	SEQI	SNEI	SLTI	SLTIL	SGTIL	SGTI	SLTUI	SLTUI L	SGTUI L	SGTUI
2x	BRA				BBC	BBS	BEQ	BNE	BLT	BGE	BLE	BGT	BLTU	BGEU	BLEU	BGTU
3x	BRA				BBC	BBS	BEQ	BNE	BLT	BGE	BLE	BGT	BLTU	BGEU	BLEU	BGTU
4x	DIVI	CPUID	DIVIL		ADDIL	CHKI	MULIL	SNEIL	ANDIL	ORIL	EORIL	SEQIL	BMAPI		MULUI	DIVUI
5x	CMPI	MLO	{VM}	VMFIL L	ADDIS	BYTN DX	WYDE NDX	UTF21 NDX	ANDIS	ORIS	EORIS		CMPUI	CHKXI		
6x	CMPIL	{FLT1}	{FLT2}	{FLT3}		{DFLT 1}	{DFLT 2}	{DFLT 3}		{PST1}	{PST2}	{PST3}	CMPUI L			
7x	CMPIS	{FLT1L }	{FLT2L }			{DFLT 1}	{DFLT 2}			{PST1R }	{PST2R }		CMPUI S			
8x	LDB	LDBU	LDW	LDWU	LDT	LDTU	LDO			LLAL	LLAH	LDVO AR		JSRI	LWS	LCL
9x	STB	STW	STT	STO	STOC			CAS	STSET	STMO V	STCMP	STFND			SWS	CACHE
Ax						SYS	INT	MOV			{bitfld}	MOVS				
Bx	{LDxX }							JSRIX						LV	LVWS	
Cx	{STxX}								PUSH	PEA	POP	LINK	UN LINK	SV	SVWS	
Dx	LDBL	LDBUL	LDWL	LDWU L	LDTL	LDTUL	LDOL			LLALL	LLAHL					CACHE L
Ex	STBL	STWL	STTL	STOL	STOCL											
Fx		NOP	RTS			{BCD}	STP	SYNC	MEMS B	MEMD B	WFI	SEI				

# $\{LDxX\}\ Scaled\ Indexed\ Loads-Func_7$

	000	001	010	011	100	101	110	111
00	LDBX	LDBUX	LDWX	LDWUX	LDTX	LDTUX	LDOX	
01	LLALX	LLAHX	CACHEX					
10								
11								

# {STxX} Scaled Indexed Stores – Func<sub>6</sub>

	000	001	010	011	100	101	110	111
00	STBX	STWX	STTX	STOX	STOCX			
01								
10								
11								

# $\{R1 - 0x01\}$ Integer Monadic Register Ops – Func<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	CNTLZ	CNTLO	CNTPOP		NOT		ABS	NABS
x001	SQRT			TST				
x010	PTRINC	TRANSFORM						
x011	V2BITS	BITS2V			VCMPRSS	VCIDX	VSCAN	
x100	CLIP							
x101	REVBIT.BP	REVBIT.WP	REVBIT.TP	REVBIT.OP				
x110	SHA256 SIG0	SHA256 SIG1	SHA256 SUM0	SHA256 SUM1	SHA512 SIG0	SHA512 SIG1	SHA512 SUM0	SHA512 SUM1
x111	SM3P0	SM3P1						
1000								
1001								
1010	AES64IM							
1011								
1100	NNA_TRIG	NNA_STAT	NNA_MFACT					
1101								_

# $\{R2 - 0x02\}$ Integer Dyadic Register Ops – Func<sub>7</sub>

-								
	000	001	010	011	100	101	110	111
0000	NAND	NOR	XNOR	ORC	ADD	SUB	MUL	
0001	AND	OR	XOR	ANDC	ADC	SBC	MULU	MULH
0010	DIV	DIVU	DIVSU			MULF	MULSU	PERM
0011	DIF		BYTNDX	WYDNDX		MULSUH	MULUH	MYST
0100				U21NDX				
0101	MIN	MAX	CMP	CMPU	BIT		CLMUL	CLMULH
0110	BMM.or	BMM.xor	BMM	BMM	PLOT			
0111	VSLLV	VSLRV	VEX	VEINS			RW_COEFF	
1000	SLL	SRL	SRA	ROL	ROR		SLLP	SRLP
1001	SLLT	SRLT	SRAT	ROLT	RORT			
1010	AES64DS	AES64DSM	AES64ES	AES64ESM	AES64KS1I	AES64KS2		
1011								
1100	NNA_MTWT	NNA_MTIN	NNA_MTBIAS	NNA_MTFB	NNA_MTMC	NNA_MTBC		
1101								

# ${R3/R4 - 0x03}$ Triadic Register Ops

	000	001	010	011	100	101	110	111
0	BMAP	PTRDIF	CHK		MUX		CMOVNZ	
1	SLLP	SLLPI			BLEND	FDP	SM4ED	SM4KS

# {F1/F1L - 0x61/0x71} Floating-Point Monadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	FMOV	FRSQRTE	FTOI	ITOF			FSIGN	FMAN
x001	FSQRT	FS2D	FS2Q	FD2Q	FSTAT		ISNAN	FINITE
x010	FTX	FCX	FEX	FDX	FRM	TRUNC	FSYNC	FRES
x011	FSIGMOID	FD2S	FQ2S	FQ2D			FCLASS	UNORD
x100	FABS	FNABS	FNEG					
x101								
x110								
x111								

# {F2/F2L - 0x62,0x72} Floating-Point Dyadic Ops - Funct<sub>7</sub>

		000	001	010	011	100	101	110	111
<b>x</b> 0	000	SCALEB		FMIN	FMAX	FADD	FSUB		
<b>x</b> 0	001	FMUL	FDIV	FREM	FNXT				
x0	010	FCMP	FSEQ	FSLT	FSLE	FSNE	FCMPB	FSETM	
<b>x</b> 0	)11	CPYSGN	SGNINV	SGNAND	SGNOR	SGNXOR	SGNXNOR	FCLASS	
x1	100								
x1	101								
x1	110								
x1	111								

# $\{F3 - 0x63\}$ Floating-Point Dyadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
0	FMA	FMS	FNMA	FNMS				
1								

# {DF2} Decimal Floating-Point Dyadic Ops – Funct<sub>7</sub>

	000	001	010	011	100	101	110	111
x000	SCALEB		DFMIN	DFMAX	DFADD	DFSUB		
x001	DFMUL	DFDIV	DFREM	DFNXT				
x010	DFCMP	DFSEQ	DFSLT	DFSLE	DFSNE	DFCMPB	DFSETM	
x011	CPYSGN	SGNINV	SGNAND	SGNOR	SGNXOR	SGNXNOR	FCLASS	
x100								
x101								
x110								
x111								

# $\{VM-0x52\}\ Vector\ Mask\ Register\ Ops-Func_5$

	000	001	010	011	100	101	110	111
00					VMADD	VMSUB		
01	VMAND	VMOR	VMXOR			VMCNTPOP	VMFIRST	VMLAST
10	MTVM	MFVM	MTVL	MFVL				
11					VMSLL	VMSLL	VMSRL	VMSRL

# Glossary

### **AMO**

AMO stands for atomic memory operation. An atomic memory operation typically reads then writes to memory in a fashion that may not be interrupted by another processor. Some examples of AMO operations are swap, add, and, and or.

### **ATC**

ATC stands for address translation cache. This buffer is used to cache address translations for fast memory access in a system with an mmu capable of performing address translations. The address translation cache is more commonly known as the TLB.

### **Burst Access**

A burst access is several bus accesses that occur rapidly in a row in a known sequence. If hardware supports burst access the cycle time for access to the device is drastically reduced. For instance, dynamic RAM memory access is fast for sequential burst access, and somewhat slower for random access.

### **BTB**

An acronym for Branch Target Buffer. The branch target buffer is used to improve the performance of a processing core. The BTB is a table that stores the branch target from previously executed branch instructions. A typical table may contain 1024 entries. The table is typically indexed by part of the branch address. Since the target address of a branch type instruction may not be known at fetch time, the address is speculated to be the address in the branch target buffer. This allows the machine to fetch instructions in a continuous fashion without pipeline bubbles. In many cases the calculated branch address from a previously executed instruction remains the same the next time the same instruction is executed. If the address from the BTB turns out to be incorrect, then the machine will have to flush the instruction queue or pipeline and begin fetching instructions from the correct address.

## **Card Memory**

A card memory is a memory reserved to record the location of pointer stores in a garbage collection system. The card memory is much smaller than main memory; there may be card memory entry for a block of main memory addresses. Card memory covers memory in 128 to 512-byte sized blocks. Usually a byte is dedicated to record the pointer store status even though a bit would be adequate, for performance reasons. The location of card memory to update is found by shifting the pointer value to the right some number of bits (7 to 9 bits) and then adding the base address of the table. The update to the card memory needs to be done with interrupts disabled.

### **FPGA**

An acronym for Field Programmable Gate Array. FPGA's consist of a large number of small RAM tables, flip-flops, and other logic. These are all connected with a programmable connection network. FPGA's are 'in the field' programmable, and usually re-programmable. An FPGA's re-programmability is typically RAM based. They are often used with configuration PROM's so they may be loaded to perform specific functions.

HDL

An acronym that stands for 'Hardware Description Language'. A hardware description language is used to describe hardware constructs at a high level.

### Instruction Bundle

A group of instructions. It is sometimes required to group instructions together into bundle. For instance, all instructions in a bundle may be executed simultaneously on a processor as a unit. Instructions may also need to be grouped if they are oddball in size for example 41 bits, so that they can be fit evenly into memory. Typically, a bundle has some bits that are global to the bundle, such as template bits, in addition to the encoded instructions.

### **Instruction Pointers**

A processor register dedicated to addressing instructions in memory. It is also often called a program counter. The program counter got its name because it usually increments (or counts) automatically after an instruction is fetched. In early machines in some rare cases the program counter did not count in a sequential binary fashion, but instead used other forms of a counter such as a grey counter or linear feedback shift register. In some machines the program counter addresses bundles of instructions rather than individual instructions. This is common with some stack machines where multiple instructions are packed into a memory word.

### **Instruction Prefix**

An instruction prefix applies to the following instruction to modify its operation. An instruction prefix may be used to add more bits to a following immediate constant, or to add additional register fields for the instruction. The prefix essentially extends the number of bits available to encode instructions. An instruction prefix usually locks out interrupts between the prefix and following instruction.

### **Instruction Modifier**

An instruction modifier is similar to an instruction prefix except that the modifier may apply to multiple following instructions.

### ISA

An acronym for Instruction Set Architecture. The group of instructions that an architecture supports. ISA's are sometimes categorized at extreme edges as RISC or CISC. RTF64 falls somewhere in between with features of both RISC and CISC architectures.

## **Keyed Memory**

A memory system that has a key associated with each page to protect access to the page. A process must have a matching key in its key list in order to access the memory page. The key is often 20 bits or larger. Keys for pages are usually cached in the processor for performance reasons. The key may be part of the paging tables.

## Linear Address

A linear address is the resulting address from a virtual address after segmentation has been applied.

## Opcode

A short form for operation code, a code that determines what operation the processor is going to perform. Instructions are typically made up of opcodes and operands.

## **Operand**

The data that an opcode operates on, or the result produced by the operation. Operands are often located in registers. Inputs to an operation are referred to as source operands, the result of an operation is a destination operand.

## Physical Address

A physical address is the final address seen by the memory system after both segmentation and paging have been applied to a virtual address. One can think of a physical address as one that is "physically" wired to the memory.

# Physical Memory Attributes (PMA)

Memory usually has several characteristics associated with it. In the memory system there may be several different types of memory, rom, static ram, dynamic ram, eeprom, memory mapped I/O devices, and others. Each type of memory device is likely to have different characteristics. These characteristics are called the physical memory attributes. Physical memory attributes are associated with address ranges that the memory is located in. There may be a hardware unit dedicated to verifying software is adhering to the attributes associated with the memory range. The hardware unit is called a physical memory attributes checker (PMA checker).

## **Program Counter**

A processor register dedicated to addressing instructions in memory. It is also often and perhaps more aptly called an instruction pointer. The program counter got its name because it usually increments (or counts) automatically after an instruction is fetched. In early machines in some rare cases the program counter did not count in a sequential binary fashion, but instead used other forms of a counter such as a grey counter or linear feedback shift register. In some machines the program counter addresses bundles of instructions rather than individual instructions. This is common with some stack machines where multiple instructions are packed into a memory word.

### **ROB**

An acronym for ReOrder Buffer. The re-order buffer allows instructions to execute out of order yet update the machine's state in order by tracking instruction state and variables. In FT64 the re-order buffer is a circular queue with a head and tail pointers. Instructions at the head are committed if done to the machine's state then the head advanced. New instructions are queued at the buffer's tail as long as there is room in the queue. Instructions in the queue may be processed out of the order that they entered the queue in depending on the availability of resources (register values and functional units).

### **RSB**

An acronym that stands for return stack buffer. A buffer of addresses used to predict the return address which increases processor performance. The RSB is usually small, typically 16 entries. When a return instruction is detected at time of fetch the RSB is accessed to determine the address of the next instruction to fetch. Predicting the return address allows the processing core to continuously fetch instructions in a speculative fashion without bubbles in the pipeline. The return address in the RSB may turn out to be detected as incorrect during execution of the return instruction, in which case the pipeline or instruction queue will need to be flushed and instructions fetched from the proper address.

## **SIMD**

An acronym that stands for 'Single Instruction Multiple Data'. SIMD instructions are usually implemented with extra wide registers. The registers contain multiple data items, such as a 128-bit register containing four 32-bit numbers. The same instruction is applied to all the data items in the register at the same time. For some applications SIMD instructions can enhance performance considerably.

### Stack Pointer

A processor register dedicated to addressing stack memory. Sometimes this register is assigned by convention from the general register pool. This register may also sometimes index into a small dedicated stack memory that is not part of the main memory system. Sometimes machines have multiple stack pointers for different purposes, but they all work on the idea of a stack. For instance, in Forth machines there are typically two stacks, one for data and one for return addresses.

## **Telescopic Memory**

A memory system composed of layers where each layer contains simplified data from the topmost layer downwards. At the topmost layer data is represented verbatim. At the bottom layer there may be only a single bit to represent the presence of data. Each layer of the telescopic memory uses far less memory than the layer above. A telescopic memory could be used in garbage collection systems. Normally however the extra overhead of updating multiple layers of memory is not warranted.

### TLB

TLB stands for translation look-aside buffer. This buffer is used to store address translations for fast memory access in a system with an mmu capable of performing address translations.

## Vector Length (VL register)

The vector length register controls the maximum number of elements of a vector that are processed. The vector length register may not be set to a value greater than the number of elements supported by hardware. Vector registers often contain more elements than are required by program code. It would be wasteful to process all elements when only a few are needed. To improve the processing performance only the elements up to the vector length are examined.

## Vector Mask (VM)

A vector mask is used to restrict which elements of a vector are processed during a vector operation. A one bit in a mask register enables the processing for that element, a zero bit disables it. The mask register is commonly set using a vector set operation.

## Miscellaneous

### Reference Material

Below is a short list of some of the reading material the author has studied. The author has downloaded a fair number of documents on computer architecture from the web. Too many to list.

<u>Modern Processor Design Fundamentals of Superscalar Processors by John Paul Shen, Mikko H.</u> <u>Lipasti. Waveland Press, Inc.</u>

<u>Computer Architecture A Quantitative Approach, Second Edition, by John L Hennessy & David Patterson, published by Morgan Kaufman Publishers, Inc. San Franciso, California</u> is a good book on computer architecture. There is a newer edition of the book available.

Memory Systems Cache, DRAM, Disk by Bruce Jacob, Spencer W. Ng., David T. Wang, Samuel Rodriguez, Morgan Kaufman Publishers

PowerPC Microprocessor Developer's Guide, SAMS publishing. 201 West 103<sup>rd</sup> Street, Indianapolis, Indiana, 46290

80386/80486 Programming Guide by Ross P. Nelson, Microsoft Press

Programming the 286, C. Vieillefond, SYBEX, 2021 Challenger Drive #100, Alameda, CA 94501

Tech. Report UMD-SCA-2000-02 ENEE 446: Digital Computer Design — An Out-of-Order RiSC-16

Programming the 65C816, David Eyes and Ron Lichty, Western Design Centre Inc.

Microprocessor Manuals from Motorola, and Intel,

<u>The SPARC Architecture Manual Version 8, SPARC International Inc, 535 Middlefield Road. Suite210 Menlo Park California, CA 94025</u>

The SPARC Architecture Manual Version 9, SPARC International Inc, Sab Jose California, PTR Prentice Hall, Englewood Cliffs, New Jersey, 07632

The MMIX processor: http://mmix.cs.hm.edu/doc/instructions-en.html

RISCV 2.0 Spec, Andrew Waterman, Yunsup Lee, David Patterson, Krste Asanovi´c CS Division, EECS Department, University of California, Berkeley {waterman|yunsup|pattrsn|krste}@eecs.berkeley.edu

<u>The Garbage Collection Handbook, Richard Jones, Antony Hosking, Eliot Moss published by CRC Press</u> 2012

### **Trademarks**

IBM® is a registered trademark of International Business Machines Corporation. Intel® is a registered trademark of Intel Corporation. HP® is a registered trademark of Hewlett-Packard Development Company. "SPARC® is a registered trademark of SPARC International, Inc.

## WISHBONE Compatibility Datasheet

The Thor2021 core may be directly interfaced to a WISHBONE compatible bus.

WISHBONE Datasheet	WISHBONE Datasheet							
WISHBONE SoC Architecture	e Specification, Rev	ision B.3						
Description:	Specifications:							
General Description:	Central processing	unit (CPU core)						
	MASTER, READ /	WRITE						
Supported Cycles:	MASTER, READ-	MODIFY-WRITE						
Supported Cycles.	MASTER, BLOCK READ / WRITE, BURST READ (FIXED ADDRESS)							
Data port, size:	128 bit							
Data port, granularity:	8 bit							
Data port, maximum operand size:	128 bit							
Data transfer ordering:	Little Endian							
Data transfer sequencing	any (undefined)							
Clock frequency constraints:	tm_clk_i must be >	>= 10MHz						
Supported signal list and cross reference to equivalent WISHBONE signals	Signal Name: ack_i adr_o(31:0) clk_i dat_i(127:0) dat_o(127:0) cyc_o stb_o wr_o sel_o(7:0) cti_o(2:0) bte_o(1:0)	WISHBONE Equiv. ACK_I ADR_O() CLK_I DAT_I() DAT_O() CYC_O STB_O WE_O SEL_O CTI_O BTE_O						
Special Requirements:	0(1.0)	DIL_O						