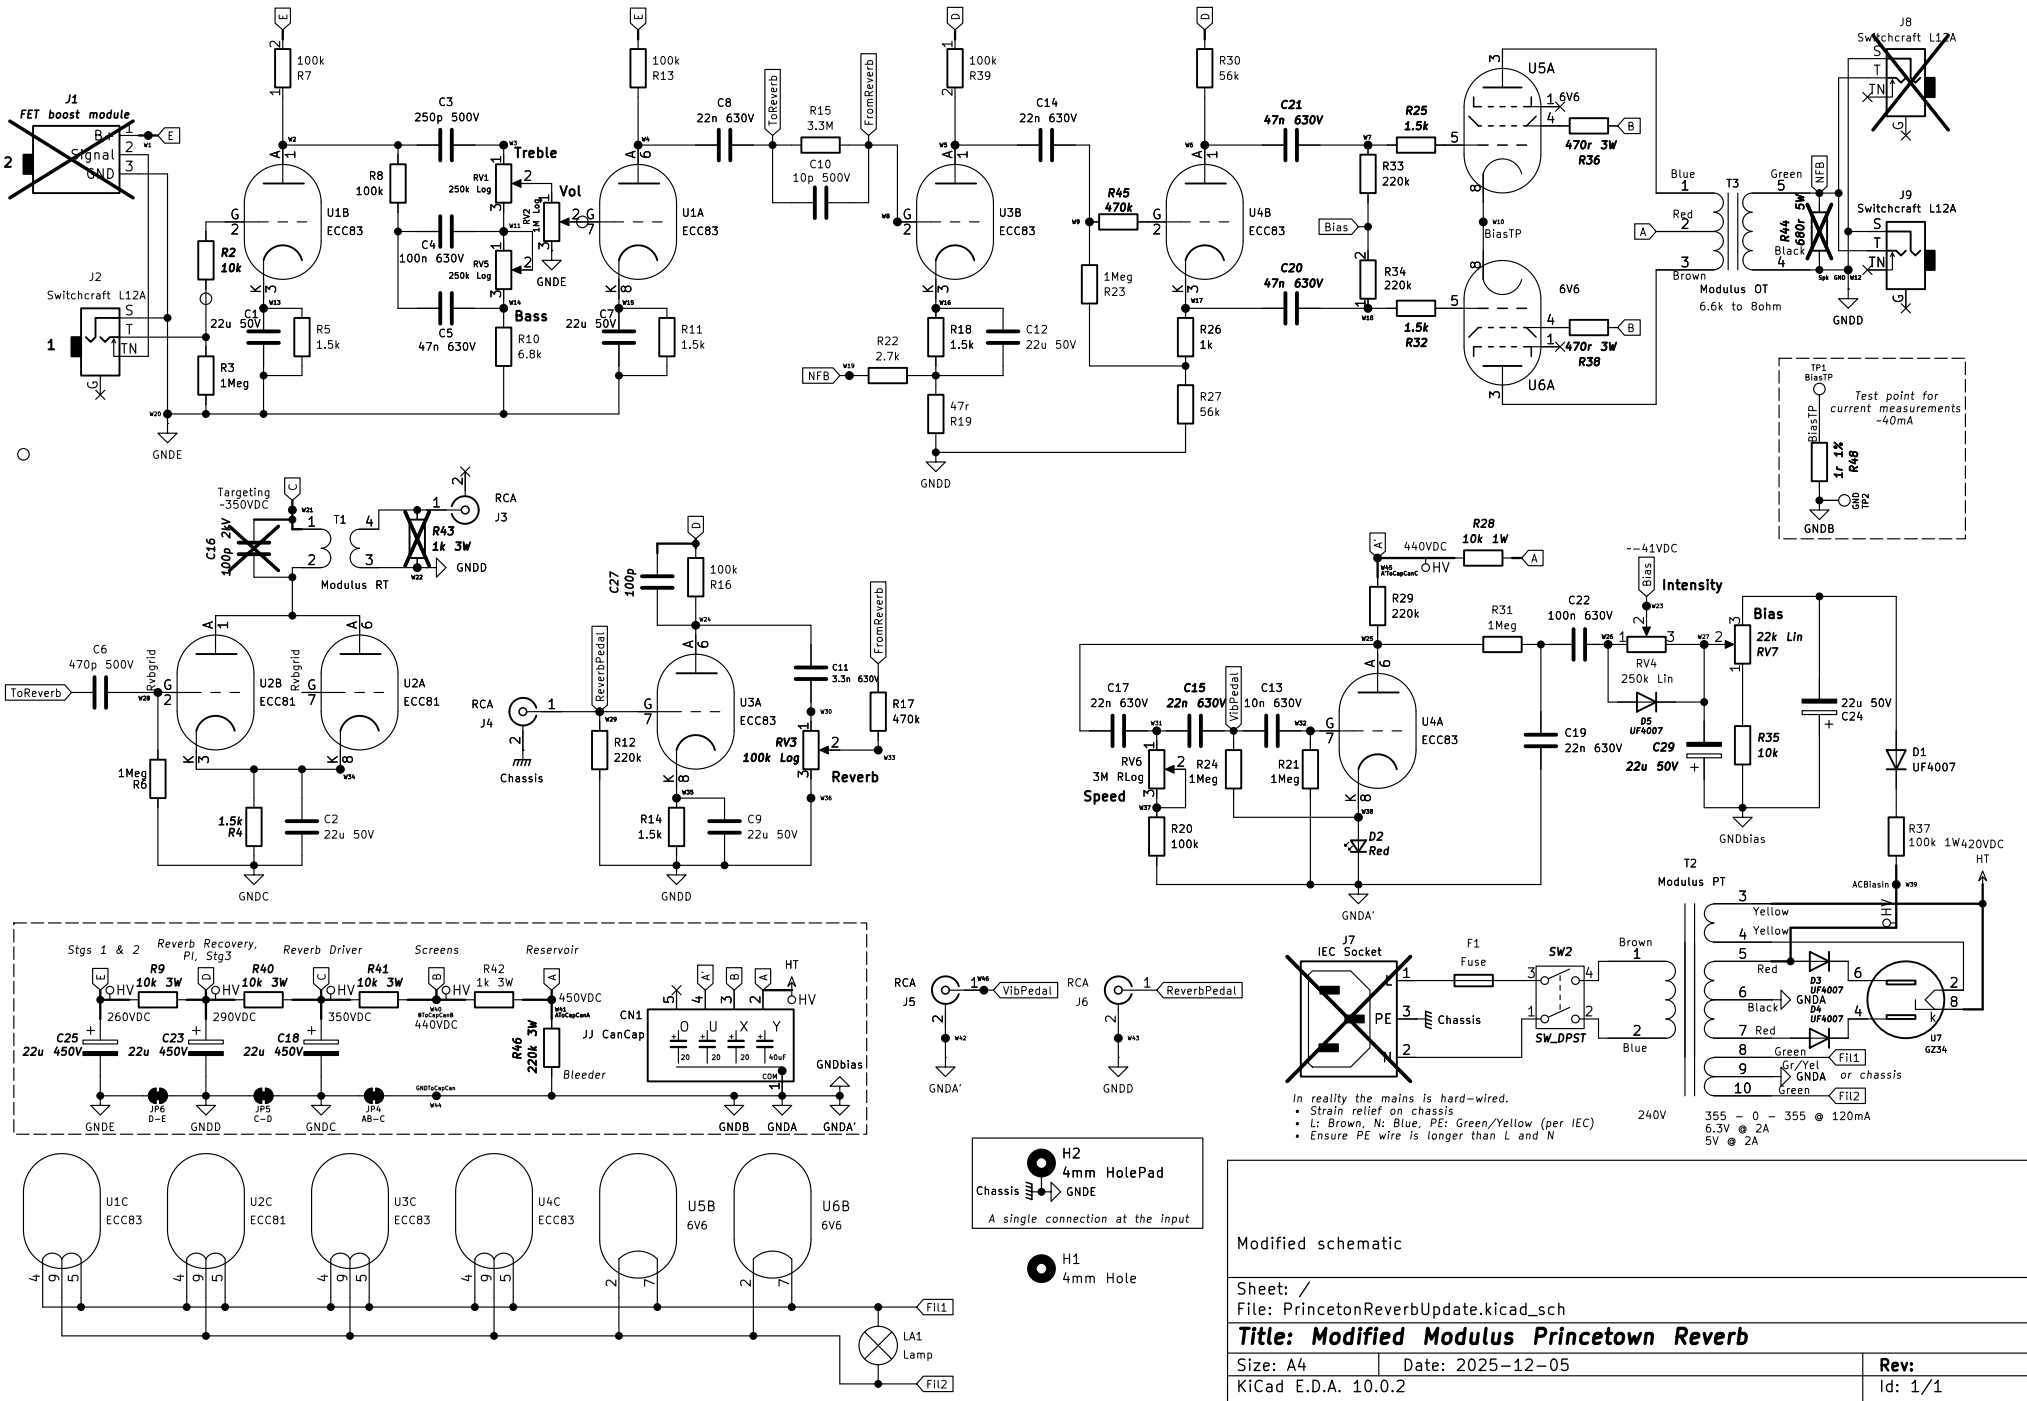

J1
FET boost module
Vin
Signal
GND
J2
Switchcraft L12A
U1B
ECC83
U1A
ECC83
U3B
ECC83
U4B
ECC83
U5A
6V6
U6A
6V6
Treble
Vol
Bass
Bias
BiasTP
Modulus OT
6.6k to 8ohm
J8
Switchcraft L12A
J9
Switchcraft L12A
GNDD
GNDE
Test point for current measurements ~40mA
Targeting ~350VDC
Modulus RT
RCA J3
U2B
ECC81
U2A
ECC81
U3A
ECC83
Reverb
Chassis
GNDC
U4A
ECC83
Intensity
Speed
440VDC
41VDC
GNDA'
GNDbias
Stgs 1 & 2
Reverb Recovery, PI, Stg3
Reverb Driver
Screens
Reservoir
260VDC
290VDC
350VDC
440VDC
450VDC
JJ CanCap
Bleeder
GNDB
GNDA
GNDA'
J5
VibPedal
J6
ReverbPedal
GNDA'
GNDD
J7
IEC Socket
F1
Fuse
SW2
SW_DPST
PE
Chassis
Brown
Blue
240V
In reality the mains is hard-wired.
Strain relief on chassis
L: Brown, N: Blue, PE: Green/Yellow (per IEC)
Ensure PE wire is longer than L and N
T2
Modulus PT
Yellow
Red
Black
Green
Gr/Yel
Fil1
Fil2
or chassis
355 – 0 – 355 @ 120mA
6.3V @ 2A
5V @ 2A
U1C
ECC83
U2C
ECC81
U3C
ECC83
U4C
ECC83
U5B
6V6
U6B
6V6
LA1
Lamp
H2
4mm HolePad
Chassis
GNDE
A single connection at the input
H1
4mm Hole
Modified schematic
Sheet: /
File: PrincetonReverbUpdate.kicad_sch
Title: Modified Modulus Princetown Reverb
Size: A4
Date: 2025-12-05
Rev:
Id: 1/1
KiCad E.D.A. 10.0.2