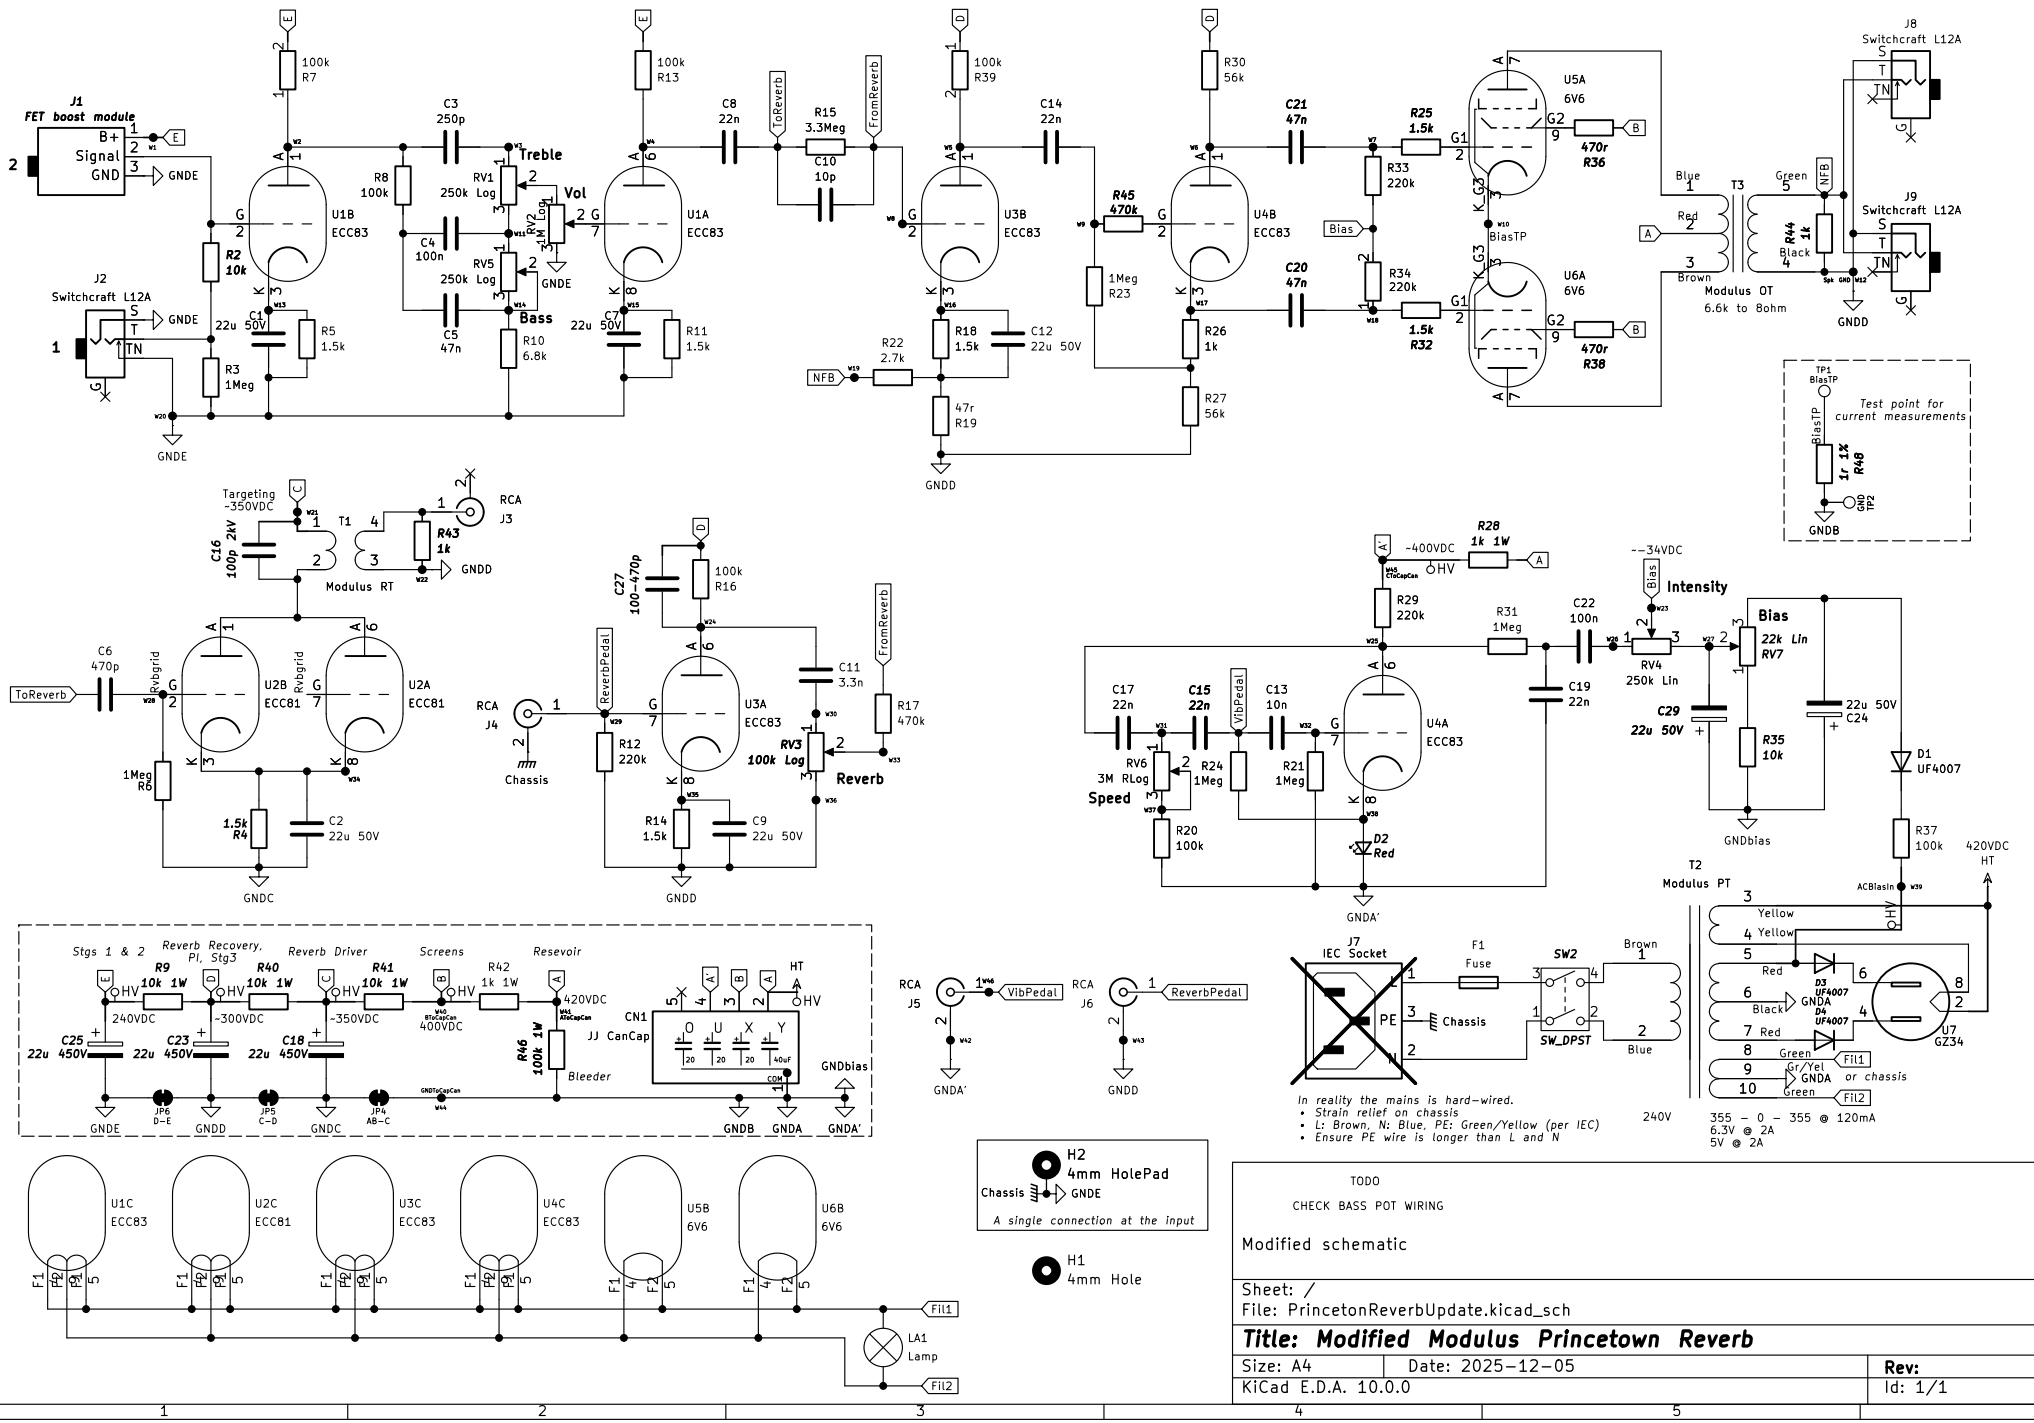
J1
FET boost module
B+
Signal
GND
GNDE
J2
Switchcraft L12A
U1B
ECC83
U1A
ECC83
U3B
ECC83
U4B
ECC83
U5A
6V6
U6A
6V6
Treble
Vol
Bass
Modulus OT
6.6k to 8ohm
J8
Switchcraft L12A
J9
Switchcraft L12A
GNDD
TP1
BiasTP
Test point for current measurements
GNDB
Targeting
~350VDC
Modulus RT
RCA
J3
U2B
ECC81
U2A
ECC81
U3A
ECC83
RCA
J4
Chassis
Reverb
GNDC
GNDD
-400VDC
HV
-34VDC
Intensity
Bias
U4A
ECC83
Speed
D1
UF4007
D2
Red
GNDA'
GNDbias
T2
Modulus PT
420VDC
HT
U7
GZ34
J7
IEC Socket
F1
Fuse
SW2
SW_DPST
Brown
Blue
PE
Chassis
240V
In reality the mains is hard-wired.
Strain relief on chassis
L: Brown, N: Blue, PE: Green/Yellow (per IEC)
Ensure PE wire is longer than L and N
355 – 0 – 355 @ 120mA
6.3V @ 2A
5V @ 2A
Stgs 1 & 2
Reverb Recovery, PI, Stg3
Reverb Driver
Screens
Resevoir
240VDC
~300VDC
~350VDC
400VDC
420VDC
JJ CanCap
Bleeder
CN1
JP6 D–E
JP5 C–D
JP4 AB–C
RCA
J5
VibPedal
GNDA'
RCA
J6
ReverbPedal
GNDD
U1C
ECC83
U2C
ECC81
U3C
ECC83
U4C
ECC83
U5B
6V6
U6B
6V6
Fil1
Fil2
LA1
Lamp
H2
4mm HolePad
Chassis
GNDE
A single connection at the input
H1
4mm Hole
TODO
CHECK BASS POT WIRING
Modified schematic
Sheet: /
File: PrincetonReverbUpdate.kicad_sch
Title: Modified Modulus Princetown Reverb
Size: A4
Date: 2025-12-05
Rev:
KiCad E.D.A. 10.0.0
Id: 1/1