MAKER EDITION · BASE INSERT

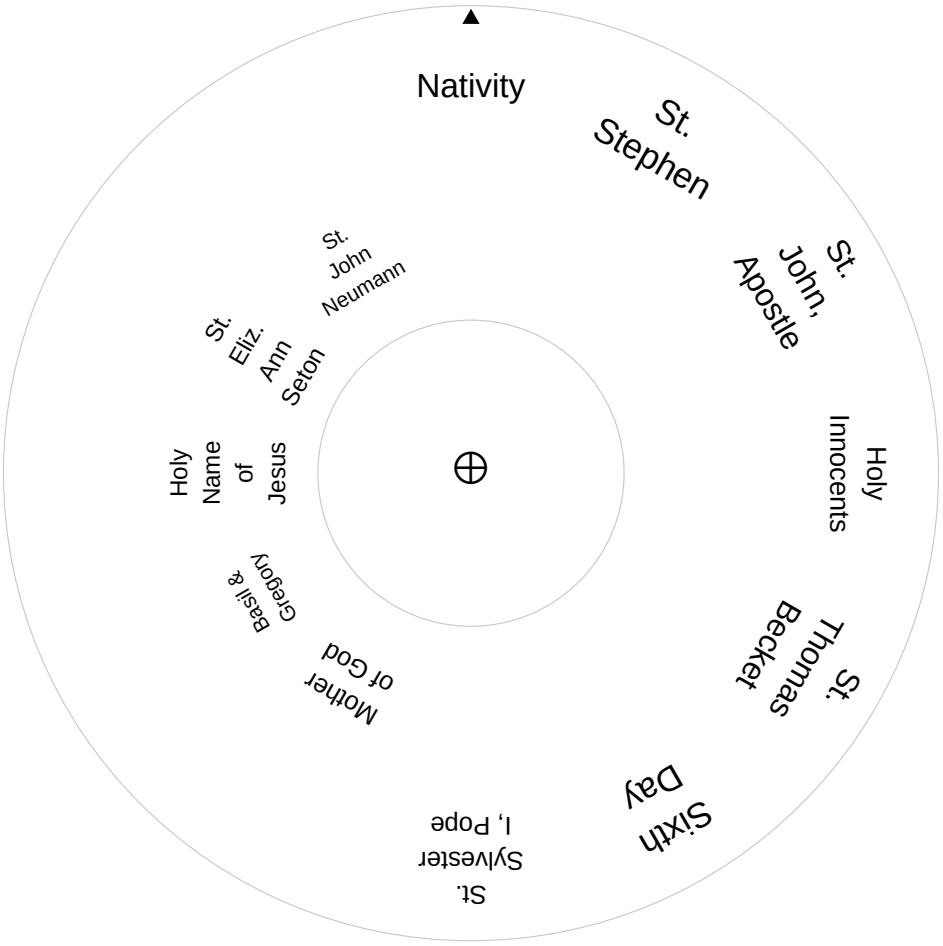

PRINT SCALE CHECK — this bar is 100 mm (3.937 in)

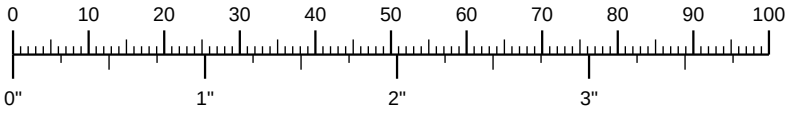

If it measures short, your driver scaled the page. Reprint at 100 ÷ (what you measured) %, or use BigPrint.

PRINT AT 100% WITH SCALING OFF — “Actual size”, not “Fit to page”

Cut along the two faint circles — one piece, with its center hole.

Line the arrowhead up with the short index line in the base floor, at twelve o’clock.

Glue for PLA or PETG: 3M Super 77 or Super 90 spray, or 3M 300LSE (9472LE) transfer tape.

Spraying: mask the part, mist both the part and the back of the insert, let both tack up about a minute, then press together.