

MAKER EDITION · FACE + WHEEL INSERTS

Top carrier, glue side up:
notch toward you,
drive slot curves right

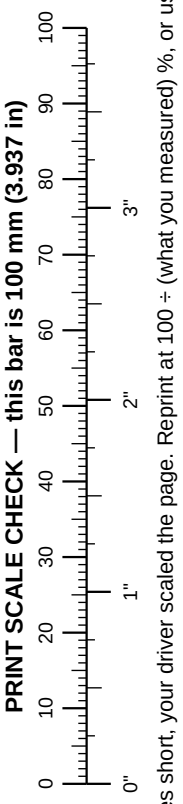

If it measures short, your driver scaled the page. Reprint at 100 ÷ (what you measured) %, or use BigPrint.

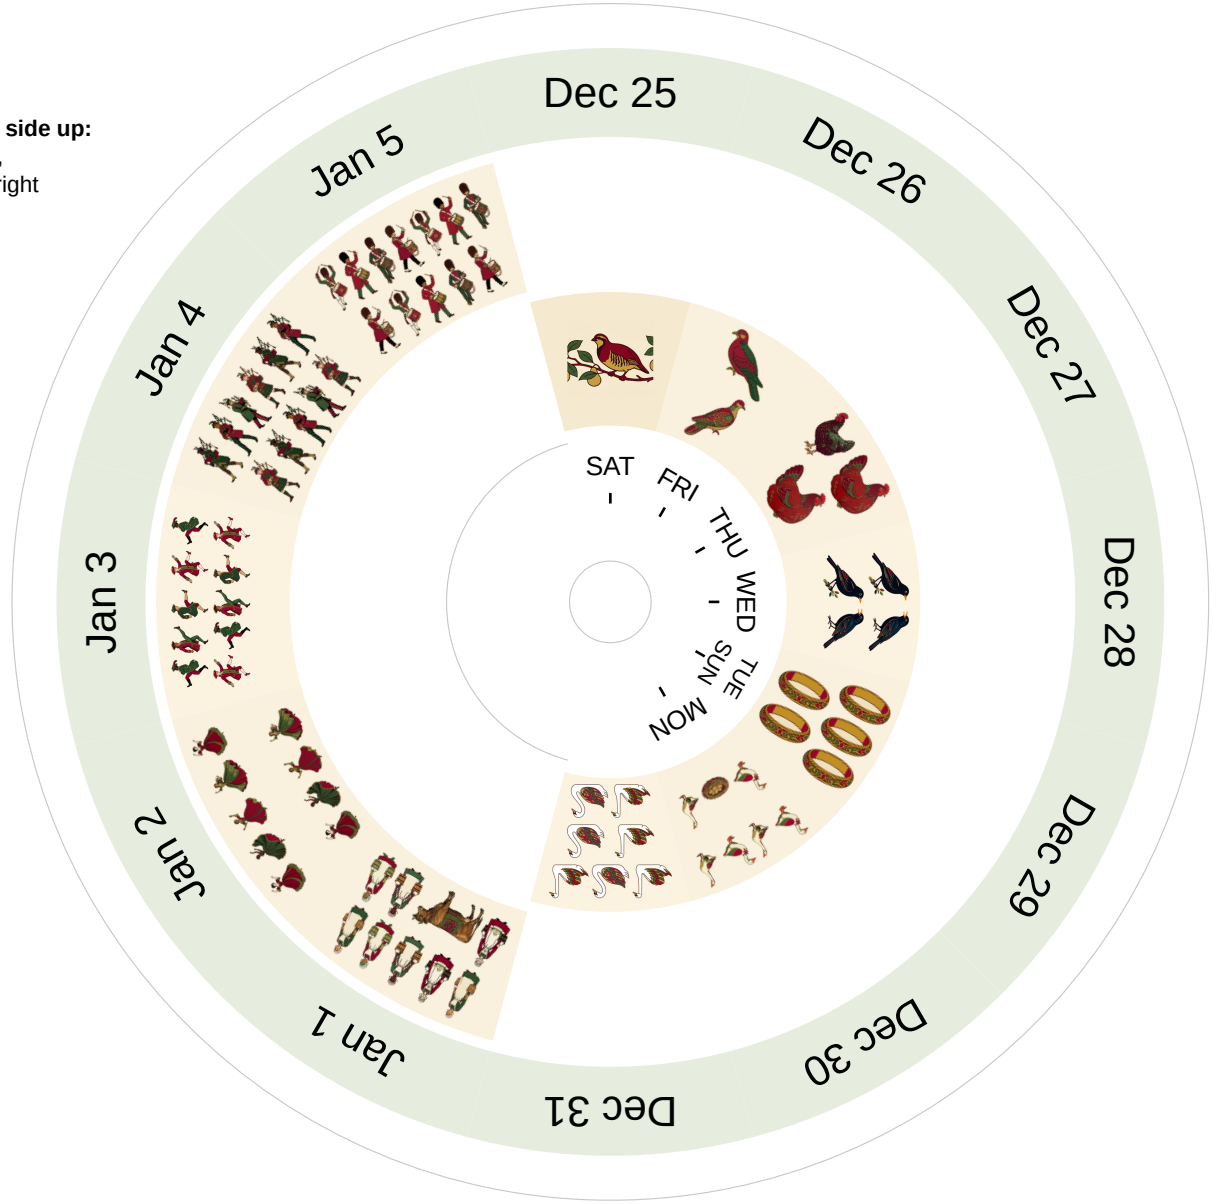

knob top

cut on the edge of the color





cut on the edge of the color



apply after assembly: it covers the bolt hole

PRINT AT 100% WITH SCALING OFF — “Actual size”, not “Fit to page”

Cut one disc along the outside of the dates, or on the outer circle to reduce masking; trim it if it sits slightly off.

Then cut out the white windows and the center.

Glue for PLA or PETG: 3M Super 77 or Super 90 spray, or 3M 300LSE (9472LE) transfer tape.

Spraying: mask the part, mist both the part and the back of the insert, let both tack up about a minute, then press together.