

PF131 - HS 서페이서



valspar



PF131 HS 서페이서





PF131 HS 서페이서 - TDS



6:1 (HS420 경화제) + 최대 25% Uni 신너를 추가 (EU version)





1.3 -1.8 mm 중력식 / 1.4-1.8mm 흡상식



1-3 코트 @ 60-180µm



플래시-오프 20°C에서 5-10 분




건조 시간 20°C에서 16 시간 또는 60°C에서 20-30분



가사 시간 20°C에서 30분

전체 수리부분 샌딩

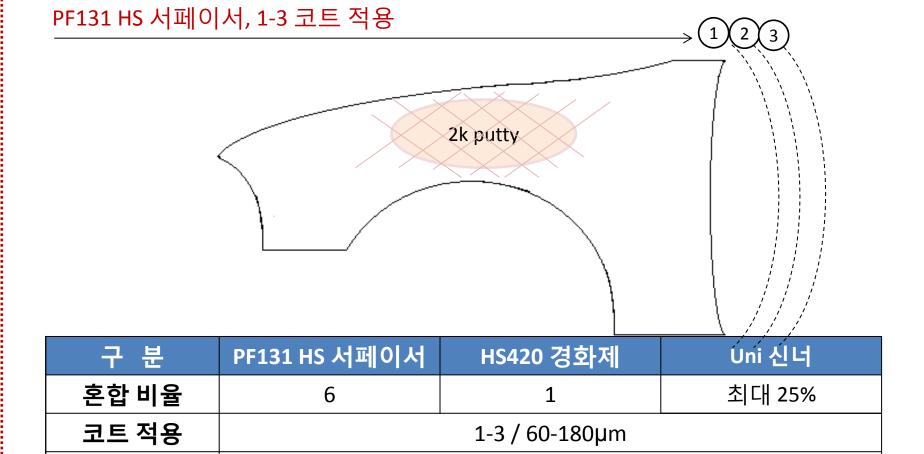


20°C에서 10-15 분

플래시-오프

부분 수리부분 샌딩

PF131 HS 서페이서, 1-3 코트 적용

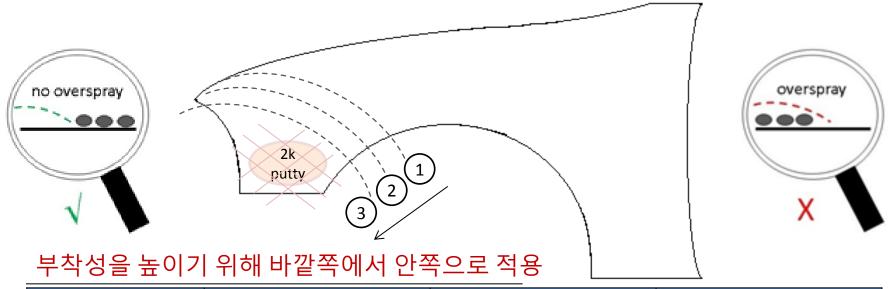

구 분	PF131 HS 서페이서	HS420 경화제	Uni 신너
혼합 비율	6	1	최대 25%
코트 적용	1-3 / 60-180µm		
플래시-오프	20°C에서 10-15분		