KTM indicator cap - 1:1 card fit-check template

Print at 100 % ("actual size", no fit-to-page). Check the bar below with a ruler before cutting.



this bar must measure 100 mm

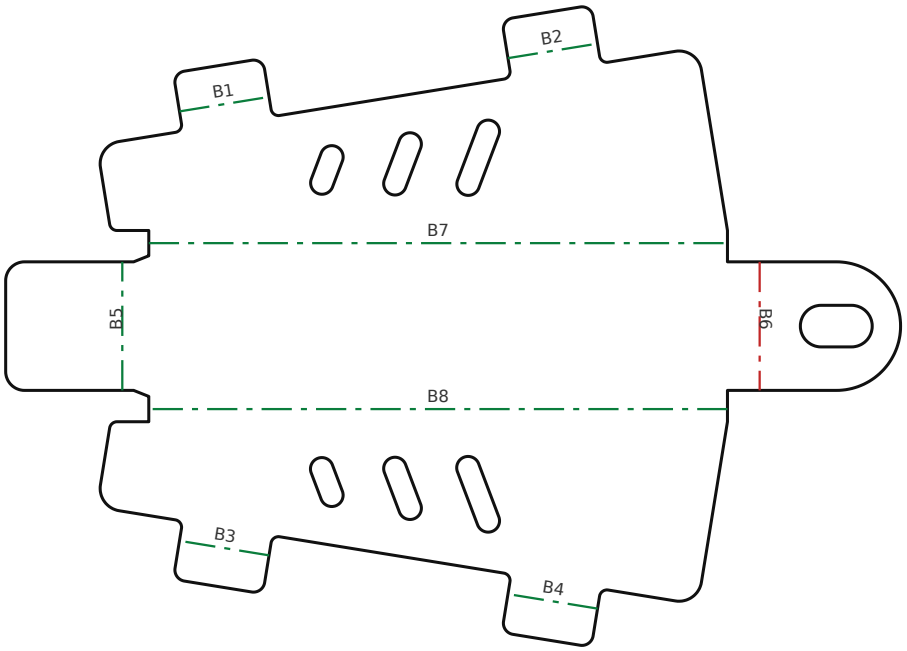

1. Glue this sheet to 1 mm card (cereal-box card works) and cut round the solid outline. Cut out the slots if you like.
2. Score the dash-dot lines. Green lines fold AWAY from you, the one red line (B6, the ear) folds TOWARDS you.
3. Fold B7 and B8 to 90° to make the channel, B5 to close the tip, the four small tabs about 35° inwards,
and B6 so the ear stands square to the lamp.
4. Slide it over the lamp from the tip. It should stop about 2 mm short of the tip, with about 1 mm play top and bottom
and 1.5 mm at the back (that space is for the foam liner). The tabs should sit on the sloped edge of the lens,
not on the lit face. The ear should land flat on the screw boss with the slot over the screw hole.
5. Wherever it does not, measure the difference and change the matching value in cad/params.py (M1-M10),
then run build.py and drawing.py again. Only cut metal once the card version fits.

Card folds sharp, steel bends on a 1.5 mm radius, so the card model runs about 0.4 mm larger inside. That is expected.