# GEORGIA INSTITUTE OF TECHNOLOGY SCHOOL of ELECTRICAL and COMPUTER ENGINEERING

# ECE 2026 Spring 2025 Lab #6: Filter Design of FIR Filters

Date: 31 March – 18 April 2025

Special Lab Instructions in Spring 2025 The labs will be held in person (or remotely through BlueJeans when needed). Students registered in a particular lab session are required to be present at the designated times. Attendances will be taken before each class. A total of six labs will be conducted. Each lab will typically last two weeks. The first week is devoted to students' **Q&As** and the second is for students' **demos** to the instructors for codes and lab results. Students will be grouped into teams of 4 to 5 by instructors before starting Lab 1. For each lab session, there will be two instructors administrating all activities. Each team will be given a breakout period of 15 minutes in each session for Q&As and verifications. Students are encouraged to discuss lab contents in teamwork. At the end of each lab, each student are required to turn in an individual lab report in a single pdf fill, containing answers to all lab questions, including codes and plots. Georgia Tech's **Honor Code** will be strictly enforced. See CANVAS Assignments for submission instructions.

Forgeries and plagiarism are a violation of the honor code and will be referred to the Dean of Students for disciplinary action. You are allowed to discuss lab exercises with other students, but you cannot give or receive any written material or electronic files. In addition, you are not allowed to use or copy material from old lab reports from previous semesters. Your submitted work must be your own original work.

#### 1 Introduction

#### 1.1 Objective

The goal of this lab is to learn some methods for designing practical FIR filters in MATLAB. These filters will have a finite number of coefficients, and a frequency response that approximates an ideal frequency response shape. We will go through the following three steps:

- 1. Windowing: The concept of windowing is widely used in DSP when dealing with finite-length signals.
- 2. *Filter Specs*: The quality of a designed filter is measured by how closely the actual response matches the desired ideal response. Often the desired match is set prior to the actual filter design step by drawing a tolerance region around the ideal filter shape. Then the minimum-order filter that fits inside the tolerance region is designed.
- 3. *Design Methods:* Two very common approaches to FIR filter design are *windowing* and computer optimization. The filterdesign GUI in *SP-First* can do both.

#### 1.2 Overview

There are many ways to approximate an ideal frequency response with a practical filter. For FIR filters the frequency response  $H(e^{j\hat{\omega}})$  is a function of  $\hat{\omega}$  that summarizes a LTI system's response to inputs such as complex exponentials and sinusoids. The MATLAB function freqz.m is used to compute samples of the frequency response in the *frequency domain*. A filter design method produces filter coefficients  $\{b_k\}$  for

<sup>&</sup>lt;sup>1</sup>If you are working at home and do not have the function freqz.m, there is a substitute available called freekz.m. You can find it in the *SP-First Toolbox*.

the time-domain implementation of the FIR filter as a difference equation

$$y[n] = b_0x[n] + b_1x[n-1] + b_2x[n-2] + \dots + b_Mx[n-M]$$

so the freqz function is an essential step for making plots of the magnitude and phase of the designed frequency response and assessing how closely it matches the desired ideal response.

# 2 Pre-Lab

# 2.1 Windowing

The concept of windowing is widely used in signal processing. The basic idea is to extract a finite section of a very long signal x[n] via multiplication w[n]x[n]. This approach works if the window function w[n] is zero outside of an interval. For example, consider the simplest window function which is the L-point rectangular window defined as

$$w_r[n] = \begin{cases} 1 & 0 \le n \le L - 1 \\ 0 & \text{elsewhere} \end{cases} \tag{1}$$

The important idea is that the product  $w_r[n]x[n+n_0]$  will extract L values from the signal x[n] starting at  $n=n_0$ . Thus the following are equivalent

$$w_r[n]x[n+n_0] = \begin{cases} 0 & n < 0\\ \mathscr{U}_r[n]x[n+n_0] & 0 \le n \le L-1\\ 0 & n \ge L \end{cases}$$
 (2)

The name window comes from the idea that we can only "see" L values of the signal  $x[n+n_0]$  within the window interval when we "look" through the window. Multiplying by w[n] is looking through the window. When we change  $n_0$ , the signal shifts, and we see a different length-L section of the signal.

The nonzero values of the window function do not have to be all ones, but they should be positive. For example, the *L*-point Hamming window is defined as

$$w_m[n] = \begin{cases} 0.54 - 0.46\cos(2\pi n/(L-1)) & 0 \le n \le L-1\\ 0 & \text{elsewhere} \end{cases}$$
 (3)

The MATLAB function hamming (L) will generate a vector with values given by (3). A stem plot of the Hamming window would show that the values are larger in the middle and taper off near the ends.

- (a) Make a stem plot of the Hamming window for L=23, over the index range  $0 \le n \le L-1$ .
- (b) Determine the maximum value of the window and the index location of the maximum. Also, determine the values of the window at n = 0, n = 11, and n = 22.
- (c) The Hamming window is said to have even symmetry. What does this mean?

#### 2.2 Ideal Filters and Practical Filters

*Ideal Filters* are given by their frequency response, consisting of *perfect* passbands and stopbands. The impulse responses of the ideal LPF are infinitely long sinc functions. They cannot be FIR filters with a finite set of coefficients because ideal LPFs are realized by the following DTFT pair:

$$h_i[n] = \frac{\sin(\hat{\omega}_c n)}{\pi n} \iff H_i(e^{j\hat{\omega}}) = \begin{cases} 1 & |\hat{\omega}| \le \hat{\omega}_c \\ 0 & \hat{\omega}_c < |\hat{\omega}| \le \pi \end{cases}$$
(4)

where  $\hat{\omega}_c$  is the *cutoff frequency* of the ideal LPF, which separates the passband from the stopband. In the dltidemo GUI, you can choose ideal lowpass filters (LPF), highpass filters (HPF) and bandpass filters (BPF) because the GUI does not use the impulse response. The ideal LPFs and HPFs have one parameter for the cutoff frequency. The ideal BPF has a parameter for center frequency which determines where the band is located; its bandwidth (in the dltidemo GUI) is always  $0.4\pi$ . All the ideal filters have an additional parameter for the slope of the phase of  $H(e^{j\hat{\omega}})$ .

**Practical Filters** are causal length-L FIR filters whose filter coefficients are chosen so that the resulting frequency response will closely approximate the desired frequency response of an ideal filter. The process of choosing the filter coefficients is called *filter design*. The practical FIR filters shown in dltidemo were designed using MATLAB's fir1 function for digital filter design. The GUI offers length-15 LPFs and HPFs, and length-21 BPFs. The LPF and HPF designs depend on specifying one parameter for the cutoff frequency which lies midway between the non-ideal passband and stopband. The BPF requires two parameters: one for center frequency which determines where the passband is located, and other for the width of the passband. In the dltidemo GUI, the default BPF cutoffs are  $\pm 0.2\pi$  from the center frequency, so only the center frequency can be changed. These practical filters do not match ideal filters exactly, and this is readily apparent at the cutoff frequencies where the frequency response has a magnitude of 0.5.

#### 2.2.1 Truncate the Ideal Impulse Response

One simple approach to designing a practical FIR filter is to truncate the impulse response of an ideal filter. This can be accomplished with a window function, so we usually say that the practical FIR filter has an impulse response that is a *windowed* version of the ideal impulse response. For example, we could make a length-23 FIR lowpass filter by taking the center portion of the sinc function:

$$h_1[n] = w_r[n] h_{\text{IDEAL}}[n-11] = \begin{cases} \frac{\sin(\hat{\omega}_c(n-11))}{\pi(n-11)} & 0 \le n \le 22\\ 0 & \text{elsewhere} \end{cases}$$
(5)

where  $w_r[n]$  is a 23-point rectangular window. The sinc function must be time-shifted to put its peak in the middle of the window at n=11, because we want the system defined by  $h_1[n]$  in (5) to be causal. It is common that the ideal impulse response is time shifted by an amount equal to half the window length.

- (a) For the time-windowed sinc function in (5), set  $\omega_c = 0.7\pi$ . Then make a stem plot of the impulse response  $h_2[n]$ .
- (b) Use MATLAB to determine (samples of) the DTFT of  $h_2[n]$  and make a plot of the DTFT magnitude,  $|H_2(e^{j\hat{\omega}})|$ .
- (c) We could experiment with different window functions. Change the window to the 23-point Hamming window, and define a new impulse response as

$$h_3[n] = w_m[n] \left( \frac{\sin(\hat{\omega}_c(n-11))}{\pi(n-11)} \right)$$

Plot the impulse response.

(d) Use MATLAB to determine (samples of) the DTFT of  $h_3[n]$  and make a plot of the DTFT magnitude,  $|H_3(e^{j\hat{\omega}})|$ . Explain why this "practical filter" is a better LPF than  $H_2(e^{j\hat{\omega}})$  when evaluated as an approximation to the ideal LPF.

# 2.3 GUI for Filter Design

The SP-First GUI called filterdesign illustrates several filter design methods for LPF, BPF and HPF filter. The interface is shown in Fig. 1. Both FIR and IIR filters can be designed, but we will only be interested in the FIR case which would be selected with FIR button in the upper right. The default design method is the Window Method using a Hamming window. The window type can be selected from the drop-down list in the lower right. To specify the design it is necessary to set the order of the FIR filter and choose one or more cutoff frequencies; these parameters can be entered in the edit boxes.

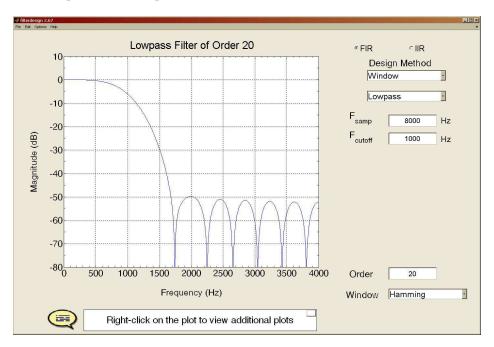


Figure 1: Interface for the filterdesign GUI. When the Filter Choice is set to FIR, many different window types can be selected, including the Hamming window and the Rectangular window (i.e., no window). The specification of one or more cutoff frequencies  $(f_{co})$  must be entered using continuous-time frequency (in Hz), along with a sampling rate  $(f_s$ , also in Hz). In normalized frequency, the cutoff frequency is  $\hat{\omega}_{co} = 2\pi (f_{co}/f_s)$ .

The plot initially shows the frequency response magnitude on a linear scale, with a frequency axis in Hz. Clicking on the word Magnitude will toggle the magnitude scale to a log scale in dB. Clicking on the word Frequency will toggle the frequency axis to normalized frequency  $\hat{\omega}$ , and also let you enter the cutoff frequency using  $\hat{\omega}$ . Recall that  $\hat{\omega} = 2\pi (f_{co}/f_s)$ . The plotting region can also show the phase response of  $H(e^{j\hat{\omega}})$ , or the impulse response of the filter h[n]. Right click on the plot region to get a menu.

The filter coefficients can be "exported" from the GUI by using the menu File->Export Coeffs. To have some filters for comparison, redo the designs from the Section 2.2.1, and export the filter coefficients to the workspace under unique names. Then you can make your own plot of the frequency response in MATLAB using the freekz function (or freqz) followed by a plot command.

The Options menu provides zooming and a grid via Options->Zoom and Options->Grid.

#### 2.4 Design Filters with the filterdesign GUI

For practice, use the filterdesign GUI to design two lowpass FIR filters with order M=22 (or length L=23). Use a cutoff frequency of  $\hat{\omega}_c=0.32\pi=2\pi(1600/10000)$ . Create one using a Hamming window,

the other with a Rectangular window which should give a result like Fig. 2. Right click on the plot to see options for displaying the impulse response either windowed or unwindowed. The unwindowed version just displays the truncated sinc function, i.e., rectangular windowing.

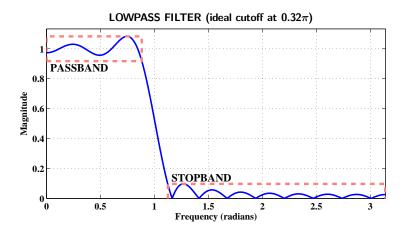


Figure 2: Passband and stopband defined for a typical lowpass filter. This one is of length 23 designed with a rectangular window and a sinc function with a cutoff frequency of  $\hat{\omega}_c = 0.32\pi$ . The passband and stopband ripples are defined to be 0.1, from which the passband and stopband edges can be measured. The approximate value of the passband edge is  $\hat{\omega}_p = 0.281\pi \approx 0.883$ ; the stopband edge,  $\hat{\omega}_s = 0.358\pi \approx 1.125$ .

# 2.4.1 Passband Defined for the Frequency Response

Frequency-selective digital filters, e.g., LPFs, BPFs and HPFs, have a frequency response magnitude that is close to one in some frequency regions, and close to zero in others. For example, the plot in Fig. 2 is a lowpass filter whose magnitude is close to one when  $0 \le \hat{\omega} < 0.883$ . This region where the magnitude is close to one is called the *passband* of the filter. It will be useful to have a precise definition of the passband edges, so that the passband width can be measured and we can compare different filters.

- (a) From the plot of the magnitude response, e.g, in MATLAB or in the filterdesign GUI, it is possible to determine the set of frequencies where the magnitude is very close to one, as defined by  $||H(e^{j\hat{\omega}})|-1|$  being less than  $\delta_p$ . This deviation from one is called the *passband ripple*. A common choice for the passband ripple is between 0.01 and 0.1, i.e., 1% to 10%. The set of frequencies in a passband should be a region of the form  $\hat{\omega}_1 \leq \hat{\omega} \leq \hat{\omega}_2$ .
- (b) For a lowpass filter, the passband region extends from  $\hat{\omega}=0$  to  $\hat{\omega}_p$ , where the parameter  $\hat{\omega}_p$  is called the *passband edge*. For the two LPFs designed in Section 2.4 determine an *accurate estimate* of  $\hat{\omega}_p$  assuming a passband ripple  $(\delta_p)$  of 0.1 for the Rectangular window case, and  $\delta_p=0.01$  for the Hamming window case. Compare these *actual passband edges* to the design parameter  $\hat{\omega}_c$  which is called the *cutoff frequency*.

*Note:* There is often confusion that  $\hat{\omega}_c$  and  $\hat{\omega}_p$  are the same, but after doing a few examples it should become clear that is not the case.

<sup>&</sup>lt;sup>2</sup>The filterdesign GUI has a zoom capability (Options->zoom), and the grid can be turned on (Options->grid). Also, when the pointer is placed to hover over the frequency response the coordinates are read from the plot.

# 2.4.2 Stopband Defined for the Frequency Response

When the frequency response (magnitude) of the digital filter is close to zero, we have the *stopband* region of the filter. In the lowpass filter example of Fig. 2, the magnitude is close to zero when the frequency  $1.125 \le \hat{\omega} \le \pi$ , i.e., high frequencies. When the frequency response of a LPF is plotted only for nonnegative frequencies, the stopband will be a region of the form  $\hat{\omega}_s \le \hat{\omega} \le \pi$ . The parameter  $\hat{\omega}_s$  is called the *stopband edge*. We can make a precise measurement of the *stopband edge* as follows:

- (a) For the lowpass filters from Section 2.4, zoom in on the plot of frequency response magnitude in the filterdesign GUI to measure the stopband edge, or use a dB magnitude plot. Then determine the set of frequencies where the magnitude is nearly zero, as defined by  $|H(e^{j\hat{\omega}})|$  being less than  $\delta_s=0.1$  for the Rectangular window case, and less than  $\delta_s=0.01$  for the Hamming window design.
- (b) Compare the values of  $\hat{\omega}_s$  found in the previous part to the design parameter  $\hat{\omega}_c$  (the cutoff frequency).

#### 2.4.3 Transition Zone of the LPF

The difference between the stopband edge and the passband edge is called the *transition width* of the filter:  $\Delta \hat{\omega} = \hat{\omega}_s - \hat{\omega}_p$ . The smaller the transition width, the better the filter because it is closer to the *ideal filter* which has a transition width of zero.

- (a) For the two lowpass filters from Section 2.4, determine the transition width. *Note:* Comment on the statement, "when comparing equal-order FIR filters, the one with smaller transition width will have larger ripples."
- (b) Design two new LPFs that have the same cutoff frequency,  $\hat{\omega}_c=0.32\pi$ , but twice the order, i.e., M=44. Repeat the measurement of  $\hat{\omega}_p$ ,  $\hat{\omega}_s$  and  $\Delta\hat{\omega}$  for these two LPFs.
- (c) Compare to the values of  $\Delta \hat{\omega}$  from part (a). When the order doubles, describe what happens to the transition width.

#### 2.4.4 Summary of Filter Specifications

The foregoing discussion of ripples, bandedges, and transition width can be summarized with the tolerance scheme shown in Fig. 3. An acceptable filter design would be an FIR filter whose magnitude response lies entirely within the template shown in red dash lines. The length-23 FIR filter shown in Fig. 3 meets the specs, but if you designed a length-19 filter it would have a transition width that is greater than  $\Delta \hat{\omega} = 0.08\pi$ .

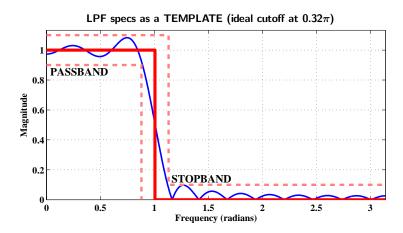


Figure 3: Tolerance scheme drawn around an ideal LPF with a cutoff frequency of  $\hat{\omega}_c=0.32\pi$ . Dashed lines indicate the maximum allowable deviation from the ideal LPF. The template uses  $\hat{\omega}_p=0.28\pi$ ,  $\hat{\omega}_s=0.36\pi$ , and  $\delta_p=\delta_s=0.1$ . The actual FIR filter shown is the length-23 FIR filter from Fig. 2 which just barely meets these specs.

# 3 In-Lab Exercise

The objective of the lab exercise is to design FIR filters that can be lowpass, highpass or bandpass filters. The exercises will involve using the *SP-First* GUI filterdesign in which FIR filters are designed via the window method, or with a computer optimization technique.

#### 3.1 Ideal Filters and Practical Filters

In dltidemo, it is possible to choose from two classes of filters: ideal filters and practical filters.

#### 3.1.1 Ideal Filters

- (a) Define the input signal to be  $x[n] = 1.8\cos(0.46\pi n)$ .
- (b) LPF: Set the filter to be an ideal LPF with a cutoff frequency of  $\hat{\omega}_c = 2\pi(0.29)$ . Determine a value for the phase slope so that the output will be delayed by 3, i.e.,  $y[n] = 1.8\cos(0.46\pi(n-3))$ . In addition, get the formula for the output signal from the *Theoretical Answer*. Explain why the phase of the *theoretical* output signal is not equal to  $-1.38\pi$ . Consider multiples of  $2\pi$  in the phase which must be taken into account when relating the phase to the delay.
- (c) HPF: Change to an ideal HPF; use the same phase slope as in the previous part. Determine the minimum value of the cutoff frequency so that the output signal will be zero.

#### 3.1.2 Practical Filters

Since ideal filters cannot be implemented with numerical computation, it is necessary to study how much degradation there will be when actual *implementable* filters are used. In this section, the filters are order-14 FIR filters with 15 filter coefficients. For both tests, use the same input signal as before:  $x[n] = 1.8\cos(0.46\pi n)$ . When you observe the output signal, think about the following question: Do you expect the signal to be in the stopband or passband of the filter, i.e., do you expect the output to be zero or to be equal to the input?

- (a) LPF: Set the filter type to a length-15 LPF, with its cutoff frequency at  $\hat{\omega}_c = 2\pi (0.29)$ . The cutoff frequency determines the boundary between the stopband and the passband. Use the GUI to determine the output signal *passed* by the LPF. Comment on how close this filter is to the ideal.
- (b) In the lowpass case, the output can be written as  $y[n] = A_{\text{out}} \cos(0.46\pi(n-n_d))$ , where  $n_d$  represents a delay. Use the time-domain plots, or the phase slope and phase value to determine  $n_d$  which must be an integer. Comment on the degradation of the output amplitude from the ideal.
- (c) HPF: Set the filter type to a length-15 HPF, with its cutoff frequency at  $\hat{\omega}_c = 2\pi (0.29)$ . The cutoff frequency determines the boundary between the stopband and the passband. Use the GUI to determine how well the output signal *rejected* by the HPF versus an ideal filter, i.e., determine the amplitude of the output signal which should be close to zero.

**Completion of Lab Results** (on separate Report page)

# 3.2 Designing Two Lowpass Filters

Design two lowpass FIR filters with M=30 and  $\hat{\omega}_c=0.5\pi=2\pi(f_c/f_s)=2\pi(2500/10000)$ , one using a Hamming window, the other with a Rectangular window. For the measurement of passband and stopband edges, there are two approaches: use the filterdesign GUI and read numbers from the plot, zooming when necessary, or export the filter coefficients from the GUI and use MATLAB to make plots of the magnitude of the frequency response using freekz (or freqz) and plot. In MATLAB zooming would be more precise and reliable because the frequency sampling can be specified in the call to freekz.

- (a) For the filter obtained with the rectangular window, determine an *accurate measurement* of the passband edge  $(\hat{\omega}_p)$  assuming the passband ripple specification is  $\delta_p = 0.1$ , i.e.,  $1 \pm 0.1$ .
- (b) For the filter obtained with the rectangular window, determine an *accurate measurement* of the stopband edge  $(\hat{\omega}_s)$  assuming the stopband ripple specification is  $\delta_s = 0.1$ .
- (c) For the filter obtained with the Hamming window, determine an *accurate measurement* of the passband edge  $(\hat{\omega}_p)$  assuming the passband ripple specification is  $\delta_p = 0.01$ , i.e.,  $1 \pm 0.01$ .
- (d) For the filter obtained with the Hamming window, determine an *accurate measurement* of the stopband edge  $(\hat{\omega}_s)$  assuming the stopband ripple specification is  $\delta_s = 0.01$ .
- (e) Question: is the cutoff frequency half way between  $(\hat{\omega}_p)$  and  $(\hat{\omega}_s)$  for both filters?

**Completion of Lab Results** (on separate Report page)

#### 3.3 Transition Zone of the LPF

The difference between the stopband edge and the passband edge is called the *transition width* of the filter:  $\Delta \hat{\omega} = \hat{\omega}_s - \hat{\omega}_p$ . The smaller the transition width, the better the filter because it is closer to the *ideal filter* which has a transition width of zero.

- (a) For the two lowpass filters from Section 3.2, determine the transition width.
- (b) Comment: "when comparing two  $M^{th}$  order filters, the one with a smaller transition width will have larger ripples."
- (c) Design a new Hamming-window LPF that has the same cutoff frequency,  $\hat{\omega}_c = 0.5\pi$ , but twice the order, i.e., M = 60. Repeat the measurement of  $\hat{\omega}_p$ ,  $\hat{\omega}_s$  and  $\Delta\hat{\omega}$  for this LPF.
- (d) Compare the values of  $\Delta\hat{\omega}$  from parts (a) and (c); when the order doubles, describe what happens to the transition width. Use this observation to explain that the following Hamming window design formula should be true

 $\Delta\hat{\omega} = \frac{C}{L}$ 

and find the value of the constant C.

**Completion of Lab Results** (on separate Report page)

# 3.4 Designing FIR Filter to Meet Given Specifications

Filter design for lowpass filters involves five parameters: two band edges, ripple heights in two bands, and the filter order. There is a sixth factor, which is the type of filter such as a Hamming windowed FIR filter. A typical design problem would be stated as follows: given the band edges and ripple heights, determine the *minimum order* filter that will meet the specs.

- (a) Suppose that you are given  $\hat{\omega}_p = 0.60\pi$ ,  $\hat{\omega}_s = 0.64\pi$ ,  $\delta_p = 0.01$ , and  $\delta_s = 0.01$ . Make a sketch of an ideal filter and a template that looks like Fig. 3. Label everything carefully and completely.
- (b) Use your Hamming window design formula (from the previous section) to predict the filter length (L) that will be needed to meet the specs. Recall that L=M+1.
- (c) Design the Hamming-windowed FIR filter with the predicted order. Determine the correct value to use for the cutoff frequency. Show the frequency response to your lab instructor for verification. Explain why the resulting frequency response does or does not meet the given specs.

Completion of Lab Results (on separate Report page)

# 3.5 Filter Design via Optimization

Many different methods have been developed for filter design via mathematical optimization. One of the widely used methods is firpm in MATLAB. For designing a LPF, it uses the following two step process:

- 1. Use the desired specifications for  $\hat{\omega}_p$ ,  $\hat{\omega}_s$ ,  $\delta_p$ , and  $\delta_s$  to estimate the filter order (M) that will be needed. This is done with the MATLAB function firpmord.
- 2. Use the outputs from firpmord as inputs to the function firpm to run the optimization and obtain the FIR filter coefficients that should meet the specs on  $\delta_p$  and  $\delta_s$ . In effect, the inputs to firpm are  $\hat{\omega}_p$ ,  $\hat{\omega}_s$ , M, and the ratio  $\delta_p/\delta_s$ .

For the calling arguments of these functions, do help firpmord and help firpm.

- (a) Suppose that you are given  $\hat{\omega}_p = 0.60\pi$ ,  $\hat{\omega}_s = 0.64\pi$ ,  $\delta_p = 0.05$ , and  $\delta_s = 0.01$ . Notice that the specs on  $\delta_p$  and  $\delta_s$  can be different, unlike the window method that always has  $\delta_p = \delta_s$ . Carry out the two design steps above to get the filter order M and the filter coefficients  $\{b_k\}$ .
- (b) Make a plot of the impulse response of the filter. Recall that the filter coefficients of the FIR filter are the values of the impulse response. Also, the DTFT of the impulse response is the frequency response of the FIR filter.
- (c) Make a plot of the frequency response magnitude versus  $\hat{\omega}$ . Then check whether or not the ripple specs  $(\delta_p, \delta_s)$  have been met. The band edges should definitely be correct because  $\hat{\omega}_p$  and  $\hat{\omega}_s$  are inputs to firpm.
- (d) If the ripple specs are not met with the predicted order, then increase the order by one and try again. A higher order such as M+1 or M+2 should meet the specs.
- (e) The phase of this FIR filter will be linear phase. Determine the slope of the linear phase.
- (f) After you have designed your bandpass filter, generate a signal by adding two sinusoids, one in the stopband and one in the passband. Run the signal through the bandpass filter to verify that the filter works properly. Plot spectrograms of the input and output signals. There should be only one sinusoid with the passband frequency present after filtering. Explain why this is the case.

**Completion of Lab Results** (on separate Report page)

# Lab #6 ECE-2026 Spring-2025 LAB COMPLETION REPORT

Name: _	gtLoginUserName: Date:
3.1.2(a)	Output of length-15 LPF with $\hat{\omega}_c=2\pi(0.29)$ which can be expressed as $A_{\rm out}\cos(\hat{\omega}_0n+\varphi)$
3.1.2(b)	LPF output: Determine the delay $n_d$ so that the output can be expressed with the formula, $A_{\rm out}\cos(\hat{\omega}_0(n-n_d))$
3.1.2(c)	Output of length-15 HPF with $\hat{\omega}_c=2\pi(0.29)$ . Give formula and explain why $y[n]$ is not exactly zero.
Part	Observations
3.2(c,d)	Passband and stopband edges of FIR filter designed with Hamming window. Measured values:
3.2(e)	Is the cutoff frequency half way between $(\hat{\omega}_p)$ and $(\hat{\omega}_s)$ for both filters?
3.3(a)	Transition widths of FIR filters designed with Hamming window.
3.3(c)	Measure values of passband and stopband edges, and transition width.
3.3(d)	Find $C$ in $\Delta \hat{\omega} = C/L$ for dependence of transition width on filter order.
3.4(a)	Make a sketch of ideal filter including a tolerance template like Fig. 3. <i>Draw the sketch on the axes below.</i>
3.4(b)	Predict length of the FIR filter to be designed with the Hamming window, using $\Delta \hat{\omega} = C/L$ . $L=?$
3.4(c)	Give value of $\hat{\omega}_{co}$ , and show frequency response of filter. Zoom in on passband stopband regions to verify.

Parta 3.5(a)-(f): Check your spectrograms before and after filtering. Explain your results.