

HEAT KING



IDF1000 Parts Manual



As a new customer of Heat King we would like to welcome you! We are looking forward to providing you with technical support for your Heat King unit. Whatever you need we are here to help.

Ways to contact us for support

By Phone : 1-800-661-0304

The main Technical support phone line is staffed monday-friday 7:00 AM to 3:30 PM CST excluding Manitoba statutory holidays.

After hours support

Calls received outside of regular hours are directed to the On-call technician. After hours support is reserved for issues that cannot wait until the next business day for resolution. If no answer please leave a message and we will get back to you as soon as possible.

By Email : Support@tamarack-ind.com

Feel free to email us at any time with technical questions or parts inquiries. Please include the year make and model of your Heat King if you have a specific question about your machine so we can better help you. If it is an emergency please call 1-800-661-0304


For more information please visit our website

www.heat-king.ca



Table of contents

Title	Pages
Ways to contact us	1
Panels	3-6
Trailer	7-8
Driveline	9
Blower	11-12
Heat Exchanger	13-14
Engine	15-16
Burner	17-18
Service Parts	19
Optional Accesories	20
Schematics	21-23

PANELS


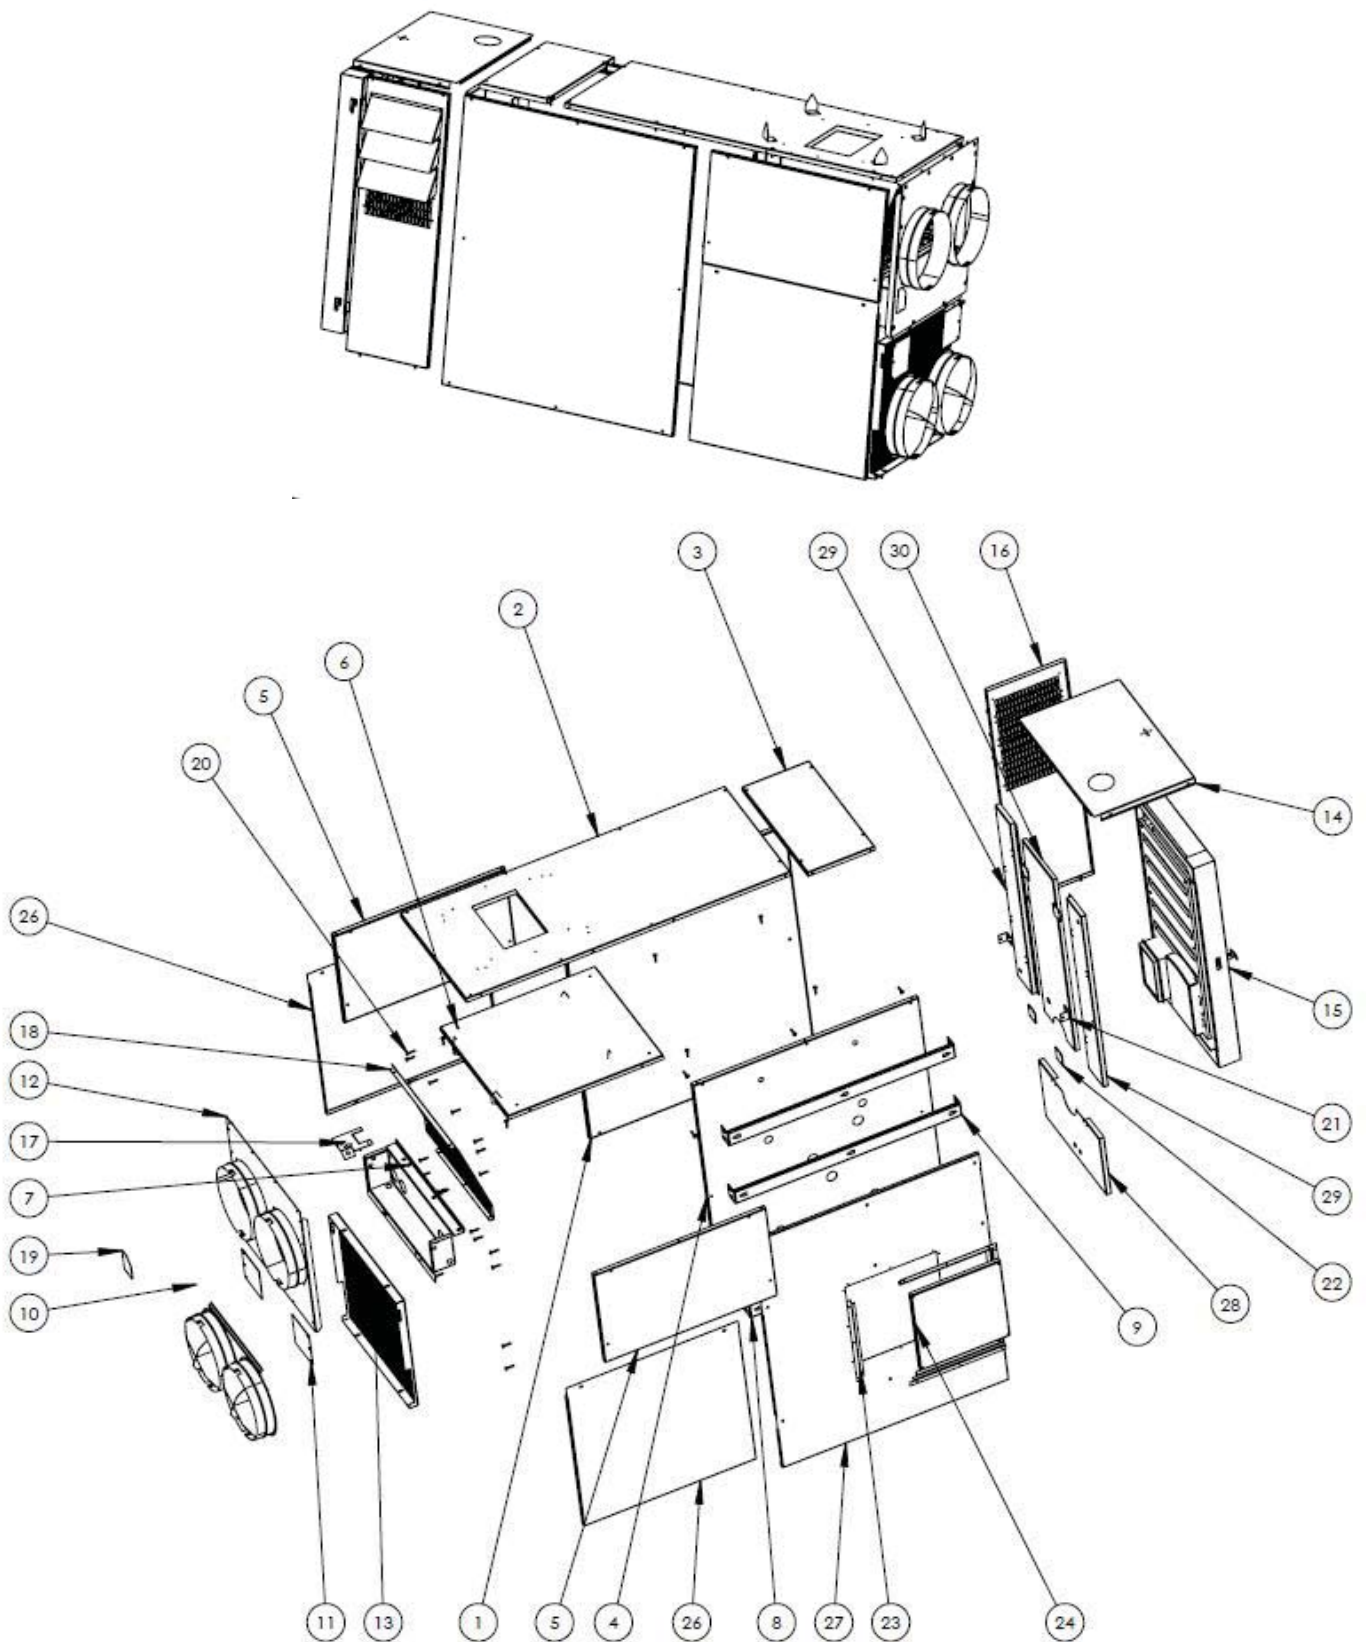


ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	A461112	ASSY, PNL SW TANKSIDE	1
2	A461115	ASSY, PNL INSU TOP LARGE	1
3	A461114	ASSY, PNL INSU TOP SMALL	1
4	A461113	ASSY, PNL SW BELTSIDE	1
5	A461116	ASSY, PNL INSU REAR SIDE	2
6	A461227	ASSY, PNL INSU FAN TOP	1
7	A461224	ASSY, WA, PNL INR LOWER	1
8	A461331	ASSY, WA, IDLER MNT PANEL	2
9	A461349	ASSY, WA, IDLER PANEL MOUNT UPPER	1
10	A461120	ASSY, RETURN AIR, MANIFOLD	1
11	A461227	ASSY, WA, FRONT MESHBOX	2
12	A461119	ASSY, WA, SUPPLY AIR MANIFOLD	1
13	A461223	ASSY,WA,FRONT MESHBOX	1
14	461286	PNL, ROOF ENGINESIDE	1
15	A461219	ASSY,WA, FRNT DOOR,IDF	1
16	A461221	ASSY, ACC. DOOR ES	1
17	461256	BKT,LIMIT SWITCH MNT	1
18	461270	PNL,EQUALISER DUCT OUT	1
19	460743	PNL, COVER, LIMIT	1
20	461289	SCR,1/4"-1.75L,SS SQR DR	35
21	461283	BKT,SW PNL MNT	2
22	461312	BKT,INSU PNL MNT FRWL	4
23	460707	BKT, FRAME,SMALL ACCESS	4
24	460706	PNL, SMALL ACCESS	1
25	485523	Nut, Panel, 5/16 UNC	4
26	461186	PNL,OUTER RR LWR	2
27	461191	PNL,OUTER MID PULLEY SIDE	1
28	461325	PNL,INNER, LWR,FRNT	1
29	461326	PNL,INNER UPR,SIDE	2
30	461170	PNL,INNER, UPR,FRNT	1
31	460692	BKT, DECAL STAND	4

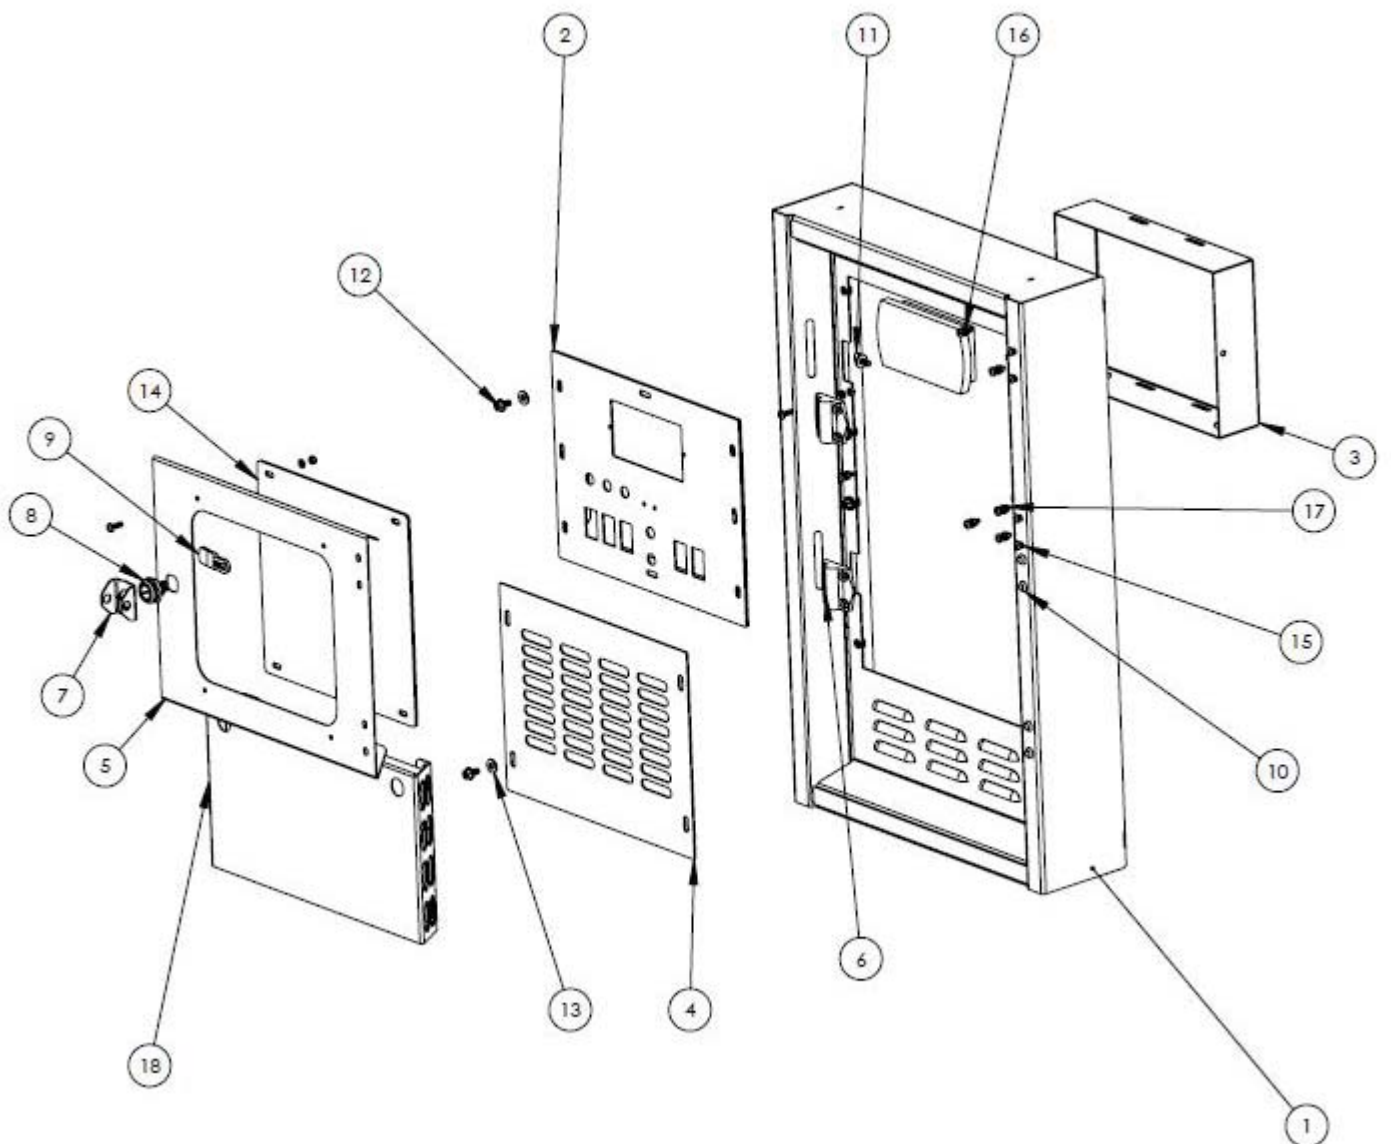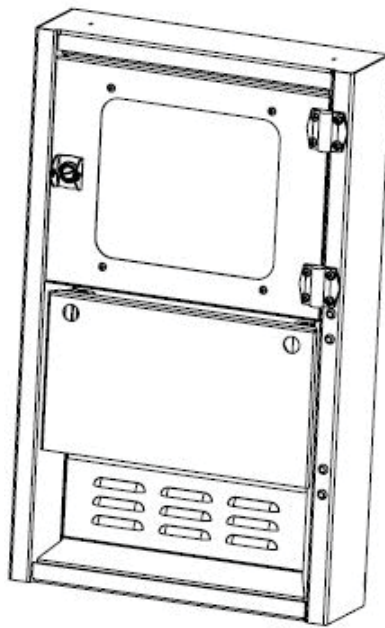


ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	A461209	Assy,WA,CP bezel	1
2	A461208	Assy,WA, Bezel plate	1
3	461245	PNL, PLC Enclosure,IDF	1
4	461244	PNL,PLC FACEPLATE, IDF	1
5	461248	PNL,CLEAR DOOR	1
6	448248	Hinge,spring detent	2
7	700169	BKT,PadLock	1
8	700163	Lock,SOUTHCO	1
9	460918	Cam,Southco	1
10	461919	PLUG,0.25" dia Plastic	4
11	460920	Screw,Thumb 1/4"X1/2"L	2
12	460914	Bolt,1/4"X 1/2" L,Serrated Flange	8
13	174485	Washer, 1/4" Flat ZP SAE	10
14	460923	Screen,Clear IDF	1
15	460924	Screw,M5 X 16 mm L ,SS PHP	12
16	700213	Washer,SS M5 screw	12
17	700212	Nut,SS Nyloc M5	12
18	461404	PNL,PLC COVER IDF	1

TRAILER

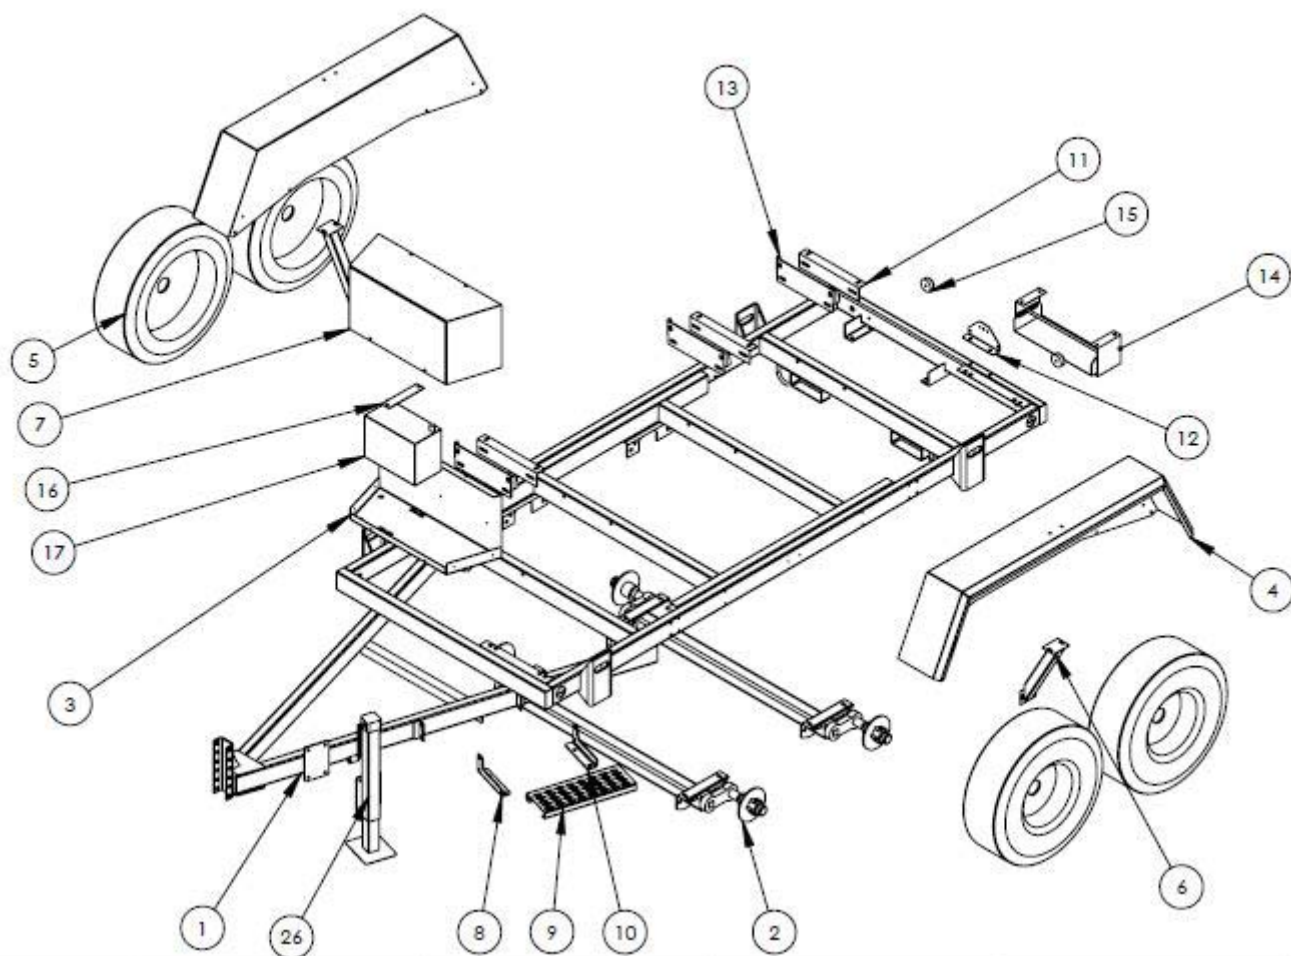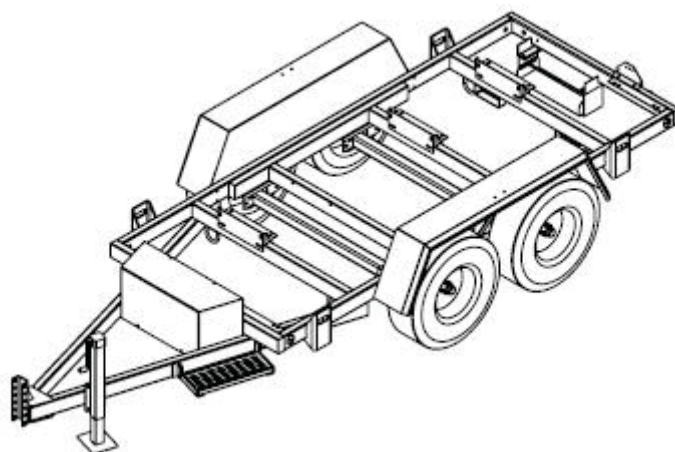

ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	A461367	ASSY,WA FRAME IDF1000	1
2	460865	Axle, 5000 Lb Torsion	2
3	461368	PNL,BACK ELECT IDF TRAILER	1
4	461028	Fender, Bolt-on	2
5	448001	Assy, W&T, 225/75R15E, 6 Bolt	4
6	A461032	ASSY,WA, Fender Gusset	2
7	461364	PNL,FRONT ELECT IDF TRAILER	1
8	461373	BKT,FOOTSTEP MNT FRONT LH	1
9	461371	GRATING GRIP STRUT	1
10	461369	BKT,FOOTSTEP MNT FRONT RH	1
11	461345	ANGLE,3X2 TRAILER MNT	3
12	461502	BKT,LICENCE PLT MNT	1
13	461346	BKT, TRAILER MNT	3
14	461362	STEP,PULL OUT 7"X20"	1
15	461469	BUMPER,RUBBER TRAILER	2
16	461475	BKT,BATTERY MOUNT	1
17	460445	Battery,31S-1000	1
18	477007	LAMP,ORANGE CLEARANCE 2"	2
19	477008	LAMP,RED,CLERANCE,2"	2
20	477009	LAMP,STOP	2
21	448021	LIGHT,LICENCE PLATE,HK	1
22	448017	CABLE,ARTIC RV W/7 PIN CONN.	1
23	448016	CHAIN SAFETY 3/8"X30" GR 43	2
24	448018	KIT,BATTERY BREAK-AWAY 42906K	1
25	448020	HARNESS,WIRING SIDE MAIN	2
26	448004	JACK, 8000 LB	1

DRIVELINE


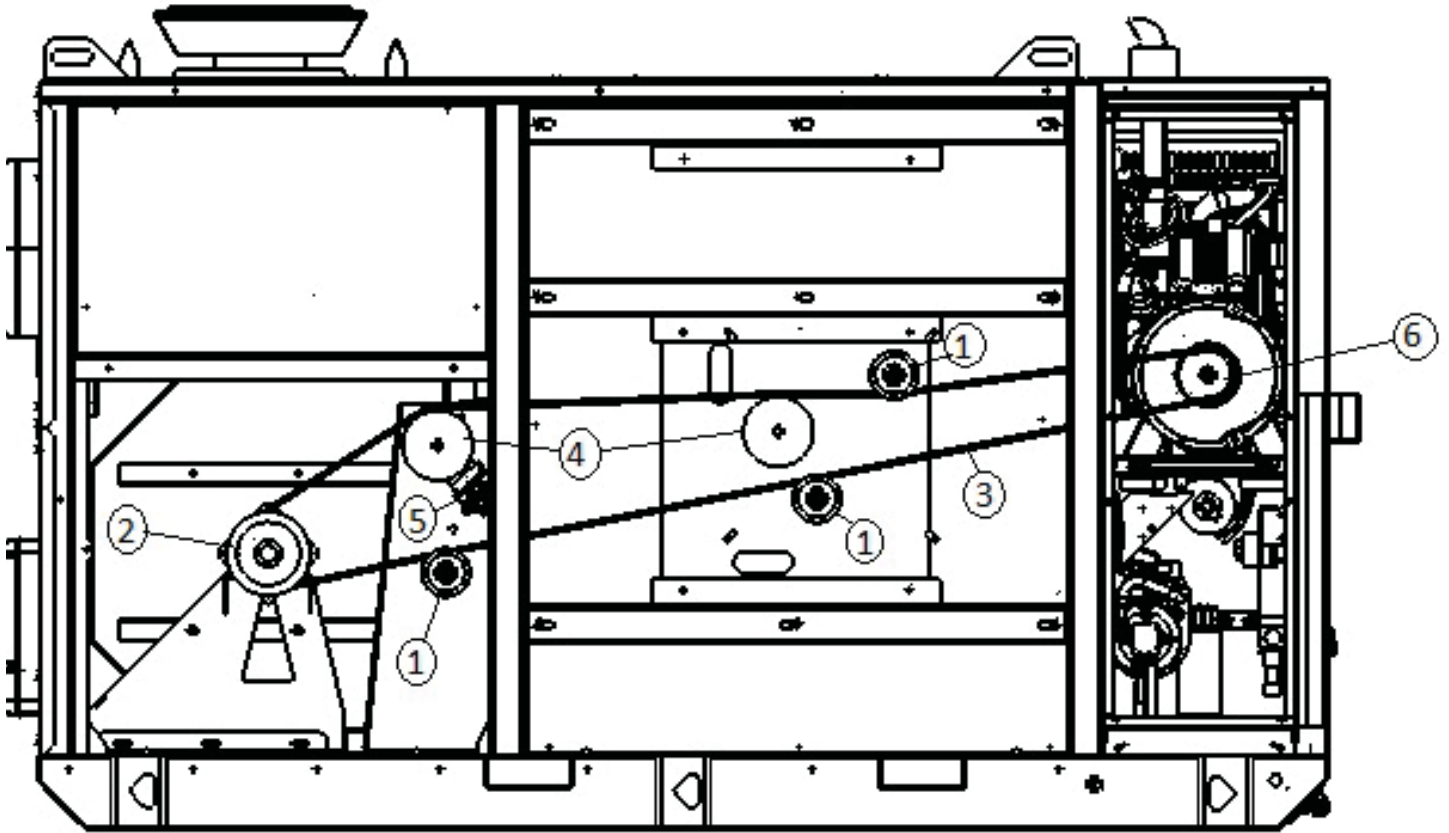


ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	460693	smooth Idler Pulley	3
2	460327	Blower Drive Pulley	1
3	460747	Double Drive Belt	1
4	460745	Idler Pulley, Grooved	2
5	460694	Belt Tensioner	1
6	460480	Clutch Assembly	1

NOTES



[illegible]

BLOWER

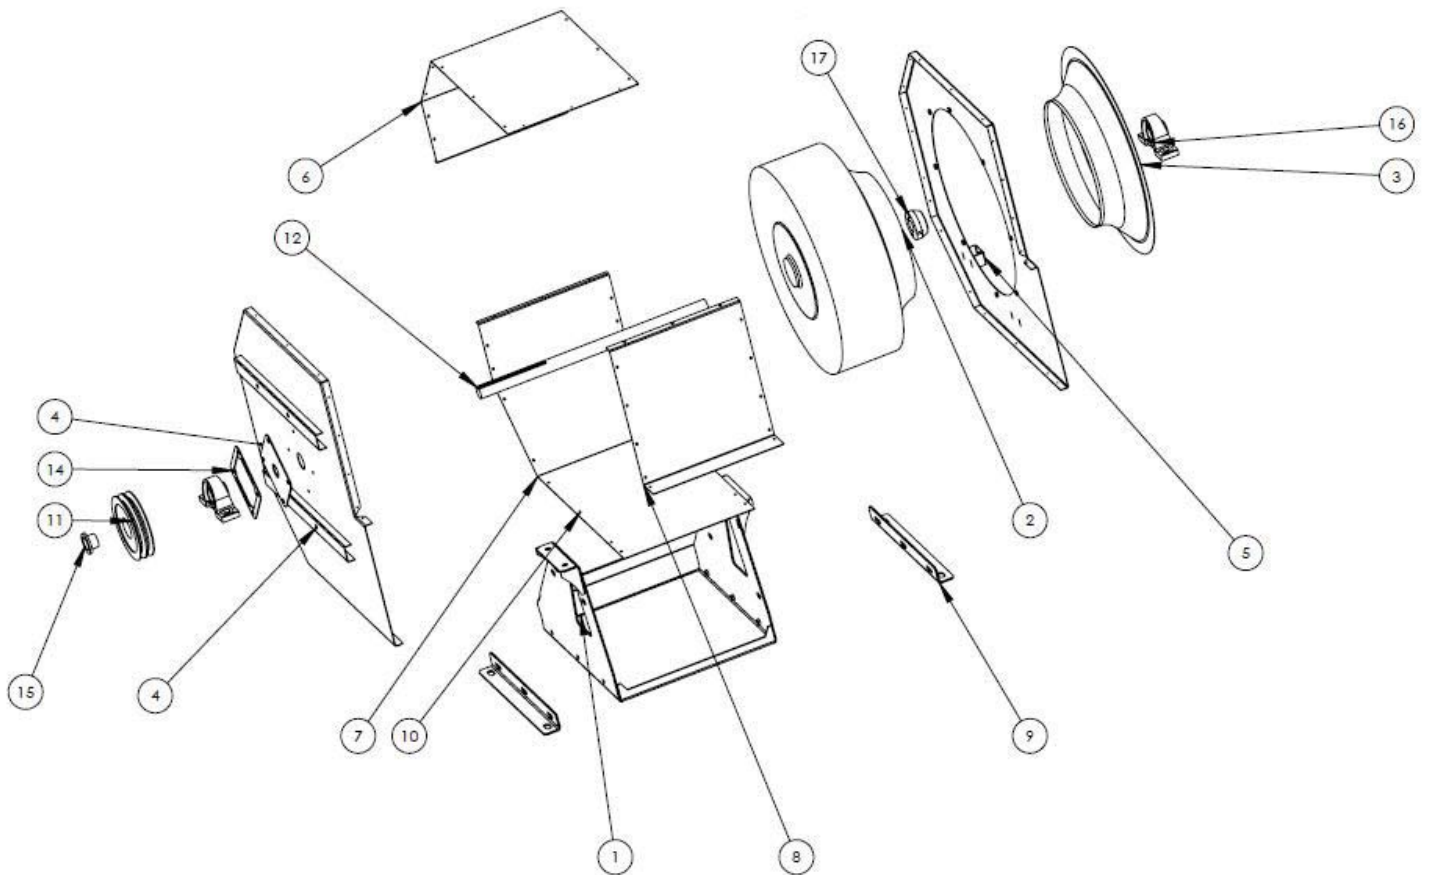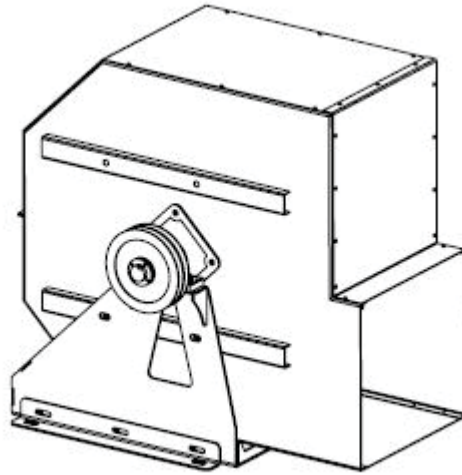



ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	460409	Assy,Wa,Blwr Mnt	1
2	460430	Impeller, Rosenberg	1
3	460431	Impeller, Rosenberg	1
4	460412	Assy,WA,RH BLWR Box	1
5	460416	Assy,WA,LH, Blwr Box	1
6	460421	Pnl, Duct Cover, Top	1
7	461344	PNL,Duct Cover, Btm	1
8	461343	PNL,Duct cover, Front	1
9	461285	BKT, Blower Mnt	2
10	119516	Screw,10-16x1 D&T Hex,ZP	1
11	460327	Pulley	1
12	460427	Shaft, IDF Blower	1
13	460428	SEAL, BLOWER SHAFT	1
14	460429	Pnl, Gasket Clamp	1
15	448263	BUSHING H 1.5	1
16	460749	ASSY, GREASELESS BRG	2
17	460853	Bushing, Taper Lock 1-1/2"	1

Heat Exchanger

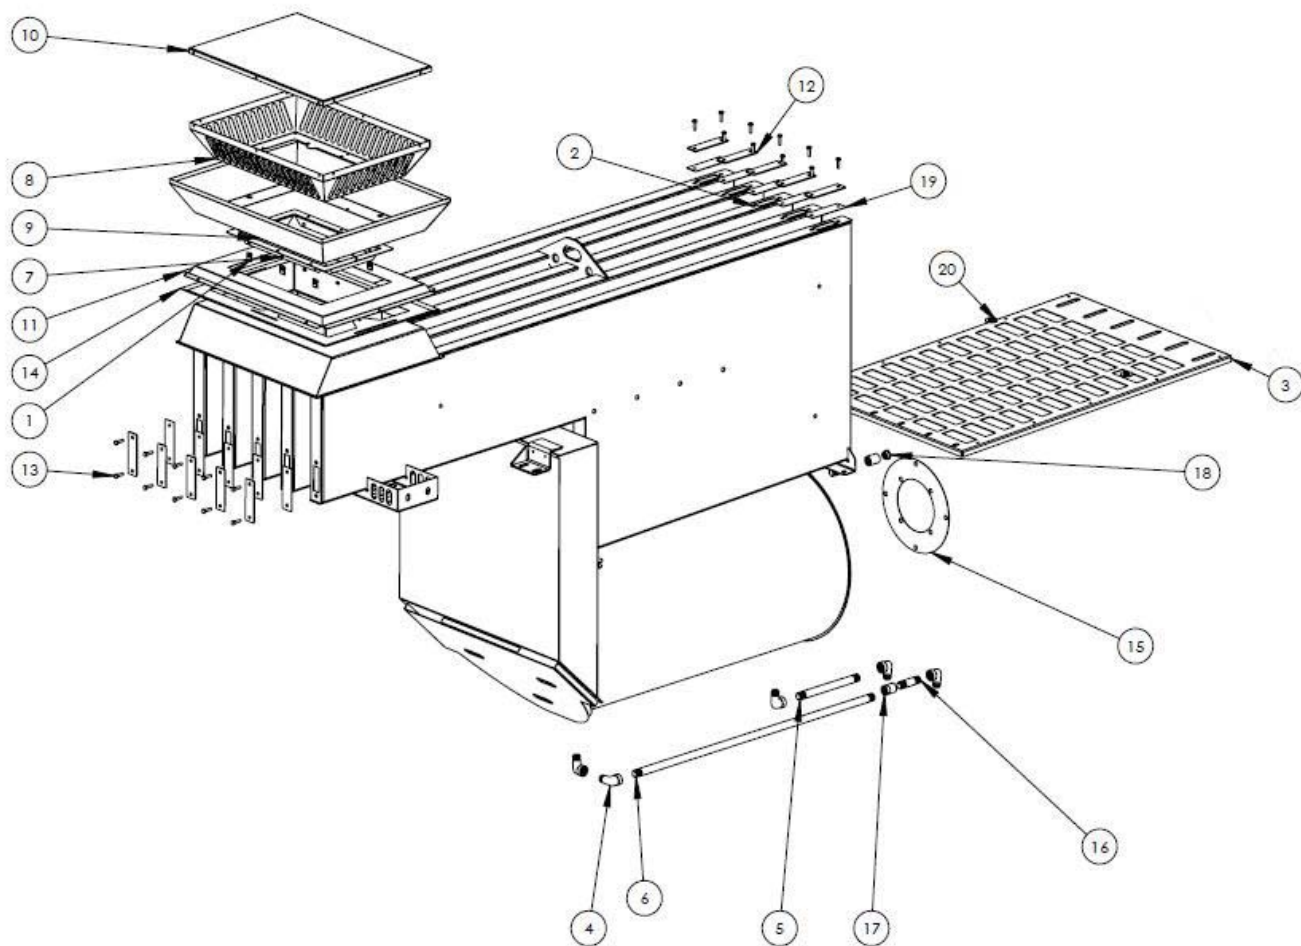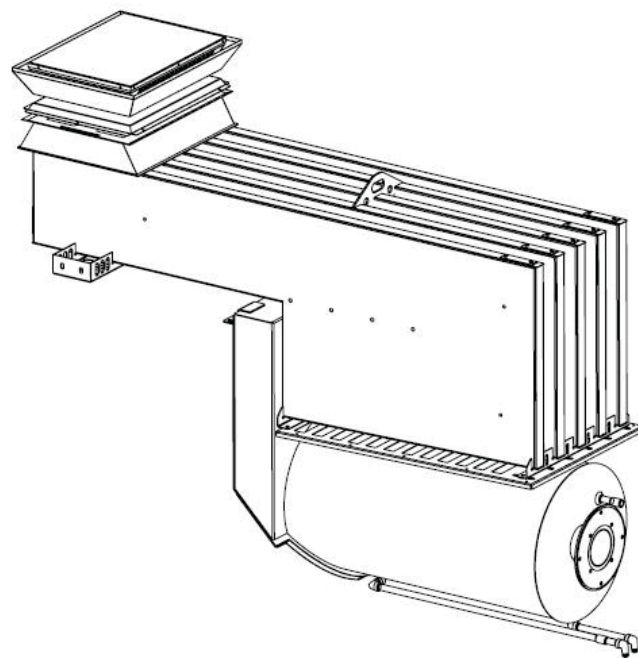


ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	460329	Nut, J-Clip, 1/4-20	6
2	A460983	ASSY,WA,HEX IDF	
3	460970	SHT, Baffle	
4	460314	Elbow, Street90, SS, 1/2NPT	
5	461337	NIPPLE,1/2NPTX9"L	
6	461288	NIPPLE,1/2NPTX36"L	
7	460947	BKT, Flu Transition	
8	460950	Bkt, IDF EXH Term	
9	460949	BKT, IDF Exh Term, Lower	
10	460951	Bkt, IDF Exh Term, Cover	
11	460948	BKT, IDF Exh Term, Lower	
12	460036	SHEET, COVER, CLEAN OUT	
13	461269	BOLT,SEEL 1/4"X1	
14	461190	SHT FORMED,EX MANIFOLD	
15	460408	GASKET, BURNER	
16	460315	NIPPLE, 1/2 NPTX 3", SS	
17	461336	COUPLING,1/2 NPT SS	
18	461339	SIGHT GLASS,1/2 NPT HEX	
19	461338	GASKET, CLEAN OUT	
20	461340	WASHER,SILICON 5/8 SCR	


Engine

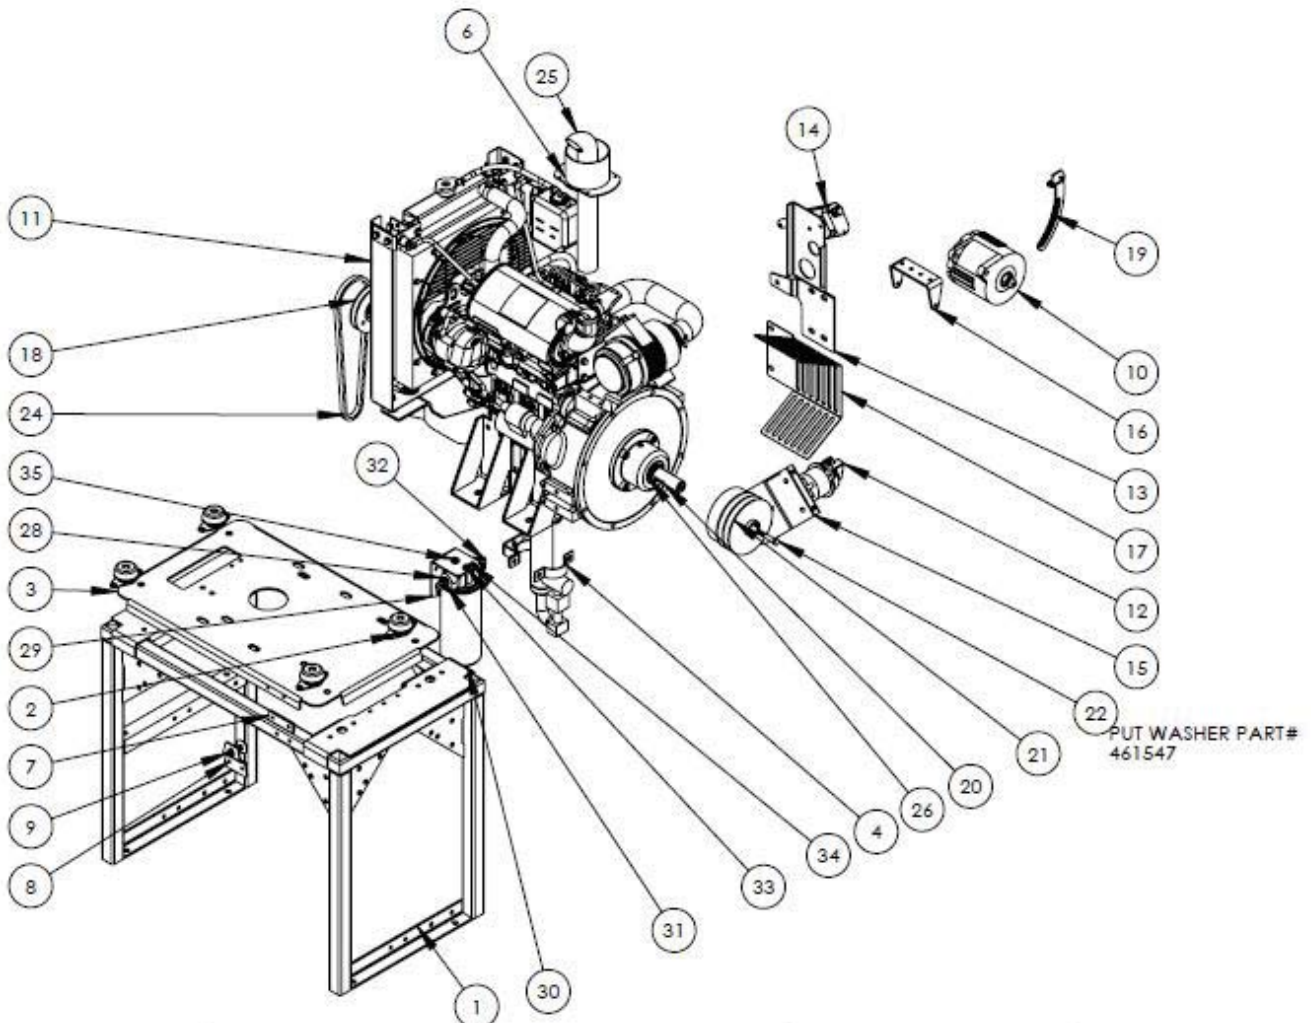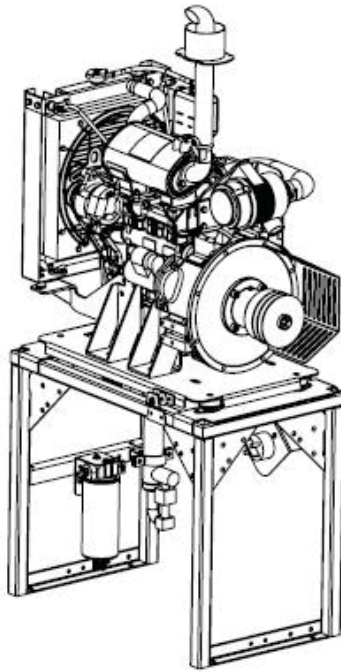

ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	A461226	ASSY,WA,ENG MNT	1
2	460611	Isolator	4
3	461276	PNL,Plate Eng Mnt	1
4	460305	FUEL PRE-HEATER	1
6	460142	Assy,WA, Eng Exh Collar	1
7	461281	Sht, UHMW, Torque Limit	1
8	461279	BKT,STOPPER PLT	1
9	461280	BOLT,STOPPER 3/8"X1 3/4	1
10	461476	Alternator,105A	1
11	461305	ENGINE, YANMAR	1
12	460463	Battery Disconnect Switch	1
13	461306	BKT,ACTUATOR IDF	1
14	461311	ACUATOR,IDF	1
15	461410	BKT,BATTERY MAIN SWITCH	1
16	461380	BKT, ALTERNATOR SUPPORT	1
17	461401	BKT,Belt guard YNMR	1
18	461405	PULLEY,ALTERNATOR DRIVE YNMR	1
19	461381	BKT, TIGHT ALTERNATOR ARM	1
20	461407	STUB SHAFT YMNR	1
21	460480	CLUTCH, Ogura	1
22	461549	SCREW, HEX, 3/8-24 UNF X 1.5"	1
24	461408	BELT, ALTERNATOR	1
25	461411	TUBE,EXHAUST EXTENSION YNMR	1
28	445161	FILTER HEAD	1
29	460486	BKT,Fuel Filter, IDF	1
30	445157	FUEL FILTER- P551000	1
31	441075	BUSHING, BRASS,1/2X1/4NPT	2
32	444007	1/4NPTx3/8,90°LOL	2
33	174990	WASHER, PL 5/16	2
34	174430	Washer, Spring,1/4	2
35	119511	Bolt, 1/4-20 x 3/4, Gr5,Zpl	2
36	461532	BOLT,HX 1/4"X2.5"	2
37	461533	BOLT,M8X15 ZP	2
38	461534	BOLT,M10X15 ZP	2
39	444054	BARB,90D 3/8"NPT X 1/2	1
40	460843	BARB,3/8"NPTX3/8	1
41	461548	BARB,90D 3/8 NPTX3/8	2
42	461547	Washer,1.5 ODX.375 ID THICK	1

Burner

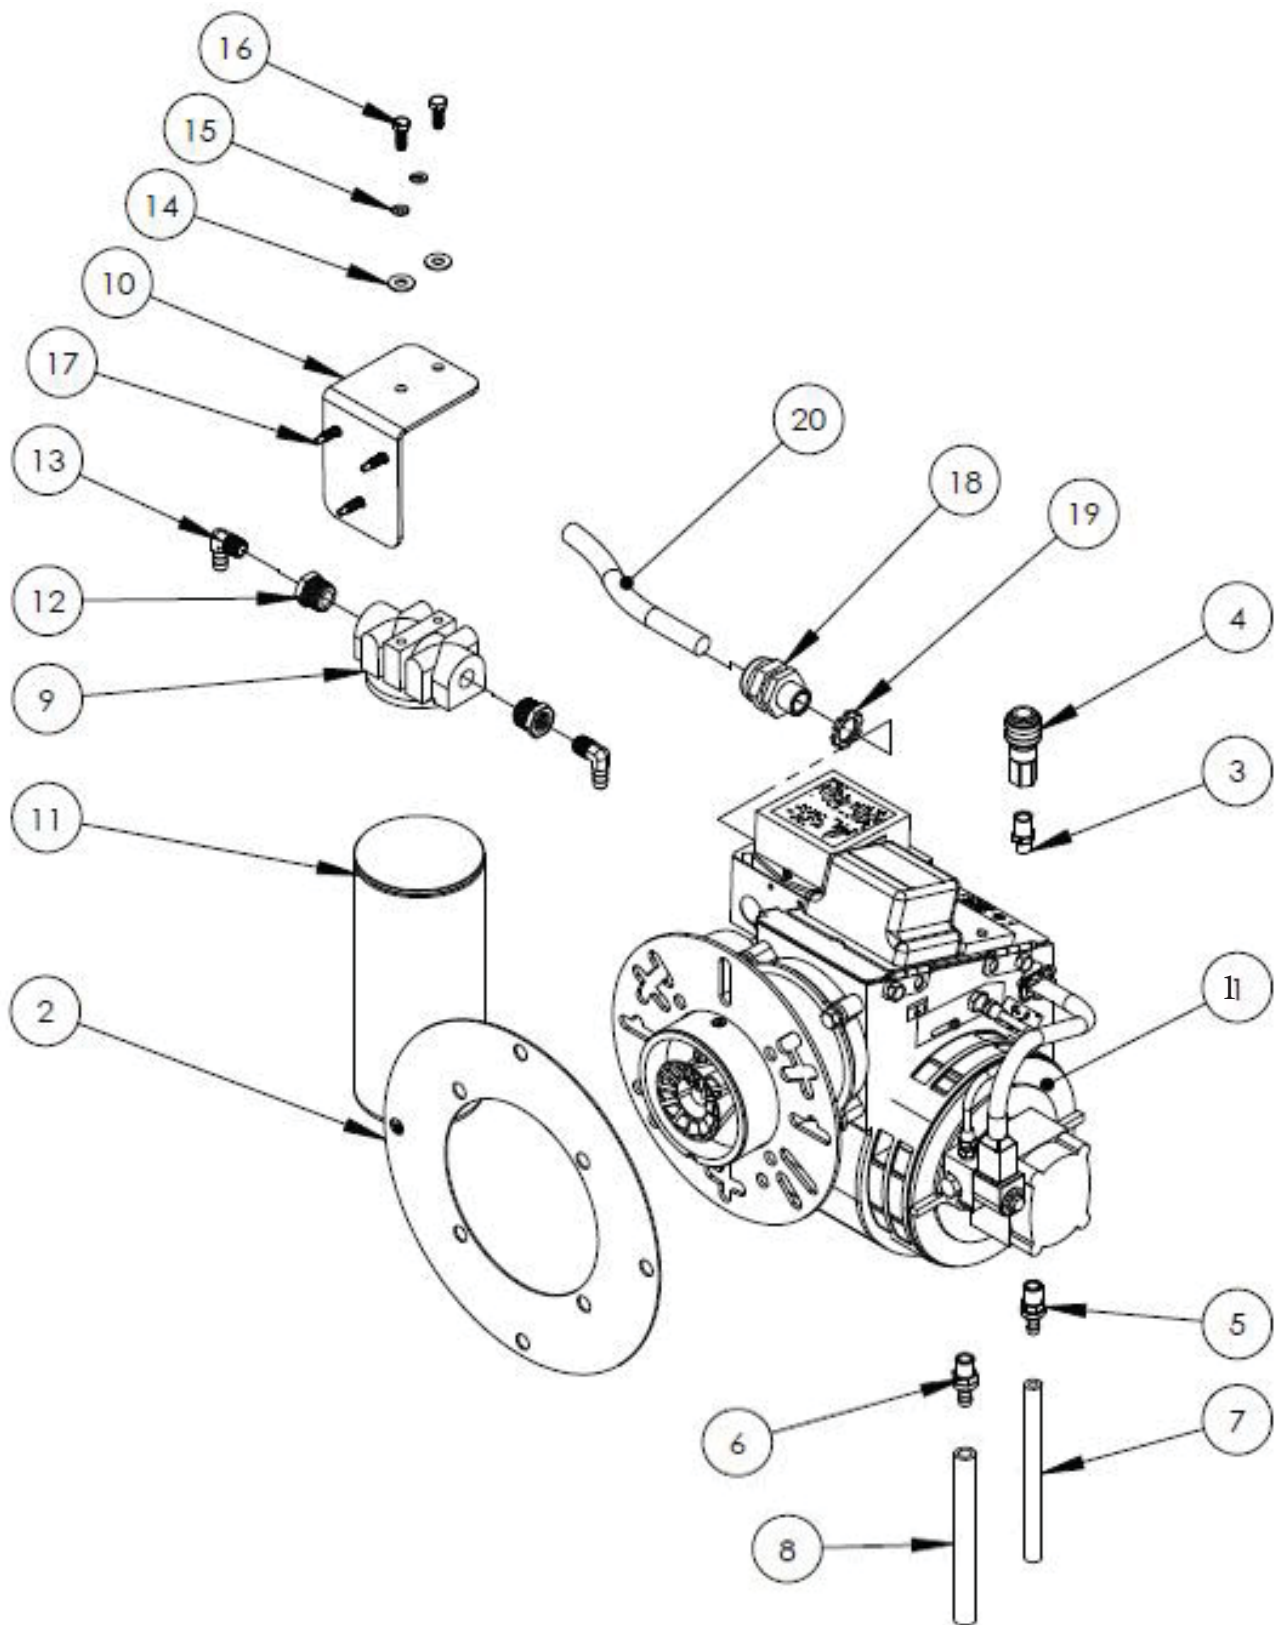


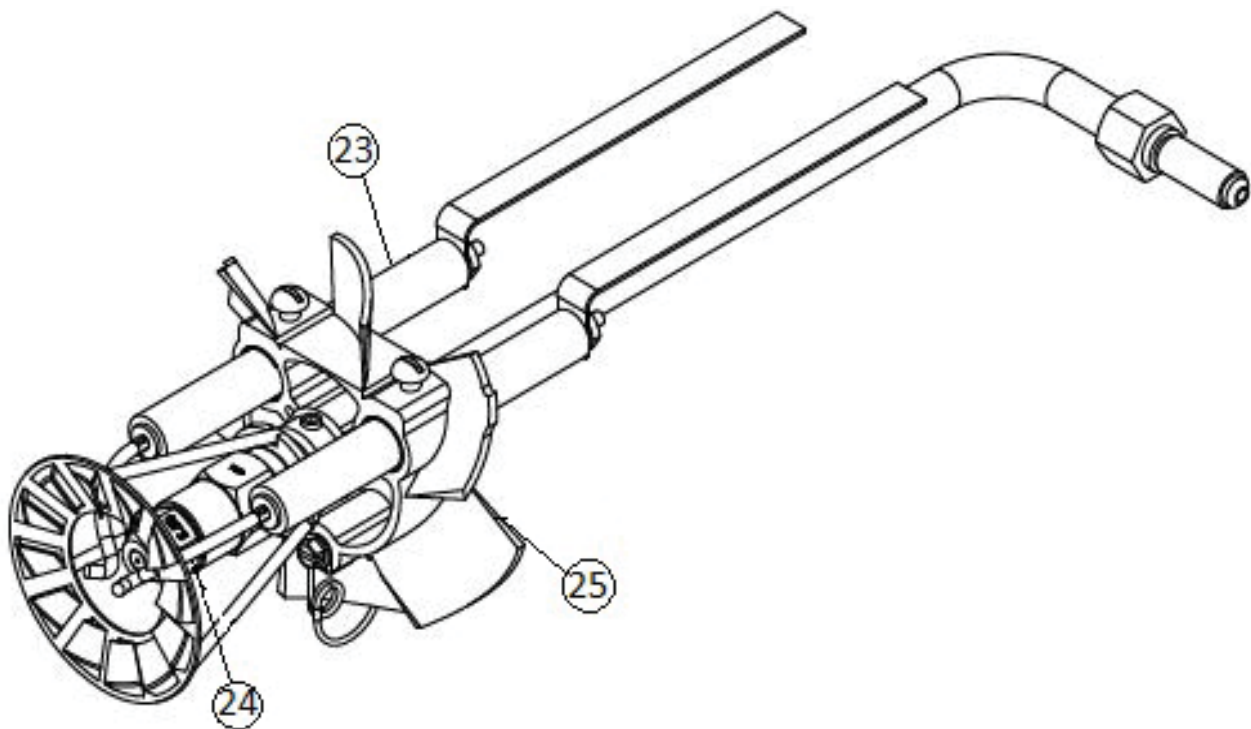


ITEM NO	PART NUMBER	DESCRIPTION	QTY.
1	460485	Burner Chasis, 12V	1
2	460408	Gasket, Burner	1
3	444814	ADAPTER,1/8NPTx1/4" MALE	1
4	444032	DISCONNECT, 1/4" FEMALE QUICK	1
5	444042	NIPPLE,1/4NPTx1/4" BRSS HOSE	1
6	448258	NIPPLE,1/4NPTx3/8" BRSS HOSE	1
7	442170	Hose, 1/4 LOL	6
8	442171	Hose, 3/8 LOL	6
9	445161	Filter Head	1
10	460486	BKT,Fuel Filter, IDF	1
11	445157	FUEL FILTER- P551000	1
12	441075	Bushing, Brass,1/2x1/4NPT	2
13	444007	1/4NPTx3/8,90°LOL	2
14	174990	WASHER, PL 5/16	2
15	174430	Washer, Spring,1/4	2
16	119511	Bolt,1/4UNCx3/4 ZP	2
17	228061	Screw,1/4x1"D&T	3
18	446260	CONNECTOR, 1/2" STRESS RELIEF	1
19	112510	NUT, LOCK CONDUIT 1/2 1704	1
20	446027	Cable, Sow,10-3	6
23	461055	electrode LHS/RHS	2
24	460708	nozzle, 5.50 GPH 80°A	1
25	460487	Burner Gun assembly	1

Service Parts

Item	Part #
Burner	
5.5 GPH 80°A Nozzle	460708
Left Electrode	461055
Right Electrode	461055
Cad cell	461057
Transformer	461053
Gap Guage Tool	461017
Primary Control	461056
Fuel Filter	445157
Burner Gasket	460408
Engine	
Oil Filter	461555
Fuel Filter Element	461556
Air Filter	461557
Water separator	461558
Alternator Belt	461477
Water Pump Belt	461559
Electric Fuel Pump	461560
Blower	
Drive Belt	460693
Clutch assembly	460480
Pillow Block Bearings	460749
High Limit switch (auto)	460434
High Limit Switch (manual)	460436
Trailer	
Tail Light (RED)	477009
Marker Light (Amber)	477007
Marker Light (red)	477008
Fuel Cap, Locking	461672
Fuel Cap, Non-Locking	461671
Fuel Sender	461063


Optional Accessories

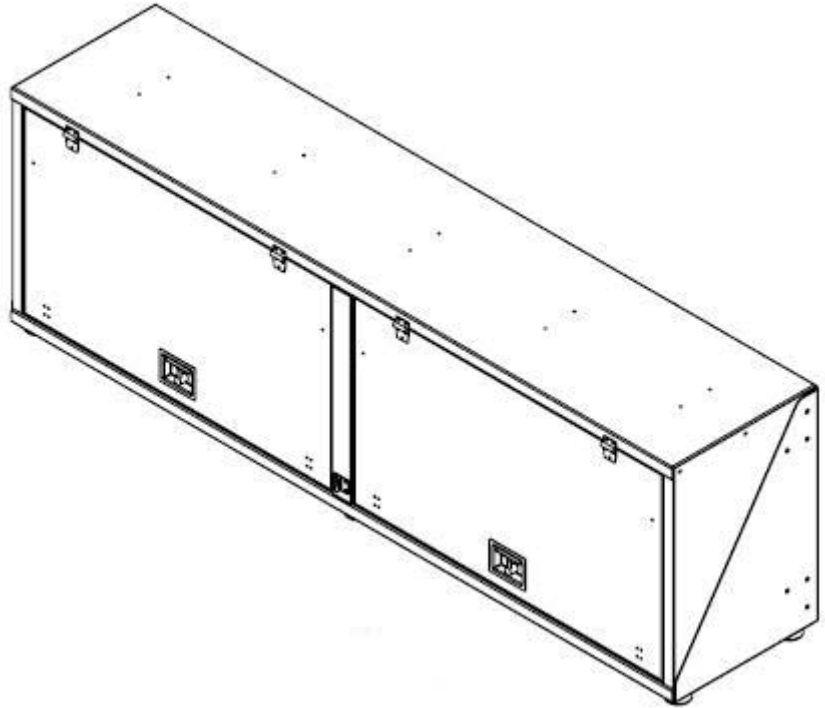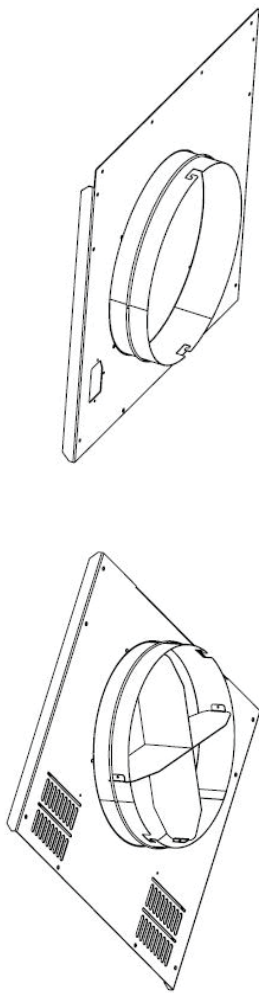

A461778	Remote Thermostat
A461487	Ducting Box
A461119	16" Supply Air outlet
A461120	16" Return Air outlet
A461428	20 " supply Air outlet
A461429	20" Return air outlet
A461382	24" Supply Air outlet
A461385	24" Return Air Outlet
458102	16"x 25' ducting
458109	20" x 25' ducting
458103	24" x 25' ducting


Schematics

IDF_POWER

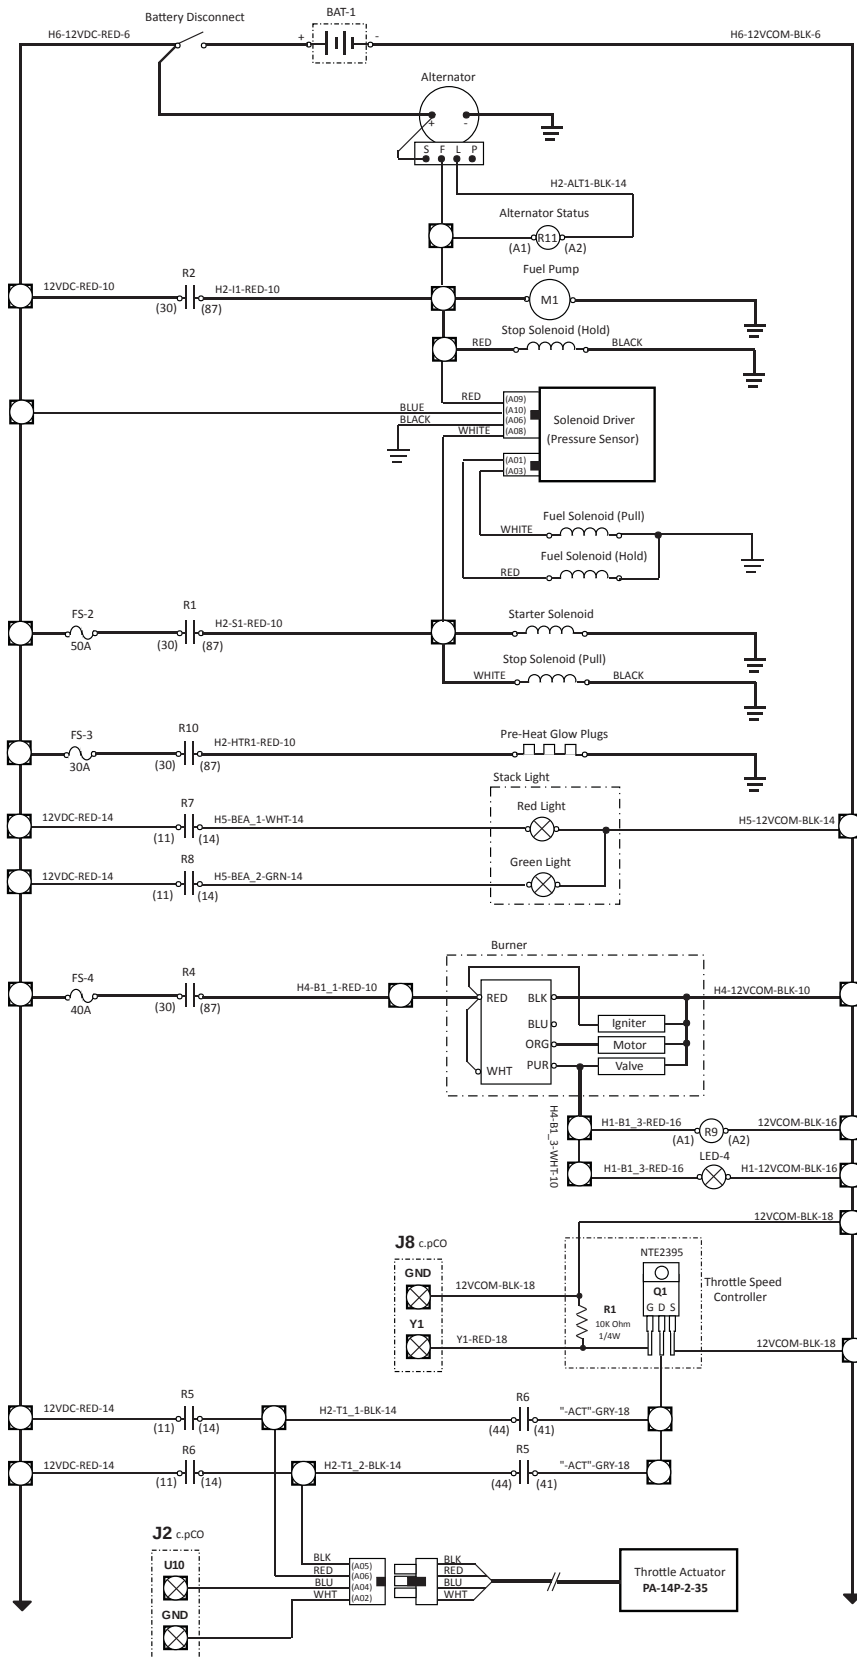


Schematic Legend		
Symbol	Device ID	Description
	FS-x	Fuse
	SW-x	Switch
	TB-x	PLC Terminal
	Rx	NO Relay Contact
	Rx	Relay Coil
	Sx	Solenoid
	Hx	Heater
	BAT-x	Battery
	Lx	Light
	TSH-x	High Temp SW
	TSL-x	Low Temp SW
	PSL-x	Low Pressure SW
	PSH-x	High Pressure SW
	ES-x	E-Stop
	TB-x	C/P Terminal

IDF_CONTROL

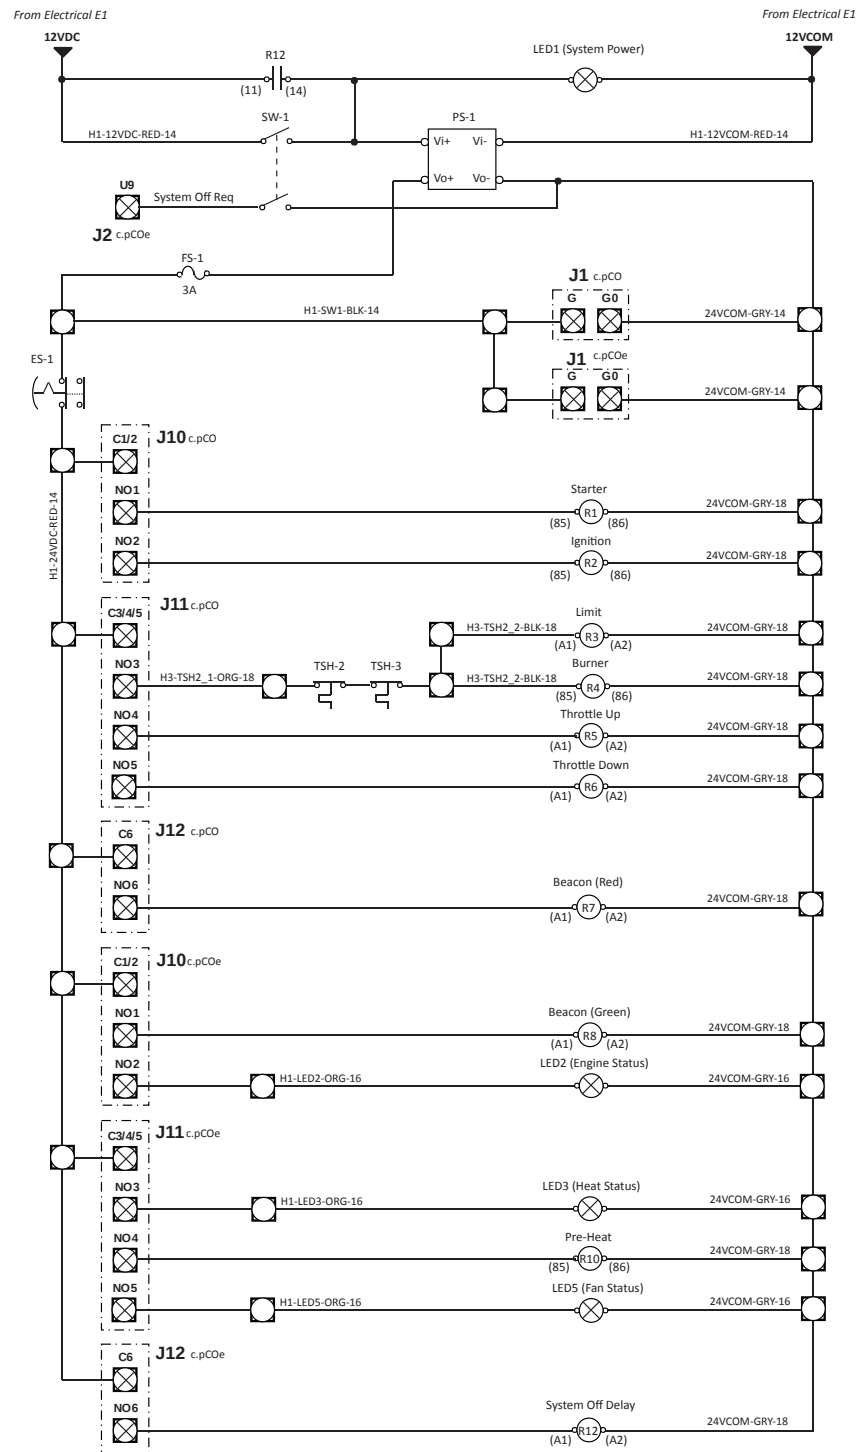


Schematic Legend		
Symbol	Device ID	Description
	FS-x	Fuse
	SW-x	Switch
	TB-x	PLC Terminal
	Rx	NO Relay Contact
	Rx	Relay Coil
	Sx	Solenoid
	Hx	Heater
	BAT-x	Battery
	Lx	Light
	TSH-x	High Temp SW
	TSL-x	Low Temp SW
	PSL-x	Low Pressure SW
	PSH-x	High Pressure SW
	ES-x	E-Stop
	TB-x	C/P Terminal

IDF_INPUTS

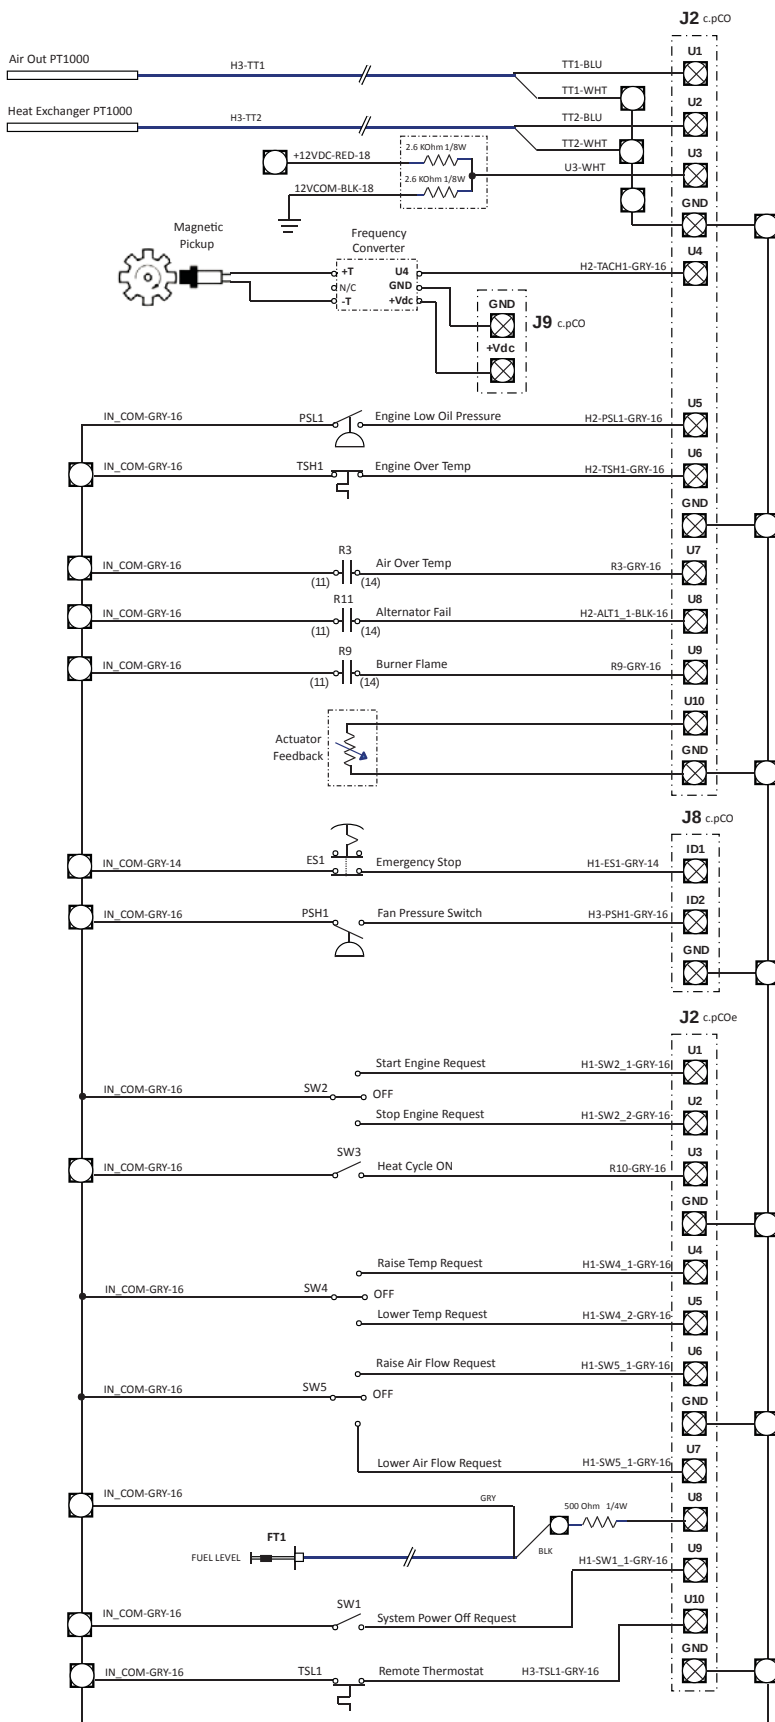


Schematic Legend		
Symbol	Device ID	Description
	FS-x	Fuse
	SW-x	Switch
	TB-x	PLC Terminal
	Rx	NO Relay Contact
	Rx	Relay Coil
	Sx	Solenoid
	Hx	Heater
	BAT-x	Battery
	Lx	Light
	TSH-x	High Temp SW
	TSL-x	Low Temp SW
	PSL-x	Low Pressure SW
	PSH-x	High Pressure SW
	ES-x	E-Stop
	TB-x	C/P Terminal

COMMUNICATION

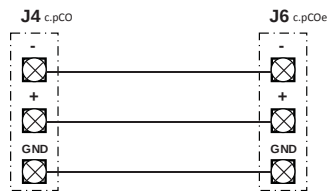

DISPLAY

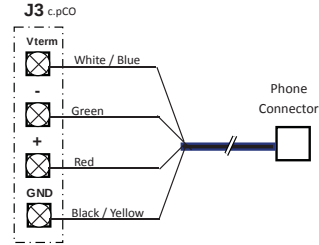



1205 SHERWIN RD
WINNIPEG, MANITOBA
CANADA R3H 0V3



WWW.HEAT-KING.CA



Support@tamarack-ind.com



1-800-661-0304



1-204-885-7557



HEATKINGTECH