

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Acer
Firmware Version: System C05, LAN D01, MCU C04
Model(s): PL6610, PL6510, PL6310W, PL6610T

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_1_0_0	8/27/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Ethernet control does not support status.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='PL6610')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='PL6610')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 2023, Model='PL6610')</code>

Control Commands (Serial)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
3DFormat	'Auto' 'Frame Sequential'	'Side by Side'	'Top and Bottom'
# 3DFormat example InterfaceName.Set('3DFormat', 'Auto')			
Command	Value	Value	
3DMode	'On'	'Off'	
# 3DMode example InterfaceName.Set('3DMode', 'On')			
Command	Value		
3DSyncInvert	None		
# 3DSyncInvert example InterfaceName.Set('3DSyncInvert', None)			
Command	Value	Value	Value
AspectRatio	'4:3'	'Letterbox'	'Native'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command	Value		
AutoImage	None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command	Value		
Freeze	None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command	Value	Value	Value
Input	'HDMI 1' 'VGA 2' 'HDBaseT' ¹	'HDMI 2' 'S-Video'	'VGA 1' 'Video'
# Input example InterfaceName.Set('Input', 'HDMI 1')			
Command	Value	Value	Value
MenuNavigation	'Up' 'Right'	'Down' 'Menu'	'Left' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value		
Mute	None		
# Mute example InterfaceName.Set('Mute', None)			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value	Value	
Volume	'Up'	'Down'	

```
# Volume example  
InterfaceName.Set('Volume', 'Up')
```

¹ Available for model PL6610T only.

Status Available (Serial)

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	
LampUsage	Hours	
# LampUsage example InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)		
Command	Value	Value
Power	'On'	'Off'
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		

Control Commands (Ethernet)

Format with Qualifier:

InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})

Format with Qualifier:

InterfaceName.Set(Command, Value)

Command 3DFormat	Value 'Auto' 'Frame Sequential'	Value 'Side by Side'	Value 'Top and Bottom'
# 3DFormat example InterfaceName.Set('3DFormat', 'Auto')			
Command 3DMode	Value 'On'	Value 'Off'	
# 3DMode example InterfaceName.Set('3DMode', 'On')			
Command 3DSyncInvert	Value None		
# 3DSyncInvert example InterfaceName.Set('3DSyncInvert', None)			
Command AspectRatio	Value '4:3'	Value 'Letterbox'	Value 'Native'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Freeze	Value None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command Input	Value 'HDMI 1' 'VGA 2' 'HDBaseT' ¹	Value 'HDMI 2' 'S-Video'	Value 'VGA 1' 'Video'
# Input example InterfaceName.Set('Input', 'HDMI 1')			
Command MenuNavigation	Value 'Up' 'Right'	Value 'Down' 'Menu'	Value 'Left' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command Mute	Value None		
# Mute example InterfaceName.Set('Mute', None)			
Command PowerOff	Value None		
# PowerOff example InterfaceName.Set('PowerOff', None)			
Command Volume	Value 'Up'	Value 'Down'	

```
# Volume example  
InterfaceName.Set('Volume', 'Up')
```

¹ Available for model PL6610T only.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

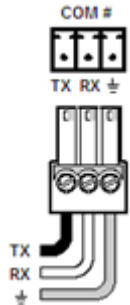

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

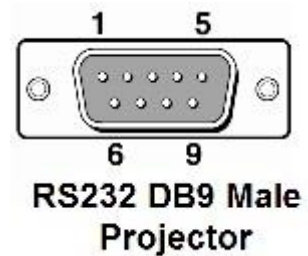

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet

Default Port: 2023

Logon Credentials No

Supported:

Multi-Connection Yes

Capabilities:

Port Changeability: Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

3D Format Auto	* 0 IR 060\x0D
3D Format Frame Sequential	* 0 IR 066\x0D
3D Format Side by Side	* 0 IR 062\x0D
3D Format Top and Bottom	* 0 IR 064\x0D
3D Mode Off	* 0 IR 057\x0D
3D Mode On	* 0 IR 056\x0D
3D Sync Invert None	* 0 IR 065\x0D
Aspect Ratio 4:3	* 0 IR 022\x0D
Aspect Ratio Letterbox	* 0 IR 040\x0D
Aspect Ratio Native	* 0 IR 041\x0D
Auto Image None	* 0 IR 014\x0D
Freeze None	* 0 IR 007\x0D
Input HDBaseT	* 0 IR 070\x0D
Input HDMI 1	* 0 IR 050\x0D
Input HDMI 2	* 0 IR 068\x0D
Input S-Video	* 0 IR 018\x0D
Input VGA 1	* 0 IR 015\x0D
Input VGA 2	* 0 IR 077\x0D
Input Video	* 0 IR 019\x0D
Menu Navigation Down	* 0 IR 010\x0D
Menu Navigation Enter	* 0 IR 013\x0D
Menu Navigation Left	* 0 IR 012\x0D
Menu Navigation Menu	* 0 IR 008\x0D
Menu Navigation Right	* 0 IR 011\x0D
Menu Navigation Up	* 0 IR 009\x0D
Mute None	* 0 IR 006\x0D
Volume Down	* 0 IR 024\x0D
Volume Up	* 0 IR 023\x0D

Appendix B. Update Commands (Serial)

Lamp Usage	* 0 Lamp\x0D
Power	* 0 Lamp ?\x0D

Appendix C. Set Commands (Ethernet)

3D Format Auto	* 0 IR 060\x0D
3D Format Frame Sequential	* 0 IR 066\x0D
3D Format Side by Side	* 0 IR 062\x0D
3D Format Top and Bottom	* 0 IR 064\x0D
3D Mode Off	* 0 IR 057\x0D
3D Mode On	* 0 IR 056\x0D
3D Sync Invert None	* 0 IR 065\x0D
Aspect Ratio 4:3	* 0 IR 022\x0D
Aspect Ratio Letterbox	* 0 IR 040\x0D
Aspect Ratio Native	* 0 IR 041\x0D
Auto Image None	* 0 IR 014\x0D
Freeze None	* 0 IR 007\x0D
Input HDBaseT	* 0 IR 070\x0D
Input HDMI 1	* 0 IR 050\x0D
Input HDMI 2	* 0 IR 068\x0D
Input S-Video	* 0 IR 018\x0D
Input VGA 1	* 0 IR 015\x0D
Input VGA 2	* 0 IR 077\x0D
Input Video	* 0 IR 019\x0D
Menu Navigation Down	* 0 IR 010\x0D
Menu Navigation Enter	* 0 IR 013\x0D
Menu Navigation Left	* 0 IR 012\x0D
Menu Navigation Menu	* 0 IR 008\x0D
Menu Navigation Right	* 0 IR 011\x0D
Menu Navigation Up	* 0 IR 009\x0D
Mute None	* 0 IR 006\x0D
Power Off None	* 0 IR 002\x0D
Volume Down	* 0 IR 024\x0D
Volume Up	* 0 IR 023\x0D