

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
 Manufacturer: Avocor
 Firmware Version: N/A
 Model(s): AVF-7510

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0001-b003	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	11/15/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AVF-7510')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AVF-7510')
```

EthernetClass

```
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='AVF-7510')
```

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Native' 'Letterbox'	Value 'Full Screen'	Value '4:3'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Native')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command AutoImage ¹	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command ExecutiveMode	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On')			
Command Input	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# Input example InterfaceName.Set('Input', 'VGA')			
Command MenuNavigation	Value 'Menu' 'Left' 'Exit'	Value 'Up' 'Right'	Value 'Down' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command PIP	Value 'Off' 'Large'	Value 'Small' 'Side by Side'	Value 'Medium' 'Portrait'

	'3 Windows'	'4 Windows'	
# PIP example InterfaceName.Set('PIP', 'Off')			
Command PIPIInput	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# PIPInput example InterfaceName.Set('PIPIInput', 'VGA')			
Command PIPIInputWindow2	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# PIPInputWindow2 example InterfaceName.Set('PIPIInputWindow2', 'VGA')			
Command PIPIInputWindow3	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# PIPInputWindow3 example InterfaceName.Set('PIPIInputWindow3', 'VGA')			
Command PIPPosition	Value 'Bottom Left' 'Top Right'	Value 'Bottom Right'	Value 'Top Left'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Bottom Left')			
Command PIPSwap	Value None		
# PIPSwap example InterfaceName.Set('PIPSwap', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command RCEmulation	Value 'Freeze'	Value 'Mute'	Value 'Blank Screen'
# RCEmulation example InterfaceName.Set('RCEmulation', 'Freeze')			

Command	Value
Volume	0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

¹ For VGA Input only

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Native' 'Letterbox'	Value 'Full Screen'	Value '4:3'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command ExecutiveMode	Value 'On'	Value 'Off'	
# ExecutiveMode examples InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 3'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2' 'HDMI 5 (Front)'

	'Display Port'	'IPC/OPS'	'Media Player (Win/Android)'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command PIP	Value 'Off' 'Large' '3 Windows'	Value 'Small' 'Side by Side' '4 Windows'	Value 'Medium' 'Portrait'
# PIP examples InterfaceName.Update('PIP') Value = InterfaceName.ReadStatus('PIP') InterfaceName.SubscribeStatus('PIP', None, FeedbackHandler)			
Command PIPIInput	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# PIPIInput examples InterfaceName.Update('PIPIInput') Value = InterfaceName.ReadStatus('PIPIInput') InterfaceName.SubscribeStatus('PIPIInput', None, FeedbackHandler)			
Command PIPIInputWindow2	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# PIPIInputWindow2 examples InterfaceName.Update('PIPIInputWindow2') Value = InterfaceName.ReadStatus('PIPIInputWindow2') InterfaceName.SubscribeStatus('PIPIInputWindow2', None, FeedbackHandler)			
Command PIPIInputWindow3	Value 'VGA' 'HDMI 3' 'Display Port'	Value 'HDMI 1' 'HDMI 4' 'IPC/OPS'	Value 'HDMI 2' 'HDMI 5 (Front)' 'Media Player (Win/Android)'
# PIPIInputWindow3 examples InterfaceName.Update('PIPIInputWindow3') Value = InterfaceName.ReadStatus('PIPIInputWindow3') InterfaceName.SubscribeStatus('PIPIInputWindow3', None, FeedbackHandler)			
Command PIPPosition	Value 'Bottom Left'	Value 'Bottom Right'	Value 'Top Left'

	'Top Right'	
# PIPPosition examples InterfaceName.Update('PIPPosition') Value = InterfaceName.ReadStatus('PIPPosition') InterfaceName.SubscribeStatus('PIPPosition', None, FeedbackHandler)		
Command	Value	Value
Power	'On'	'Off'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		
Command	Value	
Volume	0 to 100 in steps of 1	
# Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

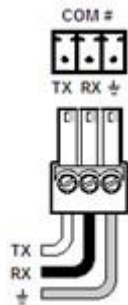

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

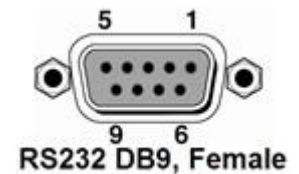

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials	No
Supported:	
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 4:3	\x07\x01\x02ASP\x02\x08\x0D
Aspect Ratio Full Screen	\x07\x01\x02ASP\x01\x08\x0D
Aspect Ratio Letterbox	\x07\x01\x02ASP\x03\x08\x0D
Aspect Ratio Native	\x07\x01\x02ASP\x00\x08\x0D
Audio Mute Off	\x07\x01\x02MUT\x00\x08\x0D
Audio Mute On	\x07\x01\x02MUT\x01\x08\x0D
Auto Image None	\x07\x01\x02ADJ\x00\x08\x0D
Executive Mode Off	\x07\x01\x02KLC\x00\x08\x0D
Executive Mode On	\x07\x01\x02KLC\x01\x08\x0D
Input Display Port	\x07\x01\x02MIN\x0D\x08\x0D
Input HDMI 1	\x07\x01\x02MIN\x09\x08\x0D
Input HDMI 2	\x07\x01\x02MIN\x0A\x08\x0D
Input HDMI 3	\x07\x01\x02MIN\x0B\x08\x0D
Input HDMI 4	\x07\x01\x02MIN\x0C\x08\x0D
Input HDMI 5 (Front)	\x07\x01\x02MIN\x11\x08\x0D
Input IPC/OPS	\x07\x01\x02MIN\x0E\x08\x0D
Input Media Player (Win/Android)	\x07\x01\x02MIN\x12\x08\x0D
Input VGA	\x07\x01\x02MIN\x00\x08\x0D
Menu Navigation Down	\x07\x01\x02RCU\x03\x08\x0D
Menu Navigation Enter	\x07\x01\x02RCU\x06\x08\x0D
Menu Navigation Exit	\x07\x01\x02RCU\x07\x08\x0D
Menu Navigation Left	\x07\x01\x02RCU\x04\x08\x0D
Menu Navigation Menu	\x07\x01\x02RCU\x00\x08\x0D
Menu Navigation Right	\x07\x01\x02RCU\x05\x08\x0D
Menu Navigation Up	\x07\x01\x02RCU\x02\x08\x0D
PIP 3 Windows	\x07\x01\x02PSC\x06\x08\x0D
PIP 4 Windows	\x07\x01\x02PSC\x07\x08\x0D
PIP Input Display Port	\x07\x01\x02PIN\x0D\x08\x0D
PIP Input HDMI 1	\x07\x01\x02PIN\x09\x08\x0D
PIP Input HDMI 2	\x07\x01\x02PIN\x0A\x08\x0D
PIP Input HDMI 3	\x07\x01\x02PIN\x0B\x08\x0D
PIP Input HDMI 4	\x07\x01\x02PIN\x0C\x08\x0D
PIP Input HDMI 5 (Front)	\x07\x01\x02PIN\x11\x08\x0D
PIP Input IPC/OPS	\x07\x01\x02PIN\x0E\x08\x0D
PIP Input Media Player (Win/Android)	\x07\x01\x02PIN\x12\x08\x0D
PIP Input VGA	\x07\x01\x02PIN\x00\x08\x0D
PIP Input Window 2 Display Port	\x07\x01\x02PIO\x0D\x08\x0D
PIP Input Window 2 HDMI 1	\x07\x01\x02PIO\x09\x08\x0D
PIP Input Window 2 HDMI 2	\x07\x01\x02PIO\x0A\x08\x0D
PIP Input Window 2 HDMI 3	\x07\x01\x02PIO\x0B\x08\x0D
PIP Input Window 2 HDMI 4	\x07\x01\x02PIO\x0C\x08\x0D
PIP Input Window 2 HDMI 5 (Front)	\x07\x01\x02PIO\x11\x08\x0D

PIP Input Window 2 IPC/OPS	\x07\x01\x02PIO\x0E\x08\x0D
PIP Input Window 2 Media Player (Win/Android)	\x07\x01\x02PIO\x12\x08\x0D
PIP Input Window 2 VGA	\x07\x01\x02PIO\x00\x08\x0D
PIP Input Window 3 Display Port	\x07\x01\x02PIP\x0D\x08\x0D
PIP Input Window 3 HDMI 1	\x07\x01\x02PIP\x09\x08\x0D
PIP Input Window 3 HDMI 2	\x07\x01\x02PIP\x0A\x08\x0D
PIP Input Window 3 HDMI 3	\x07\x01\x02PIP\x0B\x08\x0D
PIP Input Window 3 HDMI 4	\x07\x01\x02PIP\x0C\x08\x0D
PIP Input Window 3 HDMI 5 (Front)	\x07\x01\x02PIP\x11\x08\x0D
PIP Input Window 3 IPC/OPS	\x07\x01\x02PIP\x0E\x08\x0D
PIP Input Window 3 Media Player (Win/Android)	\x07\x01\x02PIP\x12\x08\x0D
PIP Input Window 3 VGA	\x07\x01\x02PIP\x00\x08\x0D
PIP Large	\x07\x01\x02PSC\x03\x08\x0D
PIP Medium	\x07\x01\x02PSC\x02\x08\x0D
PIP Off	\x07\x01\x02PSC\x00\x08\x0D
PIP Portrait	\x07\x01\x02PSC\x05\x08\x0D
PIP Position Bottom Left	\x07\x01\x02PPO\x00\x08\x0D
PIP Position Bottom Right	\x07\x01\x02PPO\x01\x08\x0D
PIP Position Top Left	\x07\x01\x02PPO\x02\x08\x0D
PIP Position Top Right	\x07\x01\x02PPO\x03\x08\x0D
PIP Side by Side	\x07\x01\x02PSC\x04\x08\x0D
PIP Small	\x07\x01\x02PSC\x01\x08\x0D
PIP Swap None	\x07\x01\x02SWA\x00\x08\x0D
Power Off	\x07\x01\x02POW\x00\x08\x0D
Power On	\x07\x01\x02POW\x01\x08\x0D
RC Emulation Blank Screen	\x07\x01\x02RCU(\x08\x0D
RC Emulation Freeze	\x07\x01\x02RCU\x18\x08\x0D
RC Emulation Mute	\x07\x01\x02RCU\x19\x08\x0D
Volume 0	\x07\x01\x02VOL\x00\x08\x0D
Volume 100	\x07\x01\x02VOLd\x08\x0D

Appendix B. Query Commands

Aspect Ratio	\x07\x01\x01ASP\x08\x0D
Audio Mute	\x07\x01\x01MUT\x08\x0D
Executive Mode	\x07\x01\x01KLC\x08\x0D
Input	\x07\x01\x01MIN\x08\x0D
PIP	\x07\x01\x01PSC\x08\x0D
PIP Input	\x07\x01\x01PIN\x08\x0D
PIP Input Window 2	\x07\x01\x01PIO\x08\x0D
PIP Input Window 3	\x07\x01\x01PIP\x08\x0D
PIP Position	\x07\x01\x01PPO\x08\x0D
Power	\x07\x01\x01POW\x08\x0D
Volume	\x07\x01\x01VOL\x08\x0D