

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Audio Processor
Manufacturer: Audac
Firmware Version: N/A
Model(s): M1

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.03.0000-b006	2.01.0001-b001	1.1.1

Version History

Module Version	Date	Notes
1_1_0_0	11/10/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

InputMute	'On' 'Off'
['Channel']	'1' – '7'
InputVolume ¹	-62 to 0 in steps of 1
['Channel']	'1' – '7'
MuteAll	None
OutputMute	'On' 'Off'
['Channel']	'1' – '4'
OutputVolume ¹	-62 to 0 in steps of 1
['Channel']	'1' – '4'
PresetRecall	None
PresetSave	None
Route	'On' 'Off'
['Input']	'1' – '7'
['Output']	'1' – '4'

¹ -62 corresponds to -70 dB and 0 corresponds to 0 dB.

Status Available:

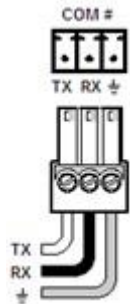
ConnectionStatus	'Connected' 'Disconnected'
InputMute	'On' 'Off'
['Channel']	'1' – '7'
InputVolume ¹	-62 to 0 in steps of 1
['Channel']	'1' – '7'
OutputMute	'On' 'Off'
['Channel']	'1' – '4'
OutputVolume ¹	-62 to 0 in steps of 1
['Channel']	'1' – '4'
Route ²	'On' 'Off'
['Input']	'1' – '7'
['Output']	'1' – '4'

¹ -62 corresponds to -70 dB and 0 corresponds to 0 dB.

² Update command does not require a qualifier to be passed in.

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device:**Serial communication:****Port Type:** RS-232**Baud Rate:** 9600**Data Bits:** 8**Parity:** None**Stop Bits:** One**Flow Control:** None**Pin Assignments Diagram**

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

**General Notes:**

Appendix A. Set Commands

Input Mute Channel 1 Off	\x02\x05\x00\x08\x01\x03
Input Mute Channel 1 On	\x02\x05\x00\x07\x01\x03
Input Mute Channel 2 Off	\x02\x05\x00\x08\x1b\x82\x03
Input Mute Channel 2 On	\x02\x05\x00\x07\x1b\x82\x03
Input Mute Channel 3 Off	\x02\x05\x00\x08\x1b\x81\x03
Input Mute Channel 3 On	\x02\x05\x00\x07\x1b\x81\x03
Input Mute Channel 4 Off	\x02\x05\x00\x08\x04\x03
Input Mute Channel 4 On	\x02\x05\x00\x07\x04\x03
Input Mute Channel 5 Off	\x02\x05\x00\x08\x05\x03
Input Mute Channel 5 On	\x02\x05\x00\x07\x05\x03
Input Mute Channel 6 Off	\x02\x05\x00\x08\x1b\x85\x03
Input Mute Channel 6 On	\x02\x05\x00\x07\x1b\x85\x03
Input Mute Channel 7 Off	\x02\x05\x00\x08\x07\x03
Input Mute Channel 7 On	\x02\x05\x00\x07\x07\x03
Input Volume Channel 1 0	\x02\x05\x00\x1b\x81\x01\x00\x03
Input Volume Channel 1 -62	\x02\x05\x00\x1b\x81\x01>\x03
Input Volume Channel 2 0	\x02\x05\x00\x1b\x81\x1b\x82\x00\x03
Input Volume Channel 2 -62	\x02\x05\x00\x1b\x81\x1b\x82>\x03
Input Volume Channel 3 0	\x02\x05\x00\x1b\x81\x1b\x81\x00\x03
Input Volume Channel 3 -62	\x02\x05\x00\x1b\x81\x1b\x81>\x03
Input Volume Channel 4 0	\x02\x05\x00\x1b\x81\x04\x00\x03
Input Volume Channel 4 -62	\x02\x05\x00\x1b\x81\x04>\x03
Input Volume Channel 5 0	\x02\x05\x00\x1b\x81\x05\x00\x03
Input Volume Channel 5 -62	\x02\x05\x00\x1b\x81\x05>\x03
Input Volume Channel 6 0	\x02\x05\x00\x1b\x81\x1b\x85\x00\x03
Input Volume Channel 6 -62	\x02\x05\x00\x1b\x81\x1b\x85>\x03
Input Volume Channel 7 0	\x02\x05\x00\x1b\x81\x07\x00\x03
Input Volume Channel 7 -62	\x02\x05\x00\x1b\x81\x07>\x03
Output Mute Channel 1 Off	\x02\x05\x00\x0f\x01\x03
Output Mute Channel 1 On	\x02\x05\x00\x0e\x01\x03
Output Mute Channel 2 Off	\x02\x05\x00\x0f\x1b\x82\x03
Output Mute Channel 2 On	\x02\x05\x00\x0e\x1b\x82\x03
Output Mute Channel 3 Off	\x02\x05\x00\x0f\x1b\x81\x03
Output Mute Channel 3 On	\x02\x05\x00\x0e\x1b\x81\x03
Output Mute Channel 4 Off	\x02\x05\x00\x0f\x04\x03
Output Mute Channel 4 On	\x02\x05\x00\x0e\x04\x03
Output Volume Channel 1 0	\x02\x05\x00\x04\x01\x00\x03
Output Volume Channel 1 -62	\x02\x05\x00\x04\x01>\x03
Output Volume Channel 2 0	\x02\x05\x00\x04\x1b\x82\x00\x03
Output Volume Channel 2 -62	\x02\x05\x00\x04\x1b\x82>\x03
Output Volume Channel 3 0	\x02\x05\x00\x04\x1b\x81\x00\x03
Output Volume Channel 3 -62	\x02\x05\x00\x04\x1b\x81>\x03
Output Volume Channel 4 0	\x02\x05\x00\x04\x04\x00\x03
Output Volume Channel 4 -62	\x02\x05\x00\x04\x04>\x03

Global Scripter Module Communication Sheet

Route Output 1 Input 1 Off	\x02\x05\x00\x05\x01\x01\x00\x03
Route Output 1 Input 1 On	\x02\x05\x00\x05\x01\x01\x01\x03
Route Output 1 Input 2 Off	\x02\x05\x00\x05\x1b\x81\x01\x00\x03
Route Output 1 Input 2 On	\x02\x05\x00\x05\x1b\x81\x01\x01\x03
Route Output 1 Input 3 Off	\x02\x05\x00\x05\x1b\x82\x01\x00\x03
Route Output 1 Input 3 On	\x02\x05\x00\x05\x1b\x82\x01\x01\x03
Route Output 1 Input 4 Off	\x02\x05\x00\x05\x04\x01\x00\x03
Route Output 1 Input 4 On	\x02\x05\x00\x05\x04\x01\x01\x03
Route Output 1 Input 5 Off	\x02\x05\x00\x05\x05\x01\x00\x03
Route Output 1 Input 5 On	\x02\x05\x00\x05\x05\x01\x01\x03
Route Output 1 Input 6 Off	\x02\x05\x00\x05\x1b\x85\x01\x00\x03
Route Output 1 Input 6 On	\x02\x05\x00\x05\x1b\x85\x01\x01\x03
Route Output 1 Input 7 Off	\x02\x05\x00\x05\x07\x01\x00\x03
Route Output 1 Input 7 On	\x02\x05\x00\x05\x07\x01\x01\x03
Route Output 2 Input 1 Off	\x02\x05\x00\x05\x01\x1b\x81\x00\x03
Route Output 2 Input 1 On	\x02\x05\x00\x05\x01\x1b\x81\x01\x03
Route Output 2 Input 2 Off	\x02\x05\x00\x05\x1b\x81\x1b\x81\x00\x03
Route Output 2 Input 2 On	\x02\x05\x00\x05\x1b\x81\x1b\x81\x01\x03
Route Output 2 Input 3 Off	\x02\x05\x00\x05\x1b\x82\x1b\x81\x00\x03
Route Output 2 Input 3 On	\x02\x05\x00\x05\x1b\x82\x1b\x81\x01\x03
Route Output 2 Input 4 Off	\x02\x05\x00\x05\x04\x1b\x81\x00\x03
Route Output 2 Input 4 On	\x02\x05\x00\x05\x04\x1b\x81\x01\x03
Route Output 2 Input 5 Off	\x02\x05\x00\x05\x05\x1b\x81\x00\x03
Route Output 2 Input 5 On	\x02\x05\x00\x05\x05\x1b\x81\x01\x03
Route Output 2 Input 6 Off	\x02\x05\x00\x05\x1b\x85\x1b\x81\x00\x03
Route Output 2 Input 6 On	\x02\x05\x00\x05\x1b\x85\x1b\x81\x01\x03
Route Output 2 Input 7 Off	\x02\x05\x00\x05\x07\x1b\x81\x00\x03
Route Output 2 Input 7 On	\x02\x05\x00\x05\x07\x1b\x81\x01\x03
Route Output 3 Input 1 Off	\x02\x05\x00\x05\x01\x1b\x82\x00\x03
Route Output 3 Input 1 On	\x02\x05\x00\x05\x01\x1b\x82\x01\x03
Route Output 3 Input 2 Off	\x02\x05\x00\x05\x1b\x81\x1b\x82\x00\x03
Route Output 3 Input 2 On	\x02\x05\x00\x05\x1b\x81\x1b\x82\x01\x03
Route Output 3 Input 3 Off	\x02\x05\x00\x05\x1b\x82\x1b\x82\x00\x03
Route Output 3 Input 3 On	\x02\x05\x00\x05\x1b\x82\x1b\x82\x01\x03
Route Output 3 Input 4 Off	\x02\x05\x00\x05\x04\x1b\x82\x00\x03
Route Output 3 Input 4 On	\x02\x05\x00\x05\x04\x1b\x82\x01\x03
Route Output 3 Input 5 Off	\x02\x05\x00\x05\x05\x1b\x82\x00\x03
Route Output 3 Input 5 On	\x02\x05\x00\x05\x05\x1b\x82\x01\x03
Route Output 3 Input 6 Off	\x02\x05\x00\x05\x1b\x85\x1b\x82\x00\x03
Route Output 3 Input 6 On	\x02\x05\x00\x05\x1b\x85\x1b\x82\x01\x03
Route Output 3 Input 7 Off	\x02\x05\x00\x05\x07\x1b\x82\x00\x03
Route Output 3 Input 7 On	\x02\x05\x00\x05\x07\x1b\x82\x01\x03
Route Output 4 Input 1 Off	\x02\x05\x00\x05\x01\x04\x00\x03
Route Output 4 Input 1 On	\x02\x05\x00\x05\x01\x04\x01\x03
Route Output 4 Input 2 Off	\x02\x05\x00\x05\x1b\x81\x04\x00\x03
Route Output 4 Input 2 On	\x02\x05\x00\x05\x1b\x81\x04\x01\x03
Route Output 4 Input 3 Off	\x02\x05\x00\x05\x1b\x82\x04\x00\x03
Route Output 4 Input 3 On	\x02\x05\x00\x05\x1b\x82\x04\x01\x03

Route Output 4 Input 4 Off	\x02\x05\x00\x05\x04\x04\x00\x03
Route Output 4 Input 4 On	\x02\x05\x00\x05\x04\x04\x01\x03
Route Output 4 Input 5 Off	\x02\x05\x00\x05\x05\x04\x00\x03
Route Output 4 Input 5 On	\x02\x05\x00\x05\x05\x04\x01\x03
Route Output 4 Input 6 Off	\x02\x05\x00\x05\x1b\x85\x04\x00\x03
Route Output 4 Input 6 On	\x02\x05\x00\x05\x1b\x85\x04\x01\x03
Route Output 4 Input 7 Off	\x02\x05\x00\x05\x07\x04\x00\x03
Route Output 4 Input 7 On	\x02\x05\x00\x05\x07\x04\x01\x03

Appendix B. Query Commands

Input Mute Channel	\x02\x05\x00\x1d\x03
Input Volume Channel	\x02\x05\x00\x1a\x03