

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: AJA
Firmware Version: N/A
Model(s): RovoCam

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	1/8/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. Device ID ranges from '1' to '7' or 'Broadcast'. When DeviceID is set to Broadcast module becomes unidirectional. Default value is set to '1'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RovoCam')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RovoCam')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AutoExposure	Value 'Manual' 'Iris'	Value 'Full Auto' 'Bright'	Value 'Shutter'
# AutoExposure example InterfaceName.Set('AutoExposure', 'Manual')			
Command AutoFocus	Value 'On'	Value 'Off'	
# AutoFocus example InterfaceName.Set('AutoFocus', 'On')			
Command BacklightMode	Value 'On'	Value 'Off'	
# BacklightMode example InterfaceName.Set('BacklightMode', 'On')			
Command Focus	Value 'Far'	Value 'Near'	Value 'Stop'
Qualifier Key 'Focus Speed'	Qualifier Value 0 to 7 in steps of 1		
# Focus example InterfaceName.Set('Focus', 'Far', {'Focus Speed': 7})			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Gain	Value 'Up'	Value 'Down'	Value 'Reset'
# Gain example InterfaceName.Set('Gain', 'Up')			
Command InfraredMode	Value 'On'	Value 'Off'	
# InfraredMode example InterfaceName.Set('InfraredMode', 'On')			
Command Iris	Value 'Up'	Value 'Down'	Value 'Reset'
# Iris example			

InterfaceName.Set('Iris', 'Up')			
Command Mute	Value 'On'	Value 'Off'	
# Mute example InterfaceName.Set('Mute', 'On')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command PresetRecall	Value '1' – '16'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '16'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command Shutter	Value 'Reset'	Value 'Up'	Value 'Down'
# Shutter example InterfaceName.Set('Shutter', 'Reset')			
Command WhiteBalance	Value 'Auto' 'One Push' 'One Push Trigger' 'Sodium Lamp'	Value 'Indoor' 'ATW' 'Outdoor Auto' 'Sodium Lamp Outdoor'	Value 'Outdoor' 'Manual' 'Sodium Lamp Auto'
# WhiteBalance example InterfaceName.Set('WhiteBalance', 'Auto')			
Command Zoom	Value 'Tele'	Value 'Wide'	Value 'Stop'
Qualifier Key 'Zoom Speed'	Qualifier Value 0 to 7 in steps of 1		
# Zoom example InterfaceName.Set('Zoom', 'Tele', {'Zoom Speed': 7})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AutoExposure	Value 'Manual' 'Iris'	Value 'Full Auto' 'Bright'	Value 'Shutter'
# AutoExposure examples InterfaceName.Update('AutoExposure') Value = InterfaceName.ReadStatus('AutoExposure') InterfaceName.SubscribeStatus('AutoExposure', None, FeedbackHandler)			
Command AutoFocus	Value 'On'	Value 'Off'	
# AutoFocus examples InterfaceName.Update('AutoFocus') Value = InterfaceName.ReadStatus('AutoFocus') InterfaceName.SubscribeStatus('AutoFocus', None, FeedbackHandler)			
Command BacklightMode	Value 'On'	Value 'Off'	
# BacklightMode examples InterfaceName.Update('BacklightMode') Value = InterfaceName.ReadStatus('BacklightMode') InterfaceName.SubscribeStatus('BacklightMode', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze')			

InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command	Value	Value	
InfraredMode	'On'	'Off'	
# InfraredMode examples InterfaceName.Update('InfraredMode') Value = InterfaceName.ReadStatus('InfraredMode') InterfaceName.SubscribeStatus('InfraredMode', None, FeedbackHandler)			
Command	Value	Value	
Mute	'On'	'Off'	
# Mute examples InterfaceName.Update('Mute') Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value	Value	Value
WhiteBalance	'Auto'	'Indoor'	'Outdoor'
	'One Push'	'ATW'	'Manual'
	'Outdoor Auto'	'Sodium Lamp Auto'	'Sodium Lamp'
	'Sodium Lamp Outdoor'		
# WhiteBalance examples InterfaceName.Update('WhiteBalance') Value = InterfaceName.ReadStatus('WhiteBalance') InterfaceName.SubscribeStatus('WhiteBalance', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to 3.5mm TRS connector

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

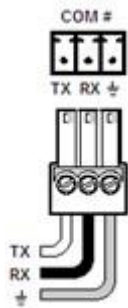

Signal	Main Cable	Pin	Signal
TxD	→	R	RxD
RxD	←	T	TxD
GND	→	S	GND

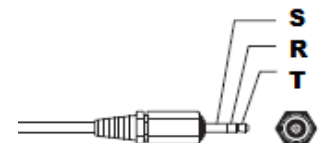

Appendix A. Set Commands

Auto Exposure Bright	\x81\x01\x049\x0D\xFF
Auto Exposure Full Auto	\x81\x01\x049\x00\xFF
Auto Exposure Iris	\x81\x01\x049\x0B\xFF
Auto Exposure Manual	\x81\x01\x049\x03\xFF
Auto Exposure Shutter	\x81\x01\x049\x0A\xFF
Auto Focus Off	\x81\x01\x048\x03\xFF
Auto Focus On	\x81\x01\x048\x02\xFF
Backlight Mode Off	\x81\x01\x043\x03\xFF
Backlight Mode On	\x81\x01\x043\x02\xFF
Focus Far Focus Speed 0	\x81\x01\x04\x08 \xFF
Focus Near Focus Speed 0	\x81\x01\x04\x080\xFF
Focus Stop Focus Speed 0	\x81\x01\x04\x08\x00\xFF
Focus Far Focus Speed 7	\x81\x01\x04\x08'\xFF
Focus Near Focus Speed 7	\x81\x01\x04\x087\xFF
Focus Stop Focus Speed 7	\x81\x01\x04\x08\x00\xFF
Freeze Off	\x81\x01\x04b\x03\xFF
Freeze On	\x81\x01\x04b\x02\xFF
Gain Down	\x81\x01\x04\x0C\x03\xFF
Gain Reset	\x81\x01\x04\x0C\x00\xFF
Gain Up	\x81\x01\x04\x0C\x02\xFF
Infrared Mode Off	\x81\x01\x04Q\x03\xFF
Infrared Mode On	\x81\x01\x04Q\x02\xFF
Iris Down	\x81\x01\x04\x0B\x03\xFF
Iris Reset	\x81\x01\x04\x0B\x00\xFF
Iris Up	\x81\x01\x04\x0B\x02\xFF
Mute Off	\x81\x01\x04u\x03\xFF
Mute On	\x81\x01\x04u\x02\xFF
Power Off	\x81\x01\x04\x00\x03\xFF
Power On	\x81\x01\x04\x00\x02\xFF
Preset Recall 1	\x81\x01\x04?\x02\x00\xFF
Preset Recall 16	\x81\x01\x04?\x02\x0F\xFF
Preset Save 1	\x81\x01\x04?\x01\x00\xFF
Preset Save 16	\x81\x01\x04?\x01\x0F\xFF
Shutter Down	\x81\x01\x04\x0A\x03\xFF
Shutter Reset	\x81\x01\x04\x0A\x00\xFF
Shutter Up	\x81\x01\x04\x0A\x02\xFF

White Balance ATW	\x81\x01\x045\x04\xff
White Balance Auto	\x81\x01\x045\x00\xff
White Balance Indoor	\x81\x01\x045\x01\xff
White Balance Manual	\x81\x01\x045\x05\xff
White Balance One Push	\x81\x01\x045\x03\xff
White Balance One Push Trigger	\x81\x01\x04\x10\x05\xff
White Balance Outdoor	\x81\x01\x045\x02\xff
White Balance Outdoor Auto	\x81\x01\x045\x06\xff
White Balance Sodium Lamp	\x81\x01\x045\x08\xff
White Balance Sodium Lamp Auto	\x81\x01\x045\x07\xff
White Balance Sodium Lamp Outdoor	\x81\x01\x045\x09\xff
Zoom Stop Zoom Speed 0	\x81\x01\x04\x07\x00\xff
Zoom Tele Zoom Speed 0	\x81\x01\x04\x07 \xff
Zoom Wide Zoom Speed 0	\x81\x01\x04\x070\xff
Zoom Stop Zoom Speed 7	\x81\x01\x04\x07\x00\xff
Zoom Tele Zoom Speed 7	\x81\x01\x04\x07' \xff
Zoom Wide Zoom Speed 7	\x81\x01\x04\x077\xff

Appendix B. Update Commands

Auto Exposure	\x81\x09\x049\xff
Auto Focus	\x81\x09\x048\xff
Backlight Mode	\x81\x09\x043\xff
Freeze	\x81\x09\x04b\xff
Infrared Mode	\x81\x09\x04\x01\xff
Mute	\x81\x09\x04u\xff
White Balance	\x81\x09\x045\xff